



4834-050

Figure 50. Relay, Engine Temperature Warning, Motor Kill, Safety and Field Shunt Transition

(1) ITEM NO.	(2) FSCM	(3) PART NUMBER	(4) DESCRIPTION AND USABLE ON CODE	(5) QTY
			GROUP 10 CONTROLS, ELECTRICAL GROUP	
			FIG. 50 ENGINE TEMPERATURE WARNING, MOTOR KILL, SAFETY AND FIELD SHUNT TRANSITION	
1	96906	MS90725-8	SCREW, HEX-HEAD	4
2	96906	MS35338-44	WASHER, LOCK	4
3	96906	MS27183-10	WASHER, FLAT	4
4	24446	17LV66J1	ASSEMBLY, RELAY	1
5	96906	MS90725-6	SCREW, HEX-HEAD, 1/4 X 3/4 IN. LONG	4
6	96906	MS35338-51	WASHER, LOCK	4
7	96906	MS27183-24	WASHER, FLAT	4
8	80971	4710452P1	BLOCK, ASSEMBLY	1
9	96906	MS90725-10	SCREW, HEX-HEAD	2
10			WASHER, LOCK	
11	80971	8831781 P1	SEAT SPRING (WITH SPRING)	1
12	80971	6743654G2	ARMATURE ASSEMBLY	1
13	96906	MS51967-09	NUT	2
14	96906	MS35338-46	WASHER, LOCK	2
15	96906	MS27183-14	WASHER, FLAT	2
16	80971	6700284G1	BASE, FINGER	1
17	96906	MS35649-202	NUT	2
18	96906	MS35338-43	WASHER, LOCK	2
19	96906	27183-8	WASHER, FLAT	2
20	80971	6700283P1	FINGER, OPEN	1
21	80971	8860749	FINGER, CLOSED	1
22	80971	8823875P1	RETAINER, SPRING	1
23	80971	8823868P1	SPRING, WIRE	1
24	80971	8860749G1	FINGER, MOVABLE CONTACT	1
25	80971	8860652P1	SUPPORT	1
26	96906	90725-32	SCREW	1
27	96906	MS35338-45	WASHER, LOCK	1
28	84971	8827086	COIL, OPERATING	1
29	80971	8867935G1	FRAME, MAGNET	1
			END OF FIGURE	