

TECHNICAL MANUAL

OPERATOR' S, UNIT, INTERMEDIATE
(DS) AND INTERMEDIATE (GS)
MAINTENANCE MANUAL

FOR

ENGINE, DIESEL,
CUMMINS MODEL NTA - 855 -L4
NSN 2815-01-216-0939

(Circle C) Copyright 1983
Cummins Engine Company, Inc.
Used by Permission

HEADQUARTERS, DEPARTMENT OF THE ARMY
25 JULY 1986

TECHNICAL MANUAL

NO 5-2815-233-14

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 25 July 1986

OPERATOR'S UNIT, INTERMEDIATE
(DS) AND INTERMEDIATE (GS)
MAINTENANCE MANUAL

**ENGINE, DIESEL,
CUMMINS MODEL NTA-855-L4
NSN 2815-01-216-0939**

NOTE:

This manual is printed in two parts as follows:

Part 1 consisting of Table of Contents, Operation and Maintenance instructions.

Part 2 consisting of a separate Table of Contents and Repair instructions.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

TABLE OF CONTECTS

Operating Instructions

Prestating Instructions..... 1-1
Starting the Engine..... 1-3
Engine Warm-Up 1-6
Engine Speeds..... 1-6
Engine Exhaust..... 1-7
High Altitude Operation 1-7
Engine Shutdown 1-7
Cold Weather Protection 1-8
Industrial Fire Pump Engines 1-11

Maintenance Operations

Schedule..... 2-2
Check Sheet 2-3
A Checks - Daily 2-7
A Checks - Weekly..... 2-11
B Checks 2-15
C Checks 2-34
D Checks 2-50
Seasonal Maintenance Checks 2-54

Specifications and Torque

Lubricating Oil..... 3-1
Grease 3-5
Fuel 011 3-6
Coolant 3-7
Torque Specifcations..... 3-8

Trouble-Shooting

Description..... 4-1
Chart..... 4-2

Index

Part I
OPERATION AND MAINTENANCE

Operation and Maintenance Manual

**Cummins Diesel
Engines**

Agricultural

Construction

Industrial

Industrial Fire Pump

Logging

Mining

Railway

Generator

Foreword

This is an engine operation and maintenance manual, not a repair manual. The design of Cummins Engines makes it possible to replace worn or damaged parts with new or rebuilt parts with a minimum of down time. Contact the nearest Cummins Distributor for parts replacement as they are equipped and have well informed, trained personnel to perform this service. If your shop is properly equipped to perform either maintenance, unit replacement and/or complete engine rebuild, contact the nearest Cummins Distributors to obtain available repair manuals and arrange for training of personnel.

For model identification of an engine, check the dataplate. The letter and number code indicates breathing (naturally aspirated except when letter "T" for turbocharged is present), cubic inch displacement, application and maximum rated horsepower.

Examples:

NTA-855-370
 N=4 valve head
 T=Turbocharger
 A=Aftercooled
 370=Maximum rated
 horsepower

V-903-320
 V=Type engine
 903=Cubic Inch
 Displacement
 320=Maximum Rated
 horsepower

Cummins Engine Company, Inc.
 Columbus, Indiana, U.S.A.

Operating Instructions

The engine operator must assume the responsibility of engine care while the engine is being operated. There are comparatively few rules which the operator must observe to get the best service from a Cummins Diesel.

General-All Applications

New and Rebuilt Engines Break-In

Cummins engines are run-in on dynamometers before being shipped from the factory and are ready to be put to work in applications such as emergency fire trucks, rail car applications and generator sets. In other applications, the engine can be put to work, but the operator has an opportunity to establish conditions for optimum service life during initial 100 hours of service by:

1. Operating as much as possible at three-quarter throttle of load range.
2. Avoiding operation for long periods at engine idle speeds, or at the maximum horsepower levels in excess of five minutes.
3. Developing the habit of watching the engine instruments closely during operation and letting up on the throttle if the oil temperature reaches 200° F [121° C] or the coolant temperature exceeds 200° F [93° F].
4. Operating with a power requirement that allows acceleration to governed speed when conditions require more power.
5. Checking the oil level every 8 to 10 hours during the break-in period.

**New or Rebuilt Engines
Pre-Starting Instructions - First Time**

Priming The Fuel System

1. Fill the fuel filter with clean No. 2 diesel fuel oil meeting the specifications outlined in Section 3.
2. Remove the fuel pump suction line and wet the gear pump gears with clean lubricating oil.
3. Check and fill the fuel tanks.

4. If the injector and valve or other adjustments have been disturbed by any maintenance work, check to be sure they have been properly adjusted before starting the engine.

Priming the Lubricating System

Note: On turbocharged engines, remove the oil inlet line from the turbocharger and prelubricate the bearing by adding 2 to 3 oz. [50 to 60 cc] of clean lubricating oil. Reconnect the oil supply line.

1. Fill the crankcase to the "L" (low) mark on the dipstick. See Lubricating Oil Specifications, Section 3.
2. Remove the plug from the lubricating oil crossover passage on NH/NT-855 Engines, Fig. 1-1. Remove the plug from the head of the lubricating oil filter housing on V Engines, Fig's. 1-2, 1-3, 1-4, 1-5 and 1-6. On KT/KTA-1150 Engines, remove the plug from the front of the oil cooler housing, Fig. 1-7.

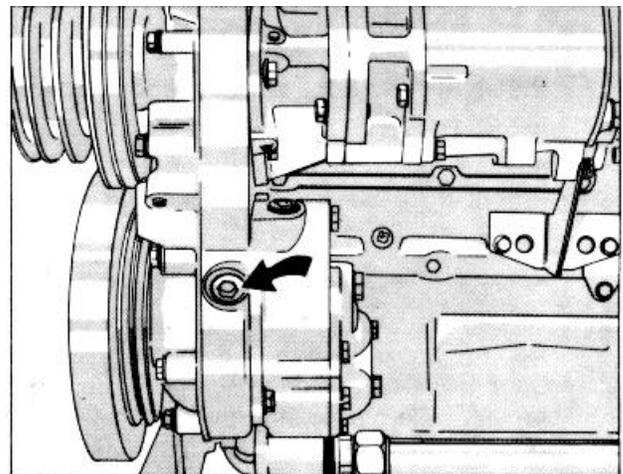


Fig. 1-1 (OM1001L). Lubricating system priming point-NT-855 C.I.D. Engine

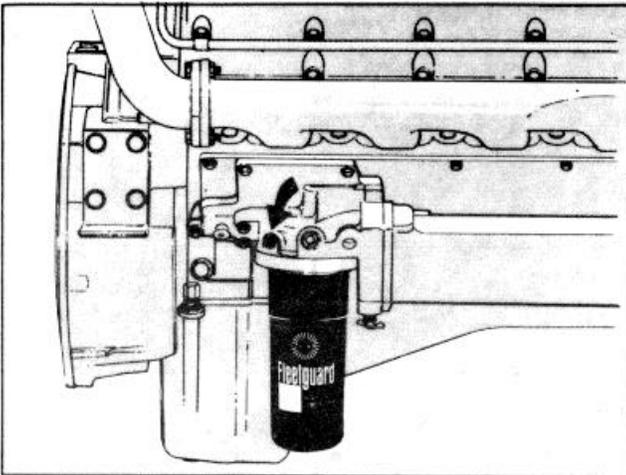


Fig. 1-2 (OM1002L). Lubricating system priming point-
VT-903 C.I.D. Engine

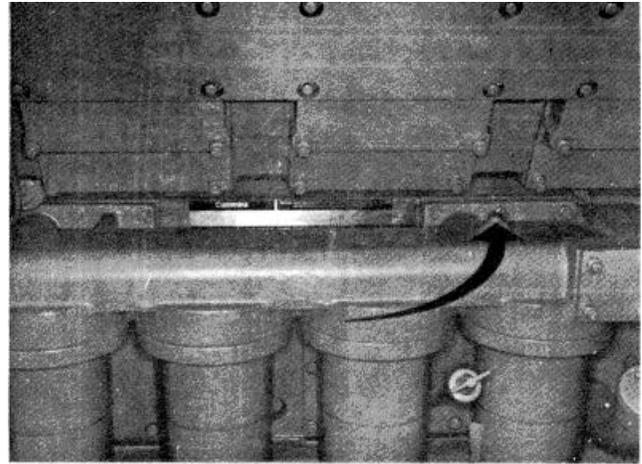


Fig. 1-4 (K21902). Lubricating system priming point
KT(A)-2300 Engine

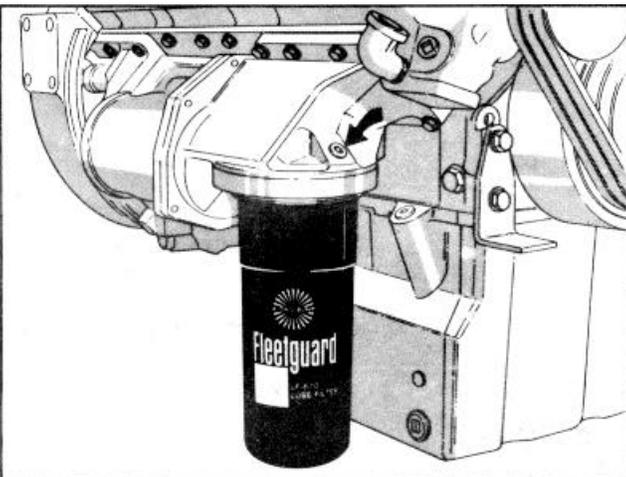


Fig. 1-3 (OM1003L). Lubricating system priming point--
V/VT-555 C.I.D. Engine

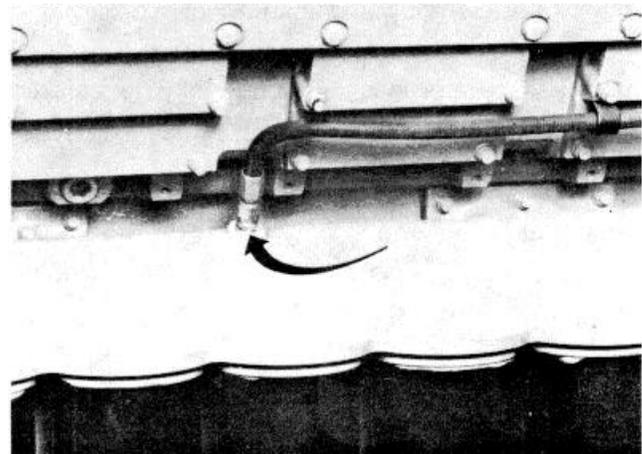


Fig. 1-5 (OM202). Lubricating system priming point -
KTA-3067 Engine

Caution: Do not prime the engine lubricating system from the by-pass filter.

3. Connect a hand- or motor-driven priming pump line from a source of clean lubricating oil to the plug boss in the housing.
4. Prime until a 30 psi [207 kPa] minimum pressure is obtained.
5. Crank the engine at least 15 seconds (with fuel shut-off valve closed or disconnected to prevent starting), while maintaining the external oil pressure at a minimum of 15 psi [103 kPa].
6. Remove the external oil supply and replace the plug.

Warning: Clean the area of any lubricating oil spilled while priming or filling the crankcase.

7. Fill the crankcase to the "H" (high) mark on the dipstick with oil meeting specifications, listed in Section 3. No change in oil viscosity or type is needed for new or newly rebuilt engines.

A dipstick oil gauge is located on the side of the engine, Fig. 1-8. The dipstick has an "H" (high) (1) and "L" (low) (2) level mark to indicate lubricating oil supply. The dipstick must be kept with the oil pan, or engine, with which it was originally supplied. Cummins oil pans differ in capacity with different type installations and oil pan part numbers. Check the dipstick calibration. If in doubt, your Cummins Distributor

OPERATING INSTRUCTIONS

can verify that you have the proper oil pan and dip-stick calibration.

Check Hydraulic Governor

Many engines used in stationary power applications are equipped with hydraulic-governed fuel pumps which use lubricating oil as an energy medium, same weight as used in the engine. Oil level in the governor sump must be at the full mark on the dipstick.

Note: Engine applications in a cold environment should use a lighter weight oil in the governor sump.

Check Air Connections

Check the air connections to the compressor and the air equipment, as used, and to the air cleaners and air crossovers to assure that they all are secure and have no damage.

Check Engine Coolant Supply

1. Remove the radiator or heat exchanger cap and check the engine coolant supply. Add coolant as needed.
2. Make a visual check for leaks and open the water filter shut-off valves.

Starting the Engine

Starting requires that clean air and fuel be supplied to the combustion chambers in the proper quantities at the correct time.

Normal Starting Procedure

Warning: Before starting be sure that everyone is clear of the engine and equipment.

If the fuel system is equipped with an overspeed stop, push the "Reset" button before attempting to start the engine.

1. On units equipped with an air activated prelude device, open the air valve to activate the piston in the prelude device which will lubricate all moving parts in the engine.

Note: On engines equipped with an oil pressure safety switch, hold the fuel by-pass switch in the "start" position until the engine oil pressure reaches 7 to 10 psi [48 to 69 kPa]; then, move it to the "run" position.

2. Set the throttle for idle speed and disengage the driven unit.

Caution: Protect the turbocharger during start-up by not opening the throttle or accelerating above 1000

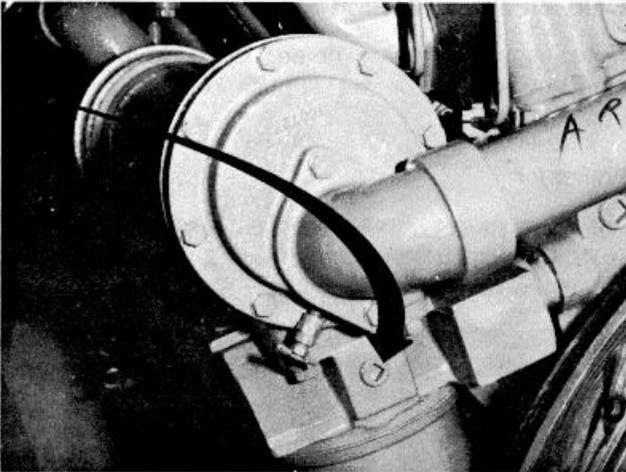


Fig. 1-6 (V41816). Lubricating system priming point - V-1710 Engine

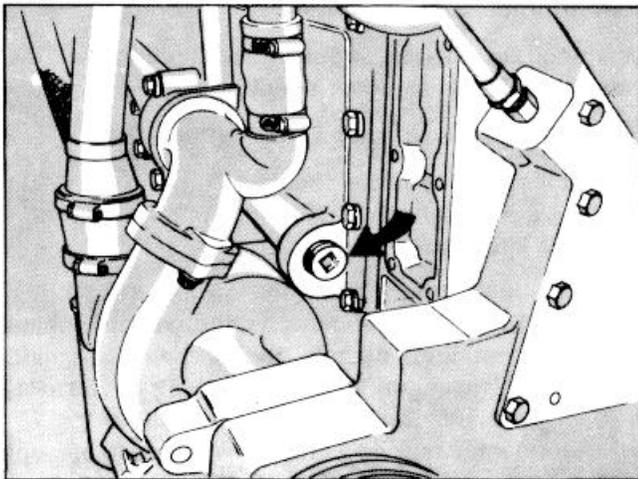


Fig. 1-7 (OM1004L). Lubricating system priming point- KT/KTA C.I.D. Engine

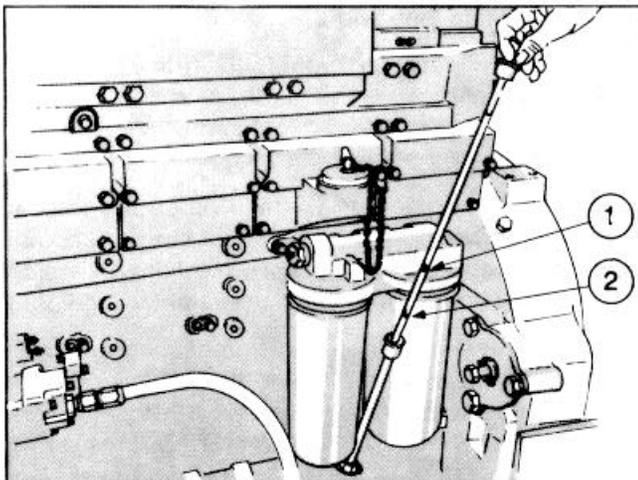


Fig. 1-8 (OM1005L). Checking engine oil level
Operating Instructions

rpm until the idle speed oil pressure registers on the gauge.

3. Open the manual fuel shut-down valve, if so equipped. Fig. 1-9. Electric shut-down valves operate as the switch is turned on. A manual override knob provided on the forward end of the electric shut-down valve allows the valve to be opened in case of an electric power failure. To use, turn fully clockwise; return it to the run position after an electric repair.

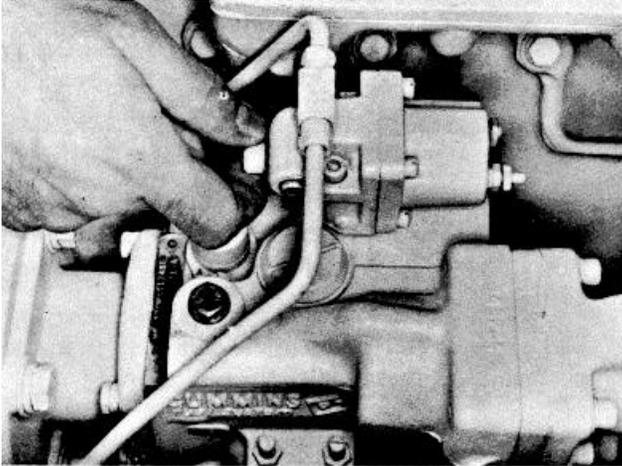


Fig. 1-9 (V21970). Using manual override knob

4. Pull the compression release (if so equipped) and press the starter button or turn the switch-key to the "start" position. After three or four seconds of cranking, close the compression release (if so equipped) and continue to crank until the engine fires.

Caution: To prevent permanent cranking motor damage, do not crank the engine for more than 30 seconds continuously. If the engine does not fire within the first 30 seconds, wait one to two minutes before re cranking.

5. At the initial start or after oil or filter changes and after the engine has run for a few minutes, shut it down and wait 15 minutes for the oil to drain back into the pan. Check the engine oil level again; add oil as necessary to bring the oil level to the "H" mark on the dipstick. The drop in oil level is due to absorption by the oil filters. Never operate the engine with the oil level below the low level mark or above the high level mark.

Cold-Weather Starting

Note: A water jacket heater is recommended for stand-by generator set applications installed in a cold climate

Preheater

The glow plug system supplies heat to the cylinders so that compression temperatures are sufficient to ignite the fuel.

To aid in starting the engine when the temperature is 50°F [10.0°C] or below, an intake air preheater is available.

Preheater equipment consists of a hand-priming pump to pump fuel into the intake manifold, and a switch to turn on the glow plug which is electrically heated by the battery. Fuel burns in the intake manifold and heats the intake air.

Warning: Do not use vapor in conjunction with the preheater. To do so could result in a fire. To use the preheater for cold starting:

1. Set the throttle in idle position. Turn the glow plug toggle switch to the "ON" position. The red indicator light must be on.
2. After the red light has been on for 20 seconds, start cranking the engine. As soon as the engine begins rotating, operate the preheater priming pump to maintain 80 to 100 psi [552 to 689 kPa] fuel pressure. Use of the primer before the 20-second interval will wet the glow plug and prevent heating.
3. If the engine does not start within 30 seconds, stop cranking. Wait one or two minutes and repeat the cranking operation.
4. After the engine starts, pump the primer slowly to keep the engine idling smoothly. In cold weather this may require 4 to 5 minutes or longer. Do not accelerate the engine.
5. When the engine has warmed up so it does not falter between primer strokes, stop pumping. Close and lock the primer. Turn off the glow plug toggle switch. (The red indicator light will go out.)
6. If the engine gives no indication of starting during the first three full strokes of the preheater pump, touch-check the intake manifold for heat. If there is no heat, check the electrical wiring. If the wiring is all right, remove the 1/8 inch pipe plug (1, Fig.1-10) from the manifold near the glow plug and

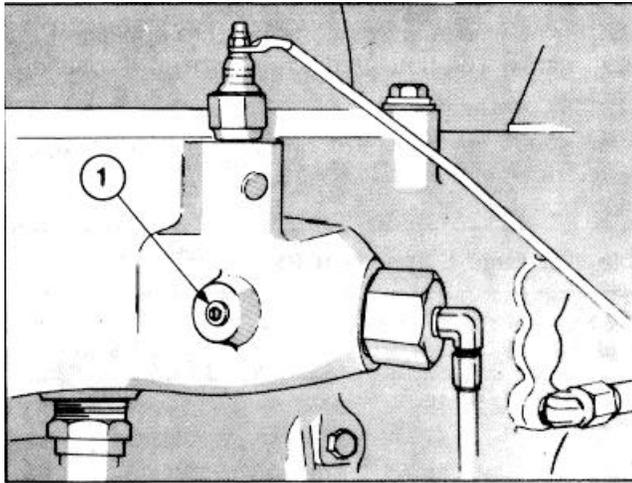


Fig 1-10 (OM1006L). Glow plug inspection hole NT-855 C.I.D. Engine

close the glow plug manual switch for 15 seconds and observe the glow plug through the 1/8 inch plug hole. The glow plug should be white hot; if not, connect the wiring to a 6- to 12-volt (as used) source and check the amperage; it should be 30 to 32 (minimum). If the glow plug is all right, check the manual switch and resistor (if used) and replace if necessary.

Note: The preheater priming pump, switches and resistor are located at the instrument panel and are to be checked during engine starting.

The cold starting aid, approved for use in Cummins Engines, has been based upon starting aid capabilities to -25° F [-32° C].

Caution: Do not attempt to use vapor compound type starting aids near heat, open flame or on engines equipped with a glow plug system.

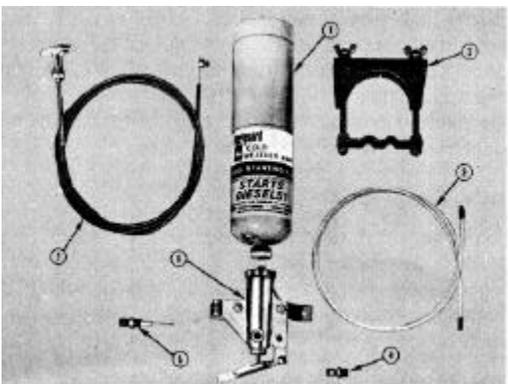


Fig. 1-11 (OM1007L). Manually operated valve

Manually Operated Valve

The manually operated valve, illustrated in Fig. 1-11 includes the valve body assembly (6), clamp (2) and nylon tube (3). The fuel cylinder (1), atomizer fitting (5) and pull control (7) must be ordered separately. Standard pull or throttle control cables may be used, to actuate the manual valve, if desired.

Electrically Operated Valve

The electrically operated valve, Fig. 1-12, includes the valve body (7), 90 degree elbow (5), clamp (2), push button switch (6), and nylon tube (3). The thermostat is mounted on the engine exhaust manifold and cuts out the valve by sensing manifold heat when the engine is running. See parts catalog for fuel cylinder (1) and fuel atomizer fittings (4). These fittings must be ordered separately, as required.

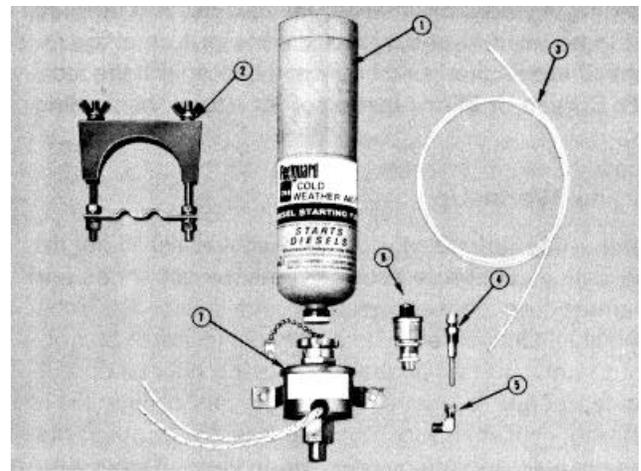


Fig. 1-12(OM1008L). Electrically operated valve

Installation Recommendations

The atomizer fittings must be mounted in the engine air intake manifold or inlet connection to provide an equal distribution of starting fuel to each cylinder. The atomizer holes are 180 degrees apart and must be mounted so the spray is injected the "long way" of the manifold. If incorrectly installed, the spray goes crosswise of the manifold.

Recommended Starting Technique Using Fleetguard Starting Aid

1. Set the throttle for idle.
2. Disengage the driven unit or make sure gears are in neutral.
3. Open the manual fuel shut-down valve, or electric

shut-down valve, whichever is used.

- Engage the starter and while cranking, apply metered amounts of starting fluid until the engine idles smoothly.

Use of Starting Fluid Without Metering Equipment

- Spray starting fluid into the air cleaner intake, while a second man cranks the engine.

Warning: Never handle starting fluid near an open flame. Never use it with a preheater or flame thrower equipment. Do not breathe the fumes. Use of too much will cause excessively high pressures and detonation, or over speed the engine.

- Starting aid fumes will be drawn into the air intake manifold and the cold engine should start without difficulty.

Warning: Fuel oil or volatile fuel cold starting aids are not to be used in underground mine or tunnel operations. If the engine is so equipped check with the local U.S. Bureau of Mines Inspector for use of the starting aid.

Engine Warm-Up

When the engine is started, it takes a while to get the lubricating oil film re-established between shafts and bearings and between pistons and liners. The most favorable clearances between moving parts are obtained only after all engine parts reach normal operating temperature. Avoid seizing pistons in liners and running dry shafts in dry bearings by bringing the engine up to operating speed gradually as it warms up. On some emergency equipment (such as fire pump engines) warm-up may not be necessary due to the equipment being housed inside a heated building. For an engine starting with a parasitic load, such as a fire pump, the coolant temperatures must be a minimum of 120°F [49°C].

Engine Speeds

All Cummins engines are equipped with governors to prevent speeds in excess of the minimum or pre-determined lower speed rating.

The governor has two functions: First, it provides the fuel needed for idling when the throttle is in the idle position. Second, it overrides the throttle and shuts off the fuel if the engine rpm exceeds the maximum rated speed.

Speeds listed in Table 1-1 are for engines rated at maximum rpm and fuel rate.

Note: Engines in many applications are applied at a lower than maximum rated speed; check the serial dataplate.

Power generator units are pre-set to operate at a specific governed rpm.

Table 1-1: Engine Speeds (RPM)

Engine Model	Maximum Rated
All NH, NT, 855-R, 855-L	2100
All NH, NT	2300
V-903	2600
VT-903	2400
V-378, V-504, V-555	3000
V-378, V-504, V-555	3300
V-1710, V-1710-L	2100
KT-1150	2100
KTA-1150	2100
KT-2300	2100
KTA-2300	2100
KTA3067	2100

Oil Temperature

The oil temperature gauge normally should read between 180° F [82° C] and 225° F [107° C]. Under full load conditions, an oil temperature of 240°F [116°C] for a short period is not cause for alarm.

Caution: Any sudden increase in oil temperature which is not caused by a load increase is a warning of possible mechanical failure and should be investigated at once.

During the warm-up period, apply the load gradually until the oil temperature reaches 140° F [60° C]. While the oil is cold it does not do a good job of lubricating. Continuous operation or long periods of idle with oil temperatures below 140 F [60C] may cause crank-case dilution and acids in the lubricating oil which quickly accelerate engine wear.

Water Temperature

A water temperature of 160° to 200° F [71 to 93° C] is the best assurance that the working parts of the engine have expanded evenly to the most favorable oil clearances. Maximum engine coolant temperatures should not exceed 200°F [93°C].

Keep the thermostats in the engine during summer and winter, avoid long periods of idling, and take the necessary steps to keep the water temperature up to a

Table 1-2: Oil Pressure PSI [kPa] @ 225°F [107°C]

Engine Series	Minimum @ Idle Speed		Rated Speed	
NH/NT	8	[55]	40/70	[276/483]
Big Cam 11	8	[55]	25/45	[172/310]
VT-350, V-903, VT-903	5	[34]	40/65	[276/448]
V/VT-378, V/VT-504, VNT-555	10	[69]	50/90	[345/620]
VNT/VTA-1710	15	[103]	50/90	[345/620]
KT/KTA-1150	15	[103]	45/70	[310/483]
KT/KTA-2300 @ 2100 RPM	15	[103]	45/70	[310/483]
KT/KTA-2300 @ 1500, 1800 or 1950 RPM	15	[103]	40/70	[276/483]
KT/KTA-3067 @ 2100 RPM	20	[138]	45/70	[310/483]
KT/KTA-3067 @ 1500 or 1800 RPM	15	[103]	40/70	[276/483]

minimum of 160°F [71°C]. If necessary in cold weather, use radiator shutters or cover a part of the radiator to prevent overcooling.

Oil Pressure

Normal engine oil pressures at 225°F [107°C] oil temperature are listed in Table 1-2.

Note: Individual engines may vary from the above normal pressures. Observe and record the pressure when the engine is new to serve as a guide for an indication of progressive engine condition. (High oil pressure during start-up is not cause for alarm.) For record purposes these readings are more accurate and reliable when taken immediately after an oil change.

High Altitude Operation

Some engines, particularly naturally aspirated, lose horsepower when they are operated at high altitude because the air is too thin to burn as much fuel as at sea level. This loss is about 3 percent for each 1000 ft [304.8 m] of altitude above sea level for a naturally aspirated engine. Operate the engine using a lower power requirement at high altitude to prevent smoke and over-fueling.

Power Take-Off Application With PT (type G)

VS Fuel Pump

The VS fuel pump governor lever is used to change the standard governed speed of the engine from rated speed to an intermediate power take-off speed. When changing from the standard speed range to the power take-off speed with the engine idling on standard throttle, operate as follows:

1. Place the VS speed control lever in the operating position.
2. Lock the standard throttle in the full-open position.

3. Engage the power take-off.

To return to standard throttle:

1. Disengage the power take-off.
2. Return the standard throttle to the idle position.
3. Lock the VS speed control lever in the maximum speed position.

Engine Shut-Down

Idle Engine A Few Minutes Before Shut-Down

It is important to idle an engine 3 to 5 minutes before shutting it down to allow the lubricating oil and water to carry heat away from the combustion chamber, bearings, shafts, etc. This is especially important with turbocharged engines.

The turbocharger contains bearings and seals that are subject to the high heat of combustion exhaust gases. While the engine is running, this heat is carried away by oil circulation, but if the engine is stopped suddenly, the turbocharger temperature may rise as much as 100° F [380 C]. The results of the extreme heat may be seized bearings or loose oil seals.

Do Not Idle Engine for Excessively Long Periods

Long periods of idling are not good for an engine because the combustion chamber temperatures drop so low the fuel may not burn completely. This will cause carbon to clog the injector spray holes and piston rings and may result in stuck valves.

If the engine coolant temperature becomes too low,

raw fuel will wash the lubricating oil off the cylinder walls and dilute the crankcase oil so all moving parts of the engine will suffer from poor lubrication. If the engine is not being used, shut it down.

Turn Switch to "Off" Position to Shut Down the Engine

The engine can be shut down completely by turning off the switch on installations equipped with an electric shut-down valve, or by turning the manual shut-down valve knob. Turning off the switch which controls the electric shut-down valve stops the engine unless the override button on the shut-down valve has been locked in the open position. If the manual override on the electric shut-down valve is being used, turn the button fully counterclockwise to stop the engine. Refer to "Normal Starting Procedure". The valve cannot be reopened by the switch until after the engine comes to a complete stop, unless a rapid re-start valve is installed.

Caution: Never leave the switch key or the override button in the valve open or in the run position when the engine is not running. With overhead tanks this would allow fuel to drain into the cylinders, causing a hydraulic lock.

Stop Engine Immediately If Any Parts Fail

Practically all failures give some warning to the operator before the parts fail and ruin the engine. Many engines are saved because alert operators heed warning signs (sudden drop in oil pressure, unusual noises, etc.) and immediately shut down the engine.

Cold-Weather Protection

1. For cold-weather operation, use of permanent-type antifreeze with rust inhibitor additives is recommended. See Section 3.
2. Drain the cylinder block and heads on all engines by opening the petcocks and removing the drain plugs as shown in Fig's. 1-13 to 1-19. If an air compressor (Fig. 1-20), heat exchanger or other "water cooled" accessory is used, open the petcock and drain. Failure to properly drain the engine and accessories may cause serious damage during freezing weather.
3. Immersion-type water and oil heaters are available for engines used in cold-weather operations and to maintain temperatures to permit the engine to operate at full load at start-up.

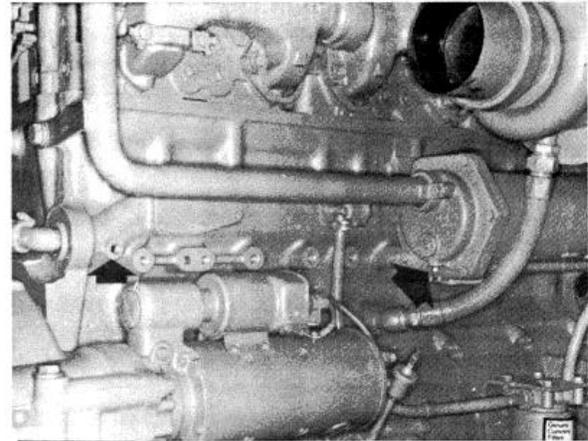


Fig. 1-13 (OM1010L). Cooling system drain points-NT-855 C.I.D. Engine

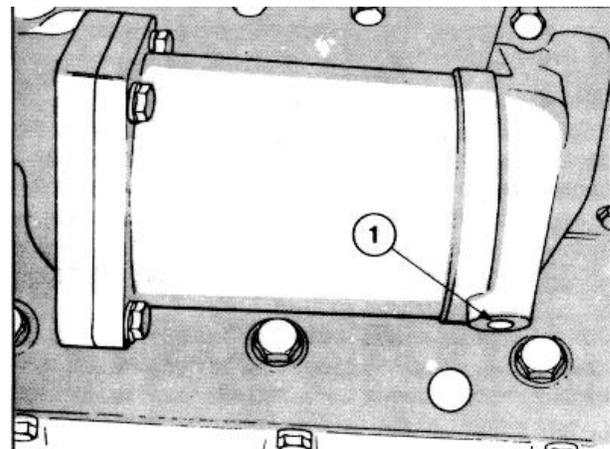


Fig. 1-14 (OM1012L). Cooling system drain points (oil cooler side) VT-903 C.I.D. Engine

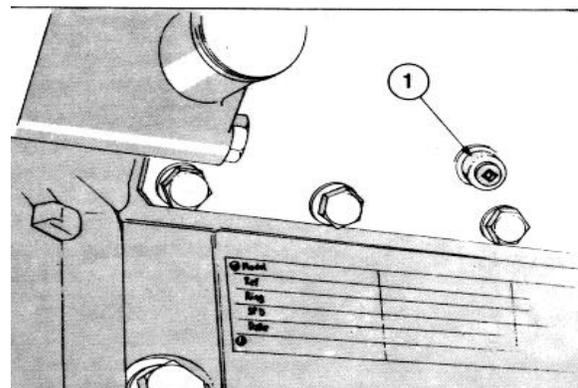


Fig. 1-15 (OM1013L). Cooling system drain points (left bank side) VN/VT-555 C.I.D. Engine

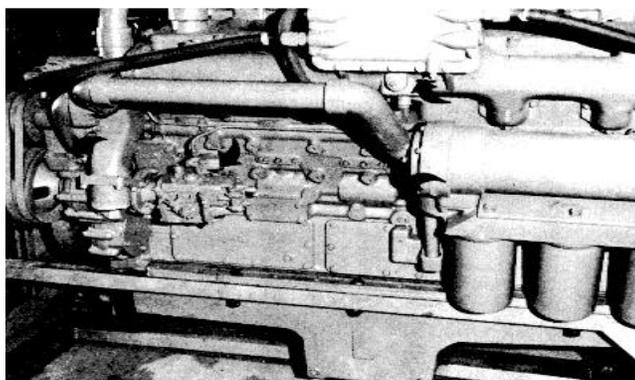


Fig. 1-16, (V40033). Coolant drain point - V/VT-1710 Engine

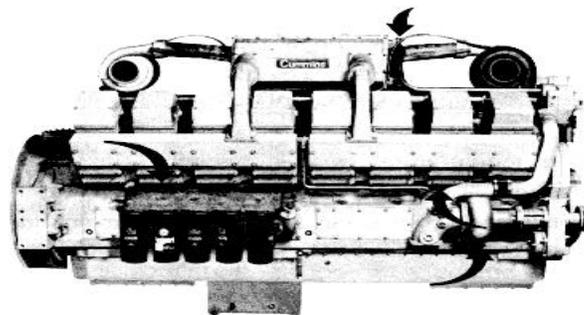


Fig. 1-19, (OM203.). Coolant drain point - KTA-3067 Engine

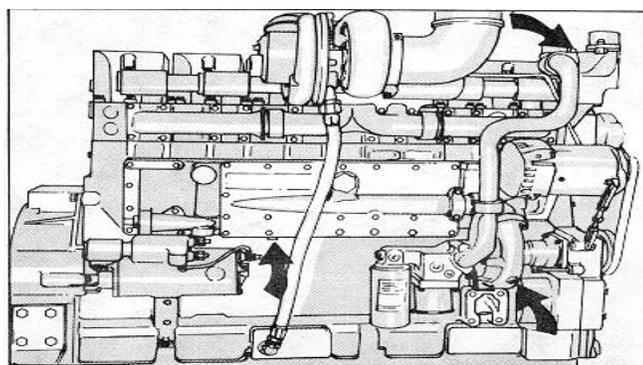


Fig 1-17,(OM1009L). Cooling system drain points- KT/KTA-1150 C.I.D. Engine

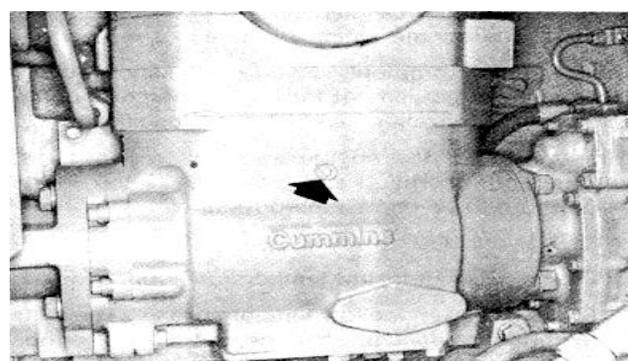


Fig. 1-20, (K21904). Two cylinder air compressor coolant drain

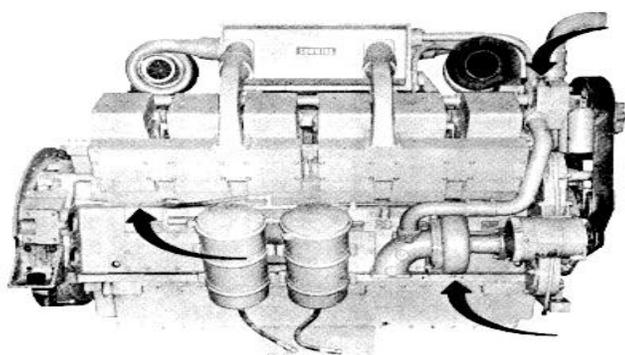


Fig. 1-18, (K21903). Coolant drain point - KT(A)-2300 Engine

Engine Operation in Cold Weather

Satisfactory performance of a diesel engine operating in low ambient temperature conditions requires modification of the engine, surrounding equipment, operating practices and maintenance procedures. The colder the temperatures encountered the greater the amount of modification required and yet with the modifications applied, the engines must still be capable of operation in warmer climates without extensive changes. The following information is provided to engine owners, operators and maintenance personnel on how the modifications can be applied to get satisfactory performance from their diesel engines.

There are three basic objectives to be accomplished:

1. Reasonable starting characteristics followed by

Operation and Maintenance Construction and Industrial

practical and dependable warm-up of the engine and equipment.

2. A unit or installation which is as independent as possible from external influences.

3. Modifications which maintain satisfactory operating temperatures with a minimum increase in maintenance of the equipment and accessories.

If satisfactory engine temperature is not maintained, higher maintenance cost will result due to the increased engine wear, poor performance and formation of excessive carbon, varnish and other deposits. Special provisions to overcome low temperatures are definitely necessary. Whereas a change to warmer climate normally requires only a minimum of revision. Most of the accessories should be designed in such a way that they can be disconnected so there is little effect on the engine when they are not in use.

The two most commonly used terms associated with preparation of equipment for low temperature operation are "Winterization" and "Arctic Specifications". Winterization of the engine and/or components so starting and operation are possible in the lowest temperature to be encountered requires:

1. Use of correct materials.
2. Proper lubrication, low temperature lubricating oils.

3. Protection from the low temperature air. The metal temperature does not change, but the rate of heat dissipation is affected.
4. Fuel of the proper grade for the lowest temperature.
5. Heating to be provided to increase the engine block and component temperature to a minimum of -25° F [-32° C] for starting in lower temperatures.
6. Proper external heating source available.
7. Electrical equipment capable of operating in the lowest expected temperature.

Arctic specifications refer to the design material and specifications of the components necessary for satisfactory engine operation in extreme low temperatures to -65° F [-54° C]. Contact Cummins Engine Company, Inc., or the equipment manufacturer to obtain the special items required.

Caution: "Anti-leak" antifreezes are not recommended for use in Cummins Engines. Although these antifreezes are chemically compatible with DCA water treatment, the "anti-leak" agents may clog the coolant filters and render them ineffective.

Industrial Fire Pump Engines

Fire pump engines are built and applied under conditions set down by agencies such as Underwriters Laboratory; therefore, parts originally supplied must not be deviated from without qualifying agency approval. The following instructions are those special items necessary to this application, and should be used in conjunction with those previously stated.

Initial Start-Up Note: Contact operating personnel responsible for fire protection system before starting. Obtain approval to service or repair. After repair obtain authorized signature of acceptance.

1. Remove the heat exchanger cap, check or fill the engine coolant supply; open the water filter inlet and outlet valves.
2. Prelubricate the engine with oil meeting specifications MIL-L-46152 (API-CC/SC) viscosity 10W30. This includes removal of the turbocharger oil inlet line on turbocharged engines to prelubricate the housing by adding 2 to 3 oz [60 cc] of clean engine lubricating oil.
3. Check the crankcase oil level and fill to the high mark on the dipstick.
4. Remove the fuel pump solenoid lead and crank the engine through both cranking cycles.
5. If the engine is equipped with a "Vernier throttle", place it in the idle position; if not, place the MVS throttle in the idle position. On turbocharged models the delay cylinder line may be disconnected at the block and the block opening plugged.
6. Reconnect the fuel solenoid lead and start the engine; run it at idle speed.
7. Verify the lubricating oil pressure has been established, normally in 6 to 8 seconds.

Note: Some automatic controllers require lubricating oil pressure higher than the normal pressure at 600 rpm idle. Increase the idle to 800 to 900 rpm if this condition is encountered. All turbocharged engines should be set to 800 to 900 rpm idle.

8. Continue to operate the engine for 3 to 5 minutes and review all systems for leaks or unusual conditions; correct as required.
9. Stop the engine and install ST-1224 Adapter.

10. Check the crankcase oil level and fill it to the high mark.
11. Start the engine and adjust overspeed.
12. Remove ST-1224 and replace the original adapter.
13. Clean the raw water strainer.
14. Start the engine and adjust operating speed.
15. Adjust the raw water pressure regulator.
16. Engine is now ready for normal operation.

Normal Operation

1. Daily or normal operation would include the checking of fuel, lubrication oil, coolant and correcting any leaks or unusual conditions as required.
2. Check the coolant and oil heaters to assure at least 120° F [49° C] water temperature has been maintained.
3. Manually start the engine using the prescribed starting procedure.
4. Operate the engine the prescribed period of time or 5 minutes after stabilization of the coolant temperature.
5. Shut the engine down using the normal test shutdown procedures.

Fire Pump Engines -Overspeed Switch Adjustment (IF Engine Models)

The speed switches required for overspeed protection on fire pump engines require high speed for the overspeed adjustment. All engines are now being shipped adjusted at the maximum overspeed. The following overspeed adjustments are 20 percent above the rated engine speed.

An adapter, ST-1224 with 2:1 ratio, in speed switch drive only, (1, Fig. 1-21) is available to drive the speed switch at twice the engine speed. This tool when

Operation and Maintenance Construction and Industrial

installed in place of the existing adapter permits adjustment to be made to the speed switch at slightly over 1/2 engine and pump speed. This maintains a pump speed well within its safe speed range while the adjustments are being made.

Table 1-3: Engine Overspeeds

Engine Model	Rated Speed	Overspeed
V-378F1	1750-2200	2100-2640
V-378F2	2400-3300	2880-3960
V-504-F1	1750-2200	2100-2640
V-504-F2	2400-3300	2880-3960
N-855	1460-2100	1750-2520
NT-855-F1	1750-2100	2100-2520
NT-855-F2	1750-2300	2100-2760
VT-1710-F	1750-2100	2100-2520

Adjustment Procedure

1. Remove the present tachometer drive adapter.
 2. Install the service tool, ST-1224, in position of the standard drive adapter. Connect the tachometer and overspeed stop switch to the ST-1224 Tool.
- Note:** The overspeed stop switch cable must be connected to the short adapter connection. (1, Fig. 1-21).
3. Start the engine and warm to operating temperature.
 4. Set the engine speed to one-half (1/2) the desired engine shut-down speed as indicated by the tachometer.

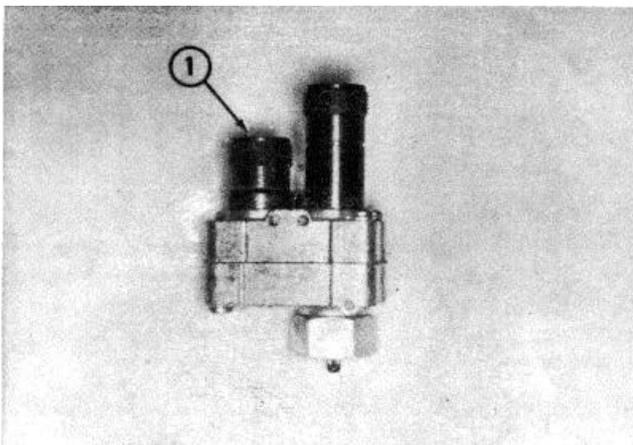


Fig. 1-21, (ST-1224). ST-1224 adapter

- a. On inline engine models, this can be accomplished by adjusting the Vernier throttle control.
- b. On Medium Duty V engines, the speed adjustment must be made by adjusting the governor idle and maximum speed screws. The idle screw is housed in the front of the MVS governor. The maximum speed screw is mounted to the MVS governor by a bracket and is on the left hand side of the fuel pump. Engine slow down is accomplished by turning the idle speed screw counterclockwise and turning the maximum speed screw in a clockwise direction. To increase the engine speed reverse the procedure.

5. Set the single element speed switch.

- a. Remove the lockwire from setscrews on the side of the switch. Loosen the three (3) setscrews.
- b. Rotate the cover clockwise (this decreases trip speed) until the switch actuates and stops the engine.
- c. Secure the setscrews and replace the locking wire.
- d. On manual reset models, re-activate the switch by pushing the reset button on top of the switch.

6. Set the dual element speed switches.

Caution: Do not break or remove the lockwire.

- a. Remove the round head dust cover screw marked 2 from the top of the switch. Fig. 1-22.
- b. Insert a 1/16 inch Hex Allen wrench into the adjusting screw located just below the surface of the cover.

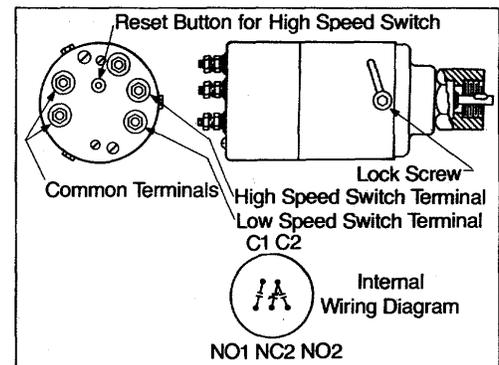


Fig. 1-22, (CGS27). Double speed switch

- c. Turn counterclockwise to lower the engine shut-down speed. Turn clockwise to raise the engine shut-down speed.

Caution: Do not turn the adjusting screw more than three (3) revolutions in either direction from the factory setting. Do not attempt to set the dual element switch in the same manner as the single element switch.

- d. Replace the dust cover screw removed in "Step a" above.
- e. All overspeed switches must be manually reset, reactivate the switch by pushing the reset button on top of the switch.

- 7. Replace the service tool, ST-1224, with the original drive adapter and reconnect the cables.

Note: If the stop crank adjustment is required do not use the ST-1224 Adapter. Replace with a standard adapter to effect the adjustment.

Fire Pump Engine Operating Speed Adjustment

All Cummins fire pump engines will be shipped adjusted at the speeds in Table 1-4, unless prior approval has been established for a specific speed.

Final operating speed adjustment should be made at the time of the in-service inspection to obtain the required fire pump operating speed.

This speed adjustment must be made with the Vernier throttle in the full fuel position and the systems fire pump operating at its rated condition. All speed ranges of N-NT and V-12 models are available by adjusting the VS high speed adjusting screw. Fig's. 1-23 and 1-24.

<i>Table 1-4: Fire Pump Engine Operating Speed</i>			
Engine Model	Fuel Pump Code	Factory Adjusted Speed	Maximum Operating Speed
V-378-F1	C-653	1750	2200
V-378-F2	C-651	2400	3300
V-504 F1	C-652	1750	2200
V-504 F2	C-650	2400	3300
N-855	8761	1750	2100
NT-855 F1	8770	1750	2100
NT-855 F2	8771	1750	2300
VT-1710 F	8784	1750	2100

This screw requires a 1/8 inch Allen wrench and adjust-

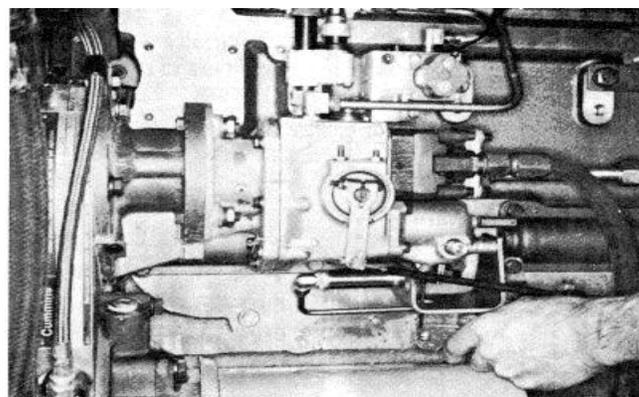


Fig. 1-23, (N11979). Adjusting engine speed

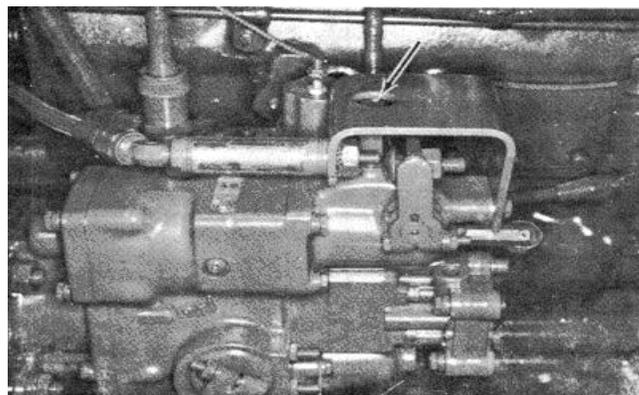


Fig. 1-24, (N11980). Governor adjusting screw

ment is made by loosening the 7/16 inch locking nut and backing the screw out to increase the engine speed through the full speed range.

The V-378 and V-504 F1 and F2 models require two differently calibrated fuel pumps. One pump code provides speeds between 1750 and 2300 rpm. A different pump code is required for speeds between 2400 and 3300 rpm. The required speeds on these models are similarly obtained by MVS adjustment within the calibrated range as indicated above. It normally is prohibited by UL and FM to change engine ratings by changing fuel pumps on any models of fire pump engines. In the event of fuel pump rebuild, the pump must be calibrated to the original code and **any deviation would be a violation to the insurance agencies approval.**

Industrial Fire Pump Engine Maintenance Schedule

EQUIPMENT NO. _____ ENGINE SERIAL NO. _____
 MECHANIC _____ HOURS, CALENDAR _____
 TIME SPENT _____ CHECK PERFORMED _____
 PARTS ORDER NO. _____ DATE _____

CUMMINS DIESEL FIRE PUMP ENGINES

Check each operation as performed.

A—CHECK	B—CHECK	C—CHECK	D—CHECK	SEASONAL	OTHER
<p>Daily</p> <ul style="list-style-type: none"> <input type="checkbox"/> Check engine operating log <input type="checkbox"/> Check engine: <ul style="list-style-type: none"> • oil level • coolant level <input type="checkbox"/> Check engine lubricating oil and coolant heaters * <input type="checkbox"/> Visually inspect engine for damage, leaks, loose or frayed belts <p>Weekly</p> <ul style="list-style-type: none"> <input type="checkbox"/> Repeat Daily "A" Check <input type="checkbox"/> Check air cleaner <ul style="list-style-type: none"> • clean precleaner dust pan • check restriction indicator • clean/change air cleaner element * <input type="checkbox"/> change oil bath cleaner oil <input type="checkbox"/> Drain water/sediment from fuel tanks & fuel filters <input type="checkbox"/> Check raw water strainer <input type="checkbox"/> Check starter battery <input type="checkbox"/> Start engine & check for unusual noise 	<p>Repeat "A" (Daily/Weekly)</p> <ul style="list-style-type: none"> <input type="checkbox"/> Change engine oil <input type="checkbox"/> Change filters <ul style="list-style-type: none"> • oil full flow • fuel filter <input type="checkbox"/> Check coolant <ul style="list-style-type: none"> • check engine coolant DCA concentration level. Add make-up DCA and change element <input type="checkbox"/> Clean/change <ul style="list-style-type: none"> • crankcase breather * <input type="checkbox"/> Clean oil bath air cleaner tray/screen 	<p>Repeat "A" & "B"</p> <ul style="list-style-type: none"> <input type="checkbox"/> Adjust valves & injectors * <input type="checkbox"/> Clean oil bath air cleaner 	<p>Repeat "A", "B" & "C"</p> <ul style="list-style-type: none"> <input type="checkbox"/> Clean & calibrate injectors, fuel pump <input type="checkbox"/> Check and/or rebuild and/or replace the following assemblies: <ul style="list-style-type: none"> • turbocharger • vibration damper <input type="checkbox"/> Rebuild or replace the following assemblies: <ul style="list-style-type: none"> • water pump 	<p>Fall</p> <ul style="list-style-type: none"> <input type="checkbox"/> Clean & flush cooling system <input type="checkbox"/> Replace hose as required <input type="checkbox"/> Check cold start & thermal aids <input type="checkbox"/> Clean electrical connections and check batteries <input type="checkbox"/> Clean engine water heater <p>Spring</p> <ul style="list-style-type: none"> <input type="checkbox"/> Steam clean engine <input type="checkbox"/> Tighten mounting bolts <input type="checkbox"/> Check crankshaft end clearance <input type="checkbox"/> Check heat exchanger zinc plugs annually or as required <input type="checkbox"/> Check overspeed switch 	<p>Electrical Components</p> <ul style="list-style-type: none"> <input type="checkbox"/> + Starter <input type="checkbox"/> + Alternator <input type="checkbox"/> + Batteries <input type="checkbox"/> + Voltage regulator <input type="checkbox"/> + Switches <input type="checkbox"/> + Gauges <input type="checkbox"/> + Tachometer <p><input type="checkbox"/> + On these components follow the manufacturer's procedure</p>
Engine Series Interval	B	C	D		
All Hours Calendar	250 6 mos.	1500 1 year	4500 2 years		

Note: Under circumstances where hours of operation are not accumulated at a fast rate, use calendar time. In other words, use hours, or calendar time, whichever comes first.

*Cummins Engine Company, Inc., recommends the use of dry type air cleaners.

Maintenance

Maintenance is the key to lower operating costs. A diesel engine requires regularly scheduled maintenance to keep it running efficiently.

Maintenance Schedule

Preventive maintenance is the easiest and least expensive type of maintenance. It permits the Maintenance Department to do the work at a convenient time.

A Good Maintenance Schedule Depends On Engine Application

Actual operating environment of the engine governs the maintenance schedule. The suggested check sheet on the following page indicates some checks have to be performed more often under heavy dust or other special conditions.

Using the Suggested Schedule Check Sheet

The maintenance schedule check sheet is designed as a guide until adequate experience is obtained to establish a schedule to meet a specific operation.

A detailed list of component checks is provided through several check periods; also a suggested schedule basis is given for hours of operation, or calendar of time.

A maintenance schedule should be established using the check sheet as a guide; the result will be a maintenance program to fit a specific operation.

The check sheet shown can be reproduced by any printer. The person making each check can then indicate directly on the sheet that the operation has been completed. When a complete column (Under A, B, C, etc.) of checks is indicated, the engine will be ready for additional service until the next check is due.

Storage for Engines Out of Service

If an engine-remains out of service and its use is not immediately forthcoming, special precautions should be taken to prevent rust. Contact the nearest Cummins Distributor or consult applicable Shop Manual for information concerning engine storage procedure.

Maintenance Schedule

EQUIPMENT NO. _____ ENGINE SERIAL NO. _____
 MECHANIC _____ HOURS, CALENDAR _____
 TIME SPENT _____ CHECK PERFORMED _____
 PARTS ORDER NO. _____ DATE _____

CUMMINS DIESEL ENGINES

Check each operation as performed.

A—CHECK	B—CHECK	C—CHECK	D—CHECK	SEASONAL	OTHER
Daily <input type="checkbox"/> Check operator's report <input type="checkbox"/> Check engine: <ul style="list-style-type: none"> • Oil level • Coolant level * <input type="checkbox"/> Oil bath cleaner oil level <input type="checkbox"/> Visually inspect engine for damage, leaks, loose or frayed belts and listen for unusual noises Weekly <input type="checkbox"/> Repeat Daily "A" Check <input type="checkbox"/> Check air cleaner <ul style="list-style-type: none"> • Clean precleaner dust pan • Check restriction indicator • Clean/change air cleaner element * <input type="checkbox"/> Change oil bath cleaner oil <input type="checkbox"/> Drain air tanks <input type="checkbox"/> Drain water/sediment from fuel tanks and fuel filters	Repeat "A" (Daily/Weekly) <input type="checkbox"/> Change engine oil <input type="checkbox"/> Change filters <ul style="list-style-type: none"> • Oil full flow • Oil by-pass • Fuel filter <input type="checkbox"/> Check coolant <ul style="list-style-type: none"> • Check engine coolant DCA concentration level. Add make-up DCA and change element <input type="checkbox"/> Check oil levels <ul style="list-style-type: none"> • Aneroid • Hydraulic governor <input type="checkbox"/> Clean/change <ul style="list-style-type: none"> • Crankcase breather—All except KT/KTA-2300 and 3067 • Air compressor breather * <input type="checkbox"/> Clean oil bath air cleaner tray/screen	Repeat "A" & "B" <input type="checkbox"/> Adjust valves & injectors <input type="checkbox"/> Change oil <ul style="list-style-type: none"> • Aneroid • Hydraulic governor <input type="checkbox"/> Replace aneroid breather <input type="checkbox"/> Inspect back side idler * <input type="checkbox"/> Clean oil bath air cleaner	Repeat "A", "B" & "C" <input type="checkbox"/> Clean & calibrate injectors, fuel pump and aneroid <input type="checkbox"/> Check and/or rebuild and/or replace the following assemblies: <ul style="list-style-type: none"> • Turbocharger • Vibration damper • Air compressor <input type="checkbox"/> Rebuild or replace the following assemblies: <ul style="list-style-type: none"> • Fan hub • Idler pulley assembly • Water pump • Back side idler <input type="checkbox"/> Clean/change crankcase breather on KT/KTA-2300 and 3067	Fall <input type="checkbox"/> Clean and flush cooling system <input type="checkbox"/> Replace hose as required <input type="checkbox"/> Check cold start & thermal aids <input type="checkbox"/> Clean electrical connections and check batteries Spring <input type="checkbox"/> Steam clean engine <input type="checkbox"/> Tighten mounting bolts <input type="checkbox"/> Check crankshaft end clearance <input type="checkbox"/> Check heat exchanger zinc plugs annually or as required	<input type="checkbox"/> + Alternator <input type="checkbox"/> + Generator <input type="checkbox"/> + Starter <input type="checkbox"/> + Exhaust brake <input type="checkbox"/> + Air compressor <input type="checkbox"/> + Electrical connections <input type="checkbox"/> + Batteries <input type="checkbox"/> + Freon compressor + On these components follow the manufacturer's recommended maintenance procedure
Engine Series	Interval	B	C	D	
All	Hours Calendar	Chart Method or 250 6 mos.	1500 1 year	4500 2 years	

Note: Under circumstances where hours of operation are not accumulated at a fast rate, use calendar time. In other words, use hours, or calendar time, whichever comes first.

*Cummins Engine Company, Inc., recommends the use of dry type air cleaners.

Maintenance Performance Record

Engine Serial No. _____ Engine Model _____

Owner Name _____ Equipment Name/Number _____

Interval Basis Mileage	[Kilometres]	Check	Mileage	[Kilometres]	Check	Other	Date	Actual Mileage	Distributor/Dealer Location/Shop	Authorized Signature
		A, B			A, B					
		A, B			A, B					
		A, B			A, B					
		A, B			A, B					
		A, B, C								
		A, B			A, B, C					
		A, B			A, B					
		A, B			A, B					
		A, B			A, B					
		A, B, C			A, B					
		A, B								
		A, B			A, B, C					
		A, B			A, B					
		A, B			A, B					
		A, B, C, D			A, B					
		A, B			A, B					
		A, B			A, B, C, D					

To prove that the Engine has been properly maintained retain records, such as work orders and receipts, showing that scheduled maintenance has been performed. The maintenance record form on this page is for that purpose.

Operation and Maintenance Construction and Industrial

Scheduled Maintenance

Schedule I, Schedule II

The following maintenance schedules should be used to establish maintenance practices for Cummins standby (GS) or continuous duty (GC) generator sets.

Schedule I is used with standby applications. Many of these installations are regulated by NFPA and/or local codes (reference NFPA No. 76A).

Standby rated generator sets are for supplying electric power in the event of normal utility power failure. No overload capability is available for this rating. This rating may be used for continuous service for as long as the emergency may last. This rating conforms with the BS 649:1958 overload rating and DIN "B" 6270.

Schedule II is used with continuous duty applications.

Continuous duty rated generator sets are for supplying electric power in lieu of commercially purchased power. Intermittent overloads up to the standby rating are allowable. This rating may be used for continuous service in commercial applications and it conforms with BS 649:1958 and DIN "A" 6270 for generator set applications.

Using The Suggested Schedule Check Sheet

Actual operating environment of the engine governs the maintenance schedule. The-suggested check sheet on the following page indicates some checks have to be performed more often under heavy dust or other special conditions.

The maintenance schedule check sheet is designed as a guide until adequate experience is obtained to establish a schedule to meet a specific operation.

A detailed list of component checks is provided through several check periods; also a suggested schedule basis is given for hours of operation, or calendar of time.

A maintenance schedule should be established using the check sheet as a guide; the result will be a maintenance program to fit a specific operation.

Cummins Standby Generator Sets

Cummins standby generator sets may be required to start and come on line in 10 seconds or less.

These engines must be equipped with engine coolant heaters capable of maintaining coolant temperature at a minimum of 100°F [38° C].

Engines subject to ambient temperatures less than 2-4 70° F [21° C] must also be equipped with a lubricating oil heater. When using a lubricating oil heater immersed in oil, the maximum surface of heater in contact with oil, should be less than 300° F [149° C] to minimize formation of hard carbon on the heating element.

Recommended wattage for the heaters when the unit is in a protected area or in an enclosure are shown in Bulletin No. 3379009, in Section 7 Miscellaneous.

Standby units should be operated once a week under a minimum of 25% of rated KW load for at least thirty minutes. During this test, the engine must reach normal operating temperature.

Cummins Continuous Duty Generator Sets

Continuous duty generator sets may be equipped with a cold starting aid. Maintenance procedures for these devices can be found in the seasonal maintenance section.

Stand-By Generator Set Maintenance

Checks	A			B	
	Daily	Weekly	Monthly	6 Mos./250 Hrs.	Annual

Engine Systems

Lubricating		Daily	Weekly	Monthly	6 Mos./250 Hrs.	Annual
Check:	-- For Leaks	•	•	•	•	•
	-- Operation of Oil Heater	•	•	•	•	•
	-- Engine Oil Level	•	•	•	•	•
	-- Hydraulic Governor Oil Level		•	•	•	•
Change:	-- Full Flow Filter				•	•
	-- By-Pass Filter				•	•
	-- Engine Oil				•	•
	-- Hydraulic Governor Oil				•	•

Cooling		Daily	Weekly	Monthly	6 Mos./250 Hrs.	Annual
Check:	-- For Leaks	•	•	•	•	•
	-- For Radiator Air Restriction			•	•	•
	-- Operation of Coolant Heater	•	•	•	•	•
	-- Hose and Connections			•	•	•
	-- Coolant Level		•	•	•	•
	-- Anti-Freeze and DCA Concentration			•	•	•
	-- Belt Condition and Tension			•	•	•
	-- Fan Hub, Drive Pulley and Water Pump			•	•	•
	-- Heat Exchanger Zinc Anode Plugs				•	•
	-- Motor Operated Louvers			•	•	•
Change:	-- DCA Water Filter				•	•
Clean:	-- Cooling System					•

Air Intake		Daily	Weekly	Monthly	6 Mos./250 Hrs.	Annual
Check:	-- For Leaks			•	•	•
	-- Air Cleaner Restriction		•	•	•	•
	-- Piping and Connections			•	•	•
Clean:	-- Crankcase Breather				•	•
	-- Or Change Air Cleaner Element				•	•

Fuel		Daily	Weekly	Monthly	6 Mos./250 Hrs.	Annual
Check:	-- For Leaks	•	•	•	•	•
	-- Fuel Level			•	•	•
	-- Governor Linkage				•	•
	-- Fuel Lines and Connections				•	•
	-- Fuel Transfer Pump			•	•	•
Drain:	-- Sediment from Tanks				•	•
Change:	-- Fuel Filters				•	•
	-- Float Tank Breather					•

Exhaust		Daily	Weekly	Monthly	6 Mos./250 Hrs.	Annual
Check:	-- For Leaks			•	•	•
	-- For Exhaust Restriction			•	•	•
Drain:	-- Condensate Trap			•	•	•
Tighten:	-- Exhaust Manifold and Turbocharger Capscrews					•

Electrical		Daily	Weekly	Monthly	6 Mos./250 Hrs.	Annual
Check:	-- Battery Charging System		•	•	•	•
	-- Battery Electrolyte Level and Specific Gravity			•	•	•
	-- Safety Controls and Alarms				•	•

Engine Related		Daily	Weekly	Monthly	6 Mos./250 Hrs.	Annual
Check:	-- For Unusual Vibration		•	•	•	•
	-- Tighten Mounting Hardware					•
Clean:	-- Engine					•

Main Generator		Daily	Weekly	Monthly	6 Mos./250 Hrs.	Annual
Check:	-- Air Inlet and Outlet for Restriction			•	•	•
	-- Windings and Electrical Connections					•
	-- Operation of Generator Heater Strips					•
Grease:	-- Bearing					•
	-- Measure and Record Generator Winding Resistance					•
Check/Clean:	-- Generator				•	•

Switchgear		Daily	Weekly	Monthly	6 Mos./250 Hrs.	Annual
Check:	-- Start Switch in Automatic	•	•	•	•	•
	-- Instrumentation					•
	-- Power Distribution Wiring and Connections				•	•
	-- Power Circuit Breaker				•	•
	-- Transfer Switch				•	•

Operational Procedures		Daily	Weekly	Monthly	6 Mos./250 Hrs.	Annual
Perform:	-- Operational Load Test		•	•	•	•
	-- Generator Load Bank Test					•
Check:	-- Service Tool Availability				•	•

Continuous Duty Generator Set Maintenance

		Checks	A	B	C	D		
			Daily	6 Mos./ 250 Hrs.	1 Year/ 1500 Hrs.	2 Years/ 4500 Hrs.	Annual	
Engine Systems								
Lubricating								
Check:	— For Leaks		•	•	•	•	•	
	— Operation of Oil Heater						•	
	— Engine Oil Level		•	•	•	•	•	
	— Hydraulic Governor Oil Level		•	•	•	•	•	
	Change:	— Full Flow Filter			•	•	•	•
		— By-Pass Filter			•	•	•	•
		— Engine Oil			•	•	•	•
	— Hydraulic Governor Oil			•	•	•	•	
Cooling								
Check:	— For Leaks		•	•	•	•	•	
	— For Radiator Air Restriction		•	•	•	•	•	
	— Operation of Coolant Heater						•	
	— Hose and Connections		•	•	•	•	•	
	— Coolant Level		•	•	•	•	•	
	— Anti-Freeze and DCA Concentration			•	•	•	•	
	— Belt Condition and Tension		•	•	•	•	•	
	— Fan Hub, Drive Pulley, and Water Pump			•	•	•	•	
	— Heat Exchanger Zinc Anode Plugs						•	
	Change:	— DCA Water Filter			•	•	•	•
Clean:		— Cooling System					•	
Air Intake								
Check:	— For Leaks		•	•	•	•	•	
	— Air Cleaner Restriction		•	•	•	•	•	
	— Piping and Connections			•	•	•	•	
Clean:	— Crankcase Breather			•	•	•	•	
	— Or Change Air Cleaner Element			•	•	•	•	
Fuel								
Check:	— For Leaks		•	•	•	•	•	
	— Governor Linkage			•	•	•	•	
	— Fuel Lines and Connections			•	•	•	•	
	— Sediment from Tanks		•	•	•	•	•	
Change:	— Fuel Filters			•	•	•	•	
Clean:	— Float Tank Breather			•	•	•	•	
	— and Calibrate Injectors					•	•	
	— and/or Calibrate Fuel Pump					•	•	
	— Adjust Injectors and Valves				•	•	•	
Exhaust								
Check:	— For Leaks		•	•	•	•	•	
	— For Exhaust Restriction				•	•	•	
Clean:	— Turbocharger Comp. Wheel and Diffuser					•	•	
Check:	— Turbocharger Bearing Clearances					•	•	
	— Tighten Exhaust Manifold and Turbocharger Capscrews					•	•	
Engine Related								
Check:	— For Unusual Vibration		•	•	•	•	•	
	— Vibration Damper						•	
	— Crankshaft End Play						•	
	— Tighten Mounting Hardware						•	
Clean:	— Engine					•	•	
Grease:	— Fan Pillow Block Bearings			•	•	•	•	
Electrical								
Check:	— Battery Charging System						•	
	— Battery Electrolyte Level						•	
	— Specific Gravity			•	•	•	•	
	— Glow Plug						•	
	— And Clean Magnetic Pickup Unit					•	•	
	— Safety Control and Alarms				•	•	•	
Main Generator								
Check:	— Air Inlet and Outlet for Restriction		•	•	•	•	•	
	— Windings and Electrical Connections		•	•	•	•	•	
	— Operation of Generator Heater Strips						•	
Grease:	— Bearing				•	•	•	
Clean:	— Generator						•	
Switchgear								
Check:	— Power Distribution Wiring and Connections		•	•	•	•	•	
	— Power Circuit Breaker				•	•	•	
	— Transfer Switch				•	•	•	
Operational Procedures								
	Perform: Generator Load Bank Test						•	

"A" Maintenance Checks-Daily**Make a Daily Report of Engine Operation to the Maintenance Department**

The engine must be maintained in top mechanical condition if the operator is to get optimum satisfaction from its use. The maintenance department needs daily running reports from the operator to make necessary adjustments in the time allotted and to make provisions for more extensive maintenance work as the reports indicate the necessity.

Comparison and intelligent interpretation of the daily report along with a practical follow-up action will eliminate most failures and emergency repairs.

Report to the Maintenance Department any of the following conditions:

1. Low lubricating oil pressure.
2. Low power.
3. Abnormal water or oil temperature.
4. Unusual engine noise.
5. Excessive smoke.
6. Excessive use of coolant, fuel or lubricating oil.
7. Any fuel, coolant or lubricating oil leaks.

Check Engine

Check Engine Oil Level

Note: Some dipsticks have dual markings, with high and low-level marks: static oil marks on one side, engine running at low idle speed marks on opposite side. Be sure to use the proper scale.

1. Check the oil level with the dipstick oil gauge located on the engine. Fig. 2-1. For accurate readings, the oil level should not be checked for approximately 15 minutes after the engine is shut-down.

Keep the dipstick with the oil pan with which it was originally shipped. Keep the oil level as near the "H" (high) mark as possible.

Caution: Never operate the engine with the oil level below the "L" (low) mark or above the "H" (high) mark.

2. If necessary, add oil of the same quality and brand as already in the engine. See Section 3.

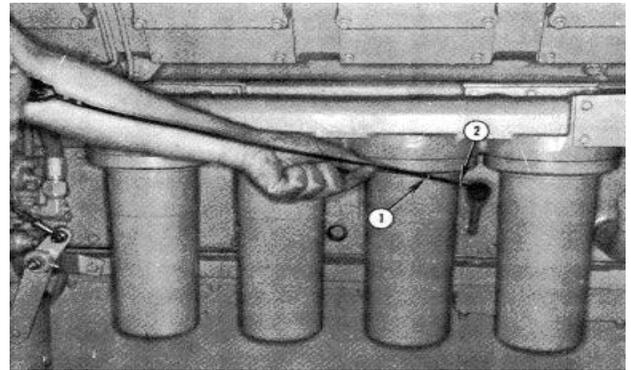


Fig. 2-1, (K21901). Checking engine oil level

Check Engine Coolant Level

Keep the cooling system filled to the operating level. Check the coolant level daily or at each fuel fill point. Investigate for causes of coolant loss. Check the coolant level only when the system is cool.

Check Belts

Visually check belts for looseness. If there is evidence of belt slippage adjust as follows: Using the appropriate gauge, Fig's. 2-2 and 2-3, check.

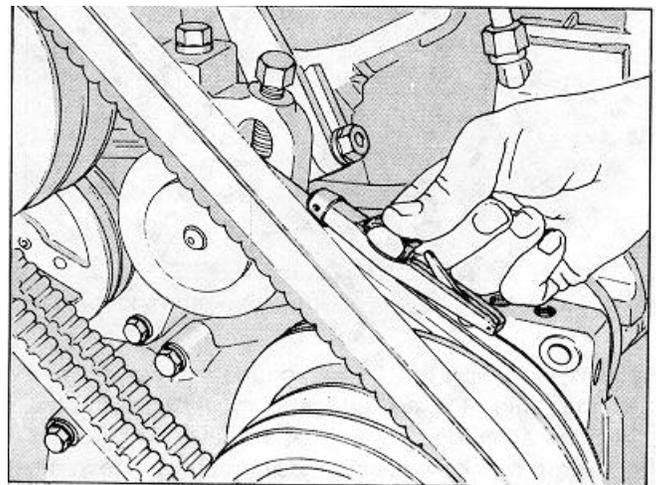


Fig. 2-2, (OM1014L). Checking belt tension with a Kriket gauge

Table 2-1: Belt Tension (Lbs.)

Belt Width Inches	Belt Gauge	New Belt* Tension (lb.) + 10	Minimum Tension (lb.)	• Used Belt Installation Tension • If Below Min. Tension, Retention to (lb.) + 10
.380	ST-12748	140-150	60	100
.440	CAN-292	140-150	60	100
1/2		140-150	60	100
11/16		160-170	60	100
3/4	ST-1138	160-170	60	100
7/8		160-170	60	100
K-Sect. 5 Rib V-Ribbed	ST-1293	125-135	60	100
K-Sect 6, Rib- V-Ribbed	ST-1293	150-160	70	120
K;Sect 10 Rib V-Ribbed	NUA	250-260	140	200

* Used belts should be retensioned to values listed in this column.

Note: A belt is considered as used. if it has been in operation for a period of time of at least 5 minutes.

and/or adjust belts to the tension as indicated in Table 2-1.

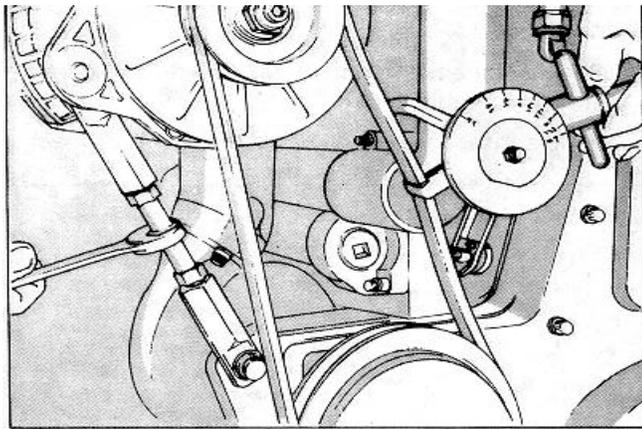


Fig. 2-3, (OM1015L). Adjusting belt tension with ST-1293

Note: When using the "Krikit" gauge the correct belt tension reading for the belt tested must be read at the point where the top of the black indicator arm crosses the bottom numbered scale. Position the gauge in the center of the belt between two pulleys. The flange at the side of the gauge should be flat against the edge of the belt.

Inline Engine Water Pump Belts (No Idler)

1. Eccentric water pump adjustment.
 - a. Loosen the water pump clamp ring to allow the pump body to turn.
 - b. Loosen the pump body by pulling up on the belts. A sharp jerk may be required.
 - c. Insert a bar in the water pump body slots and rotate the pump body counterclockwise to tighten the belts.

Note: Do not adjust to final tension at this time.

- d. Snug the clamp ring capscrew farthest from the belts, on the exhaust side to 5 ft-lbs [7 N m].
- e. Snug the two capscrews above and below the first one to 5 ft-lbs [7 N m].
- f. Finish tightening by alternating from side to side in 5 ft-lbs [7 N.m] increments to a final torque of 12 to 15 ft-lbs [16 to 20 N m].

- g. Check the belt tension.

Final belt tension was not obtained by adjustment alone. The water pump body was pulled straight by snugging the capscrews in the order described, thus increasing the belt tension to the final value.

- 2. Adjustable (split) pulley water pumps, V-903 Engines only.

- a. Remove the capscrews joining the sheave(s) of the pulley.

Note: Clean the capscrew threads and holes in the sheaves thoroughly to avoid capscrew breakage during reassembly.

- b. The outer half of the pulley is screwed onto the hub extension of the inner half. Some pulleys are provided with flats, and some with lugs for barring.
- c. Bar the engine over to roll the belt outward on the pulley as the outer half is turned in.
- d. Adjust the belt(s) to the tension indicated in Table 2-1.
- e. Turn the outer sheave(s) in enough to align the capscrew holes.
- f. Start the capscrews and tighten alternately and evenly. Final tension is: 5/16-18 capscrew, 10 to 12 ft-lbs [14 to 16 N•m] 3/8-16 capscrew, 17 to 19 ft-lbs [23 to 26 N om] g. Bar the engine over one or two revolutions to seat the belt.
- h. Recheck the belt tension.

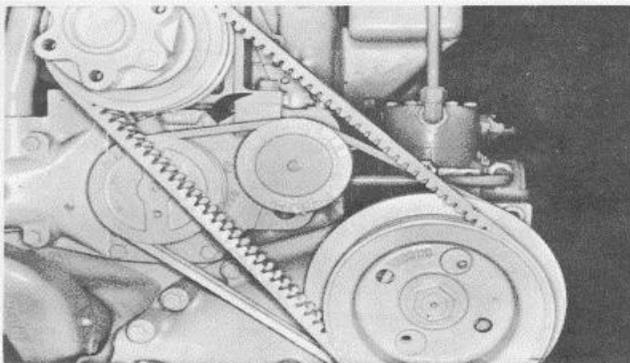


Fig. 2-4, (N11974). Water pump with idler

Inline Engine Water Pump Belts (With Idler)

1. Loosen the capscrews and lockwashers or locknut securing the idler pulley to the bracket or water pump. Fig. 2-4.
2. Using a pry bar (NTA) or adjusting screw (FFC) adjust the idler pulley until the proper belt tension is indicated on the gauge. See Table 2-1.
3. Secure the idler pulley or bracket in position by tightening the locknut or capscrews and lockwashers to 45 to 55 ft-lbs [61 to 75 N m] torque.

Note: The self tensioning idler on V-1710 belt driven water pumps requires no adjustment or belt tension check.

Fan Drive Belts

1. Loosen the large locking nut on the fan hub shaft or the capscrews securing the fan hub shaft to the mounting bracket. The fan hub will fall out of line when this is done.
2. Turn the adjusting screw to increase the belt tension.
3. Tighten the locknut or capscrews until the fan hub is straight. Snug the nut to maintain the hub in proper alignment with the fan hub bracket.

Caution: Do not adjust to full tension with the adjusting screw, as this would result in overtightening.

4. Belt tension should read as indicated in Table 2-1 on applicable gauge.
5. Tighten NH/NT Engines locknut to 400 to 450 ft-lbs [542 to 610 N m]; then back off 1/2 turn. Tighten the four 1/2 inch capscrews, Fig. 2-5, on NTC-350 FFC Engines to 75 to 85 ft-lbs [101 to 115 N.m].

On V-903 Engines tighten capscrews to 75 ft-lbs [102 N.m] or single nut to 450 ft-lbs [610 N.m].

6. Recheck the belt tension.
7. Back out the adjusting screw one-half turn to prevent breakage.

Note: The self tensioning backside idler on KT/KTA2300 and KTA-3067 belt driven fan requires no belt tension check.

Generator/Alternator Belts

Belt tension should be as indicated in Table 2-1 when measured with the applicable gauge.

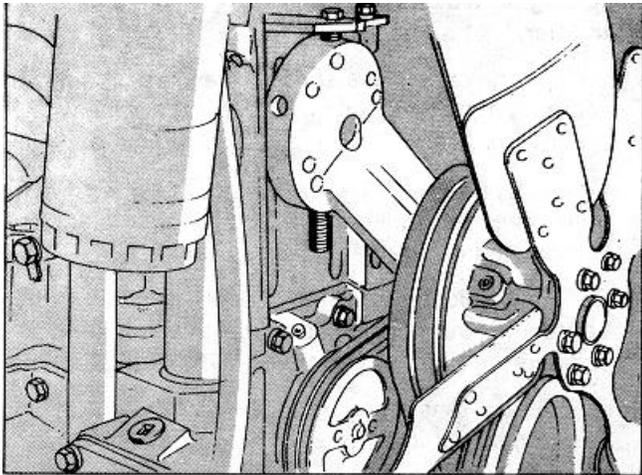


Fig. 2-5, (OM10161). Fan hub installation, NT-350 FFC

Belt Installation.

If the belts show wear or fraying, replace as follows:

1. Always shorten the distance between the pulley centers so the belt can be installed without force.

Never roll a belt over the pulley and never pry it on with a tool such as a screwdriver. Either of these methods will damage the belts and cause early failure.

2. Always replace the belts in complete sets. Belts riding depth should not vary over 1/16 in [1.6 mm] on matched belt sets.
3. Pulley misalignment must not exceed 1/16 in [1.6 mm] for each ft [0.3 m] of distance between the pulley centers.
4. Belts should not bottom on the pulley grooves nor should they protrude over 3/32 in [2.4 mm] above the top edge of the groove.

5. Do not allow belts to rub any adjacent parts
6. Adjust belts to the proper tension.

Readjusting New Belts.

All new belts will loosen after running for 5 minutes and must be readjusted to "belt tension after run-in" Ref. Table 2-1.

Check Oil Bath Cleaner Oil Level.

Daily check oil level, Fig. 2-6, in the oil bath air cleaner to be sure the oil level in the cup is at the indicated mark. Refill as required.

*Cummins Engine Company, Inc. recommends the use of dry type air cleaners.

Check for Damage.

Visually check the fuel system, etc., for misadjustment or tampering; check all connections for leaks or damage. Check the engine for damage; correct as necessary.

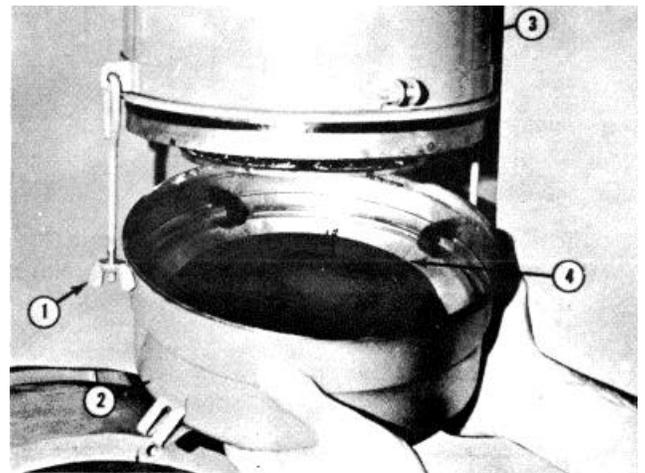


Fig. 2-6, (NI1001). Checking oil level in air cleaner

"A" Maintenance Checks-Weekly

Repeat Daily Checks

Check Air Cleaner

Clean Pre-Cleaner and Dust Pan

Under extremely dirty conditions an air pre-cleaner may be used. Clean the pre-cleaner jar and dry-type air cleaner dust pans daily or more often, as necessary, depending on operating conditions.

Check Inlet Air Restriction

Mechanical Indicator

A mechanical restriction indicator is available to indicate excessive air restriction through a dry-type air cleaner. This instrument can be mounted in the air cleaner outlet or on the vehicle instrument panel. The red flag (1, Fig. 2-7) in the window gradually rises as the cartridge loads with dirt. After changing or replacing the cartridge, reset the indicator by pushing the reset button (2).

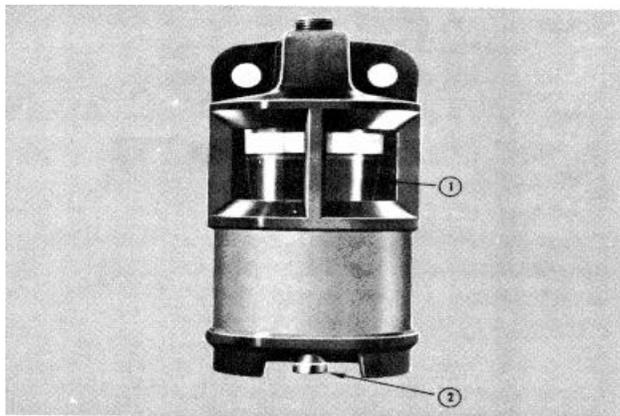


Fig 2-7, (CGS-20). Air inlet restriction indicator

Note: Never remove the felt washer from the indicator. It is necessary to absorb moisture.

Vacuum Indicator

Vacuum switches, Fig. 2-8, are available which actuate a warning light on the instrument panel when the air restriction becomes excessive.

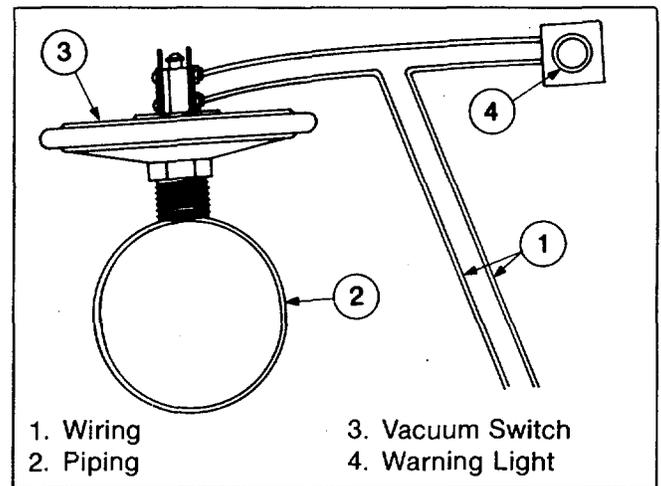


Fig. 2-8, (N21905). Vacuum switch to check air inlet

1. Air restriction on turbocharged engines must not exceed 25 inches [635 mm] of water or 1.8 inches [46 mm] of mercury under full power conditions.
2. Naturally aspirated engine air restriction must not exceed 20 inches [508 mm] of water or 1.5 inches [38 mm] of mercury at air intake manifold at rated speed.

Clean or Replace Air Cleaner Elements

The paper element in a dry-type air cleaner, Fig's. 2-9, 2-10, 2-11 and 2-12, may be cleaned several times by using air to blow off dirt or by washing with nonsudsing household detergent and water at 120 to 1400F [49 to 600C], then drying with compressed air, approximately 30 psi [306 kPa]. Do not hold the air jet too close to the paper element.

Elements that have been cleaned several times will finally clog and air flow to the engine will be restricted. After cleaning, check the restriction as previously described and replace the element if necessary.

Caution: Holes, loose end seals, dented sealing surfaces and other forms of damage render the cleaner inoperative and require immediate element replacement.

To change the element:

1. Loosen the wing nut (1, Fig. 2-9) securing the

**Operation and Maintenance
Construction and Industrial**

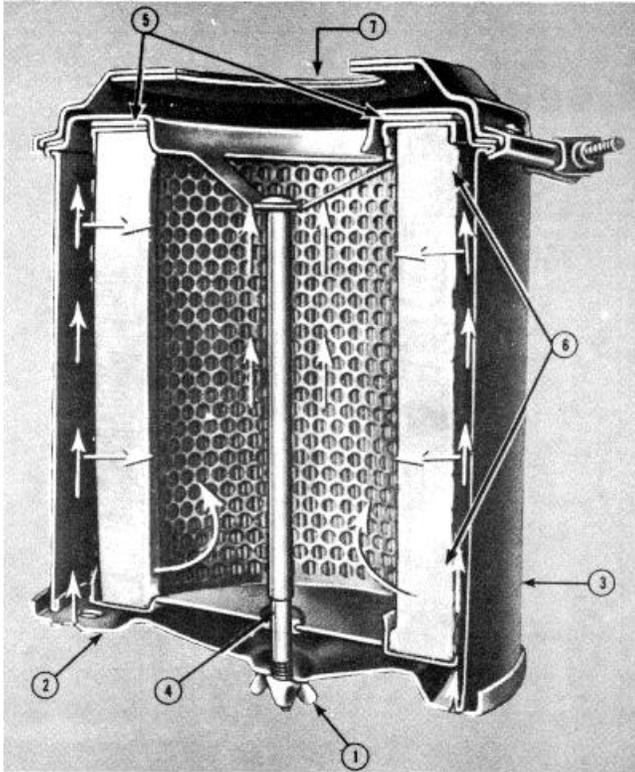


Fig. 2-10, (OM1031L). Changing air cleaner element

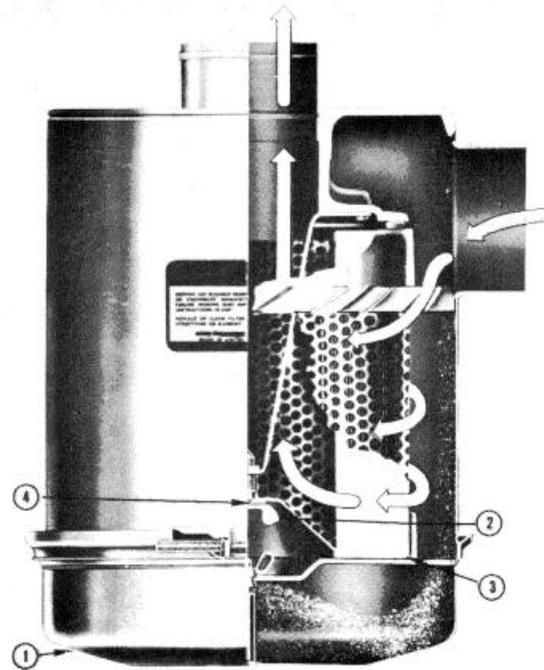


Fig. 2-11, (OM1029L). Air cleaner-heavy duty

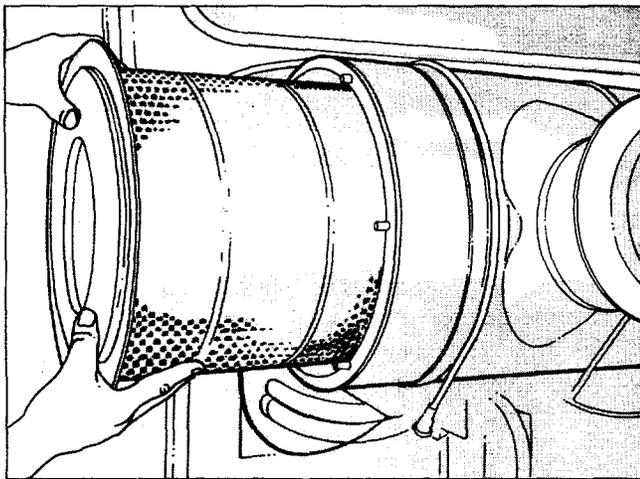


Figure 2-10, (OM1030L). Air cleaner-heavy duty element

- bottom cover (2) to the cleaner housing (3).
Remove the cover.
2. Pull the element (6) down from the center bolt (4).

Caution: Pull the cover and the element straight out when removing them from the housing, Fig. 2-10, to avoid damage to the element.

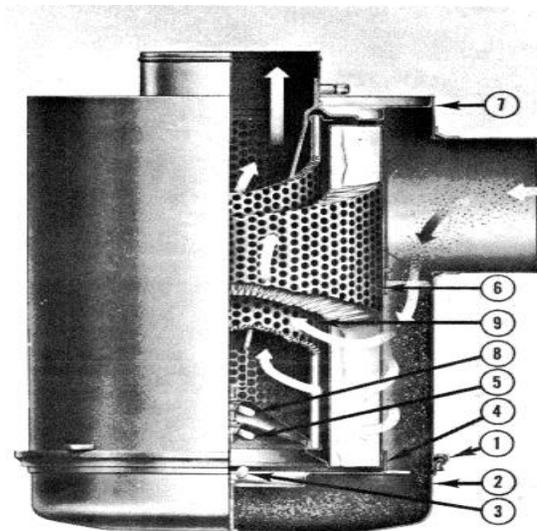


Fig. 2-12, (OM1030L). Air cleaner-heavy duty dual element

3. Remove the gasket (5) from the outlet end (7) of the housing.

When installing the element, make sure it seats on the gasket at the air cleaner outlet end.

Heavy Duty Dry-Type Air Cleaners

Heavy duty air cleaners (single and dual types) combine centrifugal cleaning with element filtering, Fig's. 2-11 and 2-12, before air enters the engines.

Before disassembly, wipe dirt from the cover and the upper portion of the air cleaner. To clean single or dual types:

1. Loosen the wing bolt, remove the band securing the dust pan (1, Fig. 2-11), (2, Fig. 2-12).
 2. Loosen the wing nut (2, Fig. 2-11 and 3, Fig. 2-12), remove the dust shield (3, Fig. 2-11), (4, Fig. 2-12), from the dust pan (1, Fig. 2-11), (2, Fig. 2-12), clean the dust pan and shield.
 3. Remove the wing nut (2, Fig. 2-11), (5, Fig. 2-12) securing the air cleaner primary element (6, Fig. 2-12) in the air cleaner housing, inspect the rubber sealing washer on the wing nut (4, Fig. 2-11), (5, Fig. 2-12).
 4. Blow out the element from the clean air side with compressed air not exceeding 30 psi [207 kPa].
 5. Wash the element with nonsudsing household detergent and water, 120 to 140° F [49 to 60° C]. Dry with compressed air, 30 psi [207 kPa].
 6. Inspect the element after cleaning.
 7. Install a new or the cleaned primary element.
 8. Be sure the gasket washer is in place under the wing nut before tightening.
 9. Reassemble the dust shield and dust pan, position them to the air cleaner housing and secure with the band.
 10. On the dual element type Cyclopac cleaner:
 - a. Check the air restriction indicator. If the air restriction is excessive, disassemble the air cleaner, remove the wing nut (8, Fig. 2-12), and replace the safety element (9).
 - b. Reassemble the air cleaner as described in "Steps 8 and 9" above. Cartridge Type Air Cleaner Element
1. Loosen the wing nuts (4, Fig. 2-13 or 2-14) on the air cleaner housing (5) to remove the pre-cleaner

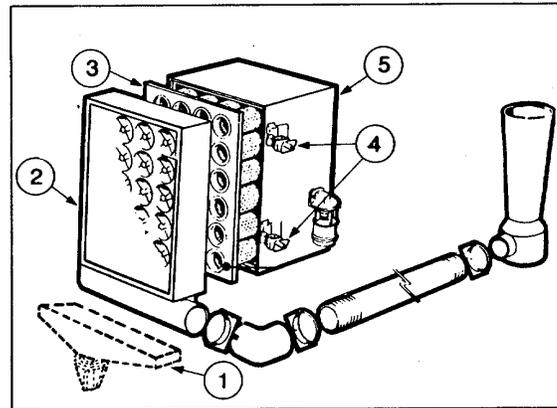


Fig 2-13. (N21026). Air cleaner - cartridge type (two stage)

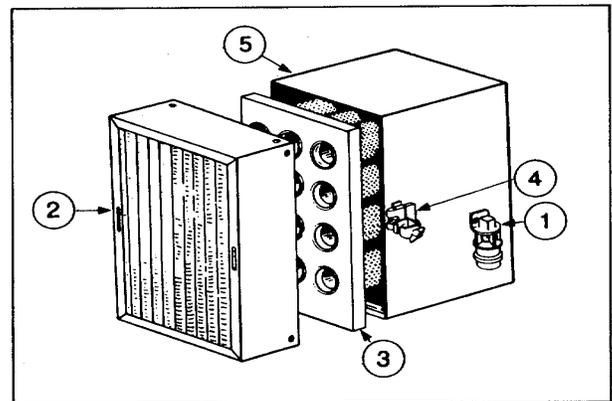


Fig. 2-14, (V11009). Air cleaner- cartridge type (single stage)

panel with the dust bin (1). To remove the pre-cleaner panel (2) equipped with an exhaust aspirator loosen the "U" bolt clamp securing the pre-cleaner to the aspirator tubing.

2. Remove the dirty Pamic cartridge (3), by inserting your fingers in the cartridge opening (loosen all four corners of the cartridge, one at a time) and pulling it straight out.

With the larger cartridge, it may be necessary to break the seal along the edges of the cartridge. After the seal has been broken, pull the cartridge straight out and slightly up so the cartridge will clear the sealing frame and edges of the air cleaner housing.

Cleaning and Inspection

1. Clean the pre-cleaner openings (2) of all soot, oil film and any other objects that may have become lodged in the openings. Remove any dust or dirt in

Operation and Maintenance Construction and Industrial

the lower portion of the pre-cleaner and aspirator tubing. Inspect the inside of the air cleaner housing for foreign material.

2. Inspect the dirty cartridge for soot or oil. If there is soot inside the Pamic tubes, check for leaks in the engine exhaust system, exhaust "blow-back" into the air intake and exhaust from other equipment. If the cartridge appears "oily", check for fumes escaping from the crankcase breather. Excessive oil mist shortens the life of any dry-type cartridge. Troubleshooting at this point can appreciably lengthen new cartridge life.
3. It is not recommended to clean and reuse the cartridge. When returned to service, life expectancy of a paper cartridge will be only a fraction of the original service life.
4. Inspect clamps and flexible hose or tubing to be sure all fittings are air tight on cleaners with exhaust aspirators.
5. The pre-cleaner dust bin is self-cleaning.

Assembly

1. Inspect the new filter cartridge for shipping damage before installing.
2. To install a new cartridge, hold the cartridge (3, Fig. 2-13 and 2-14) in the same manner as when removing it from the housing. Insert the clean cartridge into the housing; avoid hitting the cartridge tubes against the sealing flange on the edges of the air cleaner housing.
3. The cleaner requires no separate gaskets for seals; therefore, care must be taken inserting cartridge to insure a proper seat within the cleaner housing. Firmly press all edges and corners of the cartridge with your fingers to effect a positive air seal against the sealing flange of the housing. Under no circumstances should the cartridge be pounded or pressed in the center to effect a seal.
4. Replace the pre-cleaner panel (2) and tighten the wing nuts (4) by hand, for final tightness turn 1-1/2 to 2 turns with a small adjustable wrench. Do not overtighten. On a pre-cleaner with an exhaust aspirator, assemble the aspirator tube to the pre-cleaner panel and tighten the "U" bolt.
5. Care should be taken to keep the cleaner face unobstructed.

Change Oil Bath Air Cleaner Oil

Before dirt build-up reaches 1/2 inch [12.7 mm], remove the oil cup from the cleaner. Discard the oil and wash the cup in cleaning solvent or fuel oil.

Note: During wet weather and in winter months, changing of the oil is equally as important as during

dusty weather since the air cleaner inlet may be located in an air stream which carries moisture into the cleaner.

Fill the oil cup to the level indicated by the bead on the side with clean, fresh oil of the same grade as that in the crankcase and assemble it to the cleaner. In extremely cold weather a lighter grade may be necessary. A straight mineral, non-foaming detergent, or non-foaming additive oil may be used in oil bath air cleaners.

Caution: Never use dirty oil or used oil.

Drain Air Tanks

In cold weather, condensed moisture in the air tanks and lines may freeze and make controls useless. Drain the air tanks to keep all water out of the compressed air system.

Drain Sediment from Fuel Tanks

Loosen the fuel tank drain cock or plug, if used, and drain approximately 1 cup of fuel to remove water and sediment. Close the drain cock or plug.

Fuel/Water Filter Separator

If more moisture than usual is present when checking the fuel tanks, it may be advisable to install a water separator.

Contact the nearest Cummins Dealer for a Fleetguard water separator that meets requirements.

Drain plugs are located in the bottom of some fuel filter cases and in the sump of some fuel supply tanks. More condensation of water vapor occurs in a partially filled fuel tank than in a full one. Therefore, fuel supply tanks should be kept as nearly full as possible. Warm returning fuel from the injectors heats the fuel in the supply tank. If the fuel level is low in cold weather, the fact that the upper portion of the tank is not being heated by returning fuel tends to increase condensation. In warm weather both the supply tank and the fuel are warm. In the night, however, cool air lowers the temperature of the tank much more rapidly than the temperature of the fuel. Again this tends to increase condensation.

Engine Front Trunnion

If used, the engine front trunnion mount should be lubricated with grease meeting specifications as outlined in Section 3.

"B" Maintenance Checks

B-Check

At each "B" Maintenance Check, perform all the "A" Checks in addition to the following.

Lubricating Oil Change Intervals

Note: If the lubricating oil is drained from the oil pan to make an engine repair, new oil must be used. Do not use oil after it has been drained from the oil pan.

Maintaining a proper "B" maintenance check interval is a very important factor in preserving the integrity of an engine. Lubricating oil contamination is the direct result of engine operation and the load factor involved. The amount of contamination generated depends on the amount of fuel the engine consumes. Laboratory and field tests have determined that, when using the recommended quality oils and filters, a turbo-charged engine in good condition and equipped with a bypass oil filter can consume 255 gallons of fuel for each gallon of oil in the oil system before the maximum level of oil contamination is reached. Based on these findings, Cummins Engine Company, Inc., recommends that the "B" check interval be determined by the use of the "Chart Method". At each "B" check interval it is recommended to change the full-flow filter and the bypass filter.

The total lubricating system capacity in gallons can be determined by adding the high level of the lubricating oil in the oil pan and the capacities of the full-flow and bypass filters. All lubricating oil systems must be rounded to the nearest gallon when applied to the chart. Table 2-2 lists the capacities of the full-flow and bypass filter elements.

Chart Method

From laboratory and field tests we know that the maximum contamination level for a gallon of oil is reached when 255 gallons of fuel is consumed in a turbocharged engine or 280 gallons of fuel in a naturally aspirated engine. The 255 or 280 figure is the constant used in the equation for the oil change period.

The following illustration is how to use the chart method to determine the recommended oil change interval:

Table 2-2: Lubricating Oil Filter Elements

Description of Filter Capacity (Element P/N)	Capacity (Gals.)	Engine Family
Full-flow (LF516)	0.93	All Engines (except V-378 and V-504)
Full-flow (LF613)	0.83	V-378 & V-504 Only
Full-flow spin-on (LF670)	0.80	All Engines (Optional on V-555)
Full-flow (spin-on short) (LF670-SC)	0.65	Standard on All Small Vee
Bypass, 750 in3 (LF750-A)	2.91	All Engines (Except Small Vee)
Bypass, 750 in3 (LF750-C)	2.91	All Engines (Except Small Vee)
Bypass, 750 in3 (LF750)	2.91	All Engines (Except Small Vee)
Bypass, 500 in3 (LF500)	2.25	Small Vee Only
Bypass, spin-on (LF777)	0.70	C & I Engines and Small Vee
Full-flow Small spin-on (LF734)	0.50	Standard on All Small Vee (Will replace LF670-SC)

Assume a VT-1710 engine which has the following capacities:

Lubricating Oil Pan Capacity	=	18 gallons
Full-Flow Filter (3)	=	2.79 gallons
Bypass Filter 750 in3 (2)	=	5.82 gallons
Total Lubricating Oil System Capacity	=	26.61-27 gallons

Round this capacity to the nearest whole gallon and select the chart entitled "Off Highway Turbocharged with By-Pass Filter" "Lube System Capacity-27 gallons."

Also assume the average fuel consumption = 17.5 gallons per hour and the average oil consumption = 8 hours per quart.

To read the chart.

**Operation and Maintenance
Construction and Industrial**

Change Period = Constant x fuel consumed x the oil available.
 Oil Available = Oil system capacity + one-half the make-up oil added in a given period.
 Oil Added = Change Interval
 Oil Consumption Rate
 Change Period = $\frac{\text{Constant} \times \text{fuel consumed} \times [\text{the system capacity} + \text{one-half (the Change Period)}]}{\text{(Oil Consumption Rate)}}$

Solving this equation for the oil change period gives the equation which is used in developing the Chart Method.


Change Period = $\frac{\text{Constant} \times \text{fuel consumed} \times \text{oil consumption} \times \text{system capacity}}{\text{Oil consumption} - \text{one-half (constant} \times \text{fuel consumed)}}$

1. The numbers along the left side of the chart represent fuel consumption in gallons per hour. Divide the grid between "10" and "20" in 10 equal parts to find the point for fuel consumption.
2. Beginning at "17.5" (fuel consumption), draw a line from left to right to the curve "8". This curve represents oil consumption at the rate of 8 hours per quart.
3. From the point on the curve "8", draw a line perpendicular to the bottom of the chart. The numbers across the bottom of the chart represent the oil change interval in hours.
4. The perpendicular line from the curve "8" intersects the bottom line of the chart between "500" and "600". Divide the grid in 5 equal parts to find the point for the recommended oil change interval. In this example the recommended oil change interval is 505 hours.

- b. Select a group lube oil consumption for entering the chart that is halfway between the average lube oil consumption and the lowest oil consumption in the group.
4. Read the appropriate chart for each group using the fuel consumption determined in 2b and the lube oil consumption determined in 3b. The oil change interval determined in this manner should be applied to the entire group.
5. Since some will have more than one group of engine models, a change interval should be determined for each group. In some cases it may be wise to divide some groups into sub-groups (such as older NTC-290's and newer Formula 290's) for which a change interval is determined.
6. Practically, now, a manager must review the oil change intervals determined for each group or

Since it is not practical with a group of engines to use a different oil change interval for each engine based on the chart method, Cummins recommends that you use the chart method in the following manner:

1. Divide the engines into groups by engine model (engines with the same lube system capacity).
- 2a. Determine the average fuel consumption for all the engines in each group.
 - b. Select a group fuel consumption, for entering the chart, that is halfway between the average fuel consumption and the highest fuel consumption in the group.
- 3a. Determine the average lube oil consumption for all the engines in the group.

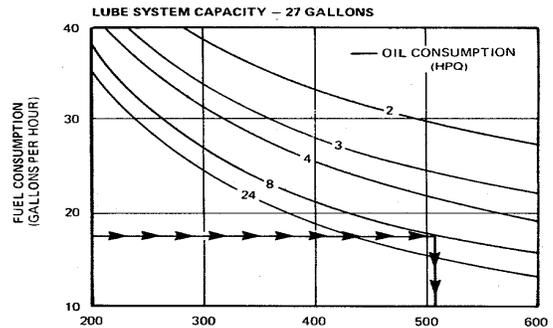

OIL CHANGE INTERVALS

subgroup; consider the other items in his preventative maintenance schedule; consider his own past practice; and select an oil change interval which he feels is the best compromise.

Note: Cummins Engine Co., Inc., does not recommend exceeding 25,000 miles and/or 600 hours on oil change intervals. Therefore, the charts are limited to 25,000 miles or 600 hours and must not be extended.





The charts for determining the recommended oil change intervals are included in the following pages.

Chart Method Alternative

As an alternative to the Chart Method for determining the "B" maintenance check interval, Cummins Engine Co., Inc., recommends that the "B" check be performed every 10,000 miles, 250 hours or 6 months.





Note: Perform the "B" check in 6 month intervals for engines in emergency or standby operations and any other operation where less than the recommended miles or hours have been accumulated in a 6 month interval.

**Operation and Maintenance
Construction and Industrial**

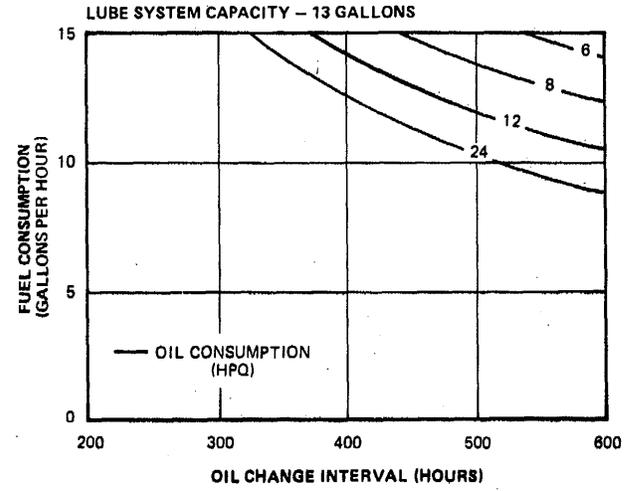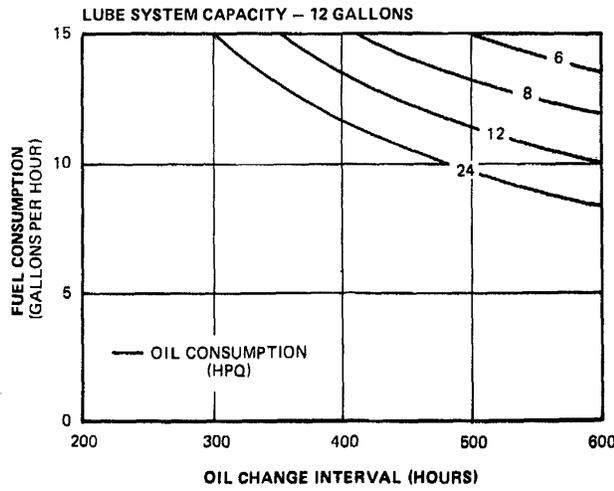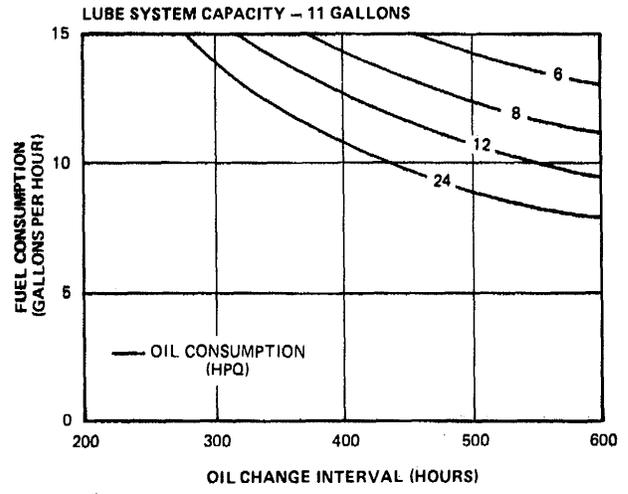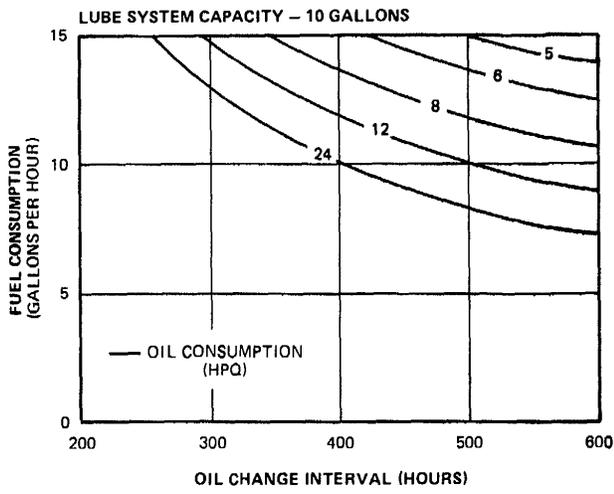





OFF HIGHWAY - NATURALLY ASPIRATED WITH BY-PASS FILTER

Maintenance Instructions

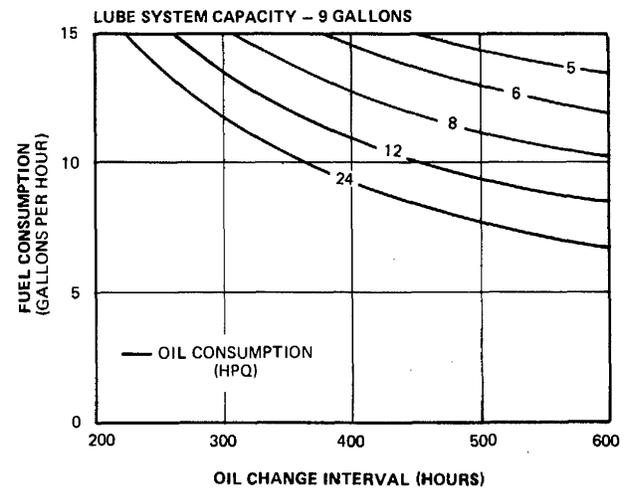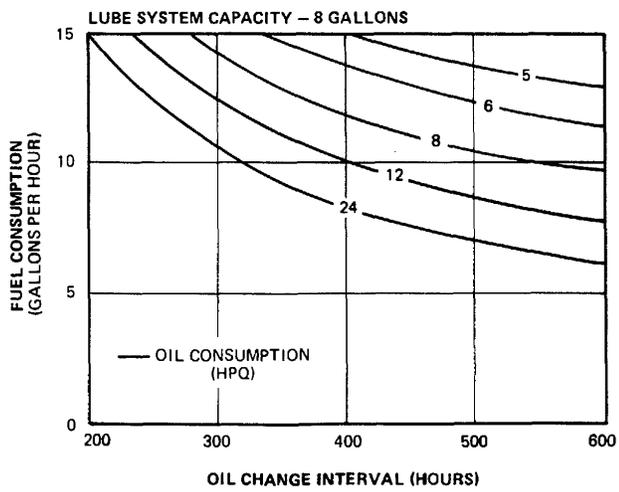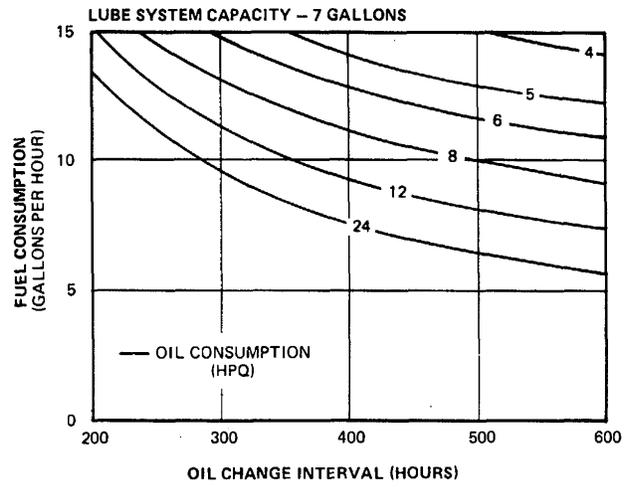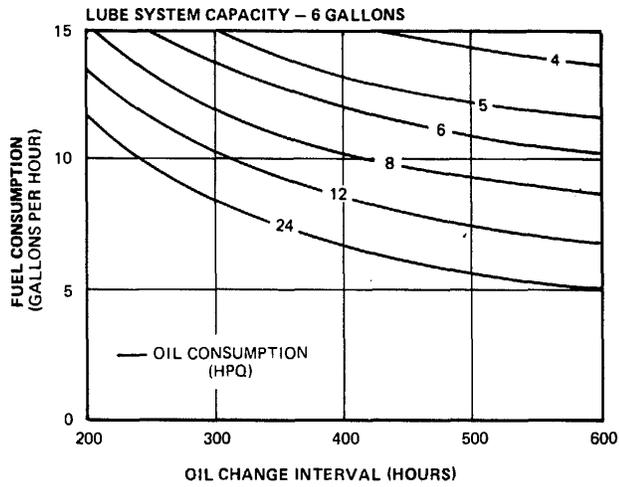





OFF HIGHWAY - NATURALLY ASPIRATED WITH BY-PASS FILTER

**Operation and Maintenance
Construction and Industrial**

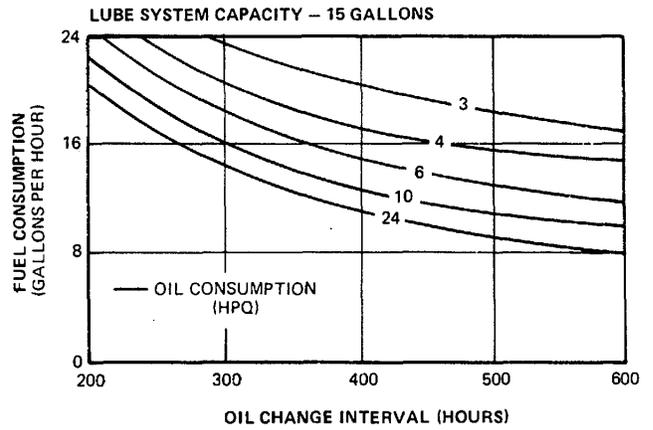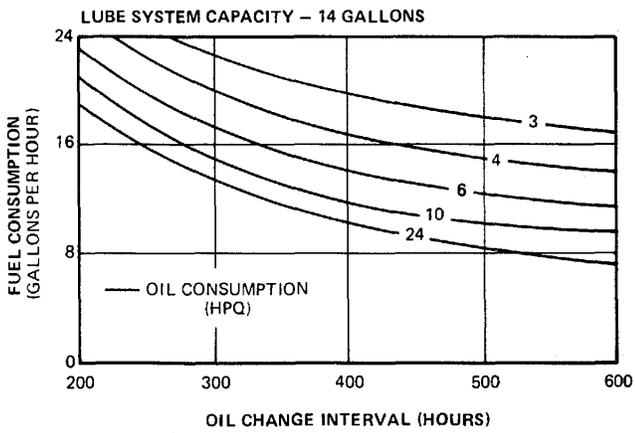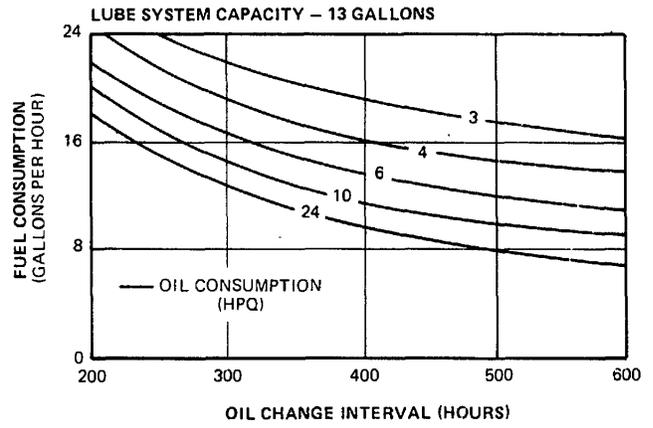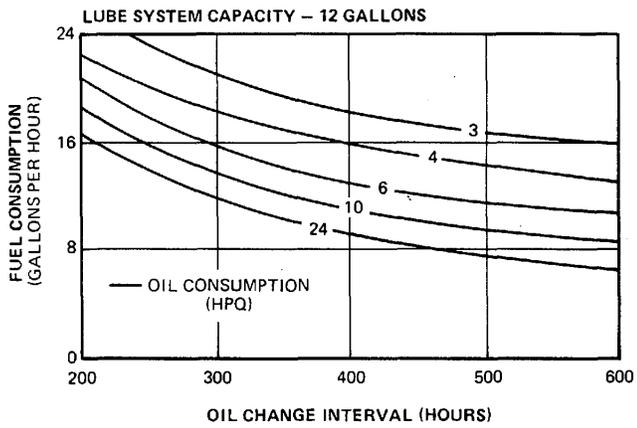





OFF HIGHWAY - TURBOCHARGED WITH BY-PASS FILTER

Maintenance Instructions

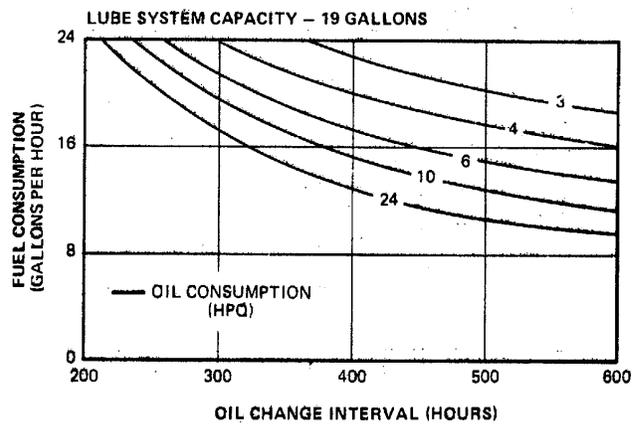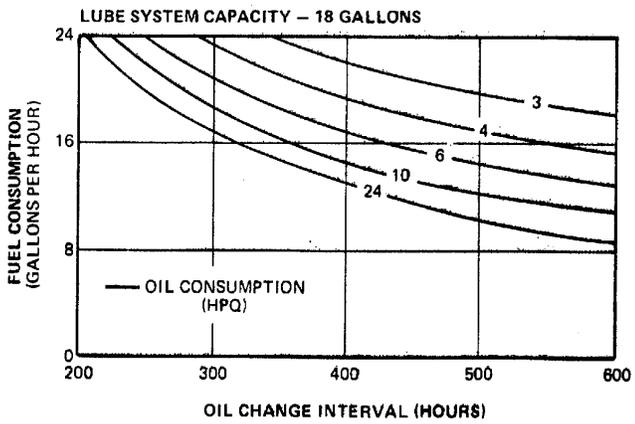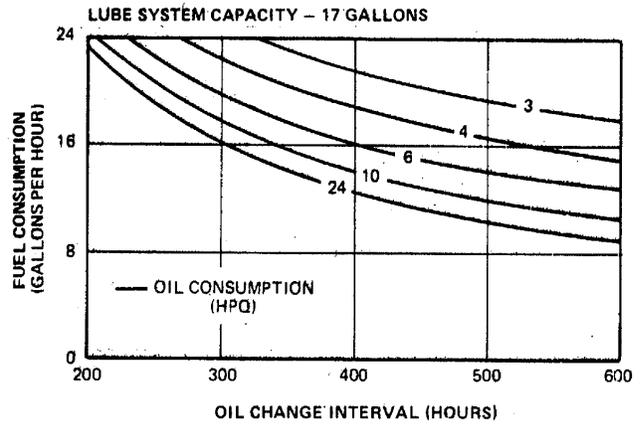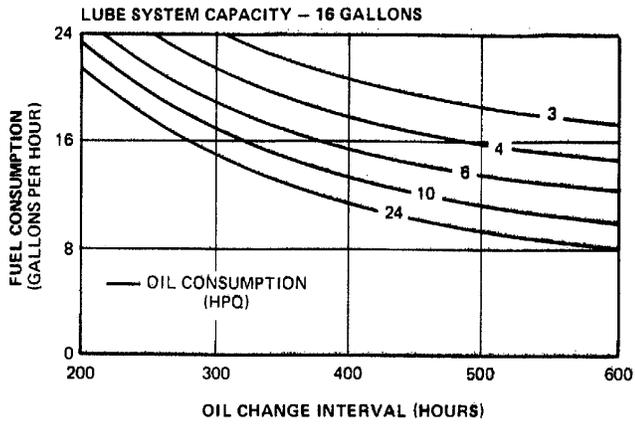





OFF HIGHWAY - TURBOCHARGED WITH BY-PASS FILTER

**Operation and Maintenance
Construction and Industrial**

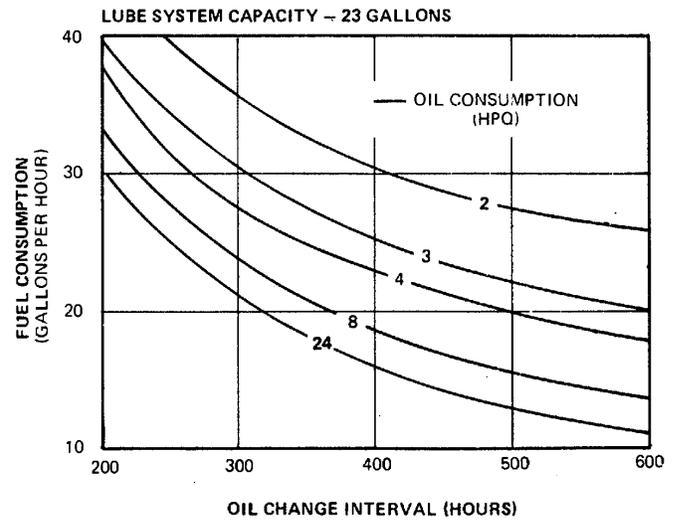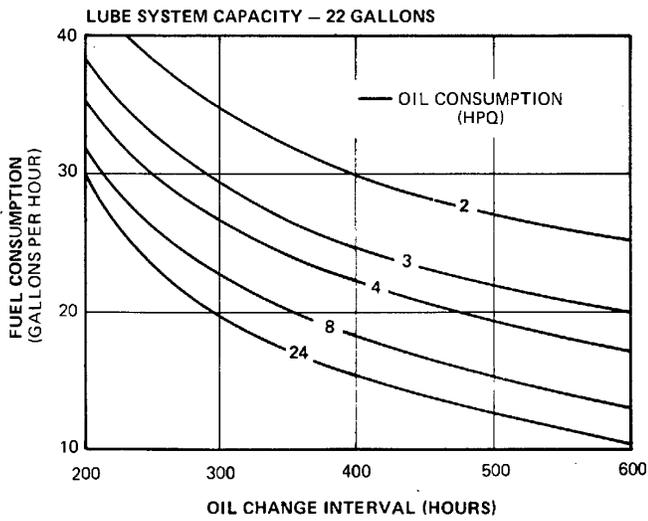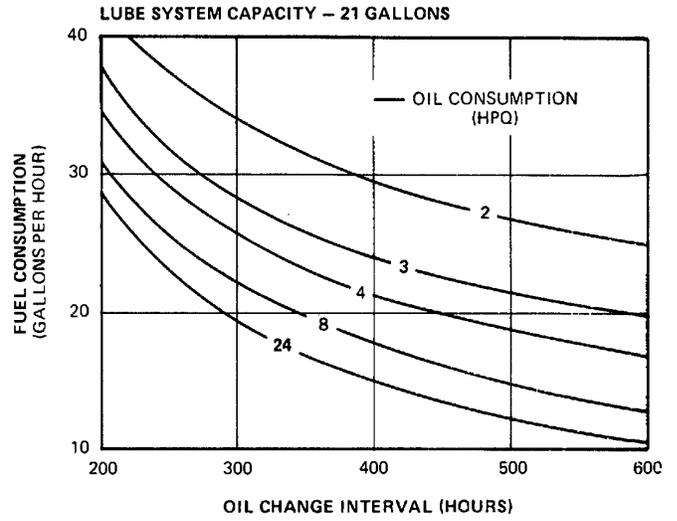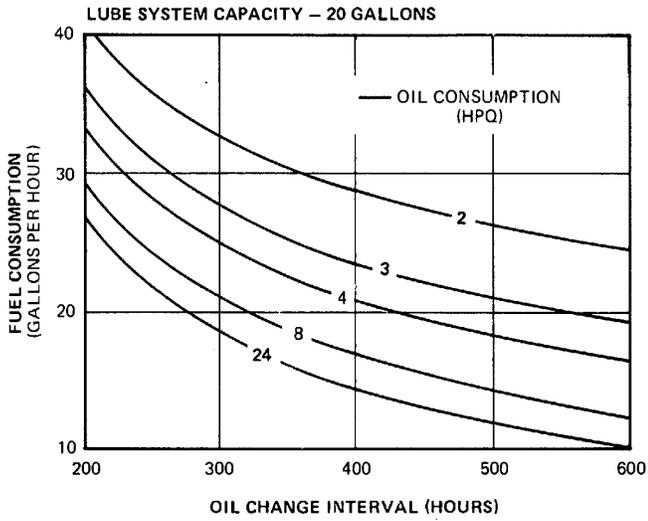





OFF HIGHWAY - TURBOCHARGED WITH BY-PASS FILTER'

Maintenance Instructions

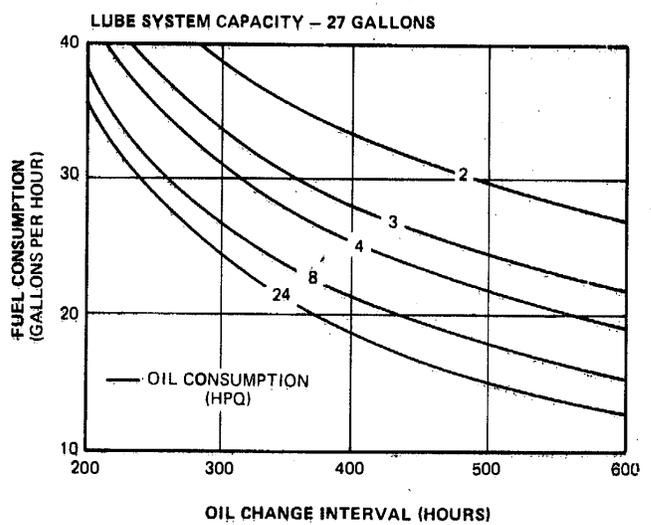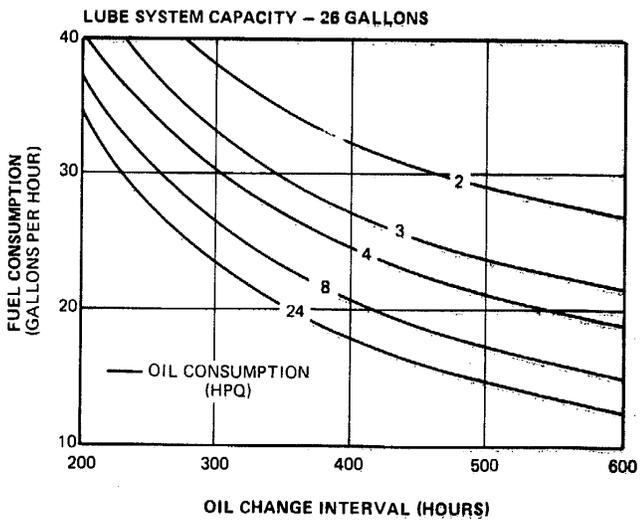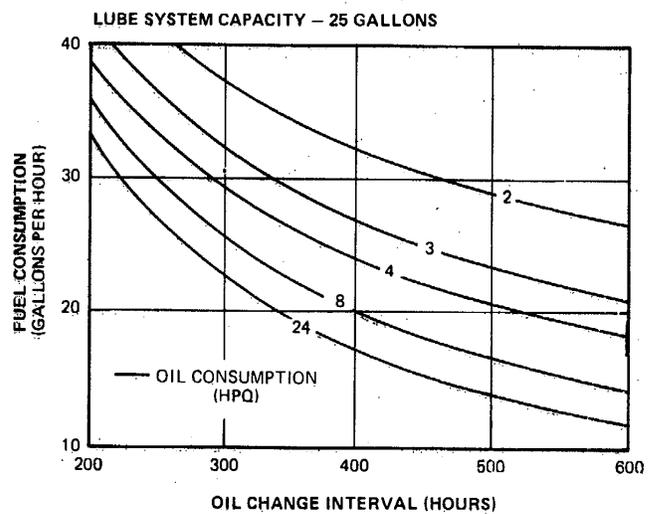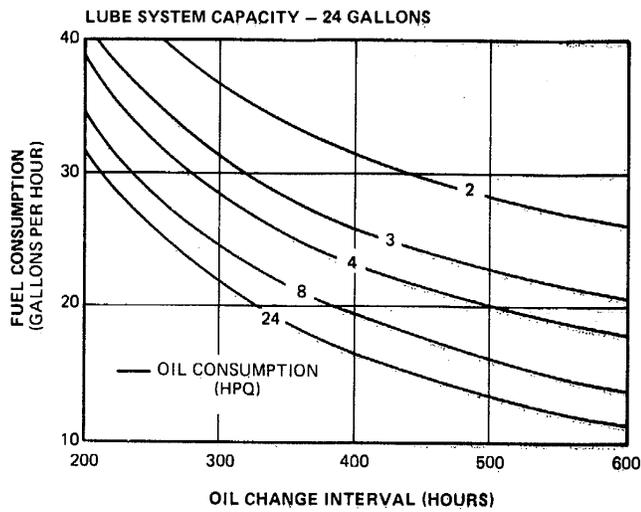



OFF HIGHWAY - TURBOCHARGED WITH BY-PASS FILTER

**Operation and Maintenance
Construction and Industrial**

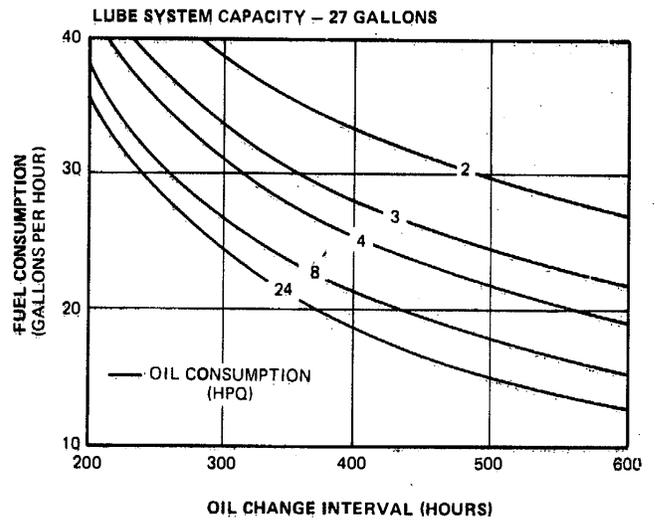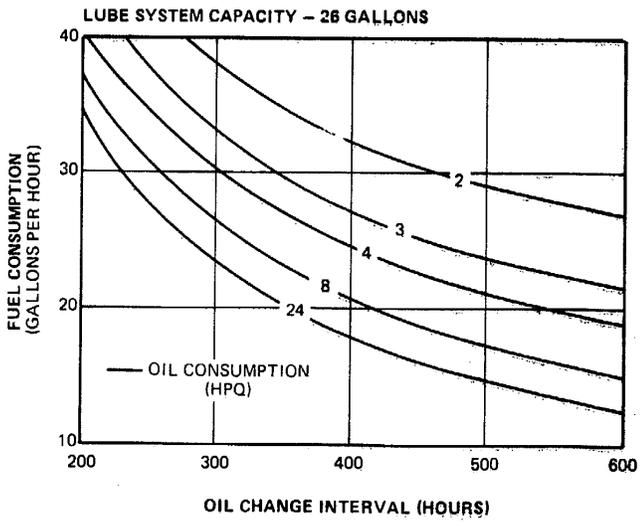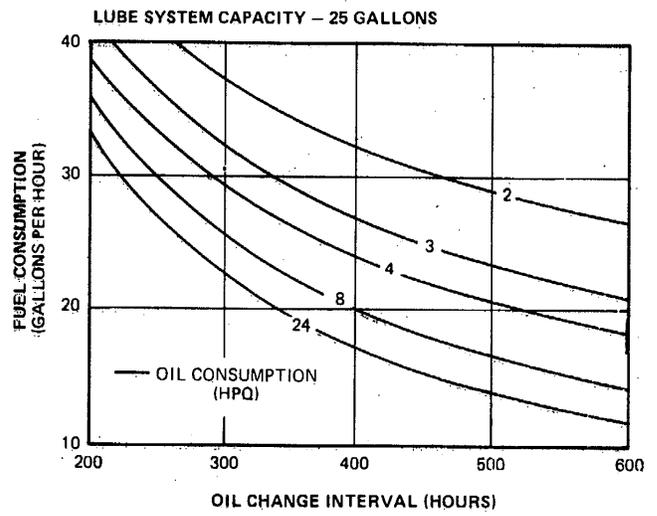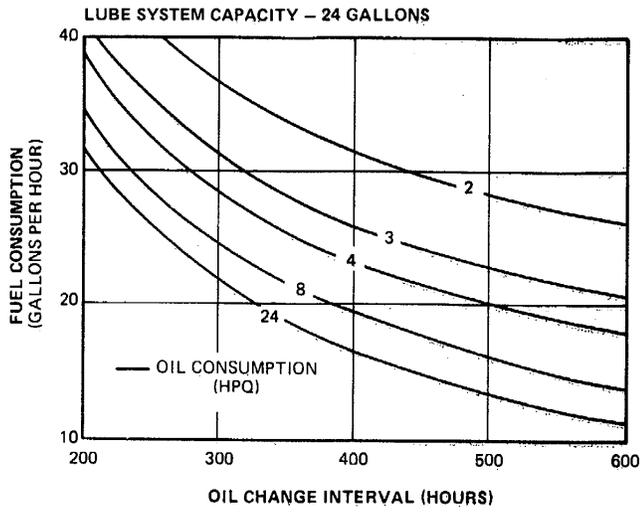

OFF HIGHWAY - TURBOCHARGED WITH BY-PASS FILTER Construction and Industrial

Maintenance Instructions

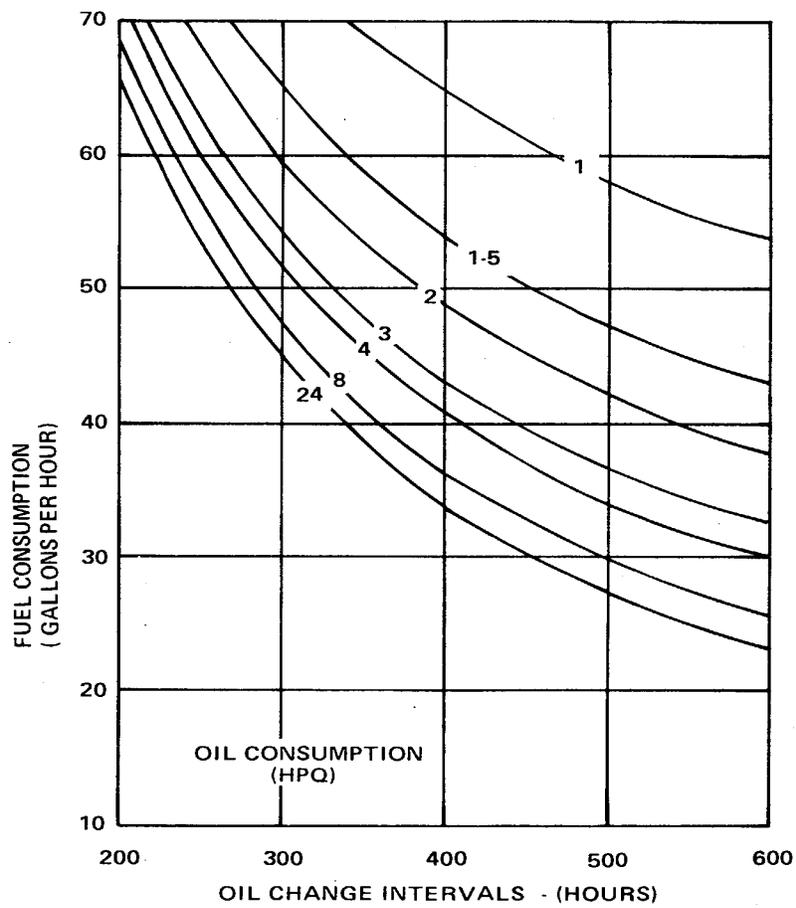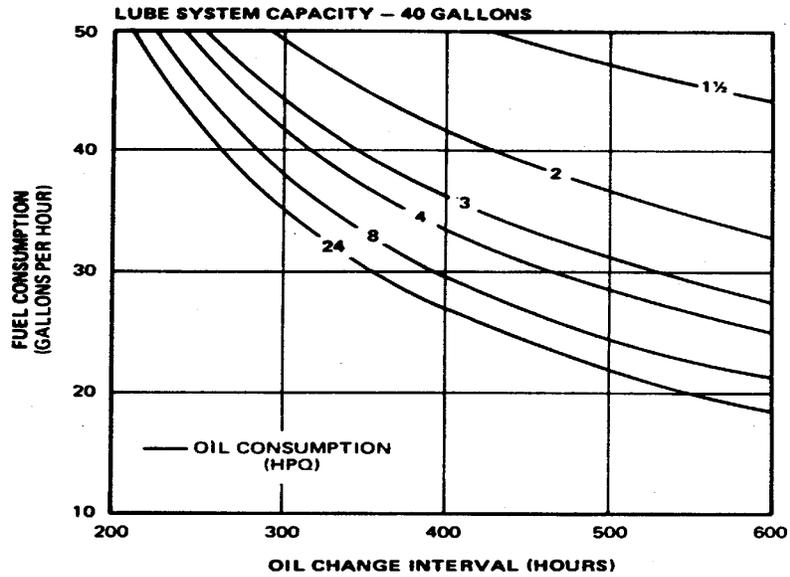

OFF HIGHWAY - TURBOCHARGED WITH BYPASS FILTER

**Operation and Maintenance
Construction and Industrial**

Lubricating Oil Analysis

An alternate method for determining when to change lubricating oil and filters is by used oil analysis using laboratory tests. The analyses used are for the purpose of determining the amount of contamination in the oil; not for predicting potential engine failures. It is recommended that new engines be operated through at least one oil change interval determined by the chart method prior to initiating a used oil analysis program.

In order to initiate a used oil analysis program for a large number of engines they should be grouped by basic model, rated horsepower and type of service. The horsepower range of a group should not exceed 25; in other words NTC-270 and NTC-290 engines could be placed in the same group, however, NTC-290 and NTC-350 engines should be in separate groups. Small vee, medium vee, NH and K models should be in separate groups. After the engines have been grouped, a sub-group consisting of 10 percent of the total engines in each group should be selected for the used oil analysis program. If a group consists of less than 50 engines but more than 25 engines the sub-group size should be 5 engines. For groups of less than 25 engines the sub-group size should be 8 engines. The selecting of the engines for each subgroup should be completely random.

Each group of engines should be set up on oil change intervals as described under the "Chart Method". When the engines reach the end of the second chart method oil change interval, an oil change should be performed on all units in the group except those engines selected for the sub-group. The engines in the sub-groups should only have an oil sample taken. Additional oil samples should be taken from each of the engines in the sub-groups at every 48-operating- hour interval after the first sample. This sampling frequency may be varied somewhat as dictated by the operation. The sampling frequency should not be extended beyond 60 hours for equipment safety reason or reduced below 40 hours because of the added analytical costs.

This sampling process should continue until the results of the analyses of the samples indicate that any one of the condemnation limits listed in Table 2-3 has been reached or exceeded until the desired oil change interval extension is reached. This process should be continued cautiously since the engines in the subgroups are subject to permanent damage because of the over-extended oil change interval. The analytical work on the samples and the examination of the

analytical results should be done as quickly and carefully as possible to prevent serious engine damage.

Table 2-3: Lubricating Oil Condemnation Limits

Property (ASTM Method*) Condemnation Limit	
Viscosity @ 100° C (D445)	+ 1 SAE Viscosity grade** from the new oil
Insolubles, pentane, noncoagulated (D-893)	1.0% maximum
Insolubles, toluene, noncoagulated (D-893)	1.0% maximum
Total acid number (D-664)	3.5 number increase from the new oil value, maximum
Total base number (D-664)	2.0, minimum
Water content (D-95)	0.2% maximum
Additive metal content (AES or AAS*)	75% of new oil level, minimum

*ASTM (The American Society for Testing and Materials) publishes these methods in their Annual Book of Standards, Part 23. Other methods should not be used without consulting Cummins.

**SAE Viscosity grades are published by the Society of Automotive Engineers in their annual SAE Handbook as SAE Recommended Practice J300d, and are shown in Table 1 of this bulletin.

***AES (Atomic Emission Spectroscopy) and AAS (Atomic Absorption Spectroscopy) are not standard ASTM methods, however most used oil analysis laboratories are capable of determining additive metal concentration by one of these methods and sample results determined by the same laboratory using the same method can be safely compared.

To determine whether the maximum oil change interval has been reached the properties in Table 2-3 should be determined by the laboratory methods specified. This table also specifies condemnation limits to be used for determining the lubricating oils' useful life. This group of analyses and the methods are not generally part of the oil analyses offered by most

Maintenance Instructions

commercial used oil analysis laboratories. These analyses are not low cost, generally costing between \$50 and \$135 per sample.

When any one of the condemnation limits is exceeded on any one sample an oil change should be performed on all engines in the sub-group. The hours at which the sample for which a condemnation limit was exceeded is the oil change interval at which 10% or more (depending on sub-group size) of the group are using lubricating oil which has exceeded its useful life. This sampling and analysis process should be repeated once to confirm the oil change interval. When this process is complete the entire group of engines can be placed on the new oil change interval.

This method of establishing an oil change interval will determine a different interval for each group of engines. It is not possible to provide maintenance on several different schedules or if one desires to schedule the oil change to coincide with other maintenance, the more conservative (or shorter) maintenance schedule should be used.

Please contact your Cummins Service Representative if you need assistance or have any questions about utilizing this method of determining an oil change interval.

Change Engine Oil

Factors to be checked and limits for oil analysis are listed below. Oil change at "B" Check, as shown in the maintenance chart on Page 2-2, is for average conditions.

1. Bring engine to operating temperature, shut down engine, remove drain plug from bottom of oil pan, and drain oil.
2. Install drain plug in oil pan. On 855, V-903, KT(A)-1150, KT(A)-2300 and KT(A)-3067 engines torque to 60 to 70 ft-lbs [81 to 95 N•m]. On V-378, V-504 and V-555 engines torque to 35 to 40 ft-lbs [47 to 54 N•m]. On V-1710 engines torque to 45 to 55 ft-lbs [61 to 75 N•m].
3. Fill the crankcase to "H" (high level) mark on the dipstick.
4. Start engine and visually check for oil leaks.
5. Shut down the engine; allow 15 minutes for oil to drain back into the pan; recheck the oil level with the dipstick. Add oil, as required.

Note: Use lubricating oil meeting specifications listed in Section 3, and genuine Cummins filters on equipment.

Change Spin-On Lubricating Oil Filter Elements

1. Unscrew combination case and elements, Fig. 2-15, discard elements.

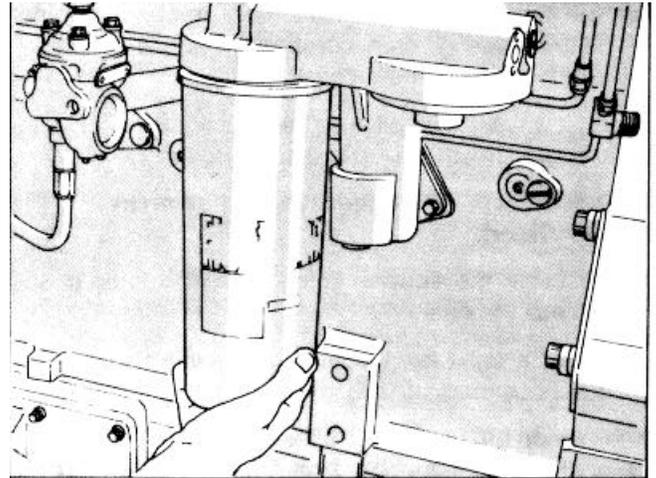


Fig. 2-15, (OM1018L). Installing lubricating oil filter cartridge

Note: At each filter change check torque of adapter mounting capscrew; it should be 25 to 35 ft-lbs [34 to 47 N•m]. If the capscrew is not within torque range, the adapter may rotate when the spin-on filter is removed. Replace the adapter to the filter head gaskets at each "C" maintenance check.

2. Fill the filter with lubricating oil. Apply a light even coat of lubricating oil to the gasket sealing surface prior to installing the filter.

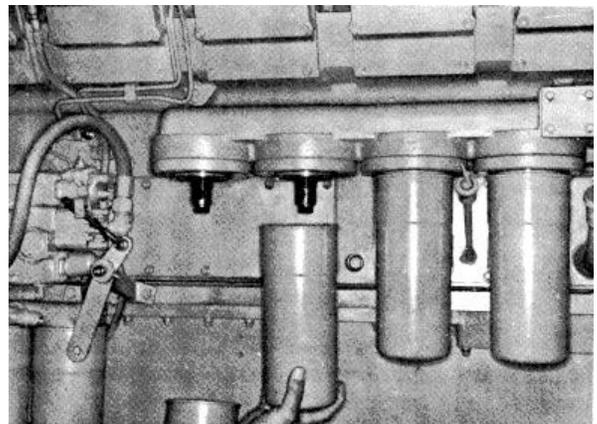


Fig. 2-16, (K21907). Installing "spin-on" lubricating oil filter - KT(A)-2300 Engine

3. Position element to the filter head, Fig. 2-16. Tighten by hand until the seal touches the filter head, tighten an additional one-half to three-fourths turn.
4. Run the engine, check for leaks, recheck engine oil level; add oil as necessary to bring the oil level to "H" mark on the dipstick.

Note: Always allow oil to drain back to the oil pan before checking the level. This may require 15 minutes.

Change the LF--777 Lubricating Oil Spin-On By-pass Filter.

1. Unscrew the spin-on filter from the filter head; discard the filter.
2. Apply a light even coat of lubricating oil to the gasket sealing surface, prior to installing the filter.
3. Position the filter to the filter head. Tighten by hand until the seal touches the filter head; tighten an additional one turn.
4. Run the engine, check for leaks, shut-down the engine. Add oil as necessary to bring the oil level to the "H" mark on the dipstick.

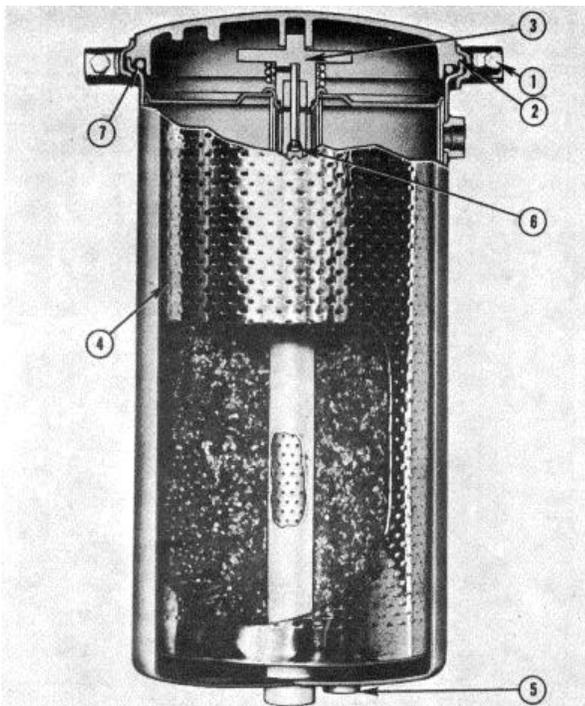


Fig. 2-17, (V41908). By-pass filter cross section

Change Lubricating Oil By-Pass Filter Element

Note: By-pass filters may be mounted either vertically, horizontally or inverted; all are serviced in like manner.

1. Remove the drain plug (5, Fig. 2-17) and drain oil.
2. Remove the clamping ring cap screw (1) and lift off the cover.
3. Unscrew the support hold-down assembly (3); lift out the element (4) and the hold-down assembly. Discard the element.
4. Clean the housing and hold-down assembly in solvent.
5. Inspect the hold-down assembly spring and seal. Replace if damaged.
6. Inspect the drain plug and connections. Replace if damaged.
7. Check the orifice plug (6) inside the oil outlet connection or standpipe; blow out with air to open and clean.
8. Check the filter cover O-ring (7). Replace if necessary.
9. Install the new element in the housing, Fig. 2-18.
10. Replace the support hold-down assembly in the filter and tighten down to stop.
11. Position the O-ring seal on the housing flange.
12. Install the cover and clamping ring; tighten the cap screws until the clamping lugs are indexed.
13. Run the engine, check for leaks; add enough extra oil to the crankcase to fill to the "H" (high) mark on the dipstick.

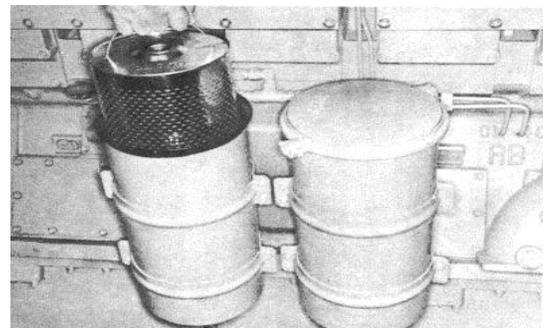


Fig. 2-18, (K21908). Installing by-pass filter element

Caution: Never use a by-pass filter in place of a full-flow filter.

**Change Fuel Filter Element
Spin-On Type Filter**

1. Unscrew the combination case and element, Fig. 2-19, discard the element.
2. Fill the new filter with clean fuel and apply a light even coat of lubricating oil to the gasket sealing surface prior to installing the filter.
3. Install the filter; tighten by hand until the seal touches the filter head. Tighten an additional one-half to three-fourths turn.



Fig. 2-19, (VI1909). Changing "spin-on" type fuel filter

Caution: Mechanical tightening will distort or crack the filter head.



Fig. 2-20, (OM1021L). Installing replaceable fuel filter element

Replaceable Element

1. Open the drain cock(s) and drain the contents.
2. Loosen the nut(s) at the top of the fuel filter(s). Take out the dirty element, clean the filter case(s) and install new element(s). Fig. 2-20.
3. Install new gasket(s) in the filter(s) and assemble the case(s) and element(s). Tighten center bolt(s) to 20 to 25 ft-lbs [27 to 34 N•m] with a torque wrench. Fill the filter case(s) with clean fuel to aid in faster pick-up of fuel.
4. Check the fittings in the filter head(s) for leaks. Fittings should be tightened to 30 to 40 ft-lbs [41 to 54 N•m].

Check Engine Coolant

Periodic tests of the engine coolant should be made to ensure that the frequency of water filter servicing or concentration of DCA inhibitor is adequate to control corrosion for any specific condition of operation. In cases where "make-up" water must be added frequently, we suggest that a supply of water be treated and added as necessary.

The concentration of effective inhibitor dissolved in

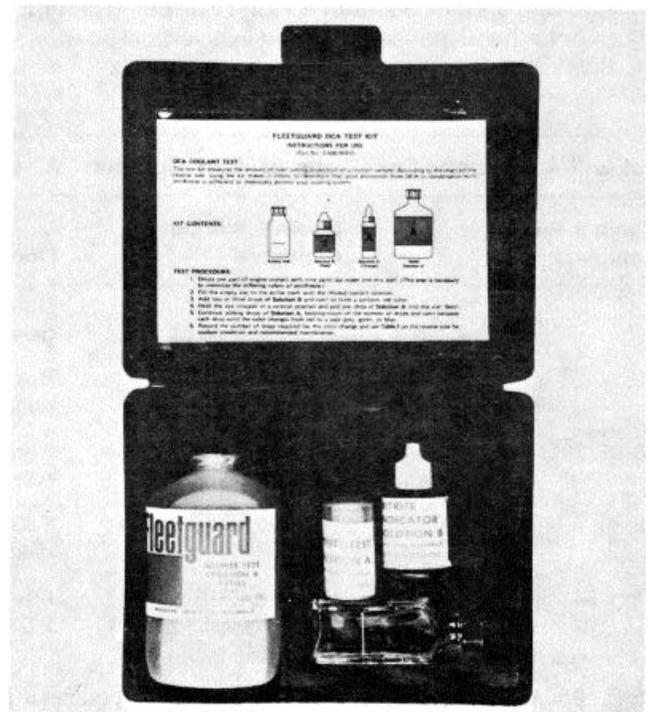


Fig. 2-21, (N12021). DCA coolant test kit

the coolant can be measured by a Fleetguard DCA Coolant Checking Kit Part No. 3300846-S or Cummins 3375208 which is available from Cummins Distributors for this check. Fig. 2-21.

The test kit indicates DCA concentration by measuring the total nitrite of a coolant sample, which provides cylinder liner cavitation protection.

When antifreeze is present, it may contribute to the total nitrite, but most of the nitrite protection is obtained from the DCA inhibitor. In general, a good nitrite reading indicates that the combined inhibitor packages contained in the antifreeze (if used) and in DCA are sufficient to ensure complete cooling system protection.



Fig. 2-22, (V12022). Mixing bottle

Concentration Test Procedure

1. Rinse the plastic dropper pipette several times with the engine coolant. Fill the dropper exactly to the 1.0 ml. mark. Discharge into the empty vial.
2. Fill the vial to the 10 ml. scribe mark with tap water and mix well. (This dilution step is necessary to minimize the differing colors of antifreeze.)
3. Add two or three drops of Solution B and swirl to form a uniform red color.
4. Add one drop of Solution A to the vial, being careful to hold the dispenser in a vertical position. Swirl.

5. Continue adding drops of solution A, keeping count of the number of drops and swirl between each drop until the color changes from red to a pale grey, green, or blue.
6. Record the number of drops required for the color change and consult Table 2-4 for coolant condition and recommended maintenance.

Adding Make-Up Coolant and DCA to Cooling System

1. Test the coolant for DCA according to the nitrite test procedure "With or Without Antifreeze"

Table 2-4. Number of Drops of Test Solution "A"

Coolant With Antifreeze	Coolant Without Antifreeze	Coolant Condition	Maintenance Required
0-12	0-6	Dangerous (0 to 0.6 oz. per gallon DCA)	Precharge system or add make-up DCA to top tank
12-17	7-12	Borderline (0.7 to 1.2 oz. per gallon DCA)	Replace service filter and/or add make-up DCA to top tank.
18-25	13-20	Acceptable (1.3 to 2.0 oz. per gallon DCA)	None.
25-30	20-30	Tolerable (2.0 to 3.0 oz. per gallon DCA)	None.
Over 30	Over 30	Overrated (over 3.0 per gallon DCA)	Drain part of coolant and make-up with plain antifreeze and water.

Note: Ethylene glycol/water solutions should not contain more than 3.0 oz. per gallon DCA or Dowtherm 209/water solutions should not contain more than 2.0 oz. per gallon DCA. Concentrations in excess of the above can cause sludge to form in the water filter.

depending on the presence or absence of antifreeze in the cooling system.

2. Estimate the make-up DCA. For example, if a fifteen gallon cooling system contains only 0.5 oz/gal. [4 ml per l] DCA, and 1.5 oz/gal. [12 ml per l] is required, 15 ounces [426 g] of DCA should be added to the make-up coolant.

Note: A one pint bottle of DCA-4L liquid (P/N 3300858) contains six dry ounces of DCA chemical in Step 2, concentrations are in dry ounces of chemical per gallon of coolant.

3. Estimate the total amount of make-up coolant required (gallons), and calculate the proportions of water and antifreeze, if used, required. For example, one gallon of 50-50 antifreeze/water solution will require two quarts of antifreeze and two quarts of water.
4. Add the required amount of water to a mixing container and dissolve the number of ounces of DCA obtained in Step 2 in the water. If negative or zero results were obtained in Step 2, do not add DCA. (For DCA to dissolve, water should be above 50°F [10°C].)
5. Add the required amount of antifreeze, if used, to the water solution and mix thoroughly.
6. Add the make-up coolant to the cooling system.

Note: If the DCA concentration is low, and the coolant level high, DCA may be added directly to the radiator in the amount indicated in Step 2. The engine should be running and warm enough to permit coolant circulation throughout the entire system.

Bulk Storage of Make-Up Coolant

If make-up coolant is stored in bulk, the following recommendations are provided for mixing and storing the coolant.

1. Drain and clean the bulk storage tank to remove any possible contaminants.
2. Knowing the total capacity of the holding tank, calculate the proportions of water and antifreeze, if used, required. For example, a 500 gallon [1892 l] tank will hold 250 gallons [946 l] of water and 250 gallons [946 l] of antifreeze for a 50-50 mixture.
3. Multiply the desired DCA concentration by the total capacity of the holding tank in gallons. In the example above, 1.5 oz. DCA per gallon [12 ml per l] of coolant can be used in the 50-50 mixture.

Multiplying 1.5 oz. DCA per gallon [12 ml per l] times 500 gallons [1892 l] yields a total DCA requirement of 750 oz. [46 lb. 14 oz.] [21.3 kg].

4. Add the water to the holding tank. Agitating continuously, add the DCA to the water in small amounts until all of the chemical has dissolved. The water should be above 50°F [10°C].
5. Add the antifreeze last, if used, maintaining agitation to bring and keep the finished coolant in solution. Both antifreeze and DCA will settle to the bottom of the tank unless constant mixing or recirculation is provided. An example of recirculation is the use of a small pump operating continuously to draw DCA and antifreeze off the bottom of the tank and discharging the solution at the top. Samples of coolant can be drawn off the top, middle and bottom of the storage tank and tested for antifreeze and/or DCA concentration if inadequate mixing is suspected.

Change DCA Water Filter

Change the filter or element at each "B" Check; selection of element to be used should be based upon the size of the system. See "Coolant Specifications", Section 3.

Note: Whenever the coolant supply is changed the system must be drained, flushed, and precharged. See "Coolant Specifications", Section 3 for DCA compatibility with different brands of antifreeze.

Spin-On Element

1. Close the shut-off valves on inlet and drain lines.
2. Unscrew the element and discard.
3. Apply a light even coat of lubricating oil to the



Fig. 2-23, (OM1023L). Installing DCA water filter cartridge

gasket sealing surface prior to installing the filter.

4. Install a new element, tighten until the seal touches the filter head. Tighten an additional one-half to three-fourths turn. Fig. 2-23. Open shut-off valves.

Caution: Mechanical tightening will distort or crack the filter head.

Check Oil Levels

Check Aneroid Oil

1. Remove the pipe plug from hole marked "Lub Oil".
2. Fill with engine lubricating oil to the level of the pipe plug hole. Reinstall the pipe plug.

Check Hydraulic Governor Oil Level

Keep the level half-way up on the inspection glass or to the high-level mark on the dipstick. Use the same grade oil as used in the engine.

Clean/Change Crankcase Breather

Mesh Element Breather

1. Remove the wing nut (6, Fig. 2-24), flatwasher and rubber washer securing the cover (1), to the breather body (5).
2. Lift off the cover and life out the breather element (2), vapor element (3), and gasket (4).
3. Clean all metal and rubber parts in an approved cleaning solvent. Dry thoroughly w/compressed air.
4. Inspect the rubber gasket; replace it if necessary. Inspect the body and cover for cracks, dents or breaks; discard all unserviceable parts.
5. Install cleaned or new breather element (2, Fig 2-24) and cleaned vapor element (3) to breather body (5).
6. Install the rubber gasket (4) in the cover (1); position the cover assembly to the body (5).
7. Install the rubber washer, flatwasher and wing nut (6); tighten securely.

Screen Element Breather - Cleaning and Inspection

1. Remove the vent tube if not previously removed.
2. Remove capscrews, washers, cover, screens and

baffle if used, from the breather body. Fig. 2-25.

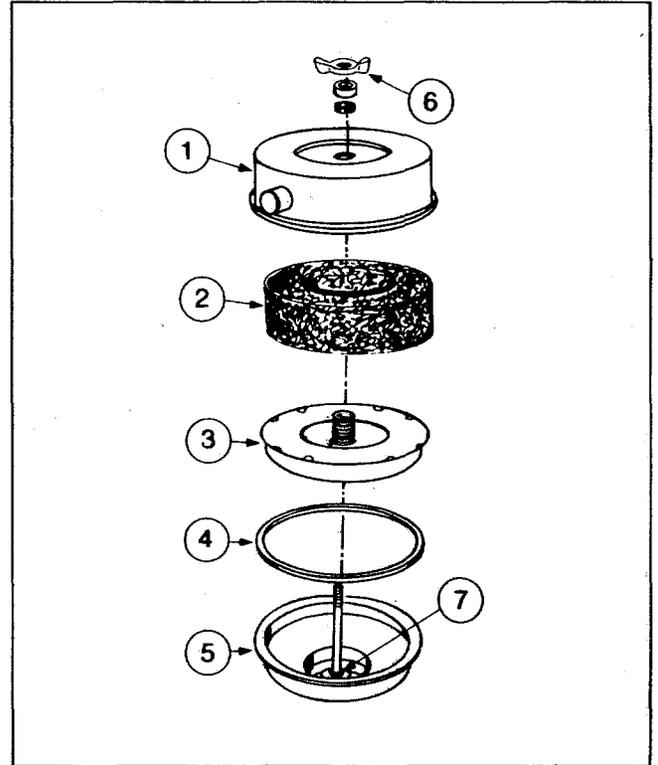


Fig. 2-24, (V51909). Crankcase breather mesh element with vapor barrier

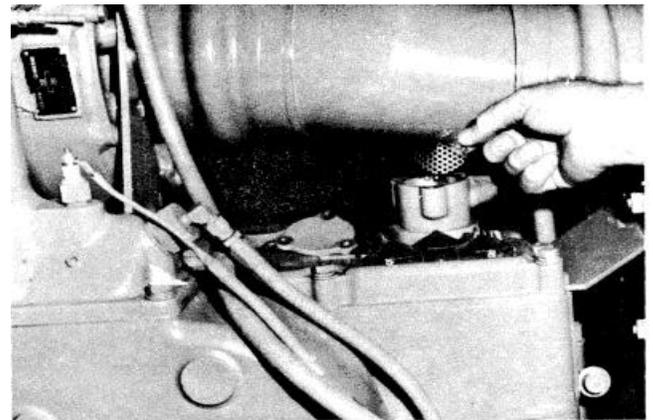


Fig 2-25, (N11934). Crankcase breather - screen type

3. Clean the vent tube, screens and baffle in an approved cleaning solvent. Dry with compressed air. Wipe out the breather housing.
4. Assemble the baffle and screens, if used, and a new gasket in the body.
5. Replace the cover with the cover boss resting

Maintenance Instructions

securely on the point of the screen, if used; secure with washers and capscrews.

6. Replace the vent tube.

Clean Air Compressor Breather

When used, service breathers regularly as follows:

Bendix-Westinghouse Paper Element

Remove the breather cover and element. Fig. 2-26. Clean by reverse flushing with compressed air; reassemble on the compressor. Discard the element if it is damaged or unsuitable for cleaning.

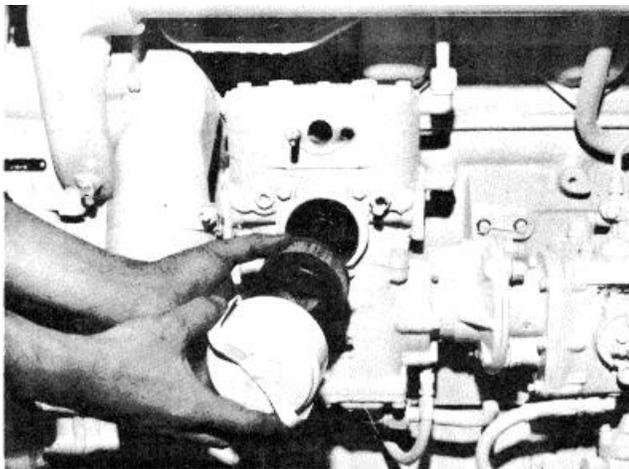


Fig. 2-26, (V41420). Bendix-Westinghouse air compressor breather

Bendix-Westinghouse Sponge

Remove the breather from the air compressor. Disassemble the breather, wash all metal parts in solvent and blow dry with compressed air. Wash the element in solvent; remove all solvent from the element; dip it in clean engine oil and squeeze excess oil from the element.

Cummins Paper

Clean the element at each "D" maintenance check. Remove the wing nut securing the front cover to the body. Lift off the front cover and element. Inspect the paper element before cleaning by reverse flow of compressed air; discard the element if it is damaged or unsuitable for cleaning. Fig. 2-27.

Caution: Do not rupture the filter element.

Clean the body and front cover with a clean cloth. With the rubber gasket on center bolt, place the element in the front cover and assemble over the center bolt; secure with the wing nut.

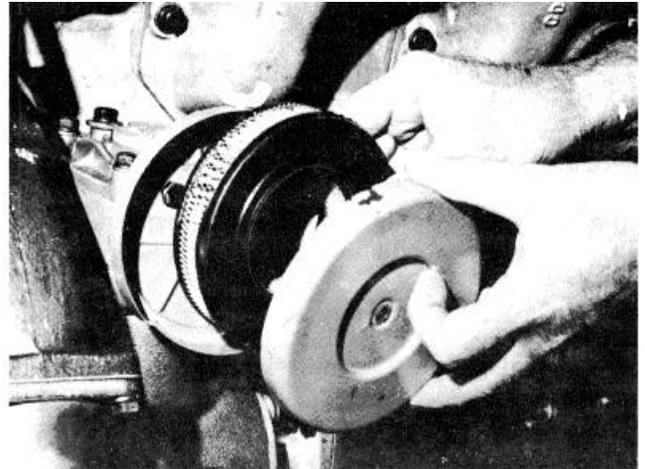


Fig. 2-27, (V414209). Cummins air compressor breather paper element

Note: At any time the three-prong unloader hat is used, it will set up air pulsations across the compressor intake which can destroy the paper element. Pipe intake air for Cummins compressors from the engine air manifold when the three-prong unloader hat is applied; current factory-installed compressors are so equipped. This same procedure may be used for any Cummins Compressor in the Field.

Clean Tray Screen

Clean the tray screen in kerosene or cleaning solvent.

Dry with compressed air, reassemble to the cleaner.

Note: If the tray screen is extremely dirty, it may be necessary to singe the screen with a flame. Do not melt the tin plate on the screen.

"C" Maintenance Checks

At each "C" Maintenance Check, first perform all "A" and "B" Checks in addition to those following:

Adjust Injectors and Valves

It is essential that the injectors and valves be in correct adjustment at all times for the engine to operate properly. One controls engine breathing; the other controls fuel delivery to the cylinders.

Final operating adjustments must be made using correct values as stated.

Caution: Be sure the injector and valve set markings, wherever located, are in proper alignment with the indicator mark.

Engine Temperatures

The following temperature conditions provide the necessary stabilization of engine components to allow for an accurate valve and injector adjustment.

Cummins Engine Company, Inc. recommends that valve and injector plunger adjustments be made when the engine is cold. The engine must be at any stabilized temperature of 140°F [60°C] or below.

A second setting or resetting after the engine is warm is not recommended.

Injector Plunger Adjustment Using Torque Method, V/VT-378, V/VT-504, V/VT-555 Engines

The injectors and valves must be in correct adjustment at all times for the engine to operate properly. This controls engine breathing and fuel delivery to the cylinders. Final adjustment must be made when the engine is at operating temperature. The injectors must always be adjusted before the valves. The procedure is as follows:

Valve Set Mark Alignment

1. Turn the crankshaft in direction of rotation until No. 1 "VS" mark appears on the vibration damper or crankshaft pulley. See Fig. 2-28 for the location of the valve set marks. In this position, both intake and exhaust valves must be closed for cylinder No. 1; if not, advance the crankshaft one revolution. See Fig. 2-29, Fig. 2-30 and Table 2-5 for firing order.

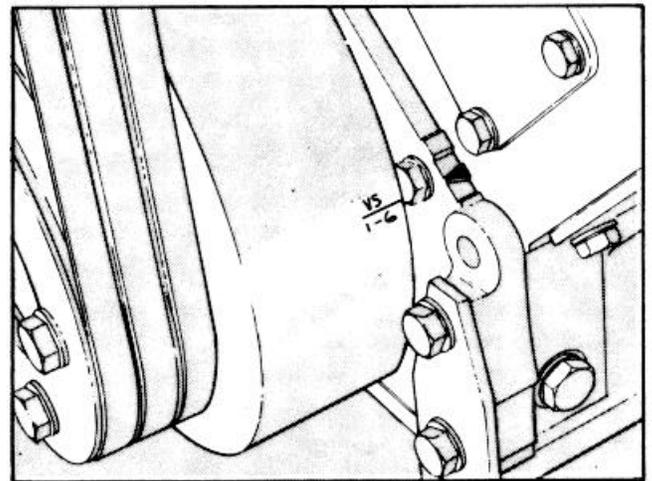


Fig. 2-28, (OM1035L). Valve set marks - V/VT-555 C.I.D. Engine

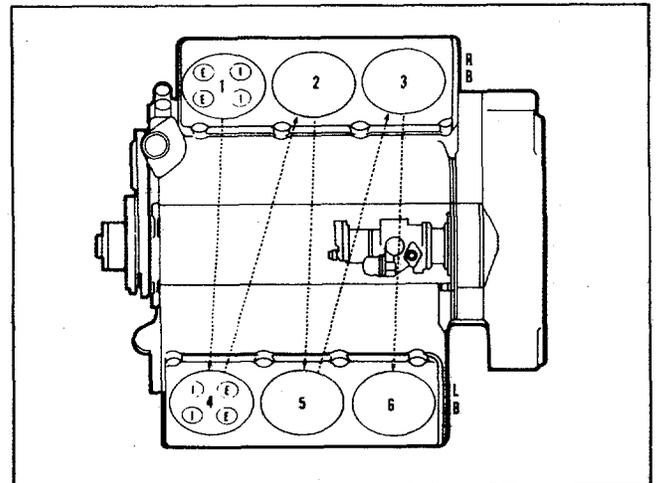


Fig. 2-29, (V11461). V6 firing order

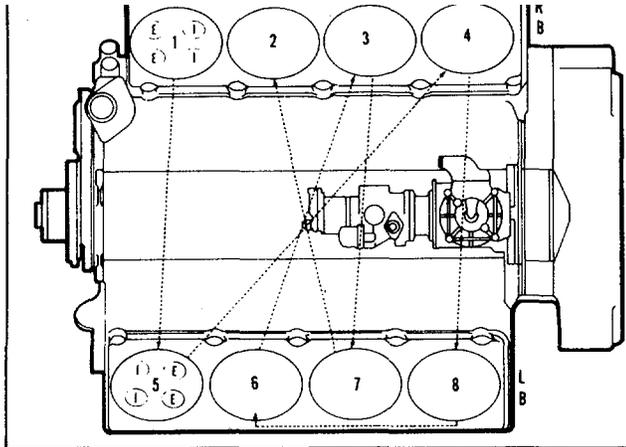


Fig 2-30, (V11462). V8 firing order

Note: Do not use the fan to rotate the engine.

- Adjust the injector plunger, then the crossheads and valves of the first cylinder as explained in succeeding paragraphs. Turn the crankshaft in the direction of rotation to the next "VS" mark corresponding to the firing order of the engine and the corresponding cylinder will be ready for adjustment. See Table 2-5.
- Continue turning the crankshaft in the direction of rotation and making adjustments until all injectors and valves have been correctly adjusted.

Table 2-5. Engine Firing Order V Engines

Right Hand	V8	1-5-4-8-6-3-7-2
Right Hand	V6	1-4-2-5-3-6

Note: Two complete revolutions of the crankshaft are needed to set all injector plungers and valves. The injector and valves can be adjusted for only one cylinder at any one "VS" setting.

Injector Plunger Adjustment

Before adjusting the injector, tighten the injector holddown capscrew to 30 to 35 ft-lbs [41 to 47 N•m].

The injector plungers of all engines must be adjusted with an in-lb torque wrench to a definite torque setting. Snap-On Model TQ12B or equivalent torque wrench and a screwdriver adapter can be used for this adjustment. Fig. 2-31.

- Turn the adjusting screw down until the plunger

contacts the cup and advance an additional 15 degrees to squeeze the oil from the cup.

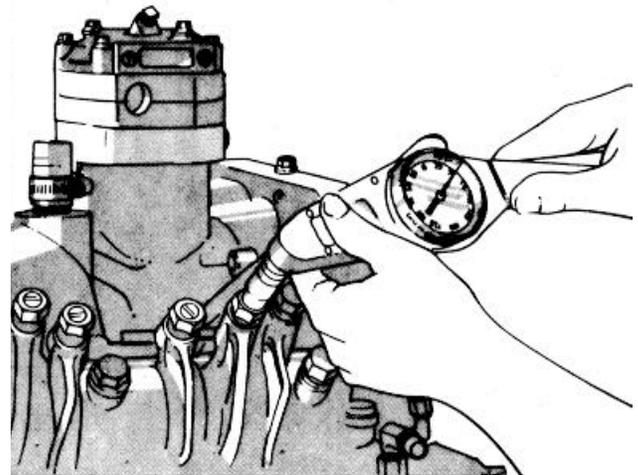


Fig. 2-31, (OM1037L). Adjusting injector plunger

- Loosen the adjusting screw one turn. Using a torque wrench calibrated in in-lbs and a screwdriver adapter, tighten the adjusting screw to the values shown in Table 2-6 for cold setting and tighten the locknut.

Table 2-6. Injector Plunger Adjustment Torque
VVT-378, VVT-504, VVT-555 Engines

Oil Temperature Cold	Oil Temperature Hot
60 in-lbs [6.8 N•m]	60 in-lbs [6.8 N•m]

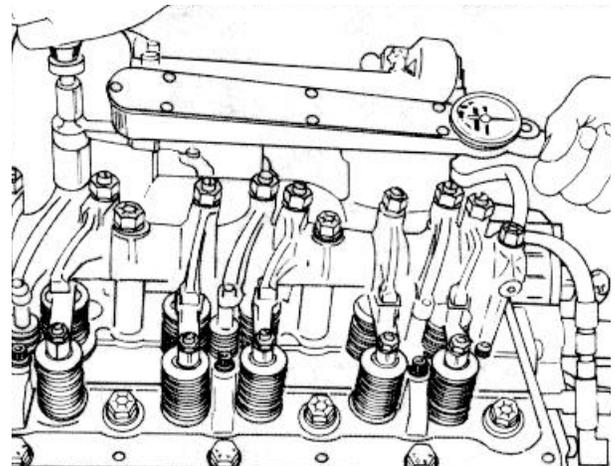


Fig 2-32 (OM1038L). Tighten injector adjusting screw locknut

Note: After all the injectors and valves are adjusted and the engine has been started and warmed up to 140°F [69°C] oil temperature, reset the injectors to the warm setting. This is only necessary if the injectors, lever assemblies, or push rods have been changed.

3. Hold the injector adjusting screw and tighten the injector adjusting screw locknut to the values indicated in Table 2-7.

When an ST-669 Adapter is used, nut torque is reduced to compensate for additional torque arm length. Fig. 2-32.

*Table 2-7. Injector and Valve Locknut Torque
V/VT-378, V/VT-504, V/VT-555 Engines*

Without ST-669	With ST-669
40 to 45 ft-lbs. [54 to 61 N•m]	30 to 35 ft-lbs. [41 to 47 N•m]

Crosshead Adjustment

Crossheads are used to operate two valves with one rocker lever. The crosshead adjustment is provided to assure equal operation of each pair of valves and prevent strain from misalignment.

1. Loosen the valve crosshead adjusting screw locknut and back off the screw one turn.
2. Use light finger pressure at the rocker lever contact surface to hold the crosshead in contact with the valve stem (without the adjusting screw).

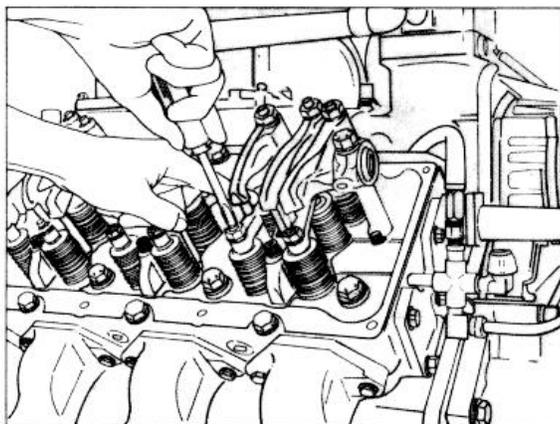


Fig. 2-33, (UM1039L). Adjusting crossheads

3. Turn down the crosshead adjusting screw until it touches the valve stem. Fig. 2-33.
4. Hold the adjusting screw in this position and torque the locknut to the values listed in Table 2-8.
5. Check the clearance between the crosshead and the valve spring retainer with a wire gauge. There must be a minimum of 0.025 inch [0.64 mm] clearance at this point.

Valve Adjustment

The same crankshaft position used in adjusting the injectors is used for setting the intake and exhaust valves.

Table 2-8. Crosshead Locknut Torque

Without ST-669	With ST-669
25 to 30 ft-lbs. [34 to 41 N•m]	22 to 26 ft-lbs. [30 to 35 N•m]

1. Loosen the locknut and back off the adjusting screw. Insert a feeler gauge between the rocker lever and the top of the crosshead. Valve clearances are shown in Table 2-9. Turn the screw down until the lever just touches the gauge and lock the adjusting screw in this position with the locknut. Fig. 2-34. Torque the locknut to the values indicated in Table 2-7; note Step 2 under "Injector Plunger Adjustment".

*Table 2-9: Valve Clearances - Inch [mm]
V/VT-378, V/VT-504, V/VT-555 Engines*

Intake Valve Oil Temperature Cold	Exhaust Valve Oil Temperature Cold
0.012 [0.30]	0.022 [0.56]

**V-903 Engines Injector Adjustment,
Using Dial Indicator Method**

This method involves adjusting the injector plunger

Maintenance Instructions

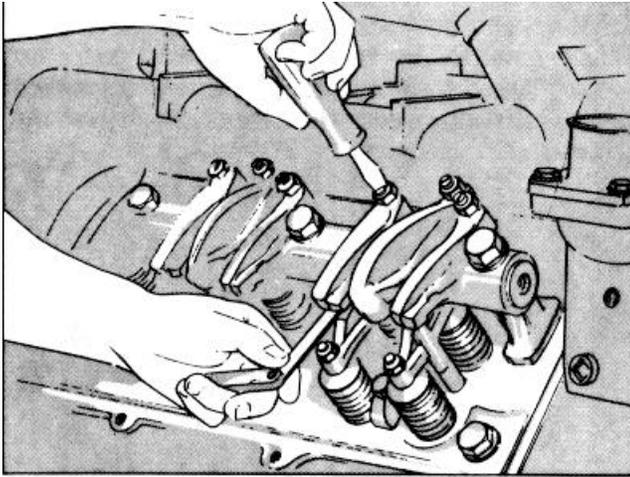


Fig. 2-34, (OM1040L). Adjusting valves

travel with an accurate dial indicator rather than tightening the adjusting screw to a specified torque.

The "indicator method" eliminates errors in adjustment caused by friction in the screw threads and distortion from overtightening the adjusting screw locknut. A check can be made of the adjustment without disturbing the locknut or screw setting. The valves can also be checked or set while adjusting the injectors by this method. See Table 2-10 for specifications.

Table 2-10. Adjustment Limits Using Dial Indicator Method Inch [mm] V-903 Engines

Injector Plunger Travel	Valve Clearance	
	Intake	Exhaust
1 to 1 Rocker Lever Ratio - Injector Lever P/N 211319		
0.187 ± 0.001 [4.75 ± 0.03]	0.012 [0.30]	0.025 [0.64]

Before adjustment, tighten the injector hold-down capscrew to 30 to 35 ft-lbs [41 to 47 N•m] torque.

Note: Remove the key, and using either a 3/8 inch hex drive for female type barring device or a 5/8 inch six-point socket for the male type barring device, press inward until the barring gear engages the drive gear; then advance. Fig. 2-35. After completion of adjustment, be sure the drive retracts and install the key into the safety lock groove.

Using the regular engine barring device, Fig. 2-35, rotate the engine in the direction of rotation with the

"VS" mark for cylinder 2-8 is aligned with the pointer. In this position both the intake and exhaust valve rocker levers for No. 2 cylinder should be free and can be moved up and down. If not, bar the engine another 360 degrees in the direction of rotation and realign the 2-8 "VS" mark.

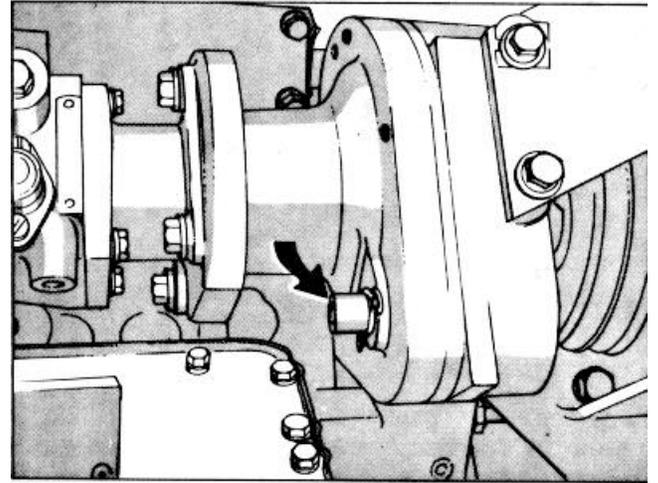


Fig. 2-35, (OM1041L). Barring V-903 Engine

The timing mark locations (Figs. 2-36 and 2-37) are used with the dial indicator method of setting the injectors and valves. Alignment, in either location, should be held to within one-half inch [12.7 mm] of the pointer.

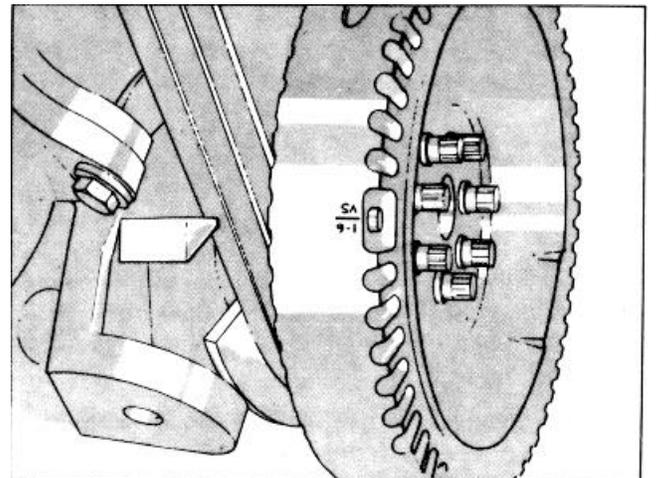


Fig 2-36, (OM1042L). Location of timing marks on front cover and vibration damper

Note: No. 2 cylinder is selected for the purpose of illustration only. Any other cylinder could be used, if so desired.

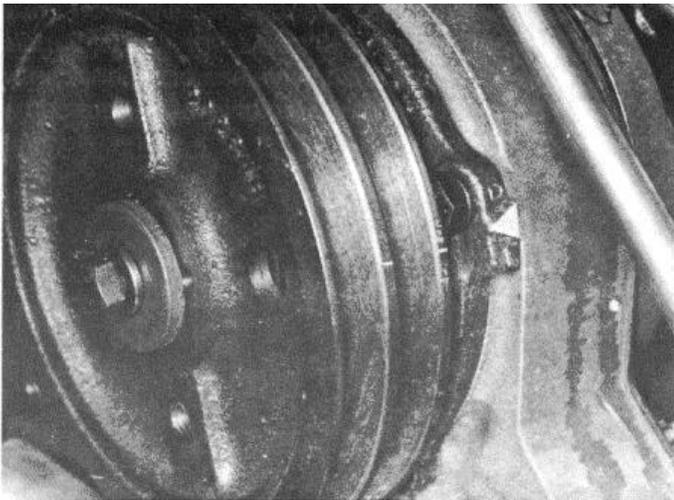


Fig. 2-37, (V514127). Valve set mark on accessory drive - V-903

1. Set up the ST-1270 Indicator Support with the indicator extension atop the injector plunger flange at No. 2 cylinder, Fig. 2-38.

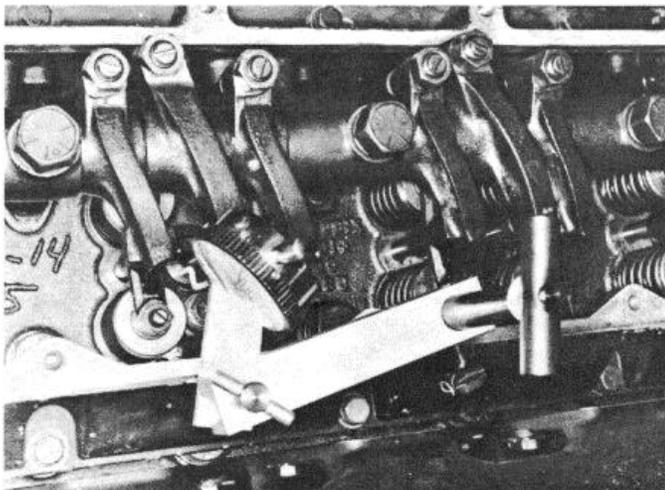


Fig. 2-38, (V514114). Dial indicator in place - V-903

2. Screw the injector lever adjusting screw down until the plunger is bottomed in the cup, back off approximately 1/2 turn then bottom again, set the dial indicator at zero (0).

Note: Care must be taken to assure the injector plunger is correctly bottomed in the cup, without overtightening the adjusting screw, before setting the dial indicator.

3. Back the adjusting screw out until a reading of 0.187 inch [4.75 mm], reference Table 2-10, is obtained on the dial indicator. Snug tighten the locknut.

4. Using ST-1251 Rocker Lever Actuator, bottom the injector plunger, check the zero (0) setting. Fig. 2-39. Allow the plunger to rise slowly, the indicator must show the plunger travel to be within the range specified in Table 2-10.

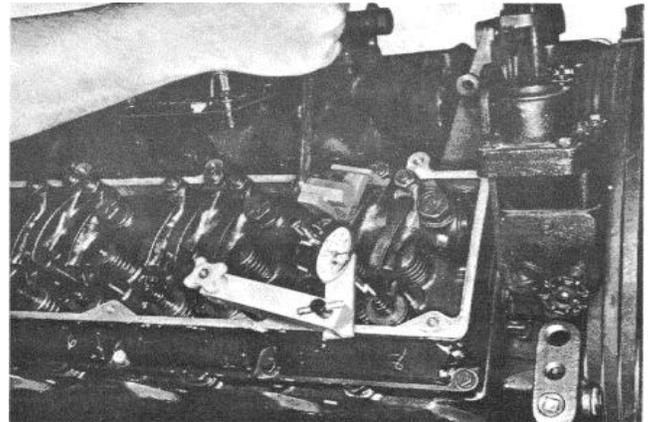


Fig 2-39, (V514128). Bottoming injector plunger in cup - V-903

5. Using ST-669 Torque Wrench Adapter to hold the adjusting screw in position, torque the locknut 30 to 35 ft-lbs [41 to 47 N•m]. If the torque wrench adapter is not used, hold the adjusting screw with a screwdriver, torque the locknuts 40 to 45 ft-lbs [54 to 61 N•m].
6. Actuate the injector plunger several times as a check of the adjustment. Remove the dial indicator assembly.
7. Adjust the valves on the appropriate cylinder as determined in Step 1 and Table 2-10. Tighten the locknuts the same as the injector locknut.

Crosshead Adjustment

Crossheads are used to operate two valves with one rocker lever. The crosshead adjustment is provided to assure equal operation of each pair of valves and prevent strain from misalignment.

1. Loosen the valve crosshead adjusting screw locknut and back off the screw one turn.
2. Use light finger pressure at the rocker lever contact surface to hold the crosshead in contact with the valve stem (without adjusting screw). Fig. 2-40.
3. Turn down the crosshead adjusting screw until it touches the valve stem.

Maintenance Instructions

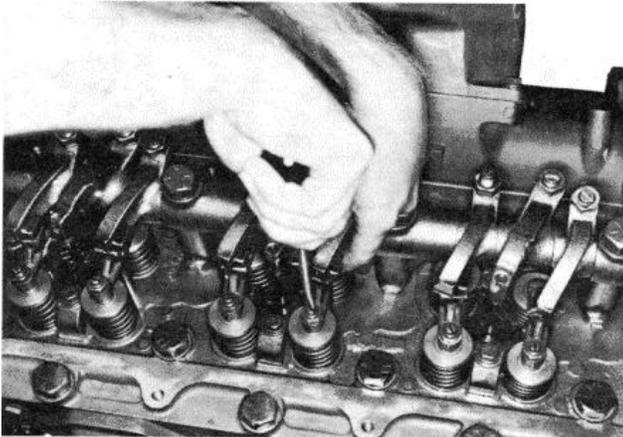


Fig. 2-40, (V51490). Adjusting crossheads - V-903

4. Hold the adjusting screw in position and torque the locknut to the values listed in Table 2-8.

Note: Be sure that the crosshead retainer on the exhaust valves, if used, is positioned equally on both sides of the spring over the crossheads and valve springs properly.

5. Check the clearance between the crosshead and the valve spring retainer with a wire gauge. There must be a minimum of 0.025 inch [0.64 mm] clearance at this point.

Valve Adjustment

The same engine position used in adjusting injectors is used for setting intake and exhaust valves.

1. Loosen the locknut and back off the adjusting screw. Insert a feeler gauge between the rocker

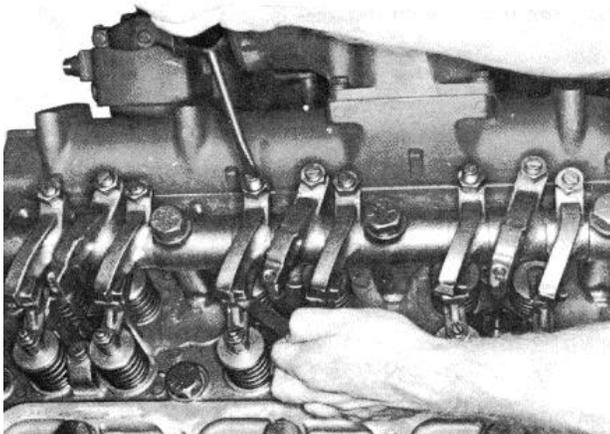


Fig. 2-41, (V51492). Adjusting valves - V-903

lever and the top of the crosshead. Fig. 2-41. Valve clearances are shown in Table 2-10. Turn the screw down until the lever just touches the gauge, and lock the adjusting screw in position with the locknut. Torque the adjusting screw locknuts to 40 to 45 ft-lb [54 to 61 N•m] or 30 to 35 ft-lb [41 to 47 N•m] when using an ST-669 Adapter.

2. Always make the final valve adjustment after the injectors are adjusted.

NH-743, N-855, C.I.D. Engines, Injector and Valve Adjustment (Dial Indicator Method)

Note: Before adjusting the injectors and valves be sure to determine if the rocker housings are cast iron or aluminum and use the appropriate setting.

Before adjusting the injectors, torque the cylindrical injector, hold-down capscrews in alternate steps to 10 to 12 ft-lbs [14 to 16 N•m]. With flange injectors torque the hold-down capscrews in alternate steps to 12 to 14 ft-lbs [14.6 to 18 N•m]. Tighten the fuel inlet and drain connections to 20 to 25 ft-lbs [27 to 34 N•m] in the flange injectors.

Maintenance Adjustment

1. Bar the engine until "A" or 1-6 "VS" mark on the pulley, Fig. 2-42, is aligned with the pointer on the gear case cover. In this position, both valve rocker levers for cylinder No. 5 must be free (valves closed). The injector plunger for cylinder No. 3 must be at top of its travel; if not, bar the engine 360 degrees, realign the mark with the pointer.
2. Set up ST-1170 Indicator Support with the indicator extension on the injector plunger top at No. 3

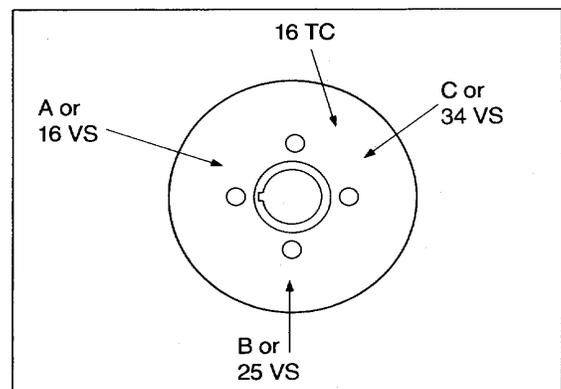


Fig. 2-42, (N114230). Accessory drive pulley marking - N-855

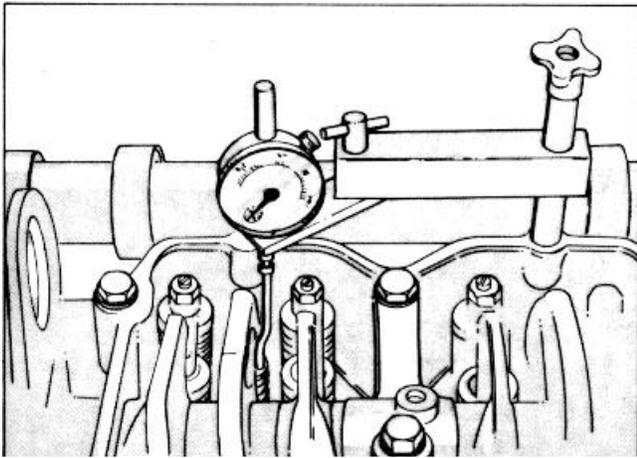


Fig. 2-43, (OM1051L). Extension in contact with plunger

cylinder, Fig. 2-43. Make sure the indicator extension is secure in the indicator stem and not against the rocker lever.

Note: Cylinder No. 3 for injector setting and cylinder No. 5 for valve setting are selected for illustration purposes only. Any cylinder combination may be used as a starting point. See Table 2-11.

Table 2-11: Injector and Valve Set Position
N-855 Engines

Bar in Direction	Pulley Position	Set Cylinder Injector	Valve
Start	A or 1-6VS 5	3	
Adv. To	B or 2-5VS	6	3
Adv. To	C or 3-4VS	2	6
Adv. To	A or 1-6VS	4	2
Adv. To	B or 2-5VS	1	4
Adv. To	C or 3-4VS	5	1

- Using ST-1193 Rocker Lever Actuator, Fig. 2-44, or equivalent, bar the lever toward the injector until the plunger is bottomed to squeeze the oil film from the cup. Allow the injector plunger to rise, then bottom again. Set the indicator at zero (0). Check the extension contact with the plunger top.
- Bottom the plunger again, release the lever; the indicator must show travel as indicated in Table 2-12. Adjust as necessary.
- If loosened, tighten the locknut to 40 to 45 ft-lbs [54 to 61 N•m] and actuate the injector plunger several times as a check of the adjustment. Tighten to 30 to

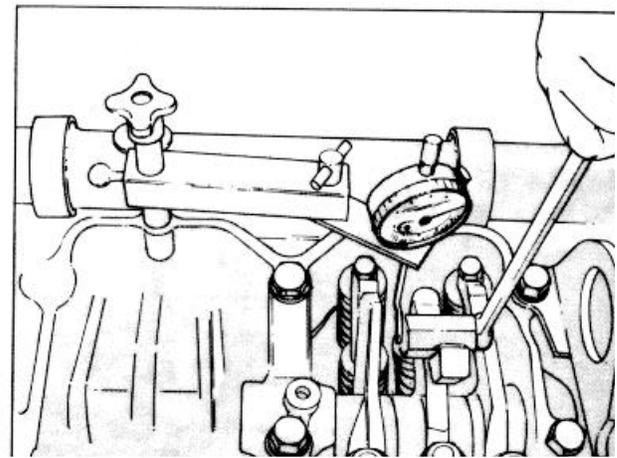


Fig. 2-44, (OM1052L). Actuating rocker lever

35 ft-lbs [41 to 47 N•m] when using ST-669 Adapter.

Table 2-12. Adjustment Limits Using Dial Indicator
Method Inch [mm] N-855 Engines

Oil Temp.	Injector Plunger		Valve Clearance Inch [mm]
	Travel Inch [mm]	Adj. Value	
		Intake	Exhaust
Aluminum Rocker Housing			
Cold	0.170 [4.32]	0.011 [0.28]	0.023 [0.58]
Hot	0.170 [4.32]	0.011 [0.28]	0.023 [0.58]
Cast Iron Rocker Housing			
Cold	0.175 [4.45]	0.013 [0.32]	0.025 [0.63]
Hot	0.170 [4.32]	0.011 [0.28]	0.023 [0.58]
NT-855 (Big Cam only - Non Top-Stop)			
	0.228 [5.79]	0.011 [0.28]	0.023 [0.58]

Note: Check engine dataplate for injector and valve setting.

Adjust Injectors and Valves (Torque Method) V-1710, NH-743, N-855 C.I.D. Engines

Timing Mark Alignment

- If used, pull the compression release lever back and

Maintenance Instructions

block in the open position only while barring the engine.

- Loosen the injector rocker lever adjusting nut on all cylinders. This will aid in distinguishing between cylinders adjusted and not adjusted.

Note: Before adjusting the injectors and valves be sure to determine if the rocker housings are cast iron or aluminum and use the appropriate setting.

- Bar the engine in the direction of rotation until a valve set mark (Figs. 2-45, 2-46 and 2-47) aligns with the mark or pointer on the gear case cover. Example: A or 1-6 "VS" on Inline Engines or 1-6R "VS" on V-1710 Engines.
- Check the valve rocker levers on the two cylinders aligned as indicated on the pulley. On one cylinder of the pair, both rocker levers will be free and the

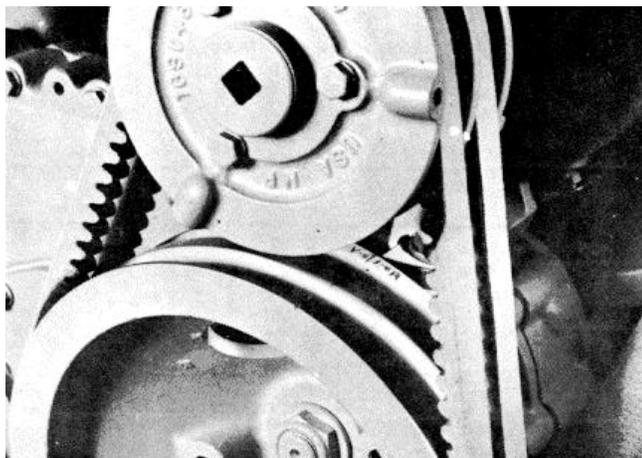


Fig 2-45, (V41484). Valve set mark - V-1710

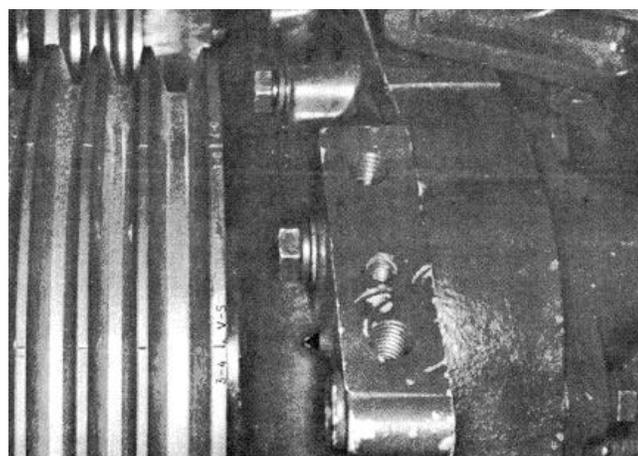


Fig. 2-46, (N114220-A). Valve set mark - N-855

valves closed; this is the cylinder to be adjusted.

- Adjust the injector plunger first, then the crossheads and valves to the clearances indicated in the following paragraphs.
- For the firing order see Table 2-13 for Inline Engines and Table 2-14 and Fig. 2-47 for V-1710 Engines.

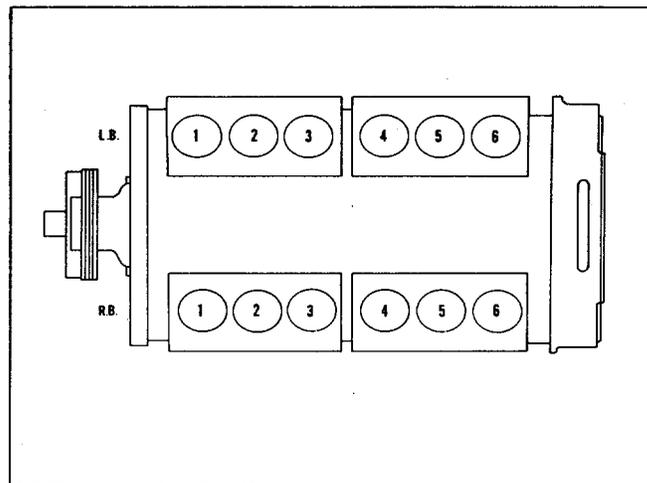


Fig. 2-47, (V414231). V-1710 piston position

Table 2-13. Engine Firing Order N-855 Engines

Right Hand Rotation	Left Hand Rotation
1-5-3-6-2-4	1-4-2-6-3-5

Table 2-14. Firing Order V-1710 Engines

Right Hand 1L-6R-2L-5R-4L-3R-6L-1 R-5L-2R-3L-4R
Left Hand 1 L-4R-3L-2R-5L-1 R-6L-3R-4L-5R-2L-6R

- Continue to bar the engine to the next "VS" mark and adjust each cylinder in the firing order.

Note: Only one cylinder is aligned at each mark. Two complete revolutions of the crankshaft are required to adjust all cylinders.

Injector Plunger Adjustment

The injector plungers must be adjusted with an inch-pound torque wrench to a definite torque setting.

Crosshead Adjustment

Crossheads are used to operate two valves with one rocker lever. The crosshead adjustment is provided to assure equal operation of each pair of valves and prevent strain from misalignment.

1. Loosen the valve crosshead adjusting screw locknut and back off the screw (4, Fig. 2-50) one turn.

Table 2-15. Injector Plunger Adjustment - Inch-lbs [N•m]

Cold Set	Hot Set
V-1710 Engines	
50 [0.6]	
NH-NT-743 and 855 Engines Cast Iron Rocker Housing	
48 [5.4]	72 [8.1]
Aluminum Rocker Housing	
71 [8.1]	72 [8.1]

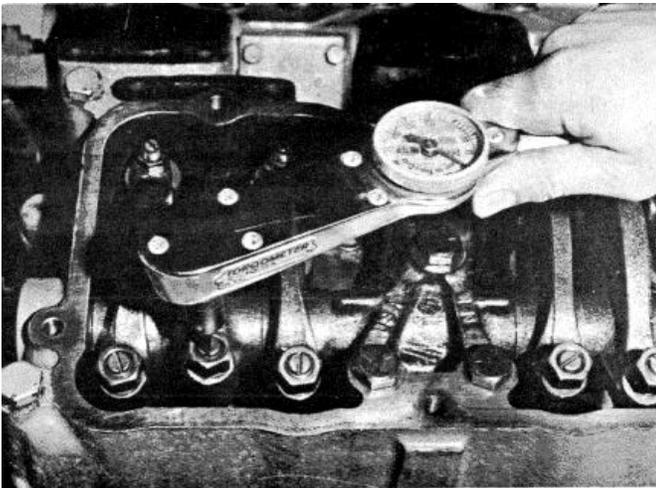


Fig. 2-48, (V414190). Adjusting injector plunger V-1710

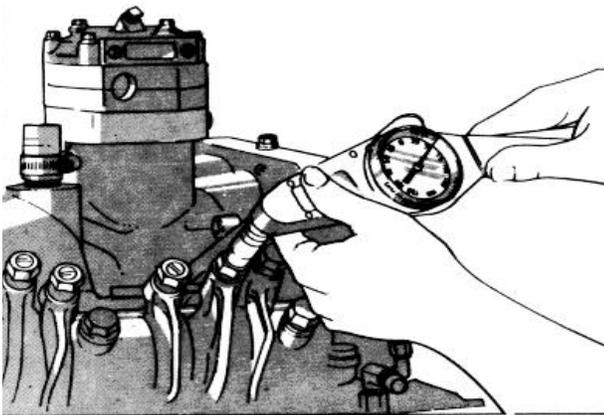


Fig. 2-49, (OM1037L). Adjusting injector plunger

Snap-On Model TE-12 or equivalent torque wrench and a screwdriver adapter can be used for this adjustment. See Figs. 2-48 and 2-49.

1. Turn the adjusting screw down until the plunger contacts the cup and advance an additional 15 degrees to squeeze the oil from the cup.

Note: Number one L and one R cylinders on V-1710 Engines are at the gear case of the engine.

2. Loosen the adjusting screw one turn; then using a torque wrench calibrated in inch-pounds and a screwdriver adapter tighten the adjusting screw to the value shown in Table 2-15 and tighten the locknut to 40 to 45 ft-lbs [54 to 61 N•m] torque. If ST-669 Torque Wrench Adapter is used, torque to 30 to 35 ft-lbs [41 to 47 N•m].

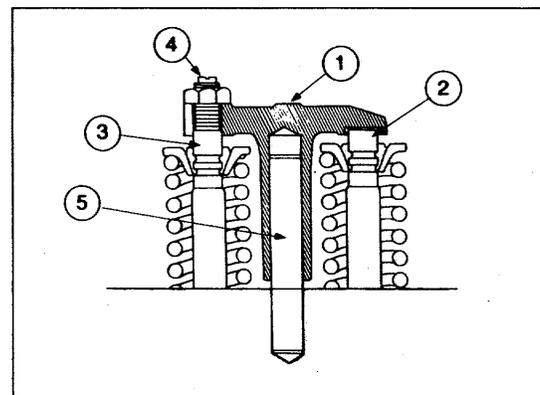


Fig. 2-50, (N21461). Valve crosshead

2. Use light finger pressure at the rocker lever contact surface (1) to hold the crosshead in contact with the valve stem (2).
3. Turn down the crosshead adjusting screw until it touches the valve stem (3).
4. Using ST-669 Torque Wrench Adapter, tighten the locknut to 22 to 26 ft-lbs [30 to 35 N•m]. If ST-669 is not available, hold the screws with a

Maintenance Instructions

screwdriver and tighten the locknuts to 25 to 30 ft-lbs [34 to 41 N.m].

5. Check the clearance between the crosshead and the valve spring retainer with a wire gauge. There must be a minimum of 0.020 inch [0.51 mm] clearance at this point.

Valve Adjustment

The same engine position used in adjusting the injectors is used for setting the intake and exhaust valves.

1. While adjusting the valves, make sure that the compression release, on those engines so equipped, is in the running position.
2. Loosen the locknut and back off the adjusting screw. Insert a feeler gauge between the rocker lever and crosshead. Turn the screw down until the lever just touches the gauge and lock the adjusting screw in this position with the locknut. Tighten the locknut to 40 to 45 ft-lbs [54 to 61 N.m] torque. When using ST-669 torque to 30 to 35 ft-lbs [41 to 47 N.m].
3. Always make final valve adjustment at stabilized engine lubricating oil temperature. See Table 2-16 for the appropriate valve clearances.

Table 2-16: Valve Clearances - Inch [mm]

Intake Valves	Exhaust
Valves	
Cold Set	Cold Set

V-1710 Engines

0.014 [0.36]	0.027 [0.69]
--------------	--------------

NH-NT-743 and 855 Engines

Cast Iron Rocker Housing

0.016 [0.41]	0.029 [0.74]
--------------	--------------

Aluminum Rocker Housing

0.014 [0.36]	0.027 [0.69]
--------------	--------------

Injector and Valve Adjustment Using 3375004 Dial Indicator Kit KT(A)-1150 Engines

This method involves adjusting the injector plunger travel with an accurate dial indicator. A check can be made of the adjustment without disturbing the locknut or screw setting. The valves can also be checked or set while adjusting the injectors by this method. See Table 2-17.

3375004 Injector Adjustment Kit is used to adjust the injectors with or without Jacobs Brake units installed.

It is essential that the injectors and valves be in correct adjustment at all times for the engine to operate properly.

Table 2-17: Injector and Valve Set Position KT(A)-1150

Bar in Direction	Pulley Position	Set Cylinder Injector	Valve
Start	A	3	5
Adv. To	B	6	3
Adv. To	C	2	6
Adv. To	A	4	2
Adv. To	B	1	4
Adv. To	C	5	1

Firing Order 1-5-3-6-2-4

One controls engine breathing; the other controls fuel delivery to the cylinders.

Operating adjustments must be made using the correct values as stated.

Injector and Valve Adjustment

Note: Do not use the fan to rotate the engine. Remove the shaft retainer key. Fig. 2-51, and press the shaft inward until the barring gear engages the drive gear; then advance. After the adjustments are complete retract the shaft and install the retainer key into the safety lock groove.

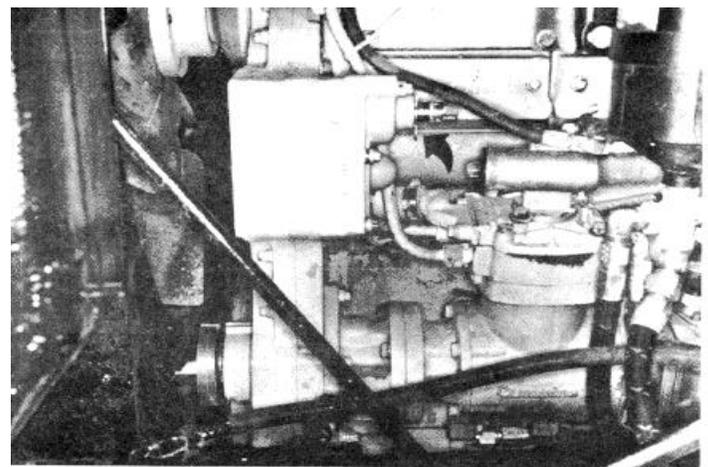


Fig. 2-51, (KI1919) Engine barring arrangement- KT(A)-1150

Caution: The barring mechanism gear must be completely engaged when barring the engine to avoid damage to the teeth of the gear.

1. Bar the engine in the direction of rotation until "B" mark on the pulley, Fig. 2-52, is aligned with pointer on the gear case cover. In this position, both valve rocker levers for cylinder No. 3 must be free (valves closed). The injector plunger for cylinder No. 6 must be at top of travel; if not, bar the engine 360 degrees, realign the marks with the pointer.

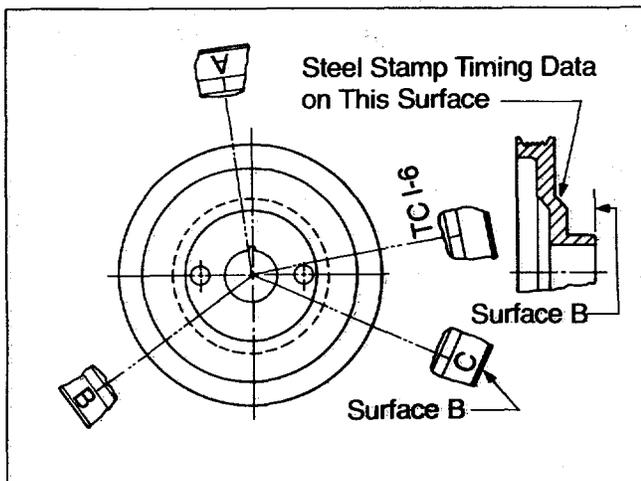


Fig. 2-52, (K11920). Accessory drive pulley marking - KT(A)-1150

Note: The injector and valves on any one (1) cylinder can't not be set at the same valve set position. Example: If the rocker levers on No. 3 cylinder are free (valves closed) the injector plunger travel on No. 6 cylinder is to be adjusted. Any valve set position may be used as a starting point. See Table 2-17.

2. Install 3375004 Dial Indicator Assembly to the rocker housing, extension (3375005) must go through the opening in the Jacobs Brake housing and contact the injector plunger top, Fig. 2-53.
3. Screw the injector lever adjusting screw down until the plunger is bottomed in the cup, back off approximately 1/2 turn then bottom again, set the dial indicator at zero (0).

Note: Care must be taken to assure the injector plunger is correctly bottomed in the cup, without overtightening the adjusting screw, before setting the dial indicator.

4. Back the adjusting screw out until a reading of 0.304 inch [7.72 mm], reference Table 2-18, is obtained on the dial indicator. Snug tighten the locknut.

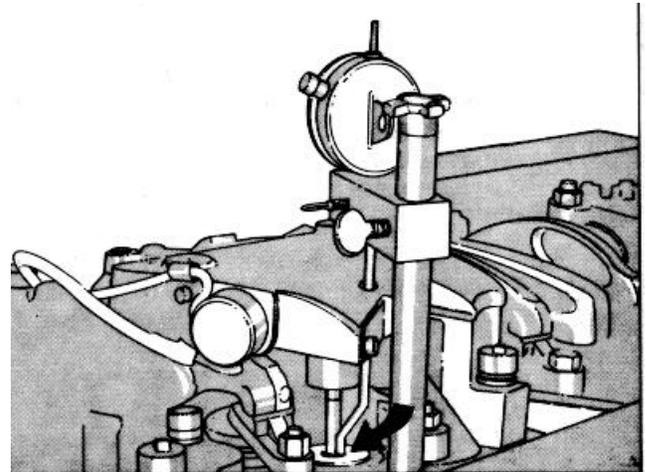


Fig 2-53, (om10611) Dial indicator in place-extension contact with plunger.

5. Using 3375009 Rocker Lever Actuator Assembly and Support Plate, bottom the injector plunger, check the zero (0) setting. Fig. 2-54. Allow the plunger to rise slowly; the indicator must show the plunger travel to be within the range specified in Table 2-18.

Table 2-18: Adjustment Limits Using Dial Indicator Method Inch [mm] KT(A)-1150 Engines

Injector Plunger Travel	Valve Clearance	
	Intake	Exhaust
0.304 + 0.001 [7.72 + 0.03]	0.014 [0.36]	0.027 [0.69]

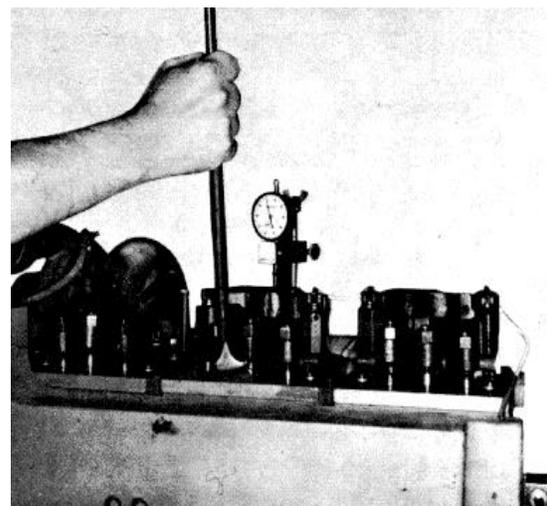


Fig. 2-54, (K114104). Actuating rocker lever

6. Using ST-669 Torque Wrench Adapter to hold the adjusting screw in position, torque the locknut to 30 to 35 ft-lbs [41 to 47 N . m]. If the torque wrench adapter is not used, hold the adjusting screw with a screwdriver, torque the locknuts to 40 to 45 ft-lbs [54 to 61 N.m].
7. Actuate the injector plunger several times as a check of the adjustment. Remove the dial indicator assembly.

Caution: If Jacobs Brake is not used, be sure the crossheads are adjusted before setting the valves. See Crosshead Adjustment following.

8. Adjust the valves on the appropriate cylinder as determined in Step 1 and Table 2-18. Tighten the locknuts the same as the injector locknut.
9. If Jacobs Brake is used, use 3375012 (0.018 inch [0.46 mm] thick) Feeler Gauge and 3375008 Torque Wrench Adapter, set the exhaust valve crosshead to Jacobs Brake slave piston clearance. Fig. 2-55.

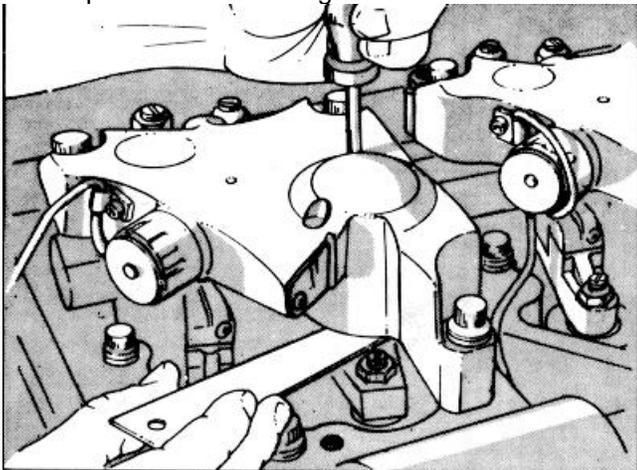


Fig 2-55, (OM1063L). Adjusting crosshead to slave piston clearance

Note: Turn both adjusting screws alternately and evenly until the crosshead and feeler gauge contact the slave piston and the adjusting screws are bottomed on the valve stem. Back the adjusting screws out one fourth (1/4) to one-half (1/2) turn. Starting with the outer adjusting screw (next to water manifold), then moving to the screw under the rocker lever, retighten gradually until the crosshead and feeler gauge contact the slave piston. Snug tighten the locknuts.

10. Hold the crosshead adjusting screws with a screwdriver, torque the locknuts 22 to 26 ft-lbs [20 to 35 N . m] using 3375008 Adapter and torque wrench.
11. See Table 2-18 for valve clearance values.

12. Repeat the adjustment procedure for each cylinder. See Table 2-17 for firing order and injector and valve set positions.

Crosshead Adjustment

Crossheads are used to operate two valves with one rocker lever. The crosshead adjustment is provided to assure equal operation of each pair of valves and prevent strain from misalignment.

1. Loosen the valve crosshead adjusting screw locknut and back off the screw (4, Fig. 2-56) one turn.

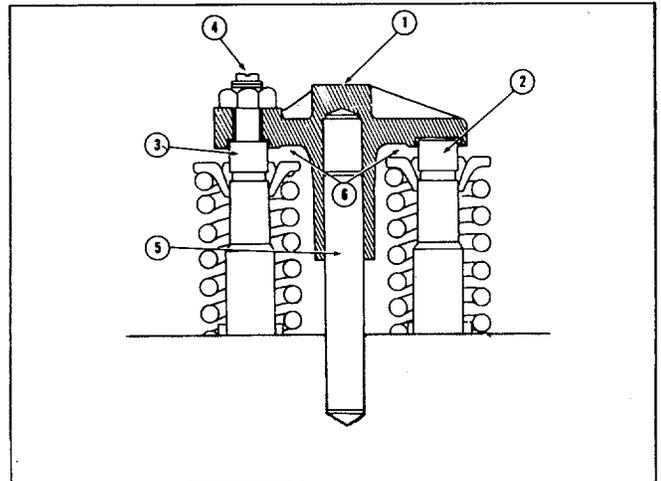


Fig. 2-56, (K21924). Valve crosshead

2. Use light finger pressure at the rocker lever contact surface (1) to hold the crosshead in contact with the valve stem (2) (without adjusting screw).
3. Turn down the crosshead adjusting screw until it touches the valve stem (3).
4. Using ST-669 Torque Wrench Adapter, tighten the locknuts to 22 to 26 ft-lbs [30 to 35 N.m]. If ST-669 is not available, hold the screws with a screwdriver and tighten the locknuts to 25 to 30 ft-lbs [34 to 41 N. m].
5. Check the clearance (6) between the crosshead and valve spring retainer with a wire gauge. There must be a minimum of 0.025 inch [0.64 mm] clearance at this point.

Injector and Valve Adjustment Using 3375004 Dial Indicator Kit (KT(A)-2300 and KTA-3067 Engines

Valve Set Mark Alignment 2-45

Note: KT(A)-2300 and KTA-3067 injectors, crossheads and valves are adjusted to the same values. Refer to Fig's. 2-57 and 2-58 for specific cylinder arrangement and engine firing order.

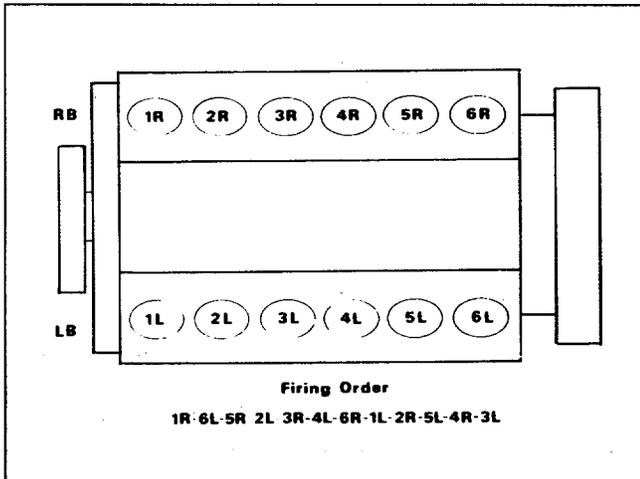


Fig. 2-57, (K21916). Cylinder arrangement and firing order KT(A)-2300

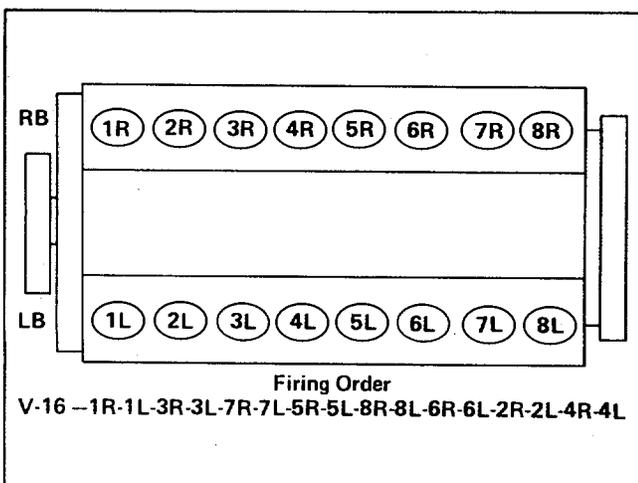


Fig. 2-58, (OM204). Cylinder arrangement and firing order KTA-3067

Three locations are provided where valve and injector alignment marks may be viewed. Injector plunger travel and valves both may be set on one cylinder at the same valve set location. The crankshaft must be turned through two (2) complete revolutions to properly set all injector plunger travel and valves.

Note: The barring mechanism may be located on either the left bank or right bank at the flywheel housing. The cover plate on opening "A" or "C" directly above the barring mechanism must be removed when viewing the timing marks at the flywheel housing.

1. When viewing the engine at the vibration damper, Fig. 2-59, align the timing marks on the damper with the pointer on the gear case cover.

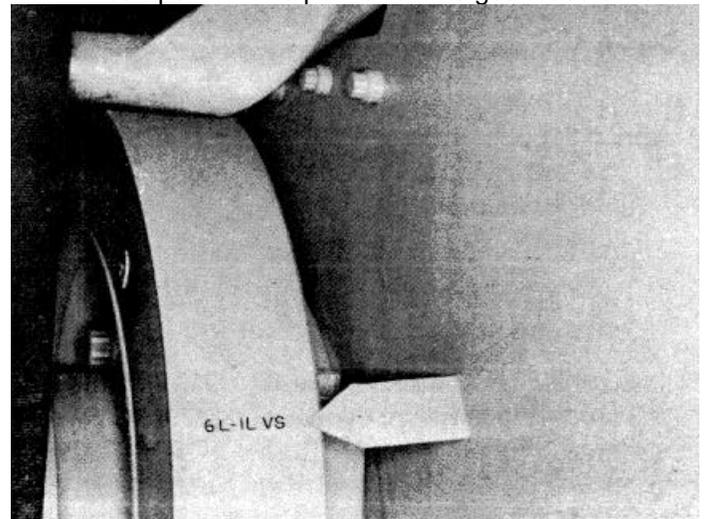


Fig. 2-59, (K21917). Valve set marks on vibration damper -KT(A)-2300

2. When barring the engine from the right bank at the flywheel housing "A" VS timing marks on the flywheel, (1, Fig. 2-60) must align with the scribe mark (2) when viewed through the opening marked "A" on the flywheel housing.

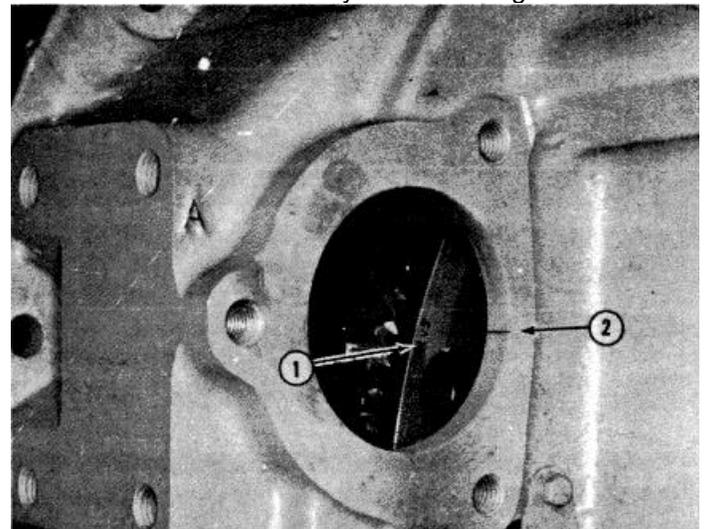


Fig. 2-60, (K21918). Valve set marks on right bank flywheel and housing - KT(A)-2300

3. When barring the engine from the left bank at the flywheel housing "C" VS timing marks on the flywheel (1, Fig. 2-16) must align with the scribe mark

(2) when viewed through the opening marked "C" on the flywheel housing.

Caution: When aligning valve set marks at either flywheel housing location, care must be taken to assure that "A" or "C" valve set marks on the flywheel match "A" or "C" marks on the flywheel housing opening.

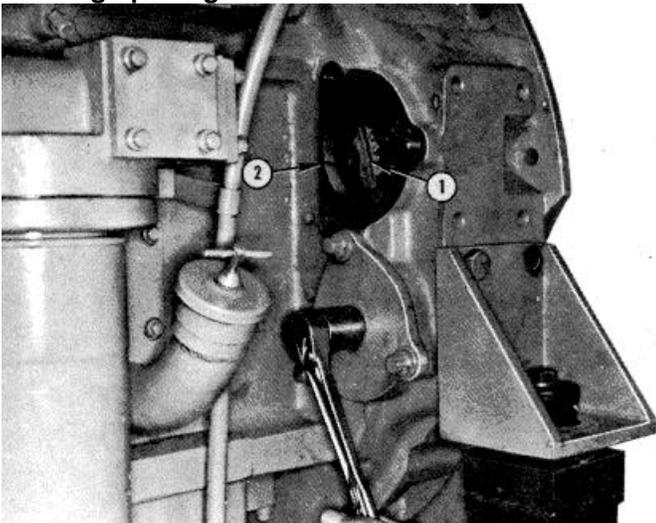


Fig. 2-61, (K21919) Engine barring device on of rotation until the appropriate valve set mark is aligned with the scribe mark on the flywheel housing or until a valve set mark on the vibration damper is aligned with the pointer on the gear case cover.

Note: Any valve set position may be used as a starting point when adjusting the injectors, crossheads and valves. Determine which of the two (2) cylinder indicated have both valves closed (rocker levers free). This cylinder is in position for injector plunger travel, crosshead and valve adjustment.

2. Set up 3375007 Indicator Support on the rocker lever housing, of the cylinder selected, with the indicator extension 3375005 on the injector plunger top. Fig. 2-62.

Note: Make sure the indicator extension is secure in the indicator stem and is not touching the rocker lever.

3. Using the rocker lever actuator, Fig. 2-63, depress the lever toward the injector until the plunger is bottomed in the cup to squeeze the oil film from the cup. Allow the injector plunger to rise, bottom again, hold in the bottom position and set the indicator at zero (0). Check the extension contact with the plunger top.

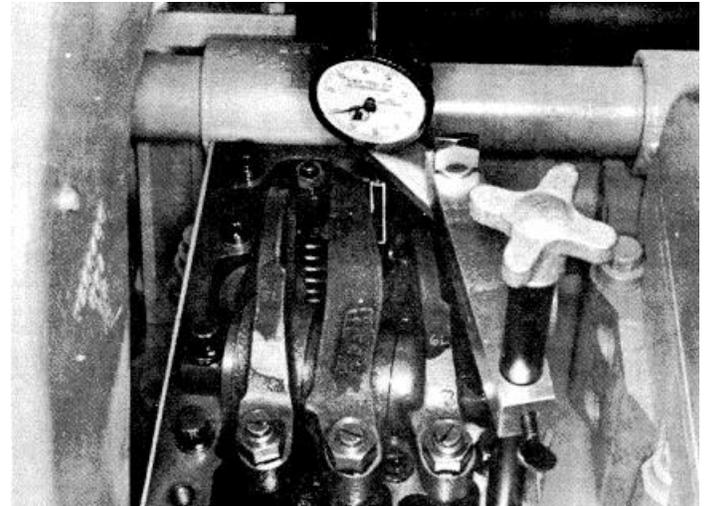


Fig. 2-62, (K21920). Dial indicator in place - extension in contact with plunger

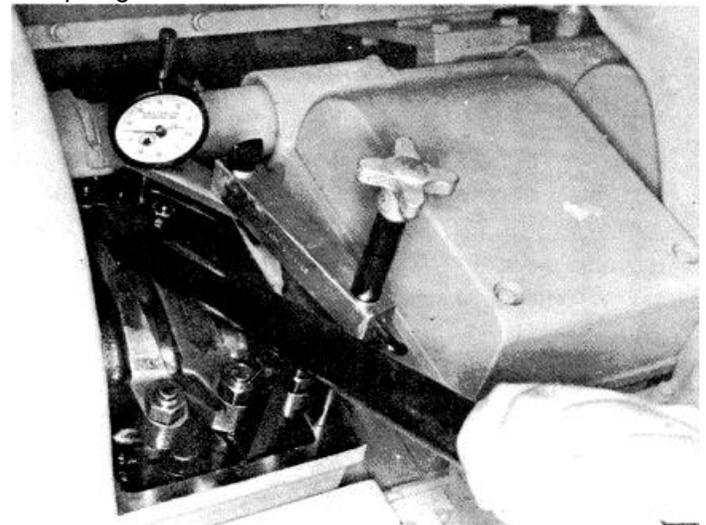


Fig 2-63, (K21921). Bottoming Injector plunger in cup

4. Allow the plunger to rise then bottom the plunger again, release the lever, the indicator must show travel as indicated in Table 2-19. Adjust as necessary.
5. If the adjusting screw locknuts were loosened for adjustment, tighten to 40 to 45 ft-lbs [54 to 61 N . m] torque and actuate the plunger several times as a

Table 2-19: Adjustment Limits Using Dial Indicator Method Inch [mm] KT(A)-2300 and KTA-3067 Engines

Injector Plunger Travel	Valve Clearance	
	Intake	Exhaust
0.308 + 0.001	0.014	0.027
[7.82 + 0.03]	[0.36]	[0.69]

check of the adjustment. Tighten the locknuts to 30 to 35 ft-lbs [41 to 47 N.m] torque when using ST-669 Torque Wrench Adapter.

6. Remove 3375004 Kit.

Crosshead Adjustment

Crossheads are used to operate two valves with one rocker lever, an adjusting screw is provided to assure equal operation of each pair of valves and prevent strain from misalignment. Crosshead adjustment changes as a result of valve and seat wear during engine operation.

1. Loosen the adjusting screw locknut, back off the screw (4, Fig. 2-56) one turn.
2. Use light finger pressure at the rocker lever contact surface (1) to hold the crosshead in contact with the valve stem (2). The adjusting screw should not touch the valve stem (3) at this point.
3. Turn down the adjusting screw until it touches the valve stem (3).
4. Using 3375008 Torque Wrench Adapter to hold the adjusting screw in position, tighten the locknut to 22 to 26 ft-lb [30 to 35 N m] torque. If the torque wrench adapter is not used, hold the adjusting screw with a screwdriver, tighten the locknut to 25 to 30 ft-lb [34 to 41 N. m] torque.
5. Check the clearance (6) between the crosshead and the valve spring retainer with a gauge. There must be a minimum of 0.025 inch [0.64 mm] clearance at this point.

Valve Adjustment

1. Insert the correct thickness feeler gauge between the rocker lever and the crosshead for the valves being adjusted. See Table 2-19 for valve clearance.

Note: Exhaust valves ace toward the front of the engine in each cylinder head on the LB side and are toward the rear of the engine in each cylinder head on the RB side.

2. If adjustment is required, loosen the locknut and turn the adjusting screw down until the rocker lever just touches the feeler gauge; lock the adjusting screw in this position with the locknut.
3. Tighten the locknut to 40 to 45 ft-lb [54 to 61 N . m] torque. When using ST-669 Torque Wrench Adapter tighten the locknuts to 30 to 35 ft-lb [41 to 47 N.m] torque.

After completing the injector plunger travel, crosshead 2-48 and valve adjustment on this cylinder bar the engine in the direction of rotation until the next valve set mark is aligned

with the scribe mark at the flywheel housing or the pointer on the gear case cover; repeat the procedure. See Fig's. 2-57 and 2-58 for cylinder arrangement and engine firing order.

Change Oil Change Aneroid Oil

1. Remove fill plug (1, Fig. 2-64) from the hole marked "Lub oil".

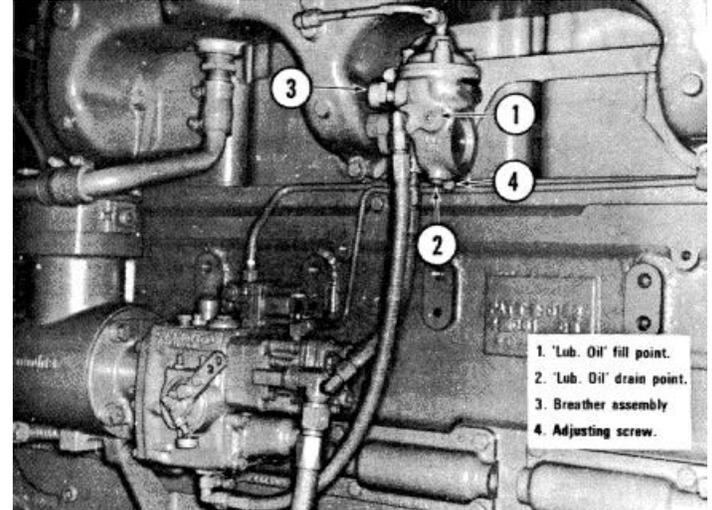


Fig. 2-64, (N10503). Aneroid

2. Remove the drain plug (2) from the bottom of the aneroid.
rain plug (2), fill the aneroid with clean engine lubricating oil. Replace the fill plug (1).

Replace Aneroid Breather

Remove and replace the aneroid breather (3, Fig. 2-64).

Change Hydraulic Governor Oil

Change oil in the hydraulic governor sump at each "C" Check.

Use the same grade of oil as used in the engine. See "Lubricating Oil Specifications".

Note: When temperature is extremely low, it may be necessary to dilute the lubricating oil with enough fuel oil or other special fluid to ensure free flow for satisfactory governor action.

Backside Idler Fan Drive Inspect the idler assembly to be sure the pivot arm is

not binding. Use the following procedure.

1. Check the idler arm for freedom of movement.
 - a. Grasp the pulley and move the pulley and arm away from the fan belt until the arm is nearly vertical.
 - b. Release the arm and pulley and allow them to move back to their original position against the belts.
 - c. The motion of the arm and pulley assembly should be free with no binding.
2. If the arm appears to be binding or tight, release the spring tension by placing a box end wrench over the square knob on the end of the pivot arm cap and while holding up on the box end wrench, remove the capscrew which holds the cap in place and allow the spring to unwind by allowing the box end wrench to rotate counterclockwise.
 - a. With the spring unloaded, rotate the cap until the slots inside the cap align with the roll pins in the pivot arm, and remove the cap by pulling away from the engine.
 - b. With the torsion spring unloaded, the pivot arm should rotate freely. If it does not appear free, then the bushings require replacement or re-packing with lubricant.
3. To inspect the bushings, loosen and remove the large hex head capscrew in the center of the pivot arm and remove the pivot arm from the pivot arm support.
 - a. Inspect the shaft for corrosion and clean it as necessary with fine grade emery cloth.
 - b. Inspect the bushings and thrust washers, clean and repack them with a good grade of lubricant such as:

- lubriplate
- moly-disulfide grease

- c. Inspect the O-ring on the pivot arm and replace it as necessary. Lubricate the O-ring prior to installation.
- d. Reassemble the pivot arm assembly cap using a new spring.
- e. Retension the new spring and lock the cap in place. Install a new fan belt and test the unit.

Clean Complete Oil Bath Air Cleaner Steam

Steam clean the oil bath cleaner main body screens. Direct the stream jet from the air outlet side of the cleaner to wash dirt out in the opposite direction of air flow.

Solvent-Air Cleaning

1. Steam clean the exterior of the cleaner.
2. Remove the air cleaner oil cup.
3. Clamp the hose with the air line adapter to the air cleaner outlet.
4. Submerge the air cleaner in solvent.
5. Introduce air into the unit at 3 to 5 psi [21 to 34 kpa] and leave it in the washer 10 to 20 minutes.
6. Remove the cleaner from solvent and steam clean thoroughly to remove all traces of solvent. Dry with compressed air.

Caution: Failure to remove solvent may cause engine to overspeed until all solvent is sucked from the cleaner.

7. If the air cleaner is to be stored, dip it in lubricating oil to prevent rusting of the screens.

Note: If screens cannot be thoroughly cleaned by either method, or if the body is pierced or otherwise damaged, replace with a new air cleaner.

"D" Maintenance Checks

At each "D" Maintenance Check, perform all "A", "B" and "C" checks in addition to those following. Most of these checks should be performed by a Cummins Distributor or Dealer and where Cummins Shop Manuals are available for complete instructions.

Clean and Calibrate Injectors Clean and calibrate the injectors regularly to prevent restriction of fuel delivery to the combustion chambers: Because of the special tools required for calibration, most owners and fleets find it more economical to let a Cummins Distributor do the cleaning and calibration operations.

To clean and calibrate the injectors, refer to Bulletin No. 3379071 and revisions thereto. After removing the injectors from KT(A)-1150, KT(A)-2300 or KTA-3067 Engines for cleaning the seal seat should be removed from the injector (1, Fig. 2-65) or injector "well" for cleaning, examination and/or replacement as necessary.



Fig. 2-65, (K11918). Injector seal seat - all KT Engines

Caution: There must be only one (1) seal seat used in each injector "well". Use of more than one seal seat per injector will change the injector protrusion and cause combustion inefficiency.

Clean and Calibrate Fuel Pump

Check the fuel pump calibration on the engine if required. See the nearest Cummins Distributor or Dealer for values.

Clean and Calibrate Aneroid

1. Remove the flexible hose or tube from the aneroid cover to the intake manifold.
2. Remove the lead seal (if used), screws and aneroid cover.
3. Remove the bellows, piston, upper portion of the two piece shaft and the spring from the aneroid body.

Note: Count and record the amount of thread turns required to remove the upper shaft, piston and bellows from the lower shaft.

4. Place the hex portion of the shaft in a vise, snug tighten the vise, remove the self-locking nut, retaining washer and bellows.
5. Clean the parts in an approved cleaning solvent.
6. Position the new bellows over the shaft to the piston, secure with retaining washer and self-locking nut. Tighten the self-locking nut to 20 to 25 ft-lb [2.3 to 2.8 N.m] torque.
7. Install the spring, shaft, piston and bellows assembly into the aneroid body. As the two piece shaft is re-assembled, turn the upper portion of the shaft the same amount of thread turns as recorded during disassembly.

Caution: The amount of thread turns during installation must correspond with turns during removal to avoid changing the aneroid setting.

8. Align the holes in the bellows with the corresponding capscrew holes in the aneroid body.
9. Position the cover to the body; secure with flat-washers, lockwashers and fillister head screws.
10. Install a new seal. Refer to Bulletin No. 3379084 for sealing instructions and calibration procedure. Calibration, if required, must be performed by a Cummins Distributor on a fuel pump test stand.

11. Reinstall the flexible hose or tube from the aneroid cover to the intake manifold.

Inspect/Install Rebuilt Unit as Necessary

The following assemblies should be inspected at this time. The options are: inspect and reuse, rebuild per shop manual instructions, replace with a new or Distributor/Dealer exchange unit or Cummins Diesel ReCon Inc. unit.

Inspect Water Pump and Fan Hub

Inspect the water pump and fan hub for wobble and evidence of grease leakage. Replace with rebuilt prelubricated units as necessary.

Idler Pulley

Inspect, rebuild and repack the idler pulley with correct grease. Refer to the Engine Shop Manual for the rebuild and lubricating procedure for the idler pulley.

**Inspect Turbocharger
r Bearing Clearance**

Check bearing clearances. This can be done without removing the turbocharger from the engine, by using a dial indicator to indicate the end-play of the rotor shaft and a feeler gauge to indicate the radial clearance. Fig. 2-66.

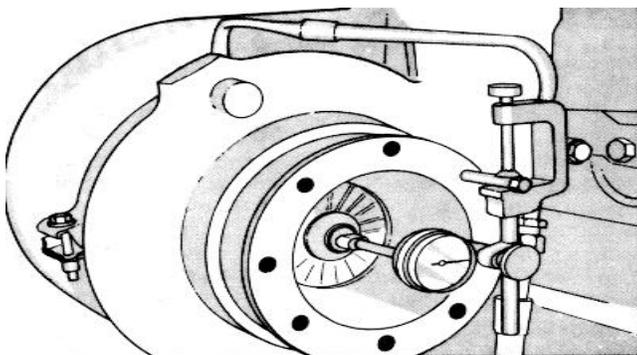


Fig. 2-66, (OM1065L).

Checking Procedure

1. Remove the exhaust and intake piping from the turbocharger to expose the ends of the rotor assembly.
2. Remove one capscrew from the front plate (compressor wheel end) and replace it with a long capscrew. Attach an indicator to the long capscrew and register the indicator point on the end of the rotor shaft. Push the shaft from end-to-end making note of the total indicator reading. Fig. 2-66. On T-50, ST-50 and VT-50

the end clearance should be 0.006 to 0.018 inch [0.15 to 0.46 mm].

- a. Push the wheel toward the side of the bore.
 - b. Using a feeler gauge, check the distance between the tip of the wheel vanes and the bore. On T-50, ST-50 and VT-50 the clearance should be 0.003 to 0.033 inch [0.08 to 0.84 mm].
3. Check the radial clearance on the compressor wheel only.
 4. If end clearances exceed the limits, remove the turbocharger from the engine and replace it with a new or rebuilt unit.
 5. Check T-18A turbochargers as follows:
 - a. For checking procedures refer to Service Manual Bulletin No. 3379055.
 - b. End clearance should be 0.004 to 0.009 inch [0.10 to 0.23 mm], radial clearance should be 0.003 to 0.007 inch [0.08 to 0.18 mm]. If the clearances exceed these limits, remove the turbocharger(s) from the engine and replace them with new or rebuilt units.
 6. Intel the exhaust and intake piping to the turbocharger(s).

**Inspect Vibration Damper
Rubber Damper**

The damper hub (1, Fig. 2-67) and the inertia member (2) are stamped with an index mark (3) to permit the detection of movement between the two components.

There should be no relative rotation between the hub and the inertia member resulting from engine operation.

Check for extrusion or rubber particles between the hub and the inertia member.

If there is evidence of inertia member movement and rubber extrusion, replace the damper.

Viscous Dampers

Check the damper for evidence of fluid loss, dents and wobble. Visually inspect the vibration damper's thick

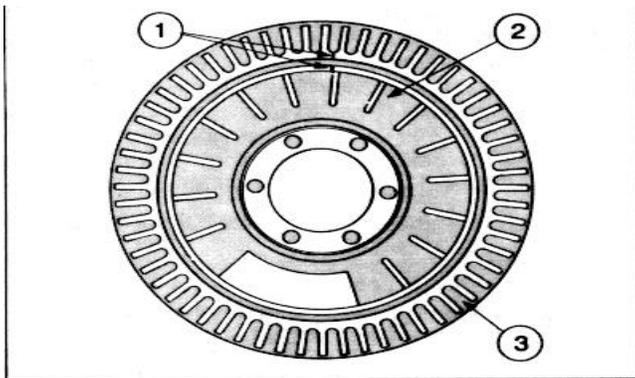


Fig. 2-67, (OM1066L). Vibration damper alignment marks

ness for any deformation or raising of the damper's front cover plate.

1. If a lack of space around the damper will not permit a visual inspection, run a finger around the inside and the outside of the front cover plate. If any variations or deformations are detected, remove the vibration damper and check as follows.
2. Remove paint, dirt and grime from the front and rear surface of the damper in four (4) equal spaced areas. Clean the surface with paint solvent and fine emery cloth.
3. Using a micrometer measure and record the thickness of the dampers at the four (4) areas cleaned in Step 3. Take the reading approximately 0.125 inch [3.18 mm] from the outside edge of the front cover plate.
4. Replace the damper if the variation of the four (4) readings exceed 0.010 inch [0.25 mm].

Viscous vibration dampers should be checked under the following conditions:

1. At any time the damper is removed from the engine.
2. At any time the engine experiences the following problems:
 - a. Gear train failure
 - b. Accessory drive shaft failure
 - c. Crankshaft failure
 - d. Damper mounting capscrew failure
 - e. Flywheel mounting capscrew failure

Viscous vibration dampers should be replaced at our recommended change interval** regardless of condition. Gellation of the damper's silicon fluid occurs after extended service because of the high shear rates and resulting high temperatures imposed on the fluid during normal damper operation and, if the damper has not failed at this time, its failure is imminent.

Table 2-20: Viscous Vibration Damper Thickness Specifications - Inch [mm]

Damper	Maximum Allowable Thickness	**Recommended Change Interval
--------	-----------------------------	-------------------------------

Part Number	Maximum Allowable Thickness	**Recommended Change Interval
20633-1	1.981 [50.32]	9000
20634-1	1.644 [41.76]	9000
20835-1	1.142 [29.01]	9000
145789	1.663 [42.24]	6000
190213	1.663 [42.4]	6000
207531	2.574 [65.38]	18000
210758	1.550 [39.37]	6000
211268	1.663 [42.24]	6000
211914	1.981 [50.32]	9000
211915*		
211916	1.663 [42.24]	6000
217321	1.663 [42.24]	15000
217322	1.663 [42.24]	15000
217323	1.663 [42.24]	15000
218755	1.663 [42.24]	15000
3005973	2.574 [65.38]	18000
3015464	2.574 [65.38]	18000

*Due to vendor manufacturing differences 211915 Vibration Damper maximum allowable thickness depends upon the style of damper installed on the engine. Fabricated type 211915 Vibration Dampers, identified by a weld bead on the inside of the damper where the mounting flange joins the housing and vendor Part Number 709555, have a maximum allowable thickness of 1.570 inch [39.88 mm]. The recommended change interval for this damper is 12,000 hours. Cast and machined type 211915 Vibration Dampers (vendor Part Number 707843) have a maximum allowable thickness of 1.550 inch [39.37 mm].

The recommended change interval for this damper is 6,000 hours.

Air Compressor Inspect the air compressor, check for evidence of oil or coolant leakage. Drain the air tank and check for air compressor lubricating oil carry over. Replace with a rebuilt unit as necessary.

Backside Idler Fan Drive

Remove the pivot arm assembly, disassemble and clean. Replace the Teflon bushings. Inspect the thrust washers and replace as necessary. Pack Teflon bushings with Aero-shell No. 5 Lubriplate (type 130AA) or Moly-disulfide grease, reassemble and install the idler assembly.

**Clean Crankcase Breathers
(KT(A)-2300 and KTA-3067 Engines)**

Remove the crankcase breathers from the right bank front and left bank rear of the cylinder block. Clean in an approved cleaning solvent, dry with compressed air, install the breather.

2-53

Seasonal Maintenance Checks

There are some maintenance checks which may or may not fall exactly into suggested maintenance schedule due to miles or hours operation but are performed once or twice each year.

Clean Cooling System (Fall)

The cooling system must be clean to do its work properly. Scale in the system slows down heat absorption from water jackets and heat rejection from the radiator. Use clean water that will not clog any of the hundreds of small passages in the radiator or water passages in the block. Clean the radiator cores, heater cores, oil cooler and block passages that have become clogged with scale and sediment by chemical cleaning, neutralizing and flushing.

Chemical Cleaning

If rust and scale have collected, the system must be chemically cleaned. Use a good cooling system cleaner such as sodium bisulphate or oxalic acid followed by neutralizer and flushing.

Pressure Flushing

Flush the radiator and the block before filling with antifreeze, or installing a water filter on a used or rebuilt engine.

When pressure flushing the radiator, open the upper and lower hose connections and screw the radiator cap on tight. Use the hose connection on both the upper and lower connections to make the operation easier. Attach a flushing gun nozzle to the lower hose connection and let water run until the radiator is full. When full, apply air pressure gradually to avoid damage to the core. Shut off the air and allow the radiator to refill; then apply air pressure. Repeat until the water coming from the radiator is clean.

Caution: Do not use excessive air pressure while starting the water flow. This could split or damage the radiator core.

Sediment and dirt settle into pockets in the block as well as the radiator core. Remove the thermostats from the housing and flush the block with water. Partially restrict the lower opening until the block fills.

Apply air pressure and force water from the lower opening. Repeat the process until the stream of water coming from the block is clean.

Replace Hose (As Required)

Inspect the oil filter and cooling system hose and hose connections for leaks and/or deterioration. Particles of deteriorated hose can be carried through the cooling system or lubricating system and restrict or clog small passages, especially radiator core, and lubricating oil cooler, and partially stop circulation. Replace as necessary.

Check Preheater Cold-Starting Aid (Fall)

Remove the 1/8 inch pipe plug from the manifold, near the glow plug, and check the operation of the Preheater as described in Section 1.

Check Shutterstats and Thematic Fans (Fall)

Shutterstats and thematic fans must be set to operate in the same range as the thermostat with which they are used. Table 2-21 gives the settings for Shutterstats and thematic fans as normally used. The 180 to 1950 F [82 to 91° C] thermostats are used only with Shutterstats that are set to close at 18PF [86°C] and open at 1950F [91° C].

Check Thermostats and Seals (Fall)

Remove the thermostats from the thermostat housings and check for proper opening and closing temperature.

Most Cummins Engines are equipped with either medium 170 to 1850 F [77 to 850 C] or low 160 to 1750 F [71 to 790C] and in a few cases high-range 180 to 1950 F [82 to 910 C] thermostats, depending on engine application.

Steam Clean Engine (Spring)

Steam is the most satisfactory method of cleaning a dirty engine or piece of equipment. If steam is not available, use's approved solvent to wash the engine.

All electrical components and wiring should be protected from the full force of the cleaner spray nozzle.

Table 2-21: Thermal Control Settings

	Setting With 160 to 175°F Control [71 to 79°C]		Setting With 170 to 185°F [77 to 85°C]		Setting With 180 to 195°F [82 to 91°C]	
	Open	Close	Open	Close	Open	Close
Thermatic Fan	185° F [85° C]	170° F [77° C]	190° F [88° C]	182° F [82° C]		
Shutterstat	18° F [82° C]	172°-F [78° C]	185° F [85° C]	177° F [81° C]	195° F [91° C]	187° F [86° C]
Modulating	175° F		185° F			
Shutters Open	[79° C]		[85° C]		[91° C]	

Checking Mountings (Spring)

Tighten Mounting Bolts and Nuts (As Required) Engine mounting bolts will occasionally work loose and cause the engine supports and brackets to wear rapidly. Tighten all mounting bolts or nuts and replace any broken or lost bolts or capscrews.

Tighten Turbocharger Mounting Nuts(As Required)

Tighten all turbocharger mounting capscrews and nuts to be sure that they are holding securely. Tighten the mounting bolts and supports so that vibration will be at a minimum. Fig. 2-68.

Check Fan and Drive Pulley Mounting (Spring)

Check the fan to be sure it is securely mounted; tighten

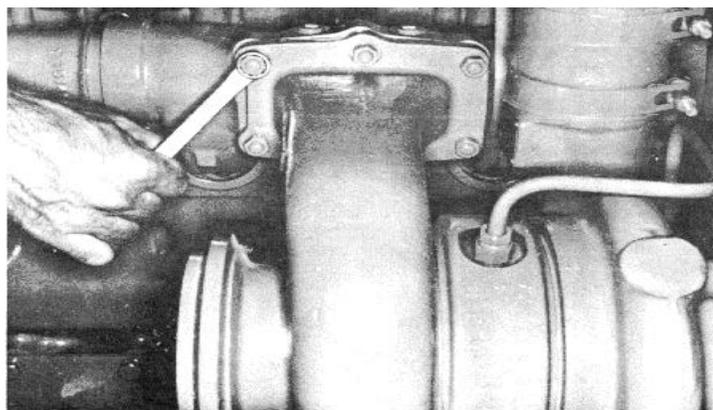


Fig. 268, (N11953). Tightening turbocharger mounting marks

the capscrews as necessary. Check the fan for wobble or bent blades.

Check the fan hub and crankshaft drive pulley to be sure they are securely mounted. Check the fan hub pulley for looseness or wobble; if necessary, remove the fan pilot hub and tighten the shaft nut. Tighten the fan bracket capscrews.

Check Crankshaft End Clearance (Spring)

The crankshaft of a new or newly rebuilt engine must have end clearance as listed in Table 2-22. A worn engine must not be operated with more than the worn limit end clearance shown in the same table. If the engine is disassembled for repair, install new thrust rings.

Table 2-22: Crankshaft End Clearance - Inch [mm]

Engine Series	New Minimum	New Maximum	Worn Limit
H, NH,	0.007	0.017	0.022
NT	[0.18]	[0.43]	[0.56]
V-903,	0.005	0.015	0.022
VT-903	[0.13]	[0.38]	[0.56]
V-378, V-504	0.004	0.014	0.022
V-555	[0.10]	[0.36]	[0.56]
V-1710	0.006	0.013	0.018
[0.15]	[0.33]	[0.46]	
KT(A)-1150 0.	0.007	0.017	0.022
[0.18]	[0.43]	[0.56]	
KT(A)-2300	0.005	0.015	0.022
KTA-3067	[0.13]	[0.38]	[0.56]

Caution: Do not pry against the outer damper ring.

The check can be made by attaching an indicator to rest against the damper or pulley, while prying against the front cover and inner part of the pulley or damper. End clearance must be present with the engine mounted in the unit and assembled to the transmission or converter.

Check Heat Exchanger Zinc Plugs (Spring)

Check the zinc plugs in the heat exchanger and change if they are badly eroded. Frequency of change depends upon the chemical reaction of raw water circulated through the heat exchanger.

2-56

Providing and maintaining an adequate supply of clean, high-quality fuel, lubricating oil, grease and coolant in an engine is one way of ensuring long life and satisfactory performance.

Lubricant, Fuel and Coolant

The Functions of Lubricating Oil

The lubricating oil used in a Cummins engine must be multifunctional. It must perform the primary functions of:

Lubrication by providing a film between the moving parts to reduce wear and friction.

Cooling by serving as a heat transfer media to carry heat away from critical areas.

Sealing by filling in the uneven surfaces in the cylinder wall, valve stems and turbocharger oil seals.

Cleaning by holding contaminants in suspension to prevent a build up of deposits on the engine surfaces.

In addition, it must also provide:

Dampening and cushioning of components that operate under high stress, such as gears and push tubes.

Protection from oxidation and corrosion.

Hydraulic Action for components such as Jacobs Brake and hydraulic controls.

Engine lubricating oil must be changed when it can no longer perform its functions within an engine. Oil does not wear out, but it becomes contaminated to the point that it can no longer satisfactorily protect the engine. Contamination of the oil is a normal result of engine operation. During engine operation a wide variety of contaminants are introduced into the oil.

Some of these are:

Byproducts of Engine Combustion asphaltenes, soot and acids from partially burned fuel.

Acids, varnish and sludge which are formed as a result of the oxidation of the oil as it breaks down or decomposes.

Dirt entering the engine through the combustion air, fuel, while adding or changing lubricating oil.

The oil must have an additive package to combat these contaminants. The package generally consists of:

Detergents/Dispersants which keep insoluble matter in suspension until they are filtered from the oil or are removed with the oil change. This prevents sludge and carbon deposits from forming in the engine.

Inhibitors to maintain the stability of the oil, prevent acids from attacking metal surfaces and prevent rust during the periods the engine is not operating.

Other Additives that enable the oil to lubricate highly loaded areas, prevent scuffing and seizing, control foaming and prevent air retention in the oil.

Oil Performance Classification System

The American Petroleum Institute (API), The American Society for Testing and Materials (ASTM) and the Society of Automotive Engineers (SAE) have jointly developed and maintained a system for classifying lubricating oil by performance categories. The following are brief descriptions of the API categories used in the Cummins oil performance recommendations.

CC (Equivalent to MIL-L-2104B.) This category describes oils meeting the requirements of the military specification MIL-L-2104B. These oils provide low temperature protection from sludge and rust and are designed to perform moderately well at high temperature. For moderate-duty service.

CD (Equivalent to Series 3 and MIL-L-45199B.) This category described oils meeting the requirements of the Series 3 specification and MIL-L-45199B. These

oils provide protection from deposits and oxidation at high temperature. For severe-duty service.

SC (Equivalent to 1964 MS Oils). This category describes oils meeting the 1964-1967 requirements of automobile manufacturers. Primarily for use in automobiles, it provides low temperature anti-sludge and anti-rust protection required in a light-duty diesel service such as a stop and-go operation.

SD (Equivalent to 1968-1971 MS Oils.) This category describes oils meeting the 1964-1967 requirements of automobile manufacturers. Primarily for use in automobiles, it provides low temperature anti-sludge and anti-rust protection required in a light-duty diesel service such as a stop-and-go operation. It may be substituted for SC category.

SE (Equivalent to 1972 MS Oils.) This category describes oils meeting the 1972 requirements of automobile manufacturers. Primarily for use in automobiles, it provides protection from high temperature oxidation and low temperature anti-sludge and anti-rust as required in a light-duty diesel service such as a stop-and-go operation. It may be substituted for SC category.

CB (No equivalent Specification.) These oils were usually referred to as Supplement 1 oils. This category describes oils which met the requirements of the military specification MIL-L-2104A where the diesel engine test was run using fuel with a high sulphur content. For moderate duty service. Oils in this performance category should not be used in Cummins Engines.

The Engine Manufacturers Association (EMA) publishes a book entitled "Lubricating Oils Data Book". Copies may be purchased from the Engine Manufacturers Association, 111 E Wacker Drive, Chicago, Ill. 60601. This book lists commercially available oils by oil company and brand name with the API performance categories met by each brand.

Oil Performance Recommendations

Cummins Engine Co., Inc. does not recommend the use of any specific brand of engine lubricating oil. Cummins recommends the use of oil designed to meet the following API categories:

CC for use in naturally aspirated engines.

CC/CD for use in turbocharged engines.

CC/SC for use only in engines that operate in a 3-2 light-duty service including standby and emergency operation.

Dual Categories are used where more protection is required than is provided by a single category.

CC/CD and CC/SC categories indicate that the oil is blended to meet the performance level required by each single category.

A sulfated ash limit has been placed on lubricating oil for use in Cummins engines. Past experience has shown that oils with a high ash content may produce deposits on valves that can progress to guttering and valve burning. A maximum sulfated ash content of 1.85 mass % is recommended for all oil used in Cummins engines except engines fueled with natural gas. For natural gas engines a sulfated ash range of 0.03 to 0.85 mass % is recommended. Cummins Engine Co., Inc., does not recommend the use of ashless oils for natural gas engines. When the ash content is below .15 mass %, the ash should represent organo-metallic anti-wear additives.

Break-In Oils

Special "break-in" lubricating oils are not recommended for new or rebuilt Cummins engines. Use the same lubricating oils used in normal engine operation.

Viscosity Recommendations

The viscosity of an oil is a measure of its resistance to flow. The Society of Automotive Engineers has classified engine oils in viscosity grades; Table 3-1 shows the viscosity range for these grades. Oils that meet the low temperature (0° F [-18° C]) requirement carry a grade designation with a "W" suffix. Oils that meet both the low and high temperature requirements are referred to as multigrade or multiviscosity grade oils.

Multigraded oils are generally produced by adding viscosity-index improver additives to retard the thinning effects a low viscosity base oil will experience at engine operating temperatures. Multigraded oils that meet the requirements of the API classifications, are recommended for use in Cummins engines.

Cummins recommends the use of multigraded lubricating oil with the viscosity grades shown in Table 3-2. Table 3-2 shows Cummins viscosity grade recommendations at various ambient temperatures. The only viscosity grades recommended are those shown in this table.

Cummins has found that the use of multigraded lubri

cating oil improves oil consumption control, improved engine cranking in cold conditions while maintaining lubrication at high operating temperatures and may contribute to improved fuel consumption. Cummins does not recommend the use of single grade lubricating oils. In the event that the recommended multi-grade oil is not available, single grade oils may be substituted.

Caution: When single grade oil is used, be sure that the oil will be operating within the temperature ranges shown in Table 3-3.

The primary criterion for selecting an oil viscosity grade is the lowest temperature the oil will experience while in the engine oil sump. Bearing problems can be caused by the lack of lubrication during the cranking and start up of a cold engine when the oil being used is too viscous to flow properly. Change to a lower viscosity grade of oil as the temperature of the oil in the engine oil sump reaches the lower end of the ranges shown in Table 3-2.

Table 3-1: SAE Viscosity Numbers for Lubricating Oils

SAE Viscosity Grade	Viscosity Range		
	millipascal-second, mPa•s (centipoise, cP) @ 0°F [-18° C] maximum	millimetre ² /second, mm ² /s (centistoke, cSt) @ 212° F [100° C] minimum	maximum
5W	1250	3.8	--
10W	2500	4.1	--
15W	5000	5.6	--
20W	10000	5.6	--
20	--	5.6	less than 9.3
30	--	9.3	less than 12.5
40	--	12.5	less than 16.3
50	--	16.3	less than 21.9

1. SAE Recommended Practice J300d
2. 1 Mpa•s = 1 cP
3. 1 mm²/s = 1 cSt

Table 3-2: Cummins Recommendations for Viscosity Grade vs. Ambient Temperature

SAE Viscosity Grade*	Ambient Temperature**
Recommended	
10W - 30	-13° F to 95° F [-25° C to 35° C]
15W - 40	14° F and above [-10° C and above]
20W - 40	32° F and above [0° C and above]

*SAE-5W mineral oils should not be used.

**For temperatures consistently below -13° F [-25°C]

See Table 4.

Table 3-3: Alternate Oil Grades

10W	-13° F to 32° F [-25°C to 0°C]
20W	23° F to 68° F [-5° C to 20° C]
20W-20*	23° F to 68° F [-5° C to 20° C]
20	23° F to 68° F [-5° C to 20° C]
30	39° F and above [4° C and above]
40	50° F and above [10° C and above]

*20W-20 is not considered a multi-grade even though it meets two grades.

Synthetic Lubricating Oil

Synthetic oils for use in diesel engines are primarily blended from synthesized hydrocarbons and esters. These base oils are manufactured by chemically reacting lower molecular weight materials to produce a lubricant that has planned predictable properties.

Synthetic oil was developed for use in an extreme environment where the ambient temperature may be as low as -50° F [-450 C] and extremely high engine temperatures at up to 400° F [2050 C]. Under these extreme conditions petroleum base stock lubricants (mineral oil) do not perform satisfactorily.

Cummins Engine Co., Inc. recommends synthetic lubricating oil for use in Cummins engines operating in areas where the ambient temperature is consistently lower than -130 F [-250 C]. Synthetic lubricating oils may be used at higher ambient temperatures provided they meet the appropriate API Service categories and viscosity grades.

Cummins Engine Co., Inc. recommends the same oil change interval be followed for synthetic lubricating oil as that for petroleum based lubricating oil.

Arctic Operations

For engine operation in areas where the ambient temperature is consistently below -13° F [-250 C] and where there is no provision to keep the engine warm when it is not operating, the lubricating oil should meet the requirements in the following table. Oil meeting these requirements usually have synthetic base stocks. SAE 5W viscosity grade synthetic oils

Table 34: Arctic Oil Recommendations

Parameter (Test Method)	Specifications
Performance Quality Level	API Classification CC/SC API Classification CC/CD
Viscosity	10,000 mPa•s Max. at -31° F [-35° C] 4.1 mm ² /s Min. at 212° F [100°C]
Pour Point (ASTM D-97)	Min. of 9° F [5° C] Below the Lowest Expected Ambient Temperature
Sulfated Ash Content (ASTM D-874)	1.85% by Weight Maximum

may be used provided they meet the minimum viscosity requirement at 212°F [100° C].

Grease

Cummins Engine Company, Inc., recommends use of grease meeting the specifications of MIL-G-3545, excluding those of sodium or soda soap thickeners. Contact the lubricant supplier for grease meeting these specifications.

TEST	TEST PROCEDURE
-------------	-----------------------

High-Temperature Performance

Dropping point, ° F.	ASTM D 2265 350 min.
Bearing life, hours at 300° F 10,000 rpm	* FTM 331 600 min.

Low-Temperature Properties

Torque, GCM Start at 0° F Run at 0° F	ASTM D 1478 15,000 max. 5,000 max.
---	--

Rust Protection and Water Resistance

Rust Test	ASTM D 1743 Pass
Water resistance, %	ASTM D 1264 20 max.

Stability

Oil separation, % 30 hours @ 212° F	* FTM 321 5 max.
--	---------------------

Penetration

Worked	ASTM D 217 250-300
--------	-----------------------

Bomb Test, PSI Drop 100 Hours 500 Hours	ASTM D 942 10 max. 25 max.
--	----------------------------------

Copper, Corrosion	* FTM 5309 Pass
--------------------------	--------------------

Dirt Count, Particles/cc 25 Micron + 75 Micron + 125 Micron +	* FTM 3005 5,000 max. 1,000 max. None
---	--

Rubber Swell

*FTM 3603
10 max.

* Federal Test Method Standard No. 791a.

Caution: Do not mix brands of grease. Damage to the bearings may result. Excessive lubrication is as harmful as inadequate lubrication. After lubricating the fan hub, replace both pipe plugs. Use of fittings will allow the lubricant to be thrown out, due to rotative speed.

Fuel Oil

Cummins diesel engines have been developed to take advantage of the high energy content and generally lower cost of No. 2 Diesel Fuels. Experience has shown that a Cummins diesel engine will also operate satisfactorily on No. 1 fuels or other fuels within the following specifications.

Recommended Fuel Oil Properties:

Viscosity (ASTM D-445)	1.3 to 5.8 CentiStoke [1.3 to 5.8 mm ² Per Second] at 104° F [40°C].
Cetane Number (ASTM D-613)	40 minimum except in cold weather or in service with prolonged low loads, a higher cetane number is desirable.
Sulfur Content (ASTM D-129 or 1552)	Not to exceed 1% by weight.
Water and Sediment (ASTM D-1796)	Not to exceed 0.1% by weight.
Carbon Residue (Ransbottom ASTM D-524 or D-19)	Not to exceed 0.25% by weight on 10% residue.
Flash Point (ASTM 0-93)	125°F [52°C] minimum. Certain marine registries require higher flash points.
Density (ASTRM D-27)	30 to 42F [-1 to 6° C] API at 60° F 116°C] (0.816 to 0.876 Sp. Gr.)
Cloud Point (ASTM D-97)	10°F [--12C] below lowest temperature expected to operate at.
Active Sulfur-Copper Strip-Corrosion (ASTM D-130)	Not to exceed No. 2 rating after 3 hours at 122° F [50° C].
Ash (ASTM D-482)	Not to exceed 0.02% by weight.
Distillation (ASTM D-86)	The distillation curve should be smooth and continuous. At least 90% of the fuel should evaporate at less than 680° F [360° C]. All of the fuel should evaporate at less than 725°0 F [385° C].

Specifications and Torque

Coolant

Water should be clean and free of any corrosive chemicals such as chloride, sulfates and acids. It should be kept slightly alkaline with a pH value range of 8.5 to 10.5. Any water which is suitable for drinking can be treated as described in the following paragraphs for use in an engine.

Maintain the Fleetguard DCA Water Filter on the engine. The filter bypasses a small amount of coolant from the system via a filtering and treating element which must be replaced periodically.

1. In summer, with no antifreeze, fill the system with water.
2. In winter, select an antifreeze and use with water as required by temperature.

Note: Some antifreeze also contains anti-leak additives such as inert inorganic fibers, polymer particles or ginger root. These types of antifreeze should not be used in conjunction with the water filter. The filter element will filter out the additives and/or become clogged and ineffective.

3. Install or replace the DCA Water Filter as follows and as recommended in Section 2.

New Engines Going Into Service Equipped With DCA Water Filters

1. New engines shipped from Cummins Engine Company are equipped with water filters containing a DCA precharge element. This element is compatible with plain water or all

permanent-type antifreeze except Methoxy Propanol. See Table 3-5 for Methoxy Propanol precharge instructions.

2. At the first "B" Check (oil change period) the DCA precharge element should be changed to DCA Service Element. See Table 3-5.
3. Replace the DCA Service Element at each succeeding "B" Check.
 - a. If make-up coolant must be added between element changes, use coolant from a pretreated supply, see "Make-Up Coolant Specifications", Section 2.
 - b. Each time the system is drained, precharge per coolant specifications, Table 3-5.
4. The service element may be changed at the "C" Check if 3300858 (DCA-4L) direct chemical additive is added to the cooling system at each "B" Check between service element changes. One bottle of direct additive should be used for every 10 gallons of cooling system capacity. Add one bottle for every 15-gallon capacity if methoxy propanol antifreeze is used in the cooling system.
5. To ensure adequate corrosion protection, have the coolant checked at each third element change or more often. See "Check Engine Coolant", Section 2.

Table 3-5: Spin-on Type DCA Water Filter

Cooling System Capacity (U.S. Gallons)	Ethylene Glycol Base Antifreeze		Methoxy Propanol Base Antifreeze	
	DCA-4L Precharge (P/N 3300858)	Service Element(s)	DCA-4L Precharge (P/N 3300858)	Service Element(s)
0-8	1	WF-2010 (P/N 299080)	1	WF-2011 (P/N3300721)
9-15	2	WF-2010	2	WF-2011
16-30	5	WF-2010	4	WF-2011
31-60	10	(2) WF-2010	8	(2) WF-2011
35-90 (V-1710)	12	(2) WF-2016 (P/N 299086)	8	(2) WF-2017 (P/N3300724)
70-90 (KT-2300)	16	(2) WF-2010	16	(2) WF-2011

Capscrew Markings and Torque Values



Current Usage	Much Used	Much Used	Used at Times	Used at Times
Minimum Tensile Strength PSI MPa	To 1/2–69,000 [476] To 3/4–64,000 [421] To 1–55,000 [379]	To 3/4–120,000 [827] To 1–115,000 [793]	To 5/8–140,000 [965] To 3/4–133,000 [917]	150,000 [1 034]

Quality of Material	Indeterminate	Minimum Commercial	Medium Commercial	Best Commercial
SAE Grade Number	1 or 2	5	6 or 7	8

Capscrew Head Markings

Manufacturer's marks may vary


These are all SAE Grade 5 (3 line)

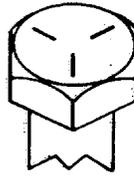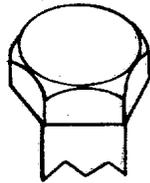

6



7

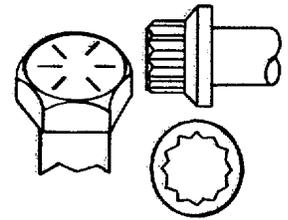

Capscrew Body Size (Inches) – (Thread)	Torque Ft-Lbs [N•m]	Torque Ft-Lbs [N•m]	Torque Ft-Lbs [N•m]	Torque Ft-Lbs [N•m]
1/4 – 20	5 [7]	8 [11]	10 [14]	12 [16]
– 28	6 [8]	10 [14]		14 [19]
5/16 – 18	11 [15]	17 [23]	19 [26]	24 [33]
– 24	13 [18]	19 [26]		27 [37]
3/8 – 16	18 [24]	31 [42]	34 [46]	44 [60]
– 24	20 [27]	35 [47]		49 [66]
7/16 – 14	28 [38]	49 [66]	55 [75]	70 [95]
– 20	30 [41]	55 [75]		78 [106]
1/2 – 13	39 [53]	75 [102]	85 [115]	105 [142]
– 20	41 [56]	85 [115]		120 [163]
9/16 – 12	51 [69]	110 [149]	120 [163]	155 [210]
– 18	55 [75]	120 [163]		170 [231]
5/8 – 11	83 [113]	150 [203]	167 [226]	210 [285]
– 18	95 [129]	170 [231]		240 [325]
3/4 – 10	105 [142]	270 [366]	280 [380]	375 [508]
– 16	115 [156]	295 [400]		420 [569]
7/8 – 9	160 [217]	395 [536]	440 [597]	605 [820]
– 14	175 [237]	435 [590]		675 [915]
1 – 8	235 [319]	590 [800]	660 [895]	910 [1234]
– 14	250 [339]	660 [895]		990 [1342]

Notes:

1. Always use the torque values listed above when specific torque values are not available.
2. Do not use above values in place of those specified in other sections of this manual; special attention should be observed when using SAE Grade 6, 7 and 8 capscrews.
3. The above is based on use of clean, dry threads.
4. Reduce torque by 10% when engine oil is used as a lubricant.
5. Reduce torque by 20% if new plated capscrews are used.
6. Capscrews threaded into aluminum may require reductions in torque of 30% or more of Grade 5 capscrews torque and must attain two capscrew diameters of thread engagement.

Caution: If replacement capscrews are of a higher grade than originally supplied, adhere to torque specifications for that placement.

Troubleshooting

Troubleshooting is an organized study of the problem and a planned method of procedure for investigation and correction of the difficulty. The chart on the following page includes some of the problems that an operator may encounter during the service life of a Cummins diesel engine.

Cummins Diesel Engines

The chart does not give all the answers for correction of the problems listed, but it is meant to stimulate a train of thought and indicate a work procedure directed toward the source of trouble. To use the troubleshooting chart, find the complaint at the top of the chart; then follow down that column until you come to a black dot. Refer to the left of the dot for the possible cause.

Think Before Acting

Study the problem thoroughly. Ask these questions:

1. What were the warning signs preceding the trouble?
2. What previous repair and maintenance work has been done?
3. Has similar trouble occurred before?
4. If the engine still runs, is it safe to continue running it to make further checks?

Do Easiest Things First

Most troubles are simple and easily corrected; examples are "low-power" complaints caused by loose throttle linkage or dirty fuel filters, "excessive lube oil consumption" caused by leaking gaskets or connections, etc.

Always check the easiest and obvious things first. Following this simple rule will save time and trouble.

Double-Check Before Beginning Disassembly Operations

The source of most engine troubles can be traced not to one part alone but to the relationship of one part with another. For instance, excessive fuel consumption may not be due to an incorrectly adjusted fuel pump, but instead to a clogged air cleaner or possibly a restricted exhaust passage, causing excessive back

pressure. Too often, engines are completely disassembled in search of the cause of a certain complaint and all evidence is destroyed during disassembly operations. Check again to be sure an easy solution to the problem has not been overlooked.

Find And Correct Basic Cause Of Trouble

After a mechanical failure has been corrected, be sure to locate and correct the cause of the trouble so the same failure will not be repeated. A complaint of "sticking injector plungers" is corrected by replacing the faulty injectors, but something caused the plungers to stick. The cause may be improper injector adjustment, or more often, water in the fuel.

Tools And Procedures To Correct A Complaint

Tools and procedures to correct the complaints found in this Troubleshooting section are available from Cummins distributors and dealers. A list of publications, by bulletin numbers, is included in the back of this manual in the form of a purchase order. This list includes all engine model shop and engine repair and rebuild manuals.

AFC Fuel Pump Adjustments

All AFC fuel pump adjustments are specified for calibration on a fuel pump test stand and not to be made on the engine. Contact your nearest authorized Cummins distributor to perform maintenance, if required.

Trouble Shooting

Cummins Engines

COMPLAINTS

- Hard Starting or Failure to Start
- Engine Misfires
- Excessive Black Smoke at Idle
- Excessive White Smoke at Idle
- Excessive Smoke Under Load
- Excessive Acceleration Smoke
- Low Power or Loss of Power
- Chalky Blue Exhaust
- Low Air Output
- Stalling or Surging
- Excessive Fuel Consumption
- Poor Deceleration
- Erratic Idle Speed
- Engine Dies
- Surging at Governed RPM
- Excessive Oil Consumption
- Oil Dilution
- Low Oil Pressure
- Excessive Temperature
- Governor Temperature Too Low
- Oil Temperature Too High
- High Oil Temperature
- Wear of Bearings and Journals
- Worn Valves and Guides
- Fuel Nozzle (Combustion Nozzle)
- Mechanical Knock
- Gear Train Noise
- Excessive Vibration
- Excessive Crankcase Pressure

CAUSES

System	Restricted Air Intake	High Exhaust Back Pressure	Thin Air in Hot Weather or High Altitude	Air Leaks Between Cleaner and Engine	Dirty Turbocharger Compressor	Improper Use of Starter Aid/Air Temp.	Hard Starting or Failure to Start	Engine Misfires	Excessive Black Smoke at Idle	Excessive White Smoke at Idle	Excessive Smoke Under Load	Excessive Acceleration Smoke	Low Power or Loss of Power	Chalky Blue Exhaust	Low Air Output	Stalling or Surging	Excessive Fuel Consumption	Poor Deceleration	Erratic Idle Speed	Engine Dies	Surging at Governed RPM	Excessive Oil Consumption	Oil Dilution	Low Oil Pressure	Excessive Temperature	Governor Temperature Too Low	Oil Temperature Too High	High Oil Temperature	Wear of Bearings and Journals	Worn Valves and Guides	Fuel Nozzle (Combustion Nozzle)	Mechanical Knock	Gear Train Noise	Excessive Vibration	Excessive Crankcase Pressure		
Air System	●	●	●	●	●	●																															
Fuel System							●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Lubricating System																	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Cooling System																	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Operation and Maintenance Practices							●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Mechanical Adjustments or Repair							●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Mechanical Variable Timing System							●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Maintenance							●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	

Index

Air Cleaner Cleaning (Oil Bath Type)	2-49	Fuel Filter Element Changing (Spin-On Type)	2-29
Air Cleaner Element - Cartridge Type	2-11	Fuel Filter Sediment Draining	2-14
Air Cleaner Element Cleaning (Single and Dual Type Elements)	2-11	Fuel Oil Leaks	2-10
Air Cleaner Element Cleaning (Dry Type)	2-13	Fuel Oil Specifications	3-6
Air Cleaner Oil Changing	2-11	Fuel Pump Calibration	2-50
Air Cleaner Oil Level	2-14	Fuel System Priming	1-1
Air Cleaner Tray Screen Cleaning	2-30	Fuel Tank Sediment Draining	2-14
Air Compressor	2-52		
Air Compressor Breather	2-33	Governed Engine Speed	1-6
Air Connections	1-3	Grease Specifications	3-5
Air Inlet Restriction at Air Cleaner	2-11		
Air Inlet Restriction at Engine	2-11	High Altitude Operation	1-7
Air Tank Draining	2-14	Hose Checking	2-54
Aneroid Oil Level, Check	2-32	Hydraulic Governor	1-3
Aneroid Change Oil	2-48	Hydraulic Governor Oil Change	2-48
Aneroid - Clean and Calibrate	2-50	Hydraulic Governor Oil Level	2-32
Aneroid - Replace Breather	2-48		
		Idler Pulley	2-51
Belt Tension - Checking and Adjusting	2-7	Idling the Engine	1-7
By-Pass Oil Filter Changing	2-28	Industrial Fire Pump Engines	1-11
Back Side Idler Fan Drive	2-48	Injectors, Clean and Calibrate	2-50
		Injector Plunger Adjustment	2-35, 2-38, 2-39, 2-41, 2-43, 2-47
Cold-Starting Aid Checking	2-54	Lubricating Oil Change Intervals	2-15
Cold-Starting Aids	1-4	Lubricating Oil Analysis	2-26
Cold-Weather Protection	1-8	Lubricating O11 Specifications	3-1
Cold-Weather Starting	1-4	Lubricating System Priming	1-1
Coolant Check	2-29		
Coolant Leaks	2-7	Maintenance Check Sheet	2-3
Coolant Level	1-3, 2-7	Maintenance Operation	2-1
Coolant Specifications	3-7	Maintenance Schedule	1-14, 2-2, 2-5, 2-6
Cooling System Cleaning	2-54	Mounting Bolt and Nut Tightening	2-55
Crankcase Breather Cleaning	2-32, 2-53		
Crankshaft End Clearance	2-55	Oil Change Charts	2-18
Crosshead Adjustment	2-36, 2-38, 2-42, 2-45, 2-48	Oil Change Limits	2-15
		Oil Filter Element Changing	2-27
Daily Checks	2-7	Oil Level	1-1, 2-7
Drive Pulley	2-55	Oil Pressure Gauge	1-7
		Oil Temperature Gauge	1-6
Engine Break-In	1-1	Operating Instructions	1-1
Engine Coolant	1-3	Operator's Daily Report	2-7
Engine Exhaust	1-7		
Engine Oil Changing	2-15	Power Take-Off Applications	1-7
Engine Oil Level, Check	2-7	Pressure Flushing	2-54
Engine Shut-Down	1-7	Pre-heater - Cold Starting	2-54
Engine Speeds	1-6	Pre-Cleaner and Dust Pan	2-11
		Pre-Starting	1-1
Fuel Filter Water Separator	2-14		
Fan Hub Inspection	2-48		

Index 1

Index

Rebuild Units - Inspection and Installing	2-51
Specifications and Torque	3-1
Shutterstat Checking	2-54
Starting Procedure	1-3
Steam Clean Engine	2-54
Storage for Engine Out of Service	2-1
Temperature Settings	2-54
Thermal Control Settings	2-54
Thermatic Fan Checking	2-54
Thermostat and Seal Checking	2-54
Throttle	5-5
Torque Specifications	3-8
Trouble-Shooting	4-1
Trouble-Shooting Chart	4-2
Turbocharger Bearing Clearance	2-51
Turbocharger Mounting Nut Tightening	2-55
Valve Adjustment	2-36, 2-39, 2-43, 2-48
Vibration Damper Inspection	2-51
'Warming Up" Engine	1-6
Water Filter Changing	2-31
Water Pump Inspection	2-51
Water Temperature Gauge	1-6
Weekly Checks	2-11
Zinc Plugs.....	2-56

Index 2

Part 2
REPAIR

a

Foreword

This NHINTINTA-855 C.I.D. Engine Rebuild Manual is written and organized in a way which allows a user, no matter his familiarity with Cummins engines, to follow the procedures necessary to rebuild that engine. For this reason, we have attempted to use as few technical terms as possible and have divided procedures into the basic steps.

This NH/NT/NTA Manual contains these instructions and specifications:

- Disassembly of the engine
- Disassembly of some components and most assemblies
- Cleaning and inspection of the engine and parts
- Repair and/or replacement of parts
- Assembly of components and assemblies
- Assembly and testing of the engine
- Worn limits
- Torque values

Some information that is specific to particular engine models is included. You should determine what engine model an engine is before doing any work on that engine. The dataplate on the engine will identify the engine model. This model number provides information on the design, aspiration, cubic inch displacement, application (equipment for which the engine was designed) and maximum rated horsepower.

Example: NTA-855-C360

N = NH Engine Series
T = Turbocharged (if there is no "T", the engine is naturally aspirated)
A = Aftercooled
855 = Cubic Inch Displacement
C = Construction Application
360 = Maximum Rated Horsepower

Application Designations

C = Construction
G = Generator (GS = Standby, GC = Continuous Duty)
P = Power Unit
M = Marine
L = Locomotive
R = Railcar

How to use this Manual

The manual is divided into 22 groups. These groups are listed in the Table of Contents.

The disassembly of the engine is covered in Group 0. The disassembly, inspection and assembly of components are covered in the appropriate group. For example, Group 0 contains the instructions for removing the lubricating oil pump from the engine. Group 7, Lubricating System, contains the instructions for disassembly, inspection and assembly of the lubricating oil pump itself.

Note: Some components are not included in the engine manual. They are: (1) the fuel pump, (2) air compressor, (3) injectors and (4) turbochargers.

At the beginning of each group is an exploded view of the components covered in that group. These exploded views show the relationship between all parts in a component.

Also at the beginning of each group is a list of tools either required or recommended to do the procedures described in that group. Many of these tools were designed by Cummins Engine Company to perform a specific procedure and are available from your Cummins Distributor. Other tools are standard tools which are generally available.

At the end of each group is a table which includes the worn limits, and dimensions of the parts contained in that group. (Worn limits indicate that a part can be used if its dimensions are within. The dimensions given and if it is not damaged.) Torque values are also included in this table.

Group 18 includes the specifications contained in all other groups and the following additional specifications:

1. Oil Recommendations
2. Fuel Recommendations
3. Coolant Recommendations

There is an alphabetical index at the end of the manual to allow you to find the page number for specific information without having to read through an entire group. This index is intended to match the headings used in the text. For example, if you are looking for disassembly of the lubricat-

ing oil pump, look up "Lubricating Oil Pump" in the index. The entry would appear as follows:

Lubricating Oil Pump

Assembly7-4
Disassembly 7-2
Inspection7-2
Repair 7-2
Replacement 7-2

Note: The pages in this manual are numbered in sequence within the group. That is, the first page in Group 0 is 0-1; the first page in Group 1 is 1-1.

The last page in this manual is a list of other Cummins Engine service publications on related subjects.

The pages of the manual can be removed by bending the manual back at the beginning and end of each group. The pages can then be easily pulled out and put in a three-ring binder.

This manual includes Service/Parts Topic information concerning the.NH/NT/NTA-855 from February, 1979 to September, 1981 and supersedes Bulletin Number 3379076-04. As it is the policy of Cummins Engine Company, Inc. to improve its products, design changes will occur after publication of this manual which can affect the procedures described in this manual. If you have any questions about your engine, check with your local Cummins Distributor or Dealer.

To make sure that this manual provides the information you need in a way that allows you to make the best use possible of that information, we need to hear from you about any problems you encounter.
Please send your comments to:

NH Technical Writer - 80203
Service Operations
Cummins Engine Company, Inc.
Box 3005
Columbus, IN 47201

Table of Contents

The Contents of this manual are based on information in effect at time of printing and are subject to change without notice.

Group 0 - Engine Disassembly	0-1	Group 4 - Cam Followers	4-1
General Information	0-1	Cam Followers	4-2
Disassembly Of The Engine	0-4	Mechanical Variable Timing	4-7
		Push Rods	4-17
Group 1 - Cylinder Block	1-1	Group 5 - Fuel System	5-1
The Cylinder Block	1-2	PT Fuel Pumps	5-1
The Camshaft Bushing.....	1-2		
The Cylinder Liner Counterbore	1-4	Group 6 - Injectors	6-1
The Cylinder Liner Bore	1-10	Injectors and Connections	6-1
The Water Passages.....	1-13		
Salvage Of The Cylinder Head		Group 7 - Lubricating System	7-1
Capscrew Holes	1-15	The Lubricating Oil Pump.....	7-2
Refinishing Of The Top Surface		Demand Flow and Cooling (DFC).....	7-8
Of The Cylinder Block.....	1-16	Lubricating Oil Filters	7-11
Main Bearing Caps.....	1-17	Lubricating Oil Lines.....	7-12
Main Bearing Bore	1-17	The Lubricating Oil Pan.....	7-14
The Cylinder Liners	1-24	The Lubricating Oil Dipstick.....	7-14
Crankshaft	1-24	The Lubricating Oil Cooler.....	7-14
Bearings.....	1-25	NTE (European) Oil Cooler	7-20
Crankshaft Thrust Bearings	1-26		
The Vibration Damper	1-26	Group 8 - Cooling System	8-1
The Mounting Flange For		The Eccentric Water Pump	8-2
The Vibration Damper.....	1-27	The Water Pump For The	
The Connecting Rod	1-27	NTA Engine	8-6
Piston Rings.....	1-31	The FFC Water Pump.....	8-12
Pistons.....	1-31	The Fan	8-18
Assemble The Piston To		The Fan Hub.....	8-18
The Connecting Rod	1-32	The Thermostat and Housing	8-21
The Rear Cover	1-32	The Raw Water or Sea Water Pump	8-22
The Camshaft	1-33		
The Camshaft Support	1-33	Group 9 - Drive Units	9-1
The Gear Cover	1-33	General Information	9-1
		Accessory Drive	9-2
Group 2 - Cylinder Head	2-1	Hydraulic Governor Drive.....	9-3
Cylinder Head	2-2	Drive Pulleys.....	9-4
The Valve Guides	2-8		
Valves.....	2-9	Group 10 - Air Intake System	10-1
The Valve Springs.....	2-11	The Intake Manifold and Connection	10-1
The Crosshead Guides.....	2-11	The Aftercooler	10-1
Crossheads	2-12		
Water Holes	2-12	Group 11 - Exhaust System	11-1
Injector Sleeve	2-14	Exhaust Manifolds.....	11-1
Assembly and Testing.....	2-16		
		Group 12 - Air Equipment	12-1
Group 3 - Rocker Levers	3-1	Air Compressor	12-1
Rocker Levers and Housing	3-2	Vacuum Pump	12-1
Rocker Levers.....	3-2	Air Cranking Motor	12-1
Crankcase Breather	3-5		
Rocker Housing Cover	3-5	Group 13 - Electrical Equipment	13-1
		Wiring Diagram	13-1
		Electrical Components	13-1

Group 14 - Engine Assembly and Testing..... 14-1
 Engine Assembly 14-3
 To Test The Engine..... 14-44
 Paint The Engine 14-48
 Preparing An Engine From Storage
 To Service 14-50

Group 16 - Mounting Adaptations..... 16-1
 The Flywheel..... 16-1
 The Flywheel Ring Gear..... 16-1

**Group 18 - Wear Limits, Specifications
 And Torque 18-1**
 Cylinder Block Specifications 18-1
 Cylinder Head Specifications..... 18-5
 Rocker Lever Specifications..... 18-6


Cam Follower Specifications 18-7
 Lubricating Oil Pump Specifications 18-8
 Oil Pan Capacity 18-11
 Cooling System Specifications 18-13
 Drive Unit Specifications 18-14
 Assembly Specifications..... 18-15
 Capscrew Markings and Torque Values..... 18-18
 Lubricating Oil 18-19
 Grease 18-22
 Fuel Oil 18-22
 Coolant 18-24

Group 20 - Vehicle Braking 20-1
 The Compression Brake..... 20-1
 Maintenance Of The Engine Brake..... 20-1
 The Exhaust Brake..... 20-9


e/(f Blank)

Table 2: Oil Pump Specifications (Except DFC*) - inc


	Minimum	Maximum
Single Oil Pump		
Drive Shaft Protrusion ①	0.855 [21.72]	0.875 [22.22]
Idler Shaft Protrusion ②	0.720 [18.29]	0.740 [18.80]
Drive Shaft End ③ Movement	0.002 [0.05]	0.005 [0.13]
Single Oil Pump (Double Capacity)		
Drive Shaft Protrusion ①	1.035 [26.29]	1.055 [26.80]
Idler Shaft Protrusion ②	0.955 [24.26]	0.985 [25.02]
Drive Shaft End ③ Movement	0.002 [0.05]	0.008 [0.20]

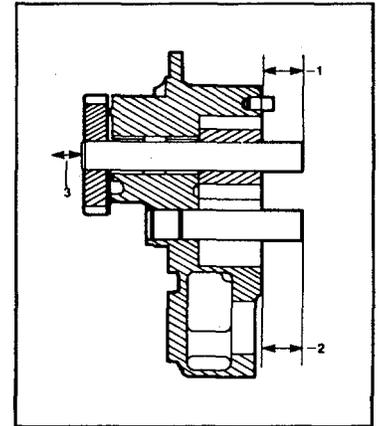

	Minimum	Maximum
Double Oil Pump		
Drive Shaft Protrusion ①	0.040 [1.02]	0.060 [1.52]
Idler Shaft Protrusion ②	2.600 [66.04]	2.620 [66.55]
Idler Shaft Protrusion ② (When Part No. is followed by the letter "L")	2.680 [68.07]	2.690 [68.33]
Drive Shaft End ③ Movement	0.004 [0.10]	0.007 [0.18]

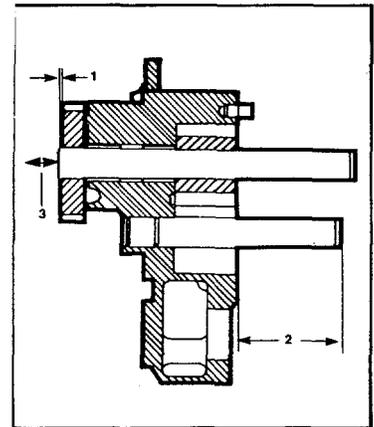

	Minimum	Maximum
Single Scavenger and Double Scavenger Pump		
Drive Shaft Protrusion ①	0.580 [14.73]	0.610 [15.49]
Drive Shaft Protrusion ② From Adapter	0.050 [1.27]	0.070 [1.78]
Idler Shaft Protrusion ③ (Even with front surface of the pump)		
Dowel Pin Protrusion ④ From Adapter	0.990 [25.15]	1.010 [25.65]
Drive Shaft End Movement		
Single	0.004 [0.10]	0.010 [0.25]
Double	0.004 [0.10]	0.007 [0.18]

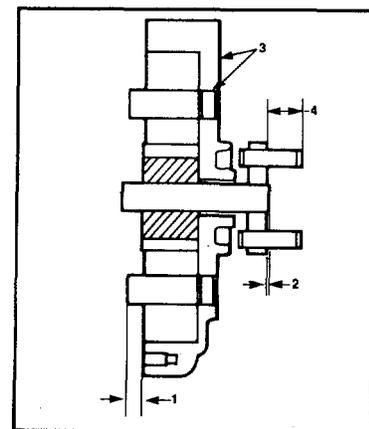

*See Page 7-10 for DFC Specifications.

2. Apply a coat of lubricating oil to the inside diameter of the driven gear. Install the gear on to the drive shaft. Use the ST-1157 and an arbor press to push the gear onto the shaft. See Table 2 to find the correct amount of protrusion the shaft must have after the gear is installed.
 3. Install the drive shaft, from the gear pocket side of the pump body, into the bore in the pump body. Apply a coat of lubricating oil to the inside diameter of the drive gear. Put the gear on the shaft on the side of the body opposite to the gear pockets, use an arbor press to push the gear onto the shaft. There must not be more than 0.012 inch [0.30 mm] clearance between the gear and the body.
 4. Apply lubricating oil to the inside diameter of the idler gear. Install the idler gear onto the idler shaft.
- Note:** For double lubricating oil pumps, install a new gasket and the scavenger pump body to the oil pump body. Apply lubricating oil to the inside diameter of the driven gear for the scavenge pump. Use an arbor press to push the gear onto the drive shaft. There must be 0.002 to 0.004 inch [0.05 to 0.10 mm] clearance from the bottom of the gear pocket to the gear. Repeat Step 4 to install the idler gear.
5. If the oil pump requires a tube for the piston cooling oil and the tube was removed, install a new tube into the body. Push the end of the tube which is not

beveled into the pump body. Make sure the tube has 2.970 to 3.000 inch [75.44 to 76.20 mm] protrusion from the body.

6. If the dowels were removed from the body, install new dowels.
7. Apply clean lubricating oil to the gears, bushings and shafts.
8. Install the pressure regulator or pressure bypass valve into the pump body. Tighten the capscrew to 30 to 35 ft.-lbs. [40 to 47 N•m] torque.
9. Install the cover and a new gasket to the pump body. Hit the cover lightly with a rubber hammer to push the cover onto the dowels. Install the capscrews and lockwashers so that the cover is held to the body. Tighten the capscrews to 30 to 35 ft.-lbs. [40 to 47 N•m] torque. Turn the gears to make sure they move freely in the pump.
10. If the pipe plugs were removed, apply a sealing compound or teflon tape to the threads. Install and tighten the plugs to the following torque values.
 - 1/2 inch pipe plug 30 to 40 ft.-lbs. [40 to 54 N•m]
 - 3/8 inch pipe plug 20 to 30 ft.-lbs. [27 to 40 N•m]
 - 3/4 inch pipe plug 45 to 55 ft.-lbs. [61 to 74 N•m]


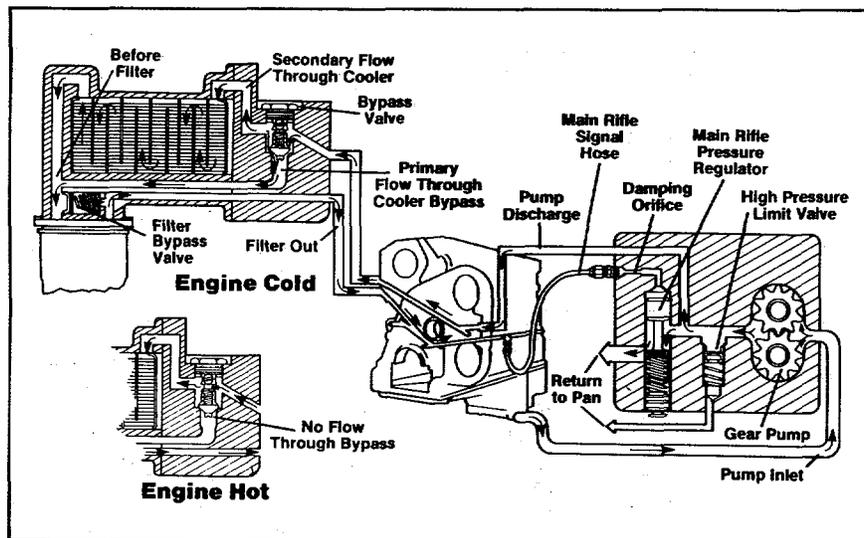


Fig. 7-3. Demand Flow and Cooling (DFC) Oil Flow Schematic.

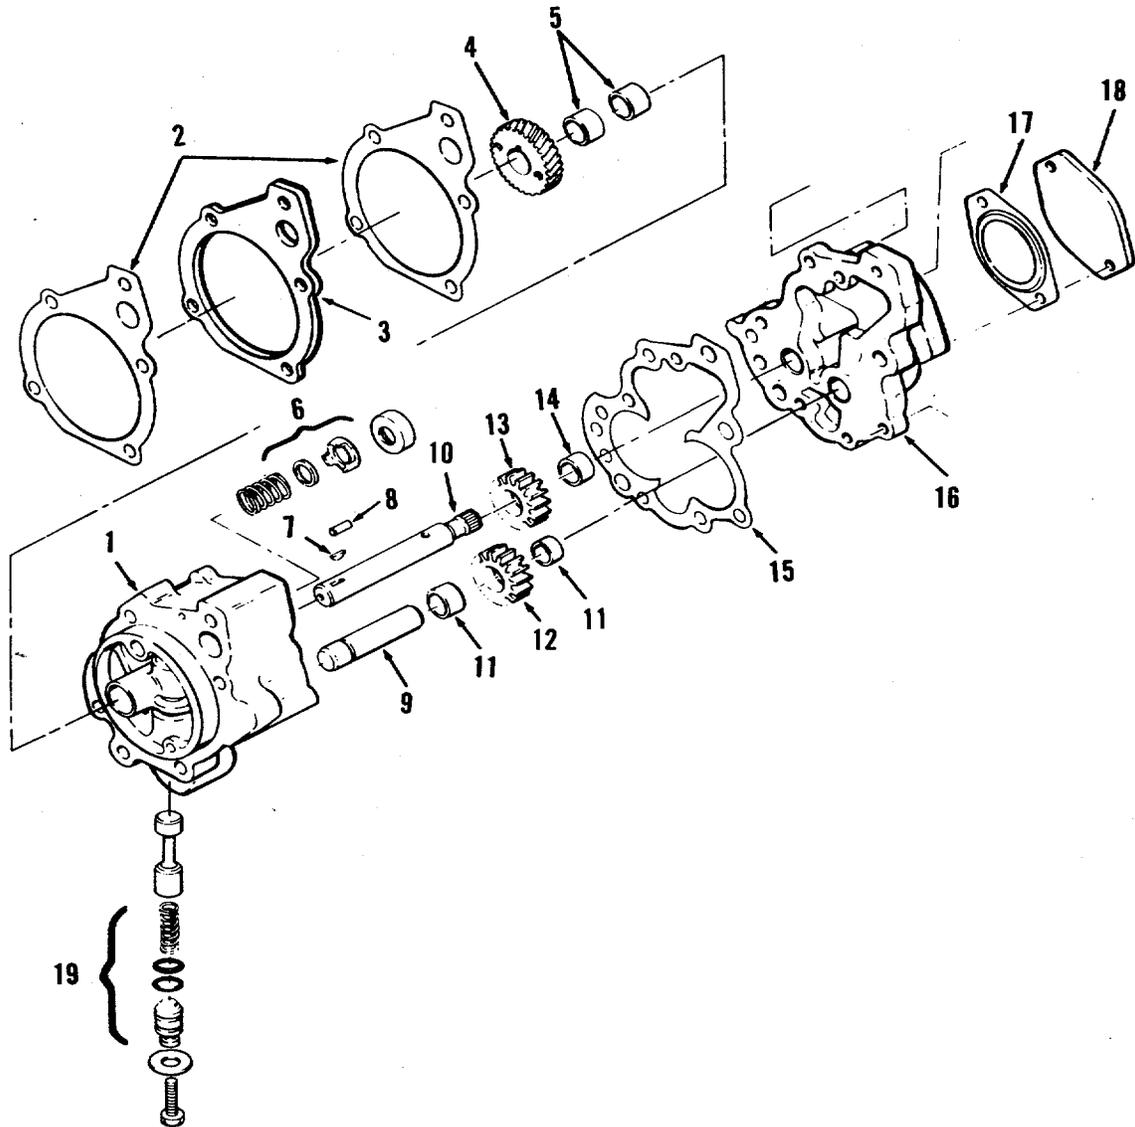

- | | | |
|------------------------------|--------------------|-----------------------------------|
| 1. Body | 7. Drive Shaft Key | 13. Driven Gear |
| 2. Gasket | 8. Dowel Pin | 14. Bushing |
| 3. Spacer | 9. Idler Shaft | 15. Gasket |
| 4. Drive Gear | 10. Drive Shaft | 16. Oil Pump Cover |
| 5. Bushing | 11. Gear Bushing | 17. Cover Plate Gasket |
| 6. High Pressure Limit Valve | 12. Idler Gear | 18. Cover Plate |
| | | 19. Main Rifle Pressure Regulator |

Fig. 7-4. Demand Flow and Cooling (DFC) Oil Pump - Exploded View

Demand Flow and Cooling

The Demand Flow and Cooling (DFC) lubricating system adjusts the oil flow and oil cooling as needed by the engine, instead of operating continuously at maximum capacity. The DFC system has a lower pressure in main oil passage (main oil rifle), 35 to 45 psi [241 to 310 kPa], less oil -flow from the pump, 40 GPM [151.4 LPM], and controls the amount of oil that is cooled before it enters the engine oil passages.

The flow is controlled through two independent circuits. One circuit is a lower flow capacity oil pump that has an internal pressure control mechanism and external feedback signal hose. The second circuit contains a temperature-controlled bypass in the oil cooler assembly, Fig. 7-3. Instructions for the disassembly, inspection and assembly of the oil cooler assembly are found later in this section.

Disassemble and Inspect the Oil Pump

1. Follow the same general instructions given to disassemble the other oil pumps.
2. Check the drive shaft and idler shaft for damage or wear, Fig. 7-5 and 7-6. Replace the shaft if the outside diameter does not measure 0.8745 to 0.8750 inch [22.21 to 22.22 mm] or if it is damaged.
3. Inspect the bushings in the pump body, cover and idler gear, Fig. 7-7. Replace the bushings if they are damaged or the inside diameter

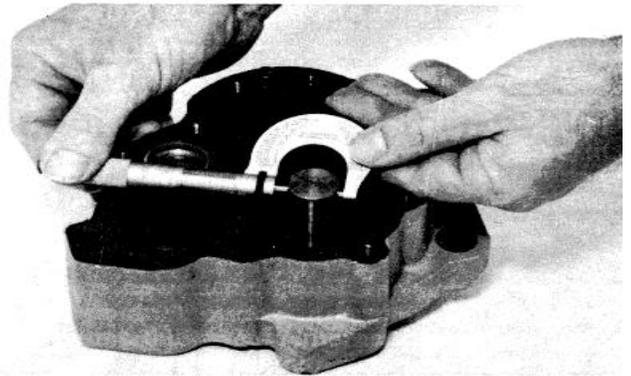


Fig. 7-6. Measure The Outside Diameter Of The Idler Shaft.



Fig. 7-7. Measure The Inside Diameter Of The Bushings.

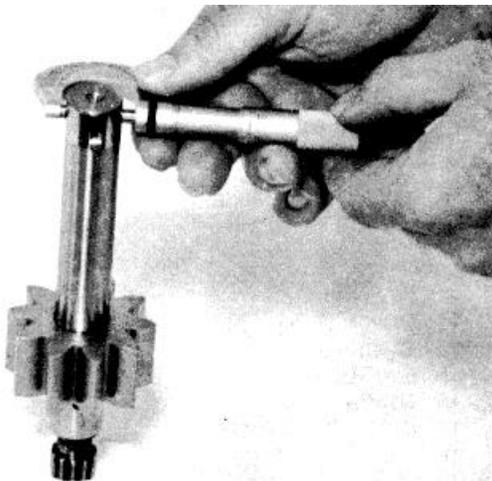


Fig. 7-5. Measure The Outside Diameter Of The Drive Shaft.

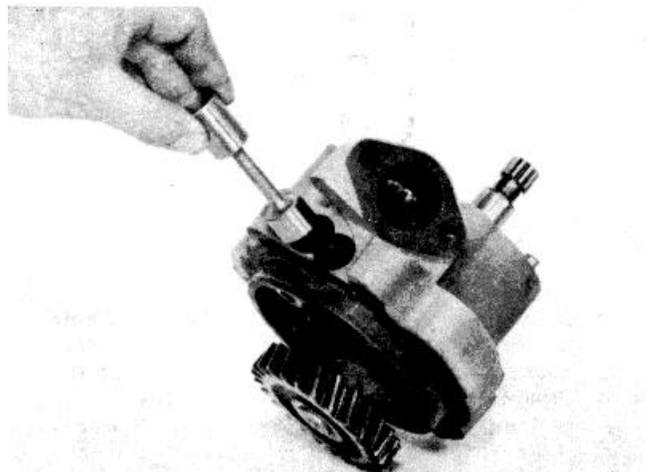


Fig. 7-8. Check The Movement Of The Plunger In The Bore.

Lubricating System

does not measure 0.8765 to 0.8775 inch [22.26 to 22.29 mm].

4. Inspect the gears for worn or broken teeth. Replace the gears that are worn or damaged.
5. Check the pump body and cover for cracks or other damage. Make sure the surfaces for the gaskets are flat and smooth. Replace the parts that are damaged.
6. Remove the pressure regulator retainer, spring and plunger. Make sure the plunger can move freely in the bore, Fig. 7-8.
7. Check the disc for the high pressure limit valve for damage. Push on the disc to check the spring for damage. Do not use a tool that has a sharp point to push on the disc. Remove the retainer plug, disc and washer to replace the spring if it is weak, damaged or broken.
8. Follow the instructions given earlier in Step 11a, b and c to install and bore the new bushings in the pump body and cover. See Table 3 to find the correct dimensions of the bushing and shaft.

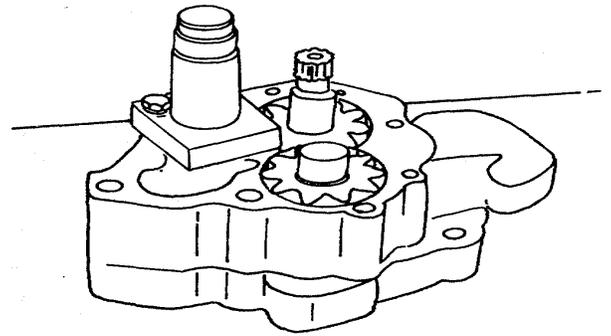


Fig. 7-9. Position The Locating Plate.

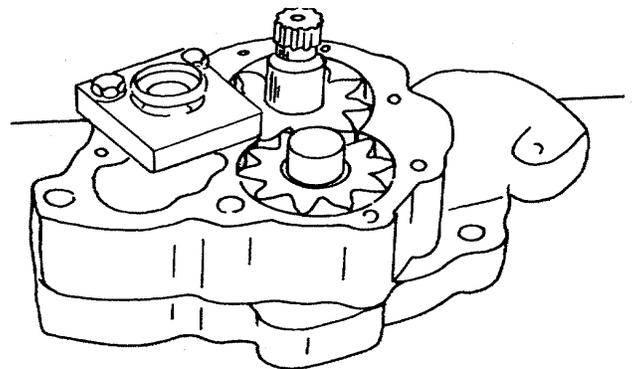


Fig. 7-10. Position The Assembly. Into The Locating Plate.

Table 3: DFC Oil Pump Specifications - inch [mm]

	Worn Limit	New Minimum	New Maximum
Bushing	0.8785	0.8765	0.8775
Inside Diameter	[22.31]	[22.26]	[22.29]
Idler and Drive	0.8740	0.8745	0.8750
Shaft Outside Dia.	[22.20]	[22.21]	[22.22]

Assemble the Oil Pump

Except for its unique parts the DFC oil pump requires the same procedure, tools and torque values for assembly as the other oil pumps. See Table 4 to find the correct amount of protrusion the idler and drive shafts must have after assembly. Special instructions for assembly of the DFC oil pumps are as follows:

1. Install the high pressure limit valve into the pump body.
 - a. Use the Part No. 3376011 pressure valve fixture to install the pressure valve.
 - b. Use capscrews and lockwashers to install the locating plate to the pump body. Do not tighten the capscrews at this time.

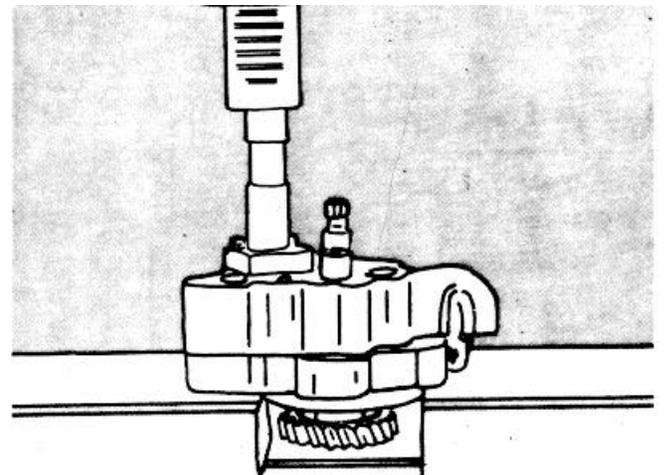


Fig. 7-11. Install The Assembly..

- c. Install the large diameter end of the mandrel into the locating plate to put the plate in the correct position on the body, Fig. 7-9. Tighten the capscrews and then remove the mandrel.
- d. Make sure the prongs of the disc are down and the lip of the seat is up when you install the bypass spring, washer, disc into the locating plate, Fig. 7-10.
- e. Install the small diameter end of the mandrel into the locating plate. Push on the mandrel with an arbor press until the large end of the mandrel is against the locating plate, Fig. 7-11.

- f. Remove the mandrel and locating plate from the pump body.

**NTE Lubricating Oil Pump
(European Big Cam Engine)**

Use the same procedures to disassemble, inspect and assemble the NTE oil pump as are used for the other NH/NT oil pumps. The difference between the NTE oil pump and the other pumps is the type and location of the oil pressure regulator and the amount of protrusion of the idler and drive shaft.

The pressure regulator is a checkball valve and is located in the front part of the pump body. It is operated by oil pressure from the pump and oil pressure from the main oil passage (oil rifle) of the engine. Fig. 7-12 (A) shows the position of the regulator when the engine is first started and the oil temperature is less than its normal operating temperature. Fig. 7-12 (B) shows the position of the regulator when the oil temperature is at normal operating temperature.

The regulator keeps the oil pressure in the engine at a minimum of 10 psi [69 kPa] when the engine is

Table 4: DFC Shaft Protrusion - inch [mm]

	Minimum	Maximum
Idler Shaft	0.705	0.735
	[17.9]	[18.6]
Drive Shaft		
from Pump Body	1.990	2.010
	[50.51]	[51.01]
from Pump Drive Gear	0.050	0.070
	[1.27]	[1.79]

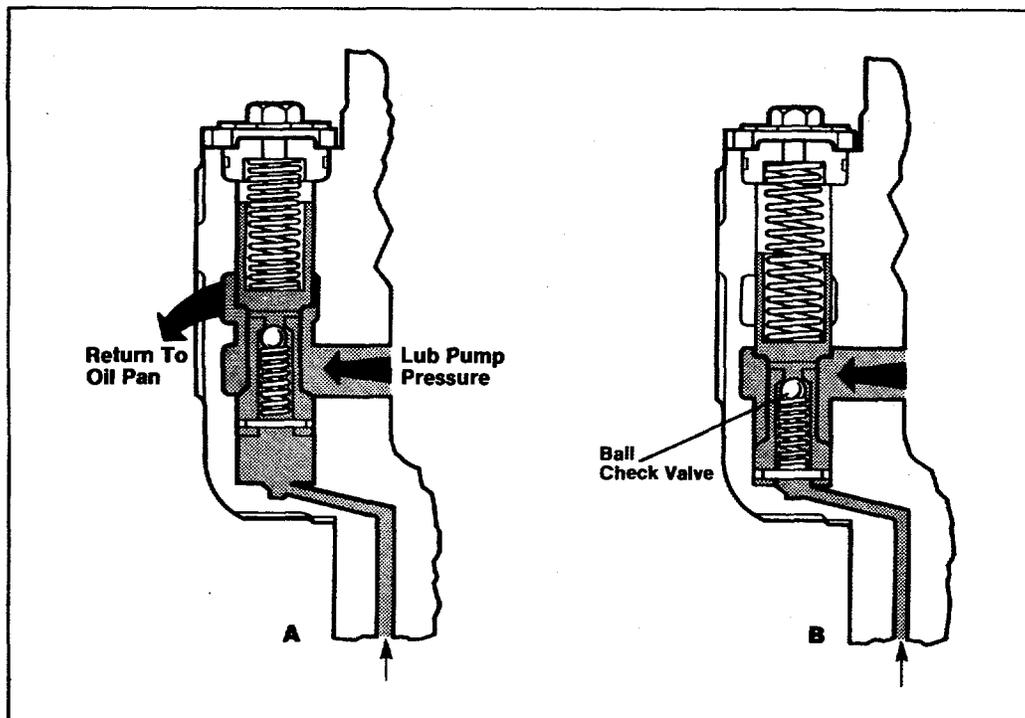


Fig. 7-12. NTE Oil Pump Pressure Regulator.

at idle RPM and 40 to 45 psi [275 to 310 kPa] at rated RPM. See Table 5 to find the correct size of the bushings and amount of shaft protrusion.

Table 5: NTE Oil Pump Specifications - inch [mm]

	Worn Limit	New Minimum	New Maximum
Bushing	0.8785	0.8765	0.8775
Inside Diameter	[22.31]	[22.26]	[22.28]
Idler and Drive	0.8740	0.8745	0.8750
Shaft Outside Dia.	[22.17]	[22.21]	[22.22]
Idler Shaft Protrusion		0.955	0.985
Drive Shaft Protrusion		2.305	2.325
		[58.54]	[59.05]

Lubricating Oil Filters

Full-Flow Oil Filter (Center-Bolt)

Disassembly.

1. Remove the drain plug from the filter shell to drain the oil. Clean the dirt from around the filter head and shell before you remove the shell.
2. Remove the center-bolt from the shell. Remove the shell, element and seal ring from the filter head. Keep the element for inspection and discard the seal ring.
3. Remove the retaining ring from the center-bolt.
4. Remove the filter support, rubber seal, washer and filter spring from the filter shell. Remove the center-bolt and copper washer.
5. Check the bypass valve in the filter head to make sure the valve works freely. If the valve does not work freely, remove and replace the valve.

Cleaning.

Clean the filter shell and parts with cleaning solvent and dry with compressed air.

Inspection.

1. Use a knife to cut the element. Remove the element from the center spool.
2. Inspect the element for metal particles and dirt, Fig. 7-13. If metal particles are found in the element, be sure to inspect all bearings in the engine. Discard the element after inspection.

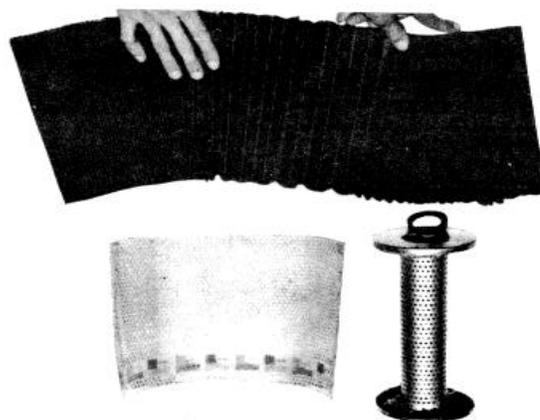


Fig. 7-13 (V40727). Inspect The Paper Element.

3. Inspect all parts for wear, damage or distortion. Discard the parts that are damaged, worn or distorted.

Replacement.

1. Replace the element with a new element.
2. Replace all the parts that were discarded with new parts.

Assembly..

1. If the bypass valve was removed, install the new valve into the filter head.
2. Install a new copper washer onto the centerbolt.
3. Install the center-bolt into the filter shell. Slide the spring, washer, a new rubber seal and the filter support onto the center-bolt. Install the retaining ring onto the center-bolt.
4. Install a new element into the filter shell.
5. Install a new seal ring to the filter head.
6. Install the filter assembly to the filter head. Install the drain plug into the filter shell.

Note: Use the parts catalog to find the correct part numbers.

Full Flow Oil Filter (Spin-On).

Disassembly..

1. Use the Part No. 3375049 Oil Filter Wrench to remove the oil filter.

2. Remove the capscrew and lockwasher that fastens the spin-on adapter to the filter head. Remove the spin-on adapter and discard the O-ring.

Cleaning.

Clean the spin-on adapter with cleaning solvent and dry with compressed air.

Inspection.

1. Use the Part No. 3375301 Tube Cutter to remove the element from the filter cartridge.
2. Inspect the element for metal particles and dirt. If metal particles are found in the element, be sure to inspect all bearings in the engine. Discard the element after inspection.
3. Inspect the spin-on adapter for damage.

Assembly.

1. Apply a coat of lubricate to a new adapter O-ring. Install the spin-on adapter and O-ring to the filter head. Tighten the capscrews for the adapter to 25 to 35 ft.-lbs. [34 to 47 N-m] torque.
2. Apply a coat of lubricating oil to a new sealing ring and to the threads of a new filter cartridge.
3. Install the sealing ring and filter to the spin-on adapter. To tighten the filter, follow the instructions on the filter cartridge.

Bypass Oil Filter

Full-flow oil filters must always be used with bypass filters. Never use a bypass filter instead of a full-flow oil filter.

Disassembly.

1. Remove the capscrews for the clamp ring. Remove the cover and O-ring.
2. Remove the element hold-down assembly and the element from the filter shell.

Cleaning.

1. Use cleaning solvent to clean the hold-down assembly and filter shell. Dry with compressed air.

2. The tee-handle of the hold-down assembly or the stand-pipe in the filter shell will have an orifice. The orifice controls the oil flow through the filter. Make sure the orifice is clean.

Inspection.

Check the hold-down assembly, filter shell and cover for damage.

Assembly.

1. Install a new element into the filter shell.
2. Install the hold-down assembly onto the stand-pipe. Tighten the assembly.
3. Install the cover and O-ring on the filter shell.
4. Install the clamp ring to the cover and filter shell. Tighten the capscrews until the lugs on the clamp ring come together.

Lubricating Oil Lines

Hose Size and Specifications

1. For oil supply and drain lines less than 10 ft. [3 m] in length, use a flexible hose size No. 6 (5/16 in. [7.9 mm] inside diameter).
2. For oil supply and drain lines more than 10 ft. [3 m] in length, use hose size No. 8 (13/32 in. [10.3 mm] inside diameter).
3. The fittings used in the oil bypass circuit must not be less than 1/4 in. pipe size.
4. The oil return line to the oil pan must be below the oil level in the oil pan.
5. The oil supply line must be connected to the oil circuit between the oil pump and full-flow filter.
6. Make sure the hose for the oil and fuel lines meet these specifications:
 - a. The inside liner is made of rubber or teflon and has fabric and wire support.
 - b. The outside of the hose has fabric or wire support.
 - c. The hose cannot be damaged by oil or fuel.
7. The hose with the inside liner must have the ability to let oil flow at - 40 F to 300 °F [- 40 0

to 149°C]. Do not use hoses that have the SAE specifications of 100R1 and 100R5.

8. A hose with a teflon liner must have the ability to let oil flow at up to 450°F [232 °C]. The hose must have a stainless steel wire support for the liner. Permanent fittings are to be used.
9. Make sure the clamps used to hold the hose in position will not damage the hose.

To Assemble New Hoses.

Replace the hose and fittings after either 100,000 to 200,000 miles [160,900 to 321,000 km] or 3200 to 6400 hours of engine operation.

Follow these instructions to make hose from bulk material.

1. Use a hacksaw to cut the hose to the correct length. Make the cut square or straight within 5 degrees.
2. Do not compress the hose while cutting. This can cause a restriction inside the hose.
3. Put the socket in a vise. Check all fittings to make sure they fit correctly.
4. Hold the hose so that it enters straight into the socket, Fig. 7-14. This will prevent a bad connection in the socket. Turn the hose counterclockwise while you push the hose into the socket.
5. Turn the hose until it comes in contact with the bottom of the socket. Make sure the hose

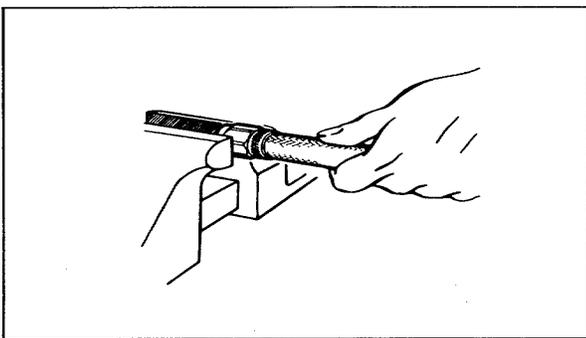


Fig. 7-14 (N10737). Install The Hose Into The Socket.

has reached the bottom and is not pushing into the inside of the socket.

6. Put the socket and hose assembly in a vise. Make sure the socket is clamped in the vise. Apply lubrication to the nipple and the inside of the hose, Fig. 7-15.
7. Use the Part No. ST-1160 Lube Hose Assembly Tool to install the nipple into the hose and socket assembly, Fig. 7-16. The ST-1160 includes hose mandrels for the hose sizes 4, 5, 6, 8, 10, 12 and 16.
8. After assembly, check the inside of the fittings and the hose. Make sure the hose is not damaged. Any damage to the hose liner can

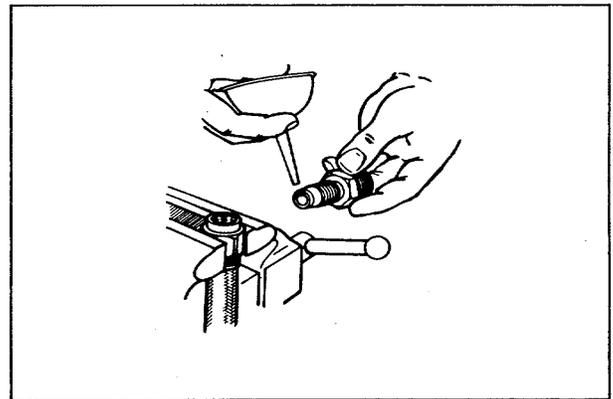


Fig. 7-15 (N10738). Lubricate The Nipple.

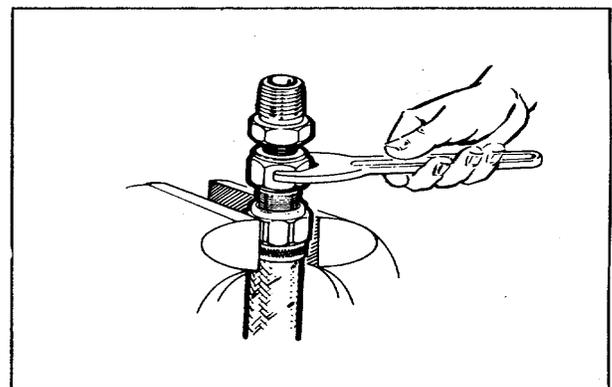


Fig. 7-16 (N10739). Assemble The Hose Nipple And Socket

The Lubricating Oil Pan

To select the correct oil pan, you must know the type of equipment the engine is to be used in. If the engine is used in an automotive vehicle, the oil pan must be designed for engine operation up to 10 degrees tilt or angularity. If used in construction equipment, the oil pan must be designed for operation up to 30 degrees tilt or angularity.

Use Table 7-5, in the back of this section, to find the specifications of the oil pan.

Inspection

1. Check the oil pan for cracks. Use the dye method to find cracks.
 - a. Apply dye to the area of inspection. Let the dye dry for 15 minutes. Do not use compressed air.
 - b. Apply the developer to the dye and check for indications of cracks.
2. Check the aluminum oil pans for damage to the thread inserts.

Repair

1. To replace damaged thread inserts:
 - a. Measure the diameter of the hole. Use the correct tool from the Part No. 3375021 Thread Insert Kit to remove the damaged thread insert. Clean and inspect the hole. Use the same tool to install a new insert.
 - b. Use different taps to start and to finish the threads in new or oversize holes for thread inserts. Use diesel fuel as a lubricant when you cut the thread in aluminum.
 - c. After the new insert is installed, bend the bottom of the insert toward the center then toward the side of the hole. This will cause the tip of the insert to break. Remove the tip.
2. Weld any small cracks in the oil pan. Do not weld machined surfaces. Make sure that you clean all of the oil from the oil pan before welding.
3. Repair the damaged threads for the oil drain plug. Install an oversize drain plug in the oil pan.
 - a. To use the Part No. 62117 Drain Plug with 1-1/4 inch X 12 thread size.

- 1) Increase the diameter of the hole to 1-11164 inch [29.77 mm].
- 2) Use a 1-1/4 inch X 12 tap to cut the threads in the hole. Use diesel fuel as a lubricant as you cut the threads.
- 3) Install the new drain plug and copper washer. Tighten the plug to 60 to 70 ft.-lbs. [81 to 95 N-m] torque.

b. To use the Part No.120349 Drain Plug with 1-318 inch X 12 thread size.

- 1) Increase the diameter of the hole to 1-19164 inch [32.94 mm].
- 2) Use a 1-318 inch X 12 tap to cut the threads in the hole. Use diesel fuel as a lubricant as you cut the threads.
- 3) Install the new drain plug and copper washer. Tighten the plug to 60 to 70 ft.-lbs. [81 to 95 N•m] torque.

The Lubricating Oil Dipstick

The dipstick has marks that show the level of the oil in the oil pan.

If the level of the oil is too high, this can cause foam in the oil and a loss of power. If the oil level is too low, this can cause a loss of oil pressure and damage to the engine.

If the dipstick is missing, install a new dipstick.

If the Part No. of the dipstick is not known, use a dipstick that does not have marks on it. Make the correct marks on the dipstick.

1. The engine must be mounted in the chassis and in the correct operating position.
2. Find the oil pan Part No. Refer to Table 7-5 to find the capacity of the oil pan.
3. Drain all of the oil from the oil pan.
4. Put enough oil into the oil pan to equal the low capacity shown in Table 7-5. Make sure the oil has enough time to drain from the engine into the pan.
5. Install the dipstick into the dipstick tube until the dipstick makes contact with the bottom of the pan. Measure the amount of protrusion from the tube to the bottom of the dipstick cap. Remove the dipstick. Cut the same

Lubricating System

amount from the end of the dipstick that was measured from the tube to the cap.

6. Install the dipstick all of the way into the tube. Remove the dipstick and make a mark where the oil level shows on the dipstick. The mark must be 0.010 inch [0.3 mm] deep. Mark the letter "L" above the first mark. Do not use a chisel to make the mark. Cut the dipstick so it has at least 112 inch [12.7 mm] of length below the mark.
7. Add enough oil to the oil pan to equal the high capacity shown in Table 7-5. Install the dipstick into the tube. Remove the dipstick and make a mark where the oil level shows on the dipstick. Mark the letter "H" above this mark.

The Lubricating Oil Cooler.

The FFC (Full Flow and Cooling) engine has the oil pressure regulator in the front support for the oil cooler, Fig. 7-17. The regulator controls the oil pressure before the oil flows through the oil filter. Use the same procedure to remove and install the regulator in the oil cooler that you used to remove and install the regulator in the oil pump.

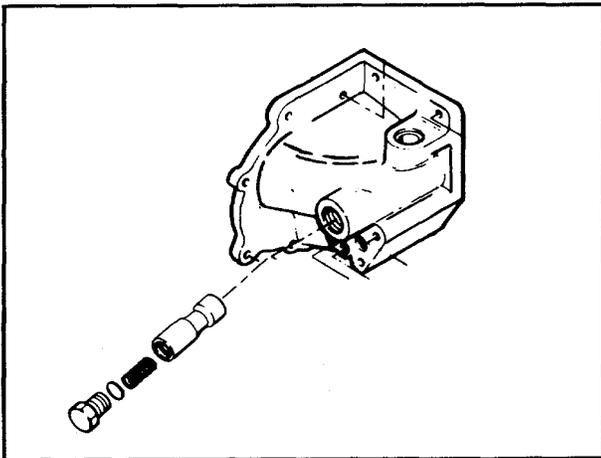


Fig. 7-17. The FFC Oil Pressure Regulator.

The oil cooler for the DFC (Demand Flow and Cooling) system has a bypass valve that controls the oil flow through the cooler, Fig. 7-18. The temperature of the oil causes the bypass valve to open and close. When the oil temperature is less than 230°F [110°C], the valve is in the closed position which allows approximately half

of the oil flow through the cooler. When the oil temperature is more than 230°F [110°C], the valve is in the open position which allows the full flow of the oil through the cooler.

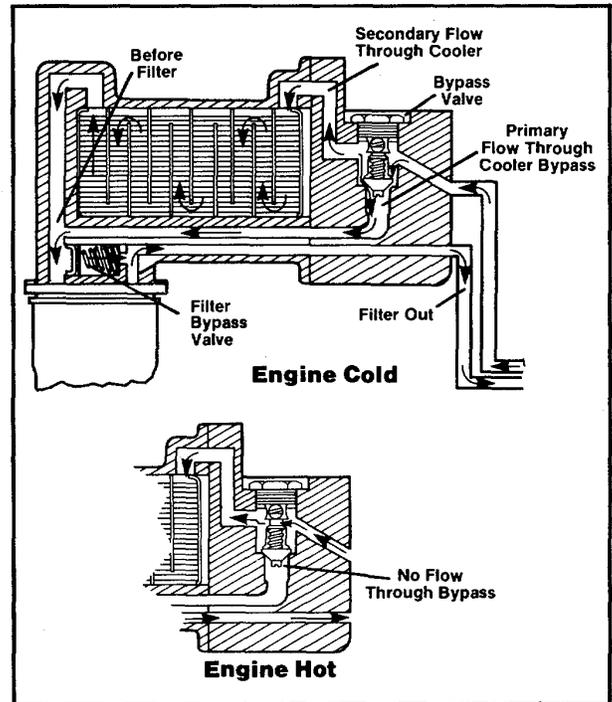


Fig. 7-18. The DFC Oil Bypass Valve.

The oil cooler for the NTE (European Big Cam) engine has a thermostat that controls the oil flow through the cooler, Fig. 7-19. When the engine and the oil is cold (oil temperature less than 215°F [96.1 °C]), the thermostat is in the closed position and the oil flow bypasses the oil cooler. As the oil becomes hotter (more than 215°F [96.1 °C]), the thermostat begins to open to allow a small amount of oil flow through the cooler. When the oil temperature reaches 235°F [112.7°C], the thermostat is fully open and allows the full flow of oil through the cooler.

Disassembly (FCC and Big Cam)

1. Remove the cooler support (8, Fig. 7-20) and cover (3) from the housing (1).
2. Remove and discard the gaskets (2 and 10) and retainers (4).

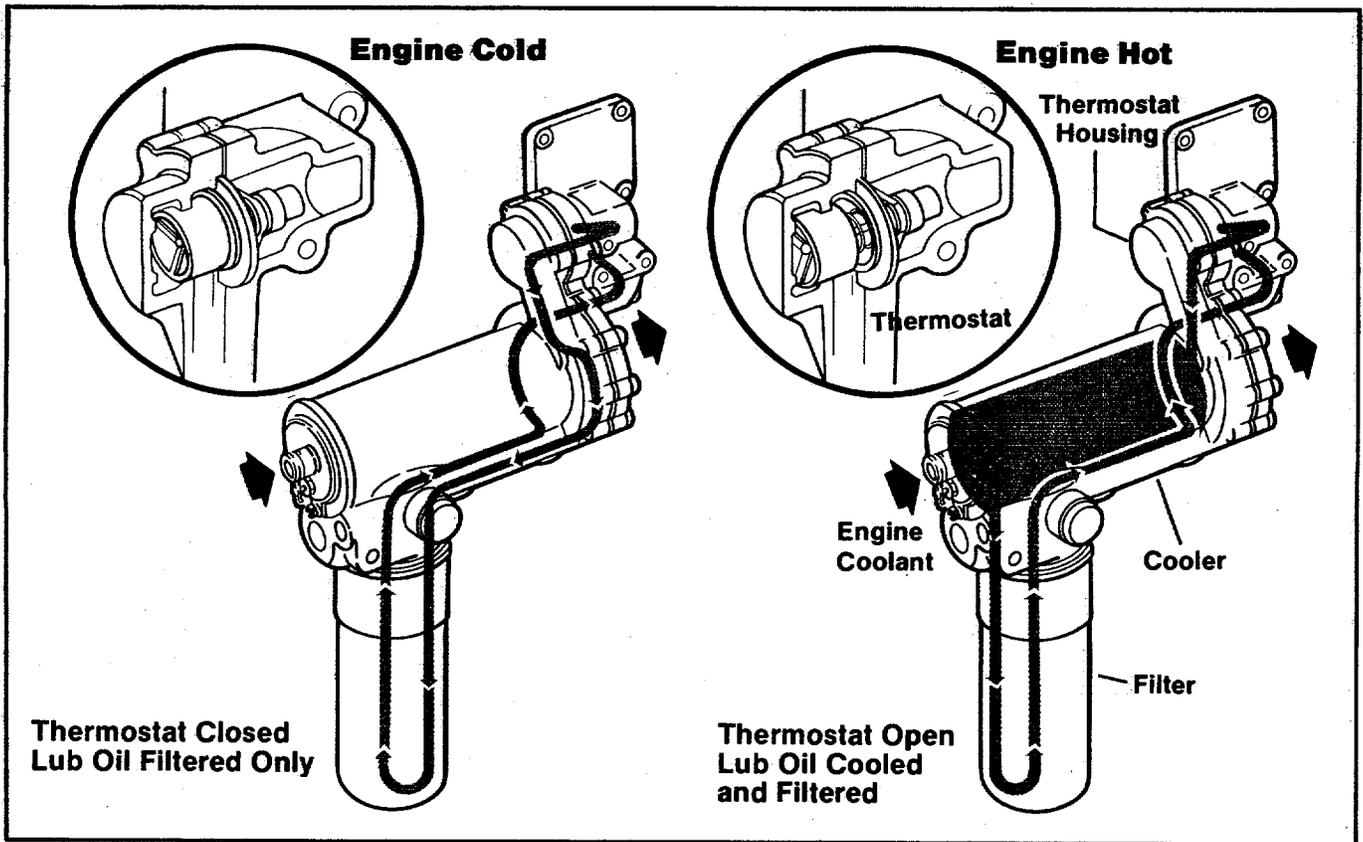


Fig. 7-19. The NTE Oil Flow Through The Oil Cooler.

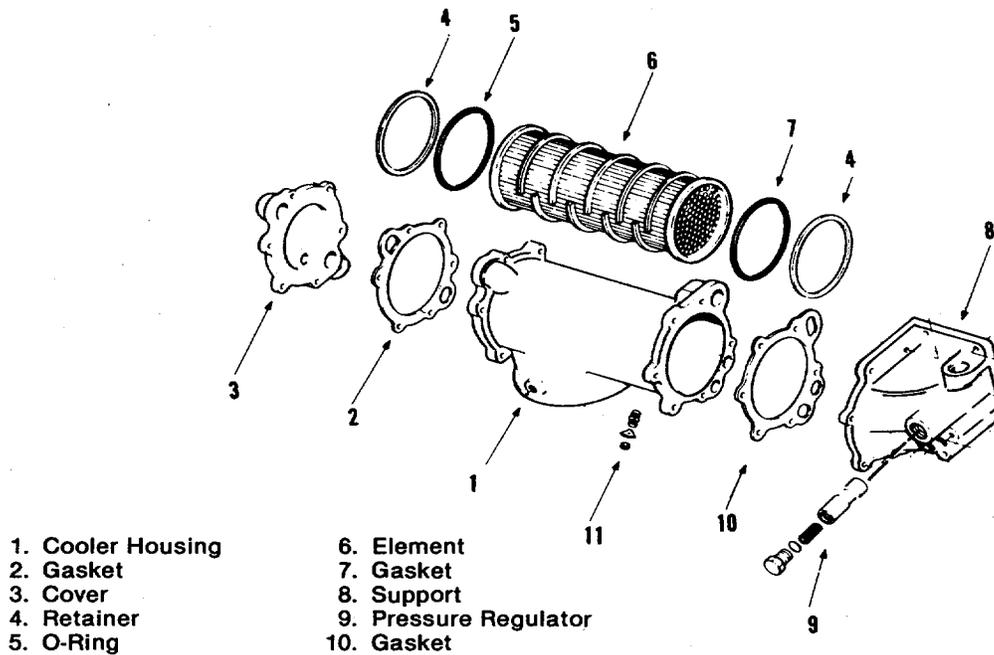


Fig. 7-20. FFC and Big Cam Oil Cooler

3. Remove and discard the O-ring (7). Be careful and do not damage the element (6) when you remove the O-ring.
4. Remove oil and dirt from the housing. Flush the oil passages with mineral spirits in the reverse direction of the oil flow.
5. Remove the element from the housing. Hit the edge of the housing against a block of wood to remove the element from the housing.
6. Remove and discard the O-ring (5).

Cleaning

Cleaning the Element

1. Put the element into a container of carbon tetrachloride or trichlorethylene. Keep the element in the solution for several minutes. Then, flush the solution around and through the tubes in the element.

Warning: The fumes from the solution are dangerous. Use the solution in open air or in a room that has proper ventilation. Wear safety glasses and gloves.

2. Flush the tubes with a solution of alkaline.

After cleaning, flush several times with hot water.

3. Put the element into a container of solution. The solution is to be: 1 part muriatic acid 9 parts water 1 lb. [0.5 kg] oxalic acid and 0.01 gal. [0.038 L] of pyridene added to each 5 gal. [18.9 L] of muriatic acid.
4. Remove the element when there are no foam or bubbles in the solution. The foam and bubbles normally stop in 30 to 60 seconds.
5. Put the element into a container that has a 5 percent solution of sodium carbonate. Remove the element when there are no bubbles coming from the solution.
6. Flush the element with clean, warm water.

Cleaning the Housing

Use steam and cleaning solvent to clean the housing.

Inspection.

1. Check the cooler housing for cracks, damage and corrosion.
2. Check the support and cover for cracks, damage and corrosion.
3. Check the cooler element for damage and leaks. Use the Part No. 3375253 Tube Bundle Tester to check for leaks. Follow these instructions:
 - a. Install the end plates to each end of the element.
 - b. Put the sliding plate of the fixture so that the fixture will fit over the element and end plates, Fig. 7-21.

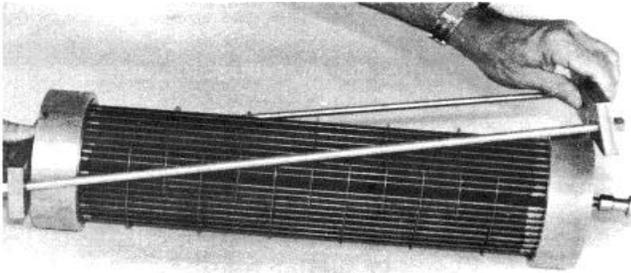


Fig. 7-21. Adjust The Length Of The Fixture

- c. Put the element into the fixture. Put the fixture so that the air connection fitting goes through the notch in the fixture plate. Install locking clips into the bars of the fixture, Fig. 7-22.
- d. Connect an air supply line that has a quick-disconnect fitting to the air connection fitting.
- e. Use an air pressure regulator and a three way air discharge valve to control the air pressure.
- f. Apply 60 psi [414 kpa] of air pressure to the element.
- g. Put the element and tool assembly into a container of water. Make sure the water

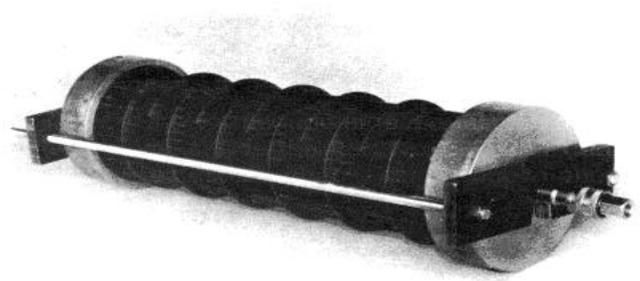


Fig. 7-22. The Element Installed Into The Bundle Tester.

completely covers the element. Check the element for air leaks.

- h. Remove the element and tool assembly from the container.
 - i. Use the air discharge valve to release the air pressure from the element.
 - j. Remove the tube bundle tester from the element.
4. Replace all the parts that are damaged.

Repair

If less than 5 percent of the tubes in the element have restrictions or are damaged, the element can be Repaired. If more than 5 percent of the tubes have restrictions, or are damaged, replace the element.

Caution: Never use a cooler element from an engine that had a failure. When an engine has a failure, metal particles enter the oil cooler. These particles cannot be completely removed from the element and can cause damage to the engine.

To Repair. the damaged tubes:

1. Install a new tube into the damaged tube. The O.D. of the new tube must be smaller than the I.D. of the tube you are Repairing.
2. Cut the ends of the tube so it will be the same length as the other tubes. Make sure the ends of the tube are flared.
3. Solder the ends of the tube to the element. Do

not cause damage to the other tubes or the element when you solder the new tubes.

4. Check the element for leaks.

Assembly (FFC and Big Cam)

1. Put the element into the housing. Put the housing and element onto a flat workbench with the rear of the housing up.
2. Align the index mark on the element with the index mark on the housing, Fig. 7-23.

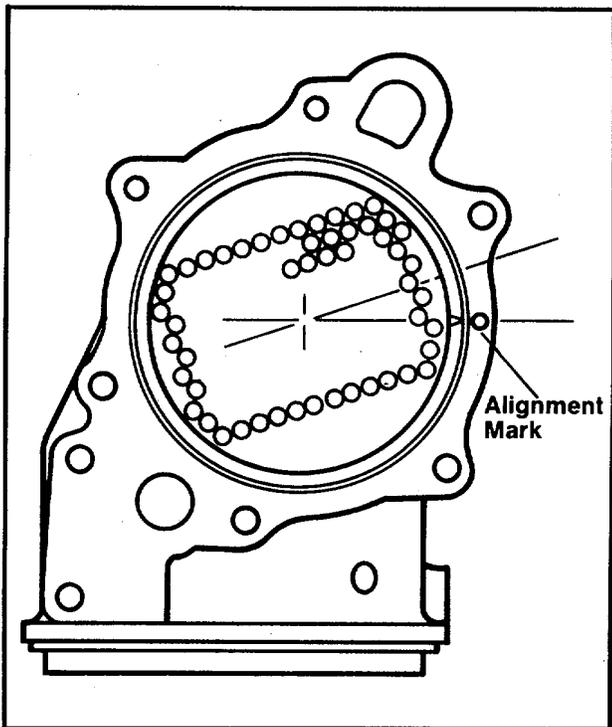


Fig. 7-23. Align the Index Marks On The Element And Housing.

- a. Some of the Part No. 208149 elements have two index marks. They can have an "O" on the tube end plate and a notch cut into the inside diameter of the rim, Fig. 7-24. Use the notch to align the element in the housing.
3. Apply a coat of clean lubricating oil to a new O-ring. Put the O-ring between the element and the housing. Make sure that the O-ring does not protrude over the element and housing.

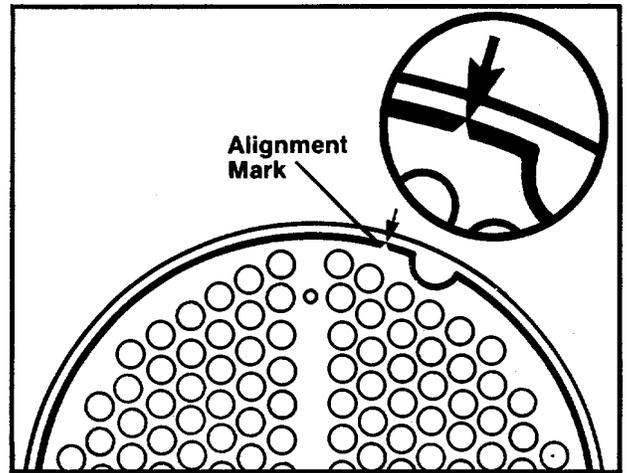


Fig. 7-24. Index Marks On The Element.

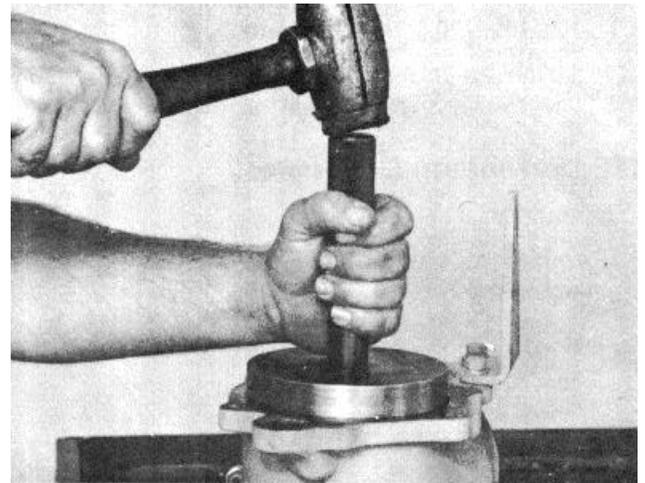


Fig. 7-25. Use The Mandrel To Install The O-Ring.

Note: The O-ring must be installed in less than one hour after the oil is applied.

4. Push the O-ring into the housing. Use the Part No. ST-1218 or ST-1223 Cooler O-Ring Mandrel to push the O-ring into the housing. Hit the mandrel with a plastic hammer until the mandrel is against the element and housing, Fig. 7-25
 - a. Use the ST-128 for an oil cooler that has a 5.0 inch [127.0 mm] diameter element.
 - b. Use the ST-1223 for an oil cooler that has a 4.0 inch [101.6 mm] diameter element.
5. Install the retaining ring. Make sure that the part number on the ring is up.

6. Install the cover and a new gasket to the housing. Tighten the capscrews to 30 to 35 ft.-lbs. [41 to 47 N•m] torque.
7. Slide the housing to the edge of the workbench until you can hold the element in position with your hand. Make sure that the element does not move in the housing. Put the housing with the cover end down onto the workbench.
8. Repeat Steps 3, 4 and 5 to install the O-ring and retaining ring.
9. Install the support and a new gasket to the housing. Tighten the capscrews to 30 to 35 ft.-lbs. [41 to 47 Nom] torque.
10. Install all of the pipe plugs that were removed.
 - a. Tighten the 1/4 inch pipe plug to 15 to 25 ft.-lbs. [20.3 N•m] torque.
 - b. Tighten the 1/8 inch pipe plug to 5 to 7 ft.-lbs. [6.8 to 9.5 N•m] torque.

NTE (European) Oil Cooler.

Disassembly.

1. Remove the cover plate from the housing and discard the gasket, Fig. 7-26.

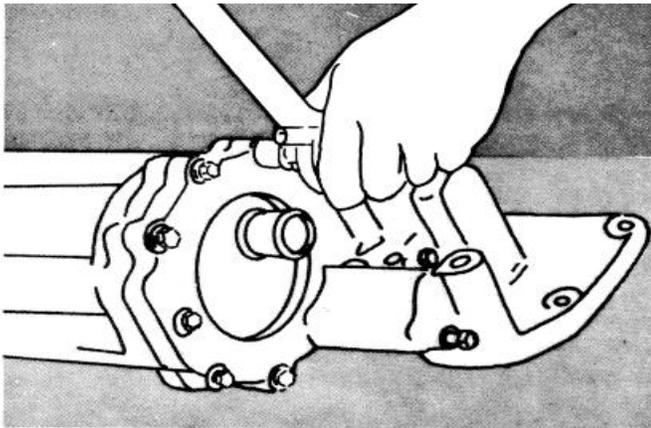


Fig. 7-26. Remove The Cover Plate.

2. Remove the thermostat from the thermostat housing. Discard the O-ring, Fig. 7-27.
3. From the opposite end of the cooler housing, remove the plate that holds the element in the housing, Fig. 7-28.

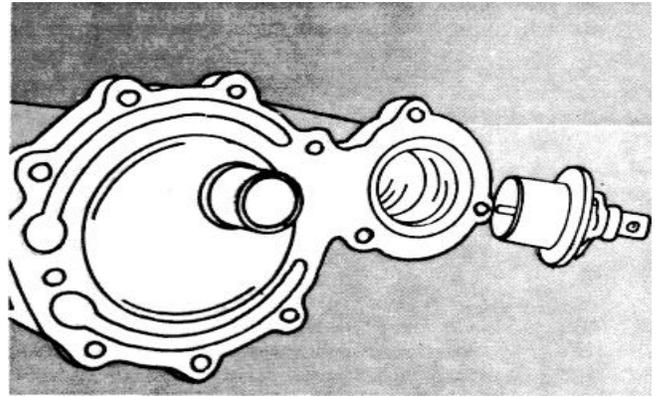


Fig. 7-27. Remove The Thermostat And O-Ring.

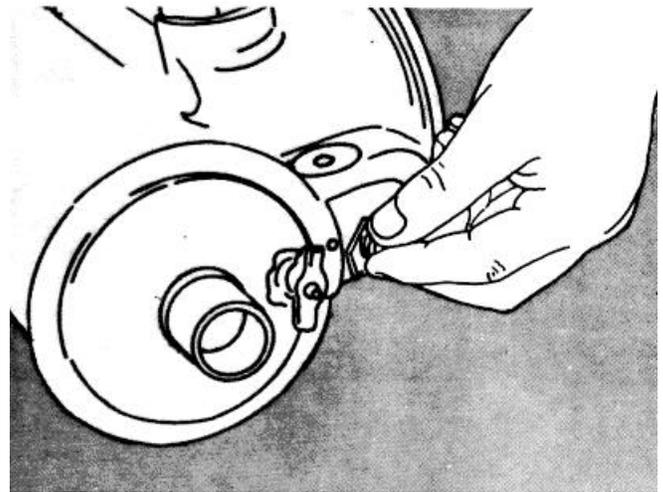


Fig. 7-28. Remove The Retaining Plate.

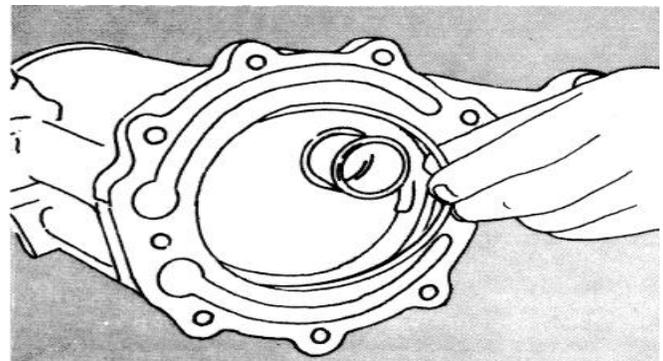


Fig. 7-29. Remove The O-Ring From The Thermostat End Of The Housing.

4. To remove the O-ring from the thermostat end of the housing, push the element approximately 0.50 inch [12.4 mm] toward the filter end of the housing. Remove and discard the O-ring, Fig. 7-29.
5. Push the element through the housing, toward the thermostat end of the housing. Remove the element, Fig. 7-30.
6. Remove and discard the O-ring from the filter end of the housing, Fig. 7-31.
7. Remove the pipe plugs from the housing.
8. Check the filter bypass valve to make sure the valve works freely, Fig. 7-32.

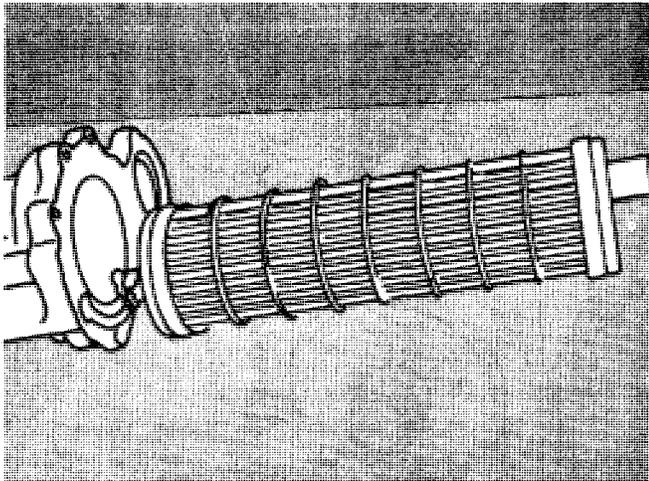


Fig. 7-30. Remove The Element From The Housing.

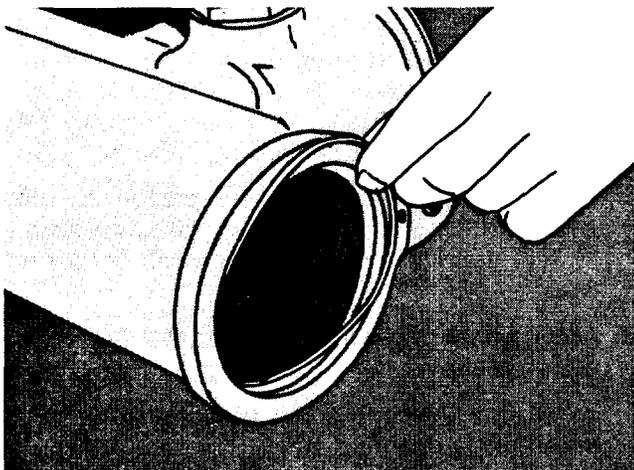


Fig. 7-31. Remove The O-Ring From The Filter End Of The Housing.

- 1 Plug
- 2 Gasket

- 3 Valve Seat
- 4 Valve
- 5 Valve Spring
- 6 Washer

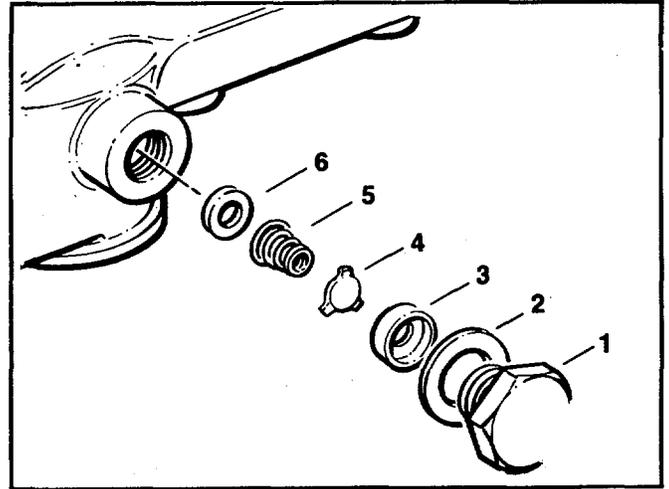


Fig. 7-32. Filter Bypass Valve - Exploded View.

Cleaning

1. Clean the element and housing immediately after disassembly. This will prevent hardening and drying of foreign material in the element and housing.
2. Use mineral spirits or equivalent to clean the housing. Flush the oil passages in the reverse direction of the oil flow.
3. Flush the element with hot water. Make sure the water goes around and through the tubes of the element. Dry with compressed air.

Caution: Never use a cooler element from an engine that had a failure. When an engine has a failure, metal particles enter the oil cooler. These particles cannot be completely removed from the element and can cause damage to the engine.

Inspection

1. Check the oil cooler element for damage and leaks. To check the element for leaks:
 - a. Seal both ends of the element. One end must have a fitting for an air connection.

- b. Install an air connection to the end that has a fitting.
- c. Put the element into a container of water.
- d. Apply 40 psi [276 kPa] air pressure to the element.
- e. Check for air bubbles coming from the element.

2. Check the cooler housing for cracks, damage or corrosion.

Replacement

1. Replace the element if it has damage or leaks.
2. Replace the housing if it has cracks, damage or corrosion.

Assembly

1. Apply a coat of SAE 30 oil to the O-ring for the thermostat. Install the O-ring into the groove in the housing.
2. Install the thermostat into the housing. Push the thermostat into the housing until it is against the bottom of the bore, Fig. 7-33

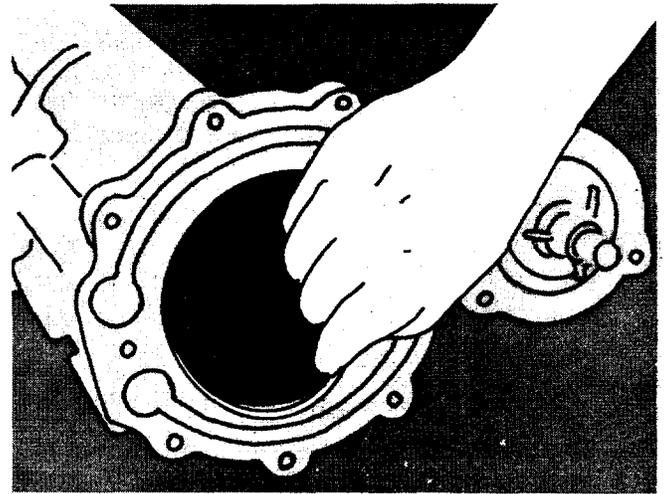


Fig. 7-34. Install The O-Ring Into The Thermostat End Of The Housing

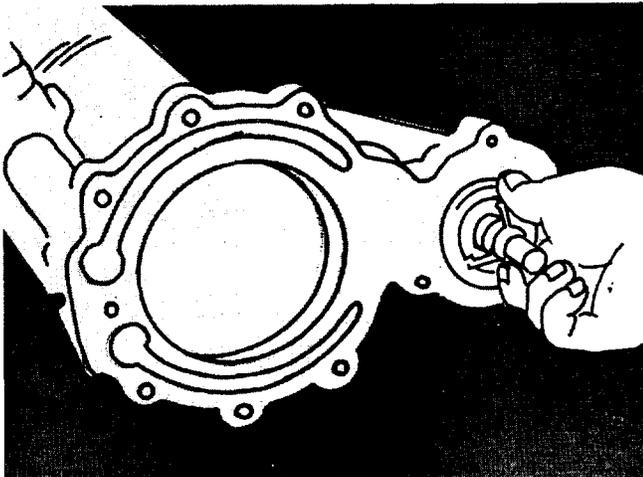


Fig. 7-33. Install The Thermostat.

3. Apply a coat of grease to the O-ring for the element.
- 4.

Note: Make sure the groove does not have any sharp edges before you install the O-ring.

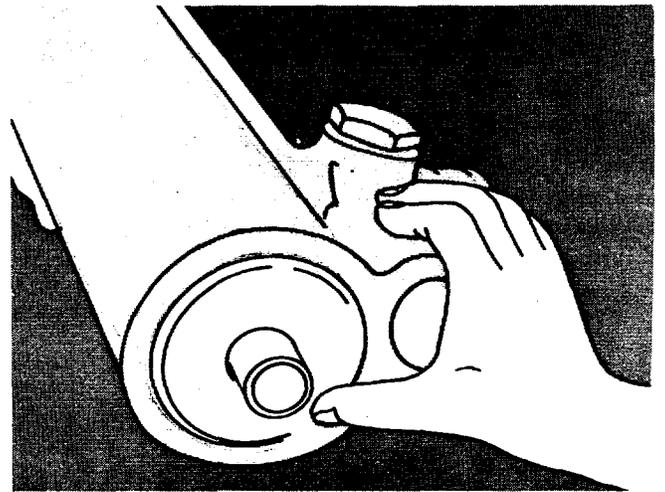


Fig. 7-35. Install The Element Into The Housing.

5. Install the element into the housing from the filter end of the housing. Make sure the drain-cock on the element is to the filter end of the housing, Fig. 7-35. Use your hand to push the element into the housing.
6. install the cover and a new gasket to the cooler housing. Do not tighten the capscrews, install them 2 to 3 threads deep into the housing.
7. Apply a coat of grease to the second O-ring for the element.
8. Install the O-ring into the groove at the filter end of the housing.

Note: Make sure the groove does not have any sharp edges before you install the O-ring.

Lubricating System

**Table 7-1: Lubricating Oil Pump Specifications -
Inch [mm] (Reference Fig. 7-0)**

Ref. No.	Measurement	Worn Limit	New Minimum	New Maximum
Single Lubricating Oil Pump				
1.	Bushings			
	Inside diameter [15.710]	0.6185 [15.659]	0.6165 [15.684]	0.6175
2.	Idler and Drive Shaft			
	Outside diameter [15.608]	0.6145 [15.62]	0.615 [15.634]	0.6155
3.	Drive Gear to Body Clearance	0.012 [0.30]		
4.	Drive Shaft			
	End Movement		0.002 [0.05]	0.005 [0.13]
	Idler shaft			
	Shaft Protrusion Inside Body		0.720 [18.29]	0.740 [18.80]
	Driven Gear/Drive Shaft			
	Shaft Protrusion		0.855 [21.72]	0.875 [22.22]
Single (Double Capacity) Lubricating Oil Pump				
1.	Bushings			
	Inside Diameter [22.33]	0.879 [22.33]	0.8767 [22.268]	0.8777 [22.293]
2.	Idler and Drive Shaft			
	Outside Diameter [22.17]	0.874 [22.17]	0.8745 [22.212]	0.875 [22.22]
3.	Drive Gear to Body Clearance	0.012 [0.30]		
4.	Drive Shaft			
	End Movement	0.002 [0.05]	0.008 [0.20]	
	Idler Shaft			
	Shaft Protrusion Above body to Cover Face		0.955 [24.26]	0.985 [25.02]
	Driven Gear/Drive Shaft			
	Shaft Protrusion [26.29] [26.80]		1.035	1.055
5.	Piston Cooling Oil Tube			
	Protrusion Above Body Mounting Face	2.970 [75.44]	3.000 [76.20]	
Double Lubricating Oil Pump				
1.	Bushings			
	Inside Diameter [15.710]	0.6185 [15.710]	0.6165 [15.659]	0.6175 [15.684]
2.	Idler and Drive Shaft			
	Outside Diameter [15.608]	0.6145 [15.608]	0.615 [15.62]	0.6155 [15.634]
3.	Drive Gear to Body Clearance	0.012 [0.30]		
4.	Drive Shaft			
	End Movement		0.004 [0.10]	0.007 [0.18]

9. To push the element into position over the O-ring, evenly tighten four of the capscrews for the support.
10. Tighten all of the capscrews to 15 to 20 ft.-lbs. [20 to 27 N-m] torque, Fig. 7-36.
11. Install the retaining plate with a retaining screw, lockwasher and plain washer, Fig. 7-37. Tighten the screw to 5 to 6 ft.-lbs. [6 to 8 Nom] torque.
12. Apply a coat of Locktite 572 to the threads of the draincock. Install the draincock into the element and tighten to 5 to 10 ft.-lbs. [6 to 13 N.m].

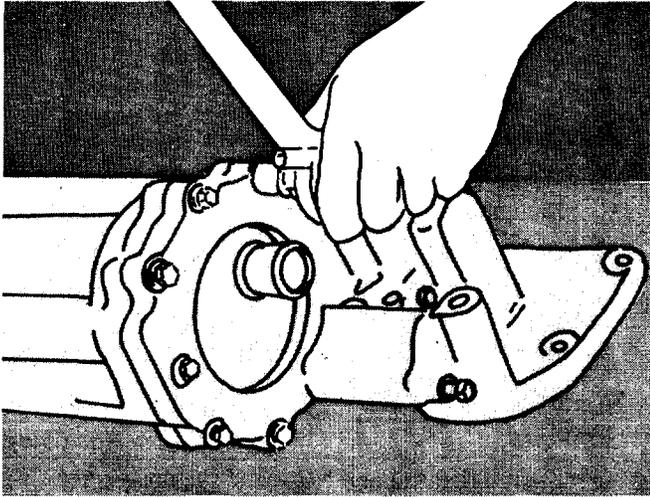


Fig. 7-36. Tighten The Capscrews For The Cover.

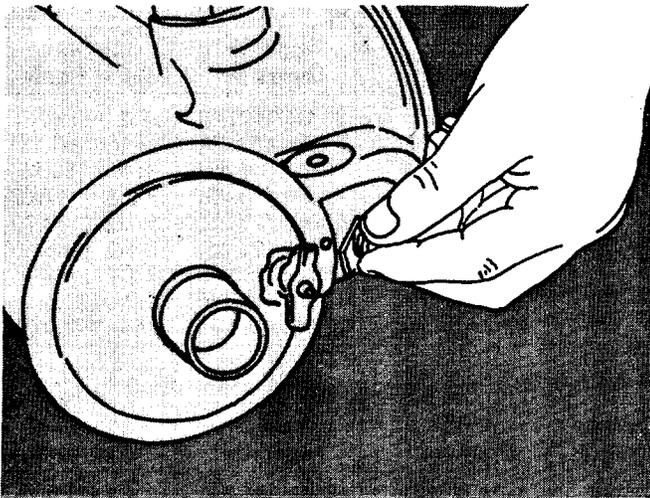


Fig. 7-37. Install The Retaining Plate.

Table 7-1: Lubricating Oil Pump Specifications - Inch [mm] (Reference Fig. 7-0)

Ref. No.	Measurement	Worn Limit	New Minimum	New Maximum
	Idler Shaft Shaft Protrusion Above Back Surface of Body		2.600 [66.04]	2.620 [66.55]
	Idler Shaft Suffix Letter L		2.680 [68.07]	2.690 [68.33]
	Drive Gear Drive Shaft Shaft Protrusion		0.040 [1.02]	0.060 [1.52]
1	Single Scavenger Pump Bushings Inside Diameter	0.6185 [15.710]	0.6165 [15.659]	0.6175 [15.684]
2	Idler and Drive Shaft Outside Diameter	0.6145 [15.608]	0.615 [15.62]	0.6155 [15.634]
	Idler Shaft Protrusion	Flush with front surface of pump.		
	Driven Gear Drive Shaft Protrusion		0.580 [14.73]	0.610 [15.49]
	Coupling Dowels Protrusion Above Coupling Face		0.990 [25.15]	1.010 [25.64]
	Coupling/Drive Shaft Shaft Protrusion		0.050 [1.27]	0.070 [11.78]
4	Drive Shaft End Movement		0.004 [0.10]	0.010 [0.25]
1	Double Scavenger Pump Bushings Inside Diameter	0.841 [21.36]	0.840 [21.34]	0.8405 [21.349]
2	Idler and Drive Shaft Coupling Drive Shaft Shaft Protrusion		0.050 [1.27]	0.070 [1.78]
4	Drive Shaft End Movement		0.004 [0.10]	0.007 [0.25]
	FFC Filter Cooler or Non-FFC Lubricating Pump Pressure Regulator Spring Free Length			3.410 [86.36]

Table 7-1: Lubricating Oil Pump Specifications - Inch [mm] (Reference Fig. 7-0)

Ref. No.	Measurement	Worn Limit	New Minimum	New Maximum
	Load at 2.125 inch [53.98 mm] lb [N]		45 [200]	50 [222]

Recommended Oil Pressure	50 [345]	70 [483]
psi [kPa]		
FFC Lubricating Oil Pump By-Pass Valve Spring Free Length		2.500 [63.50]
Load at 1.780 inch [45.21 mm] lb [N]	79 [351]	91 [405]
Oil Pressure		130 [896]
psi [kPa]		
DFC Lubricating Oil Pump Pressure Regulator Spring Free Length		3.310 [84]
Load at 1.820 inch [46.2 mm] lb [N]	21.9 [97.4]	25.7 [114]
Oil Pressure		40 [275.7]
psi [kPa]		
DFC Lubricating Oil Pump Bypass Valve Spring Free Length		2.224 [56.5]
Load at 1.145 inch [29.07 mm] lb [N]	59.2 [263]	72.4 [322]
Oil Pressure		150 [11034]
psi [kPa]		

Table 7-2: Hose Size

Location	Minimum Hose Size
Turbocharger Oil Supply	No 6
Full Flow Filter	No 16
Turbocharger Oil Drain	No 16

Table 7-3: Hose Bends -Inch [mm] (Rubber-Lined)

Hose Size	Inside Diameter	Outside Diameter	Minimum Bend Radius
4	3/16 [4.76]	31164 [12.30]	2 [50.80]
5	1/4 [6.35]	35164 [13.89]	2-114 [57.15]
6	5/16 [7.94]	39/64 [15.48]	2-314 [69.85]
8	13/32 [10.32]	47164 [18.65]	4-518 [117.48]
10	1/2 [12.70]	53164 [21.03]	5-112 [139.70]
12	5/8 [15.87]	61164 [24.21]	6-112 [165.10]
16	7/8 [22.23]	1-13/64 [30.56]	7-318 [187.34]
20	1-1/8 [28.58]	1-31164 [137.70]	9 [228.60]
24	1-3/8 [34.93]	1-23/32 [43.66]	11 [279.40]

Table 7-4: Hose Bends - Inch [mm] (Teflon-Lined)

Hose Size	Inside Diameter	Outside Diameter	Minimum Bend Radius
6	5/16 [7.94]	39/64 [15.48]	4 [101.60]
16	7/8 [22.23]	1-13164 [30.56]	7-3/8 [187.33]

Table 7-5: Oil Pan Capacity - U.S. Gallons [Litres] and Degrees of Angularity

Part Number	Sump Location	Capacity		Degrees of Angularity			
		High	Low	Front Up	Front Down	F.P Side Down	Exhaust Side Down
10451	Center	6-1/2 [25]	4 [15]				
10474-2	Rear	7 [26]	5-11/2 [21]	19	21	35	35
10492-2	Rear	6-11/2 [25]	4 [15]	19	21	35	35
10668-1	Rear	8-11/2 [32]	5-11/2 [21]	16	16	16	16
10774	Rear	7 [26]	5-11/2 [21]	19	20	30	25
10777	Front	7 [26]	5-1/2 [21]	40	40	45	35
10779	Rear	8-1/2 [32]	5-1/2 [21]	16	16	16	16
10809	Full	11 [42]	3 [11]				
10811	Center	7 [26]	5-1/2 [21]	32	40	37	35
10850	Rear	7 [26]	5-1/2 [21]	14	12	45	20
10850-A	Rear	7 [26]	5-1/2 [21]	14	12	45	20
11055	Front	7 [26]	5-1/2 [21]				
11102	Front	7 [26]	5-1/2 [21]				
11150	Dry						
11194	Dry						
103949	Front	7 [26]	5-11/2 [21]	15	35	35	35
110626	Rear	7 [26]	5-1/2 [21]	40	25	45	19
116916	Rear	7 [26]	5-1/2 [21]	20	15	37	35
118784	Rear	7 [26]	5-1/2 [21]	14	12	45	20
119330	Center	7 [26]	5-1/2 [21]	45	45	45	45
119382	Full	7 [26]	5-1/2 [21]	42	1	19	40
119586	Front	7 [26]	5-1/2 [21]				
120905	Center	7 [26]	5-1/2 [21]				
121089	Front	6 [23]	4-3/4 [18]	15	30	30	30
121244	Front	6 [23]	4 [15]	36	45	45	40
121862	Center	6-1/2 [25]	4-11/2 [17]	22	24	40	40
121377	Rear	6 [23]	4 [15]	45	38	42	40
125318	Rear	6-1/2 [25]	4 [15]	28	15	38	38
126818	Rear	7 [26]	5-1/2 [21]	40	25	45	19
129434	Rear	6 [23]	4 [15]	45	38	42	40
133879	Rear	7 [26]	5-1/2 [21]	36	11	32	30
134070	Center	6 [23]	4 [15]	35	33	35	35
13427	Front	7 [26]	5-1/2 [21]	10	35	40	40
134279	Rear	7 [26]	5-1/2 [21]	19	21	35	35
134283	Rear	7 [26]	5-1/2 [21]	19	20	30	25
137156	Full	7 [26]	4 [15]	45	8	42	40
139493	Front	6 [23]	4 [15]	36	45	45	40
139745	Rear	6 [23]	4 [15]	45	38	42	40
146866	Dry						
148160	Rear	6 [23]	4 [15]	45	39	40	42
151079	Rear	6 [23]	4 [15]				
152410	Rear	6 [23]	4-1/2 [17]	27	15	25	35


Table 7-5: Oil Pan Capacity - U.S. Gallons [Litres] and Degrees of Angularity

Part Number	Sump Location	Capacity				Degrees of Angularity			
		High		Low		Front Up	Front Down	F.P Side Down	Exhaust Side Down
153729	Rear	7	[26]	5-1/2	[21]	19	[2	25	25
154418	Full	6	[23]	4	[15]	15	15	15	15
16[206	Front	6	[23]	4	[15]	36	45	45	40
162377	Rear	7	[26]	5-1/2	[21]	45	38	42	40
164436	Front	6	[23]	4	[15]	40	40	45	35
164776	Rear	7	[26]	5-1/2	[21]	40	25	45	19
167186	Rear	7	[26]	5-1/2	[21]	19	[2	25	25
167429	Rear	7	[26]	5-1/2	[21]	40	25	45	19
169348	Front	6	[2M	4	[15]	40	40	45	35
177155	Rear	6	[23]	4	[15]	45	39	40	42
181768	Rear	7	[26]	5-1/2	[21]	20	15	37	35
187756	Center	6-1/2	[25]	4	[15]	24	24	32	30
189672	Full	[2	[45]	3-1/2	[13]				
193625	Rear	7	[26]	5-1/2	[21]	16	12	35	39
193629	'Rear	7	[26]	5-1/2	[21]	16	12	35	39
193631	Rear	7	[26]	5-1/2	[21]	-16	12	35	39
193634	Rear	7	[26]	5-1/2	[21]	16	12	35	39
193635	Rear	7	[26]	5-1/2	[21]	16	12	.35	39
193636	Rear	7	[26]	5-1/2	[21]	16	12	35	39
193637	Rear	7	[26]	5-1/2	[21]	16	12	35	39
193638	Rear	7	[26]	5-1/2	[21]	16	12	35	39
193639	Rear	7	[26]	5-1/2	[21]	16	12	35	39
2007B7	Rear	7	[26]	5-1/2	[21]	16	12	35	39
201S836	Rear	5	[19]	3-1/2	[13]	27	15	25	35
201837	Rear	5	[19]	3-1/2	[13]	.27	15	25	35
201839	Rear	7	[21]	5-1/2	[21]	16	[2	35	39
201841	Rear	5	[19]	3-1/2	[13]	27	15	25	35
201842	Rear	7	[26]	5-1/2	[21]	16	12	35	39
201843	Rear	7	[26]	5-1/2	[21]	16	12	35	39
201844	Rear	5	[19]	3-1/2	[13]	27	15	25	35
202283	Front	7	[26]	5-1/2	[21]	10	35	40	40
202284	Front	7	[26]	5-1/2	[21]	10	35	40	40
203561	Rear	7	[26]	5-1/2	[21]	19	12	25	25
203563	Rear	7	[26]	5-1/2	[21]	19	12	25	25
203564	Rear	7	[26]	5-1/2	[21]	19	12	25	25
203841	Front	7	[26]	5-1/2	[21]	10	35	40	40
3002151	Center	6-1/2	[25]	5-1/2	[21]	24	24	32	30
3002152	Center	7	[26]	5-1/2	[21]				
3005178	Rear	7	[26]	5-1/2	[21]	19	12	25	25
3005179	Rear	7	[26]	5-1/2	[21]	19	12	25	25
3005181	Rear	7	[26]	5-1/2	[21]	19	12	25	25
3005183	Rear	7	[26]	5-1/2	[21]	19	12	25	25

Group 8

The cooling system includes the water pump for the engine, the fan hub, thermostat, heat exchange, and sea or raw water pump.

Cooling System

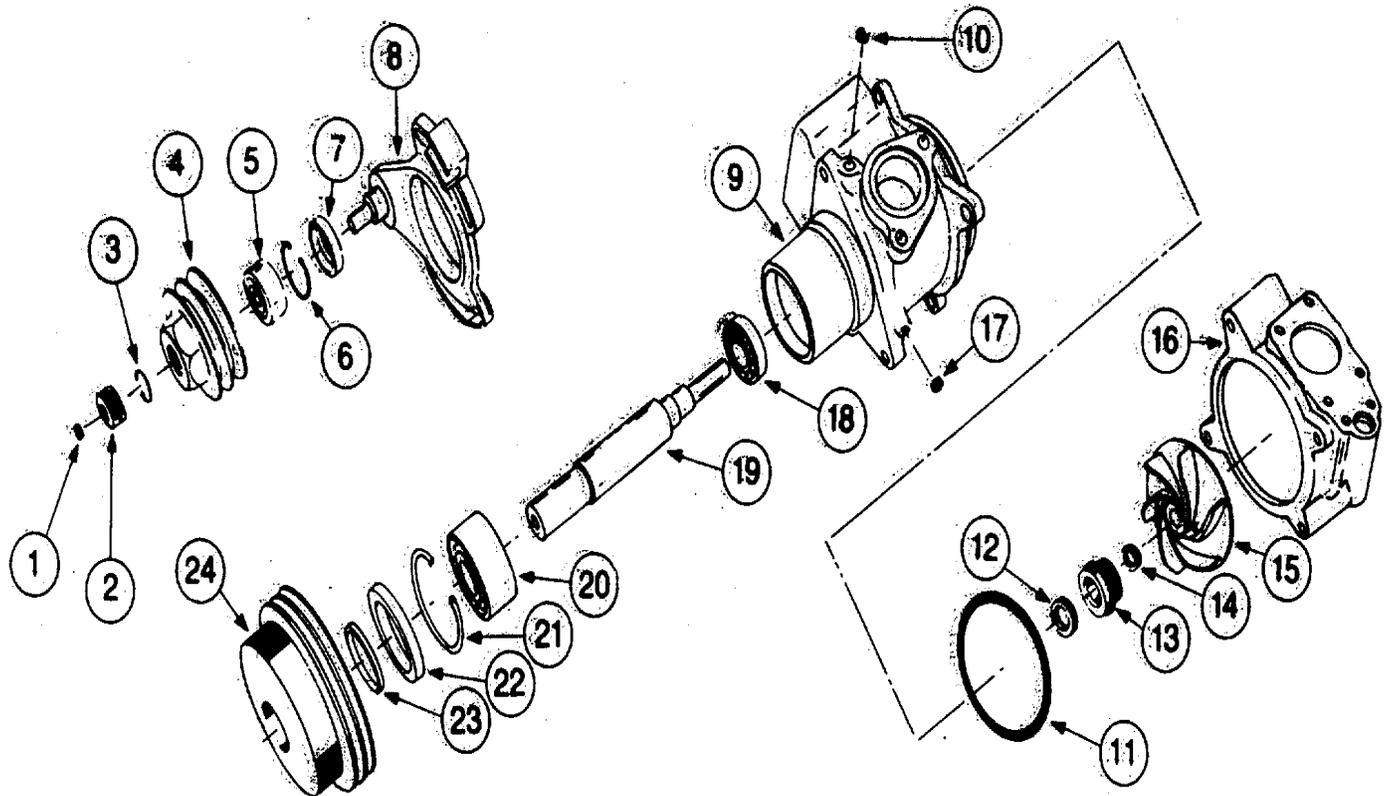

- | | | | | |
|-----------------|-----------------|-----------------------|------------------|-----------------|
| 1 Pipe Plug | 7. Spacer | 13 Water Pump Housing | 19. Capscrew | 25 Spacer |
| 2. Pulley | 8. Snap Ring | 14. Pipe Plug | 20. Washer | 26. Snap Ring |
| 3. Wear Sleeve | 9. Ball Bearing | 15. Carbon Face Seal | 21. Idler Pulley | 27. Capscrew |
| 4. Grease Seal | 10. Shaft | 16. Adjusting Screw | 22. Idler Shaft | 28. Grease Seal |
| 5. Snap Ring | 11. Grease Seal | 17. Seat | 23. Ball Bearing | 29. Lockwasher |
| 6. Ball Bearing | 12. Pipe Plug | 18. Impeller | 24. "O" Ring | 30. Spacer |
| | | | | 31. Nut |

Fig. 8-1 (N10894). FFC And Eccentric Water Pump - Exploded View. 8-1

Service Tool List

Service Tools (Or Equivalent) Required

Service Tool Number	Tool Name
ST-657	Bearing Mandrel
ST-658	Bearing Mandrel
ST-709	Puller
ST-1114	Bearing Separator
ST-1154	Seal Mandrel
ST-1159	Wear Sleeve Driver
ST-1161	Seal Mandrel
ST-1191	Seal Driver
3375110	Impeller Support Plate (Phenolic impellers only)
3375180	Oil Seal Pilot
3375257	Pulley/Impeller Puller
3375265	Pulley/Impeller Puller
3375318	Bearing Mandrel
3375326	Bearing Separator
3375448	Seal and Seat Mandrel
3376081	Bearing Mandrel

Standard Tools


Arbor Press	Grease Gun
Bearing Packer	Feeler Gauge Set

0-1, 1-2, 2-3 Micrometers Telescoping Gauges
Snap Ring Pliers (Large and Small)
5116-18, 3t8-16, 6/16-14 Taps

The Eccentric Water Pump

Disassembly

1. Remove the huglock nut (14, Fig. 8-2) and the washer (15). The huglock nut and washer are not used on the water pump with the short shaft. Use the Part No. 3375265 Puller to remove the pulley (1) from the shaft (7). Remove the large retaining ring (2).
2. Use the 3375265 Puller to remove the impeller (13) from the shaft, Fig. 8-3. If the pump has a plastic (phenolic) impeller, the impeller does not have holes for a puller. Use the Part No. 3375110 Support Plate between the impeller and water pump housing. Use a press to push the shaft from the impeller, Fig. 8-4.
3. Support the water pump housing on the pulley side of the housing. Use a press to push the shaft and bearing assembly from the housing. Apply the pressure to the impeller end of the shaft.
4. Remove the cup seat (12, Fig. 8-2), face seal (11), grease fittings (10), and relief fittings (8).
5. Use the Part No. ST-1114 Bearing Disassembly Fixture to support the bearing and spacer. Push

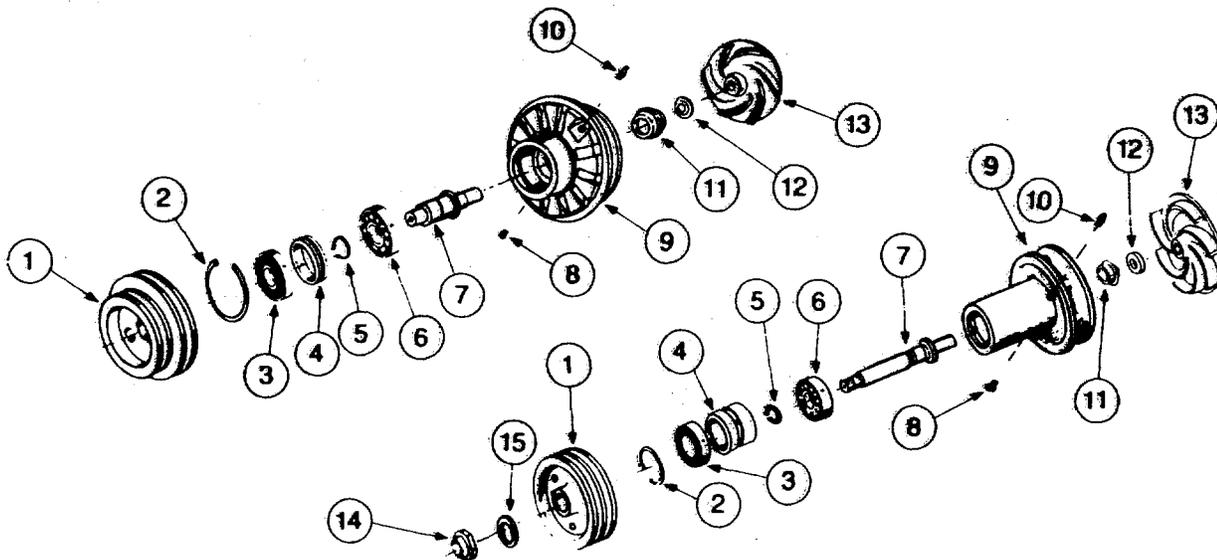

1 Water Pump Pulley	5 Retaining Ring	9 Water Pump Housing	13 Impeller
2 Retaining Ring	6 Ball Bearing	10 Grease Fitting	14 Huglock Nut
3 Ball Bearing	7 Shaft	11 Face Seal	15 Washer
4 Spacer	8 Relief Fitting	12 Cup Seat	

Fig. 8-2 (N10845). Eccentric Water Pump With Short Shaft And Eccentric Water Pump With Long Shaft.

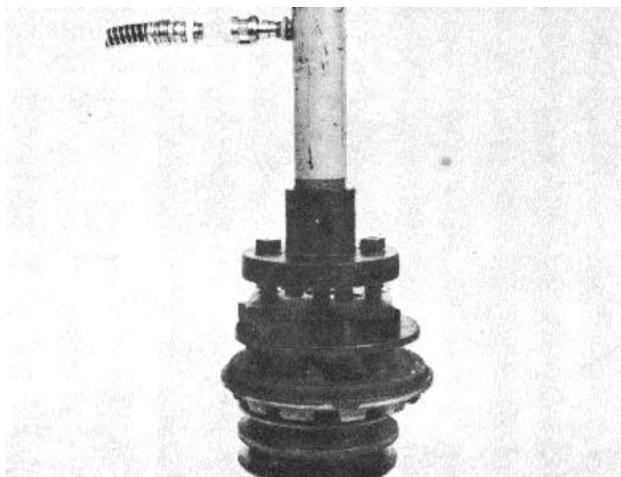


Fig. 8-3 (UW101). Using A Puller To Remove The Impeller.

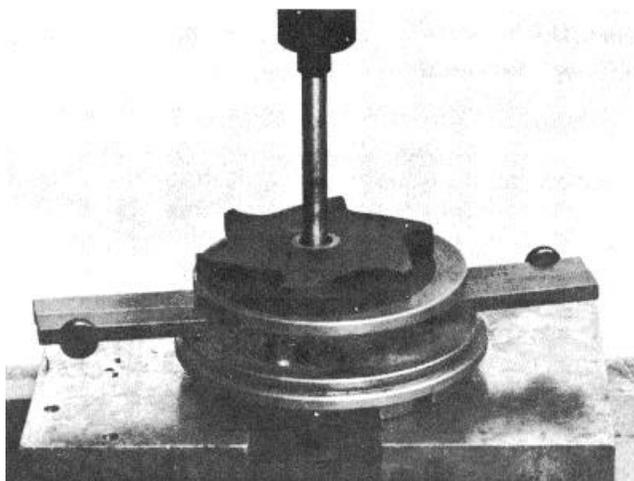


Fig. 8-4 (N10847). Using A Press To Remove The Impeller.

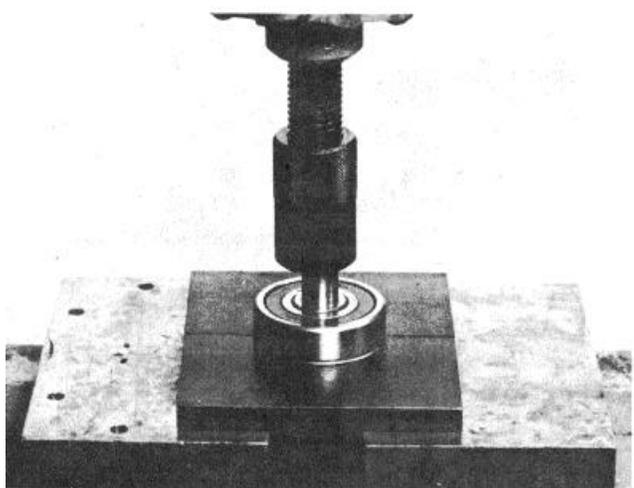


Fig. 8-5 (N10848). Push The Shaft From The Bearing.

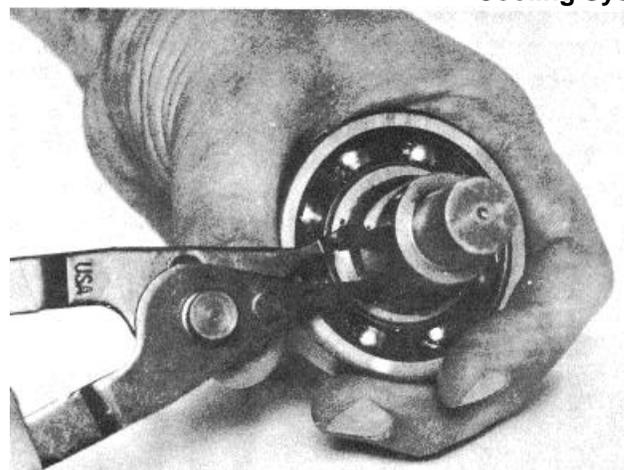


Fig. 8-6 (N10849). Remove The Retaining Ring.

the shaft from the bearing and spacer; Fig. 8-5.

6. Remove the small retaining ring that holds the inner bearing in position, Fig. 8-6.
7. Use the ST-1114 to support the bearing. Push the shaft from the bearing.

Cleaning

1. Clean all parts with cleaning solvent. Dry with compressed air.

Inspection

1. Inspect the bearings. Check for damage or wear to the races of the bearings. If the bearings are damaged or worn, be sure to check the shafts and bore in the housing for damage and wear. Discard the bearings.
2. Inspect the bearing spacer for wear or damage.
3. Check the water pump impeller for cracks or corrosion.
4. Measure the bore of the impeller and the outside diameter of the impeller and of the shaft. The press-fit between the shaft and the impeller bore must be a minimum of 0.001 inch [0.03 mm]. Refer to Table 8-1, in the back of this section, to find the correct dimensions of the parts.
5. Check the shaft for wear and damage.
6. Check the grooves in the pulley for wear and damage.

Note: A new belt, when pushed down into the groove, must protrude 1/16 to 1/8 inch [0.06 to 0.13 mm] above the outside diameter of the pulley. The belt must not touch the bottom of the groove.

7. Check the water pump housing for wear and damage. Make sure the weep hole in the housing is open. Measure the bore in the housing, Fig. 8-7. Discard the housing if the bore is larger than 2.4494 inch [62.215 mm].

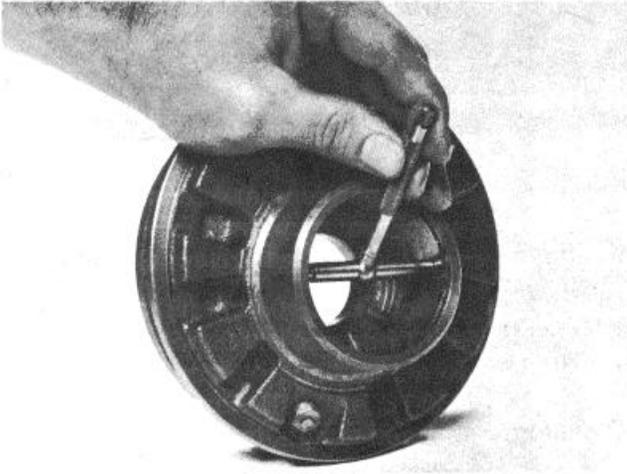


Fig. 8-7 (N10850). Measure The Bore In The Housing.

Replacement Replace any parts which are damaged or worn beyond the specifications in Table 8-1.

Assembly

1. Apply a coat of clean lubricating oil to the outside diameter of the shaft. Support the new inner bearing with a Part No. ST-658 Mandrel. Use a press to push the shaft into the bearing, Fig. 8-8. Push the shaft into the bearing until the bearing is against the larger diameter (shoulder) of the shaft.
2. Install the small retaining ring on the shaft. Make sure the ring is against the bearing. Install the bearing spacer onto the shaft. The side of the spacer must be against the side of the bearing.
3. Support the new outer bearing with the ST-658. Push the shaft into the bearing until the bearing is against the spacer. Make sure the bearings turn freely.

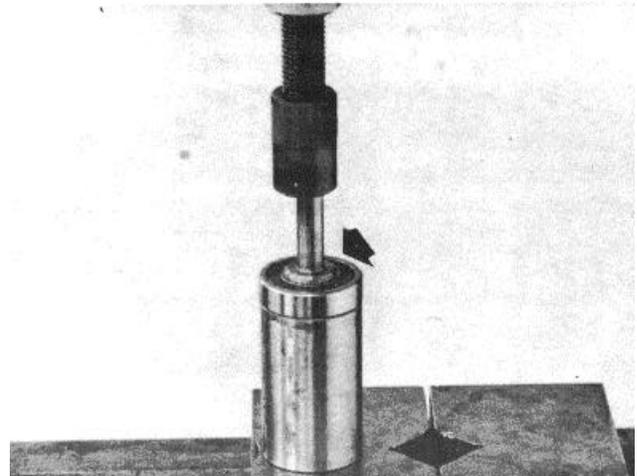


Fig. 8-8 (N10851). Push The Shaft Into The Bearing.

Caution: To prevent damage to the bearing, make sure the inner race of the bearing is not overloaded from contact with the spacer.

4. Apply a thin coat of Loctite 601 to the outer race of the bearings, Fig. 8-9. To support the waterpump housing, put the impeller side of the housing on a mandrel. Use the ST-658 Mandrel to push the shaft and bearing assembly into the housing.

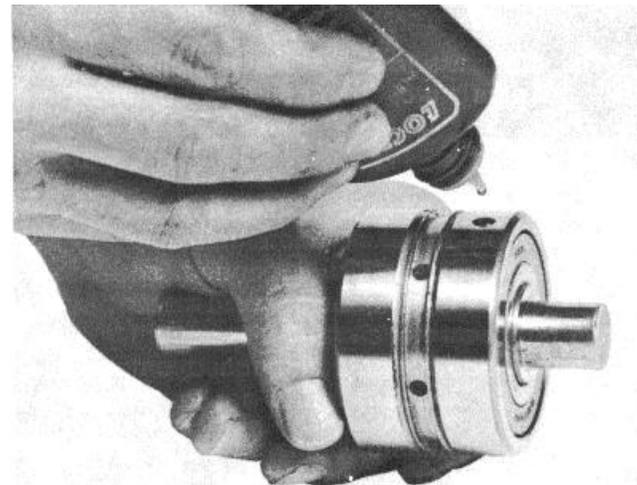


Fig. 8-9 (N10852). Apply Loctite Onto The Bearings.

Caution: Do not support the housing on the thin section of the impeller cavity.

5. Install the larger retaining ring into the water pump housing. The flat side of the ring must be against the bearing.

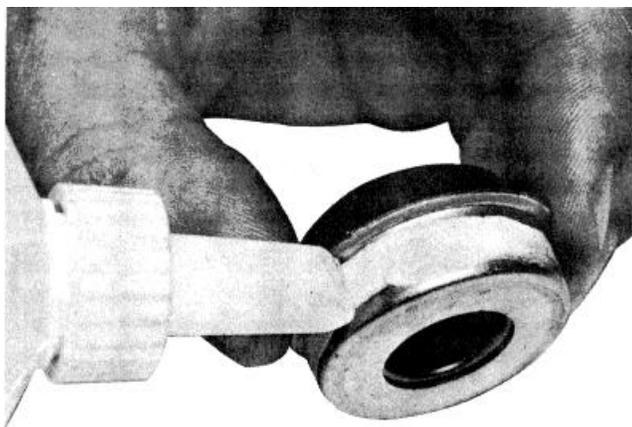


Fig. 8-10 (N10853). Apply Sealant Onto The Seat.

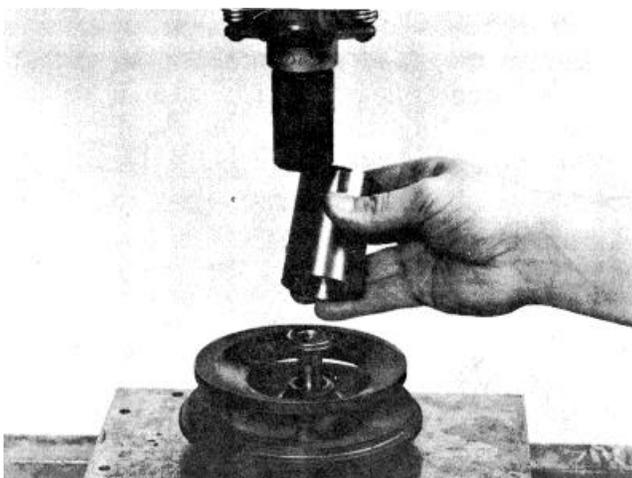


Fig. 8-11 (N10854). Install The Seat Onto The Shaft.



Fig. 8-12 (UW102). Apply Loctite Between The Shaft And The Seat.

6. Turn the water pump housing and support the drive side of the housing. Apply a coat of Part No. 3375066 Loctite to the outside diameter of the brass part of the seal, Fig. 8-10. Push the new seal into the housing until the seal is against the bottom of the bore. Use the Part No. 3375448 Mandrel to push the seal into the housing.
7. Use the 3375448 and push the new cup seat onto the shaft. The 3375448 will put the cup seat into the correct position against the seal, Fig. 8-11.
8. Apply one drop of Loctite 290 to the cup seat. Put the drop of Loctite between the shaft and the cup seat, Fig. 8-12.

Caution: Do not apply more than one drop of the Loctite. More than one drop will cause the seal and seat to become fastened together.

9. Apply a thin coat of Loctite 601 to the inside diameter of the impeller. Support the water pump on the pulley end of the shaft. Push the impeller onto the shaft. The minimum clearance between the vanes of the cast iron impeller and the water pump housing must be 0.020 inch [0.51 mm]. The maximum clearance must not be more than 0.040 inch [1.02 mm], Fig. 8-13.



Fig. 8-13 (N10855). Measure The Clearance For The Impeller.

Note: The minimum clearance for a plastic (Phenolic) impeller is 0.030 inch [0.76 mm]. The maximum clearance must not be more than 0.050 inch [1.27 mm].

10. Install a grease fitting into the housing. The grease fitting must be clean. Install grease, through the fitting, into the housing until you can see the grease in the opposite fitting hole. You must use grease that meets the specifications of MIL-G-3545. Do not use grease that has thickeners of sodium or soda soap. A lubricant supplier can supply grease that meets the specifications.

Caution: Do not fill the housing more than two thirds full. If the housing is filled more than two thirds full, the bearings can be damaged.

11. Install the relief fitting, the fitting must be clean.
12. Support the water pump on the impeller end of the shaft. Do not support the pump on the impeller. Push the pulley onto the shaft until the hub of the pulley is against the outer bearing, Fig. 8-14. Install the huglock nut and washer to the long shaft water pump. Tighten the nut to 90 to 100 ft.-lbs. [122 to 136 Nrm] torque.


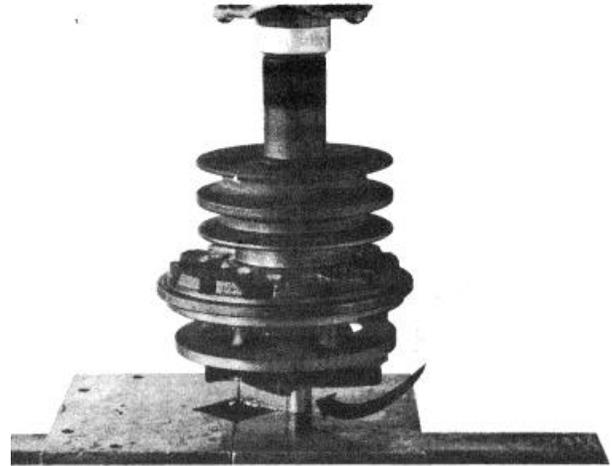


Fig. 8-14 (N10856). Install The Pulley Onto The Shaft. The Water Pump for the NTA Engine

Disassembly

1. Remove the capscrews and lockwashers that hold the inlet housing (16, Fig. 8-15) to the water pump housing (9). Remove the inlet housing and discard the O-ring (11).

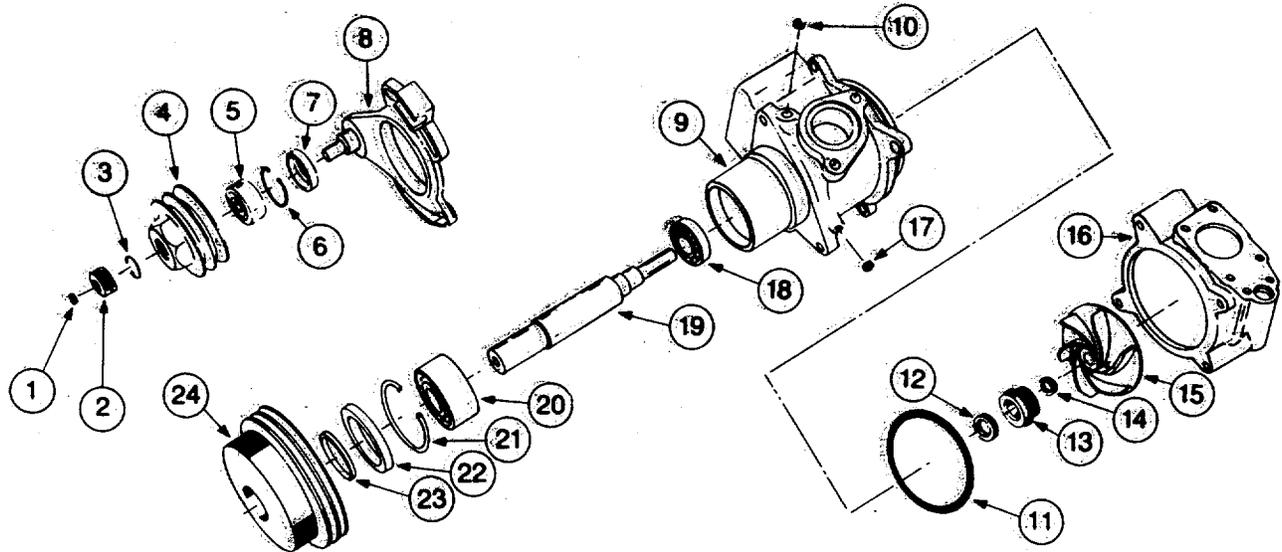

- | | | | |
|-------------------|-----------------------------|------------------------|--------------------|
| 1. Pipe Plug | 7. Grease Seal | 13. Face Seal | 19. Shaft |
| 2. Pipe Plug | 8. Idler Shaft and Bracket | 14. Cup Seat | 20. Ball Bearing |
| 3. Retaining Ring | 9. Water Pump Housing Inlet | 15. Impeller | 21. Retaining Ring |
| 4. Idler Pulley | 10. Pipe Plug | 16. Water Pump Housing | 22. Grease Seal |
| 5. Ball Bearing | 11. O-Ring | 17. Pipe Plug | 23. Wear Sleeve |
| 6. Retaining Ring | 12. Grease Seal | 18. Ball Bearing | 24. Pulley |

Fig. 8-15 (N10857). (NTA(Water Pump - Exploded View

2. Use the Part No. 3375265 Puller and remove the pulley (24) from the shaft (19). Remove the idler pulley assembly from the housing.
3. Remove the seal (12) from the water pump housing. Use the rounded end of a pry bar to remove the seal, Fig. 8-16. Be careful and do not damage the bore for the seal.
4. Remove the larger retaining ring (21).
5. Remove the impeller (15). Use the 3375265 puller to remove the impeller.
6. Support the drive side of the housing (9). Push the shaft and bearing assembly from the housing.
7. Remove and discard the cup seat (14, Fig. 8-15), face seal (13) and oil seal (12) from the housing as shown in Fig. 8-17.
8. Use the Part No. 3375326 Bearing Separator to support the larger bearing (20, Fig. 8-15). Push the shaft from the bearing, Fig. 8-18.
9. Use the 3375326 to support the smaller bearing

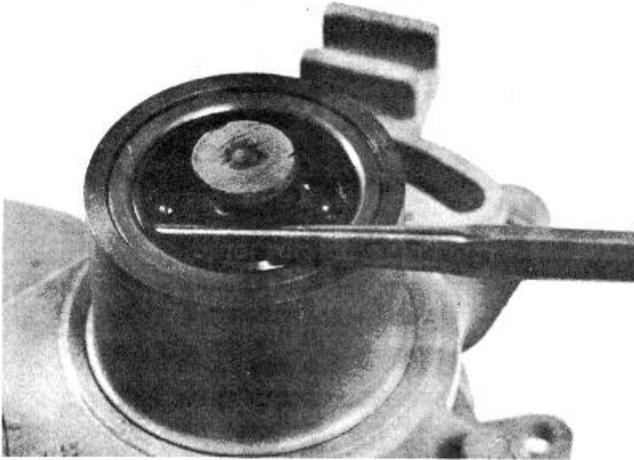


Fig. 8-16 (N10859). Pry The Seal Out Of The Housing.



Fig. 8-17 (N10860). Remove The Oil Seal From The Housing.

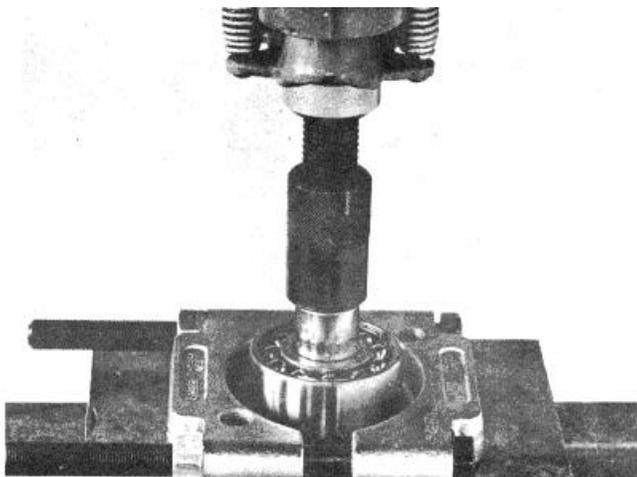


Fig. 8-18 (N10861). Push The Shaft From The Bearing.

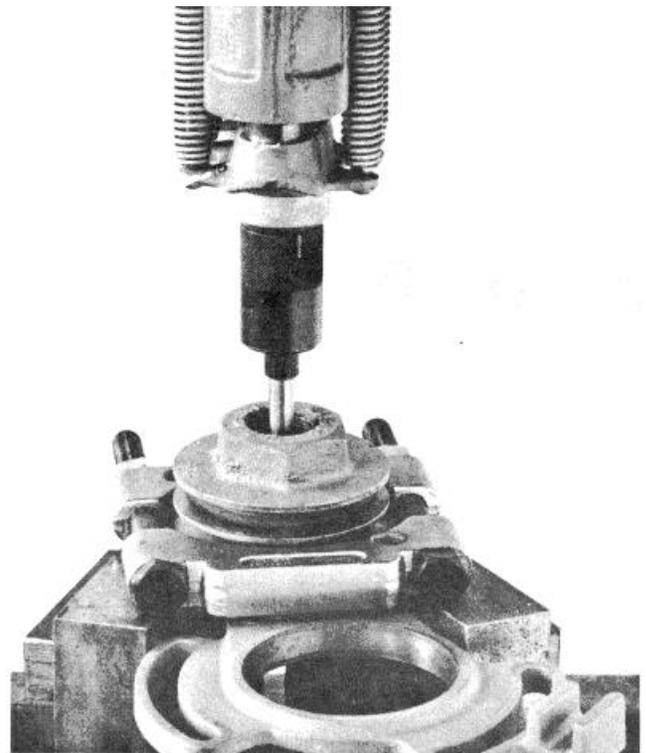


Fig. 8-19 (N10862). Remove The Shaft And Bracket Assembly From The Pulley.

- 18, Fig. 8-15). Push the shaft from the bearing.
10. Remove the pipe plug (2, Fig. 8-15) from the idler pulley (4).
 11. Remove the retaining ring (3, Fig. 8-15) from the shaft (8).
 12. Use the 3375326 to support the idler pulley. Push the shaft and bracket assembly (8, Fig. 8-15) from the pulley, Fig. 8-19.
 13. Remove the oil seal (7, Fig. 8-15) and retaining ring (6) from the pulley. Use the flat end of a punch to push the bearing (5) from the pulley, Fig. 8-20. Discard the oil seal and bearing.

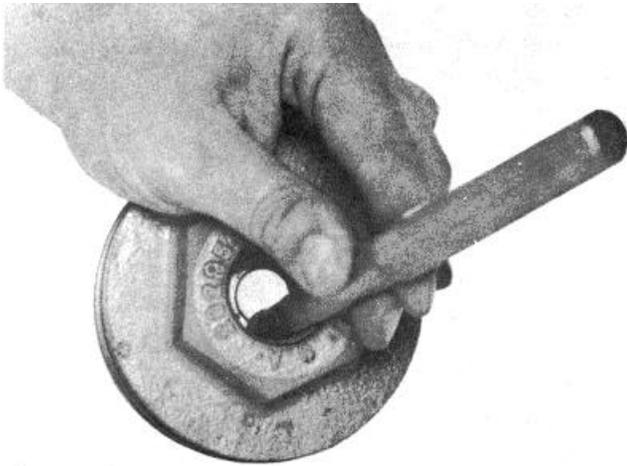


Fig. 8-20 (N10863). Remove The Bearing From The Pulley.

Cleaning

Clean all of the parts with cleaning solvent. Dry with compressed air.

Inspection

1. Check the impeller for cracks or corrosion.
2. Measure the bore of the impeller and the outside diameter of the impeller end of the shaft. The press-fit between the shaft and the impeller bore must be a minimum of 0.001 inch [0.03 mm]. Refer to Table 8-2, in the back of this section, to find the correct dimensions of the parts.
3. Check the shaft for wear and damage.
4. Check the grooves in the pulleys for wear and damage.

Note: A new belt, when pushed down into the groove, must protrude 1116 to 118 inch [0.06 to 0.13 mm] above the outside diameter of the pulley. The belt must not touch the bottom of the groove.

5. Measure the bore in the drive and idler pulley. Measure the outside diameter (pulley end) of the water pump shaft. Measure the outside diameter (pulley end) of the idler shaft. The press-fit between the shaft diameters and pulley bores must be a minimum of 0.001 inch [0.03 mm].
6. Check the wear sleeve (23, Fig. 8-15) for wear or damage. To remove the sleeve, use a chisel to cut a groove in the sleeve, Fig. 8-21. Be careful and do not damage the pulley. Use a

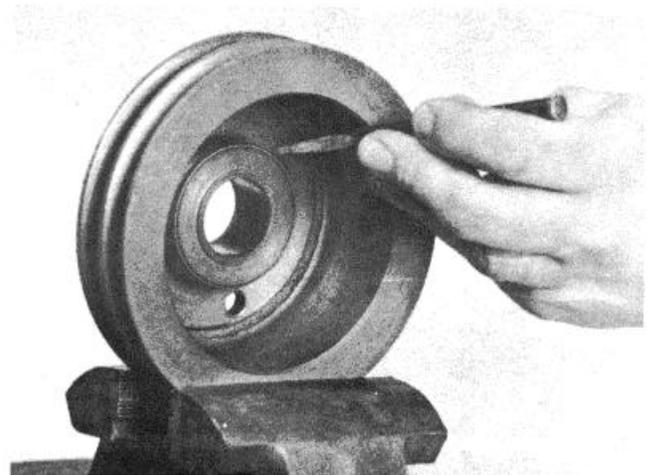


Fig. 8-21 (N10864). Cut The Wear Sleeve.

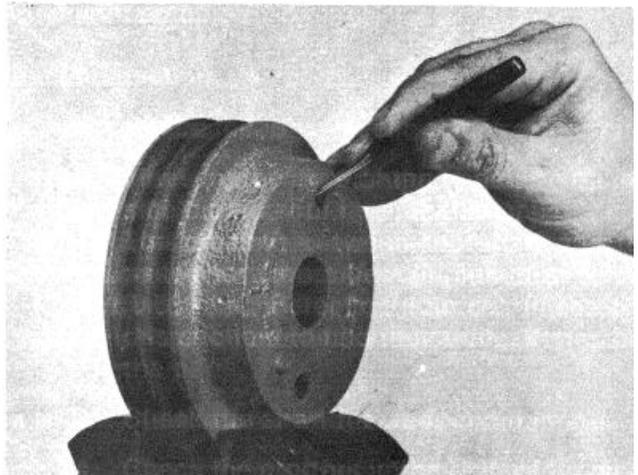


Fig. 8-22 (N10865). Push The Wear Sleeve From The Pulley

3. Install the retaining ring (6, Fig. 8-15) with the flat side of the retaining ring against the bearing. Install a new seal (7) so that the flat side of the seal is even with the hub of the pulley as shown in Fig. 8-24. Use the Part No. ST-1159 Seal Driver to install the seal.
4. Push the pulley and bearing assembly onto the shaft (8, Fig. 8-15). Install the retaining ring (3).
5. Put grease into the pulley cavity until the cavity is one-half to two-thirds full. Install the pipe plug.

Assemble the Water Pump

1. Apply a thin coat of clean lubricating oil to the shaft (19, Fig. 8-15). Use the Part No. ST-658 Bearing Mandrel to support the smaller bearing (18). Push the impeller end of the shaft into the bearing until the bearing is against the larger diameter (shoulder) of the shaft as shown in Fig. 8-25.
2. Use the Part No. 3375318 Bearing Mandrel to support the outer bearing (20). Push the pulley

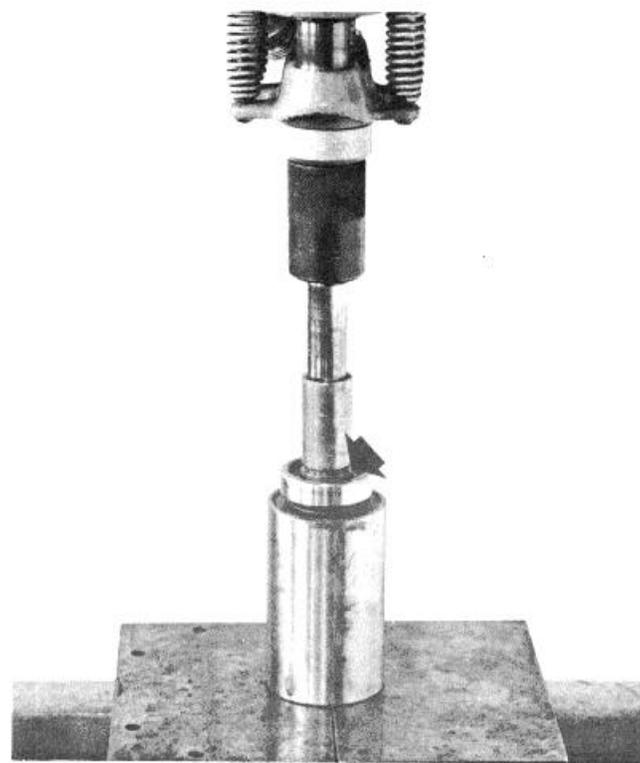


Fig. 8-25 (N10868). Install The Shaft Into The Bearing.



Fig. 8-23 (N10866). Measure The Bore In The Housing.

punch to push the sleeve from the pulley, Fig. 8-22.

7. Check the water pump housing for cracks, damage or corrosion. Make sure the "weep" hole in the housing is open. Measure the bore in the housing, Fig. 8-23. Refer to Table 8-2 to find the correct dimensions.

Assembly

Assemble the Idler Pulley and Bracket

1. Apply grease to the bearings. Make sure the grease meets the specifications of MIL-G-3545.
2. Use the Part No. ST-567 Bearing Mandrel to push the bearing (5, Fig. 8-15) into the pulley (4).

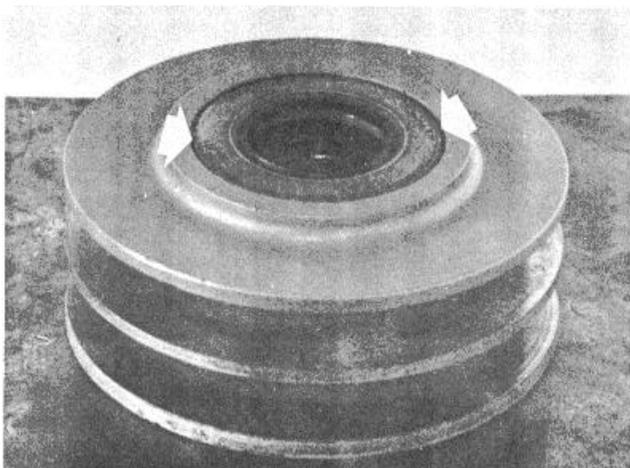


Fig. 8-24 (N10867). The Seal Installed Into The Pulley.

end of the shaft through the bearing until the bearing is against the larger diameter of the shaft.

3. Use the Part No. ST-1154 Seal Mandrel to push the small seal (12, Fig. 8-15) into the water pump housing (9). The seal must be even with to 0.015 inch [0.38 mm] below the edge of the bore, Fig. 826.

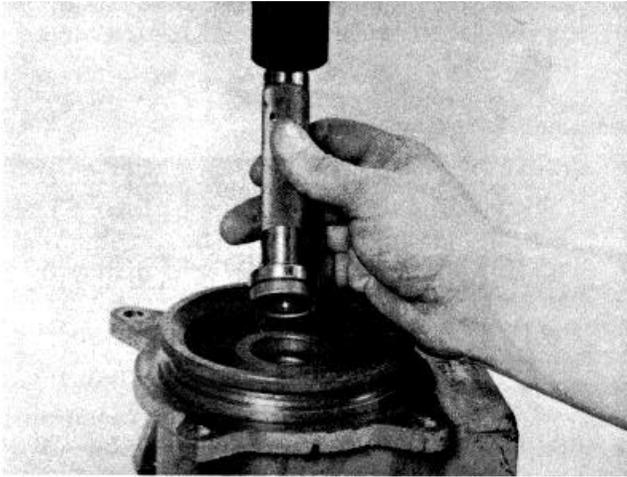


Fig. 8-26 (N10869). Install The Seal Into The Housing.

4. Apply a thin coat of Loctite 601 to the outside diameter of the bearings, Fig. 8-27. Install the shaft and bearing assembly into the housing. Use the 3375318 to push the shaft and bearing into the housing, Fig. 8-28. Install the larger retaining ring (4, Fig. 8-15).



Fig. 8-27 (N10870). Apply Loctite Onto The Bearings.

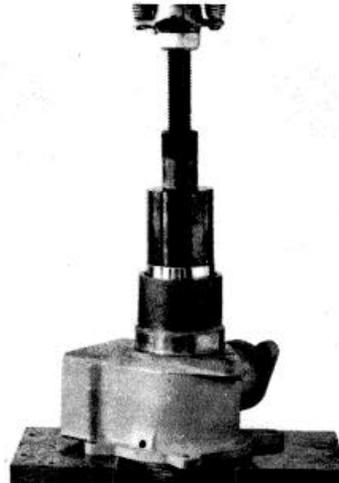


Fig. 8-28 (N10871). Install The Shaft Assembly Into The Housing.

5. Install the grease fitting. Make sure the grease fitting is clean. Install grease, through the fitting, into the housing until you can see the grease in the opposite pipe plug hole. You must use grease that meets the specifications of MIL-G-3545. Do not use grease that has sodium or soda soap thickeners.



Fig. 8-29 (N10872). Install The Seal Into The Housing

6. Support the water pump housing at the impeller side of the housing. Install the larger grease seal. Use the Part No. ST-1161 Seal Driver to install the seal, Fig. 8-29.
7. Install the idler pulley and bracket assembly to the water pump housing.
8. Support the water pump assembly at the impeller end of the shaft. Push the drive pulley (24, Fig. 8-15) onto the shaft until the pulley is against the bearing.
9. Support drive side of the housing. Apply a coat of Part No. 3375066 Locktite to the outside diameter of the brass part of the seal, Fig. 8-30. Use the Part No. 3375448 Mandrel to push the seal into the housing, Fig. 8-31.



Fig. 8-32 (UW102). Apply Loctite Between The Shaft And The Cup Seat.

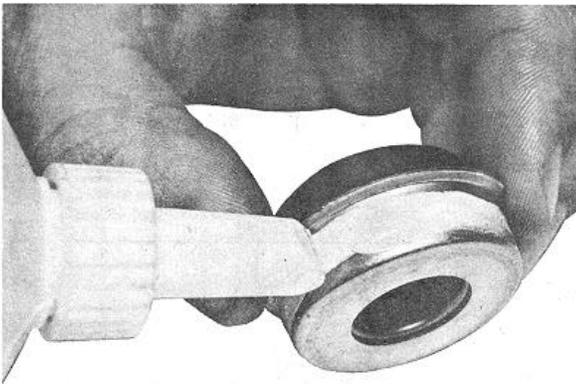


Fig. 8-30 (N10853). Apply Loctite Onto The Seal.

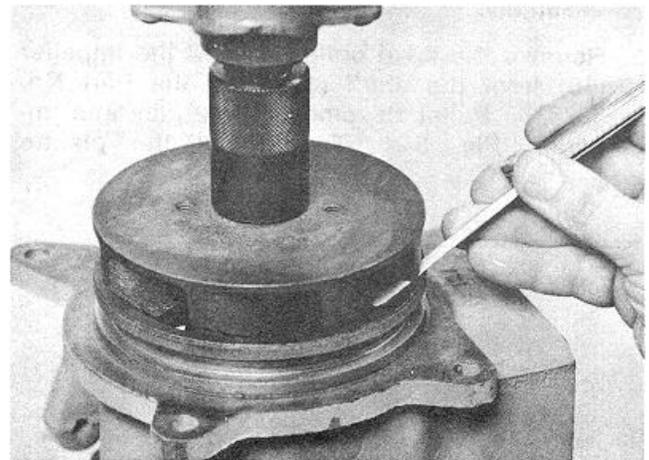


Fig. 8-33 (N10874). Measure The Clearance For The Impeller.



Fig. 8-31 (N10873). Install The Seal Into The Housing.

10. Install a new cup seat (14, Fig. 8-15) onto the shaft. Use the 3375448 to push the cup seat onto the shaft.
11. Apply one drop of Loctite 290 to the cup seat. Put the Loctite between the shaft and the cup seat as shown in Fig. 8-32.

Caution: Do not apply more than one drop of the Loctite 290. More than one drop will cause the seal and cup seat to become fastened together.

12. Support the water pump on the pulley end of the shaft. Push the impeller onto the shaft. The minimum clearance between the vanes of the impeller and the housing must not be less than 0.020 inch [0.51 mm]. The maximum

clearance must not be more than 0.040 inch [1.02 mm], Fig. 8-33.

Note: The minimum clearance for a plastic (Phenolic) impeller must not be less than 0.030 inch [0.76 mm]. The maximum clearance must not be more than 0.050 inch [1.27 mm].

13. Apply clean lubricating oil to a new O-ring (11, Fig. 8-15). Install the O-ring into the groove in the water pump housing (9). Install the housing (9) to the inlet housing (16). Do not damage the O-ring.

The FFC Water Pump

Disassembly

1. Remove the nut (19, Fig. 834) and the adjusting screw (16). Remove the idler pulley assembly.
2. Remove the drive pulley (2) and the impeller (18) from the shaft (10). Use the Part No. 3375265 Puller to remove the pulley and impeller, Fig. 8-35. To remove the plastic


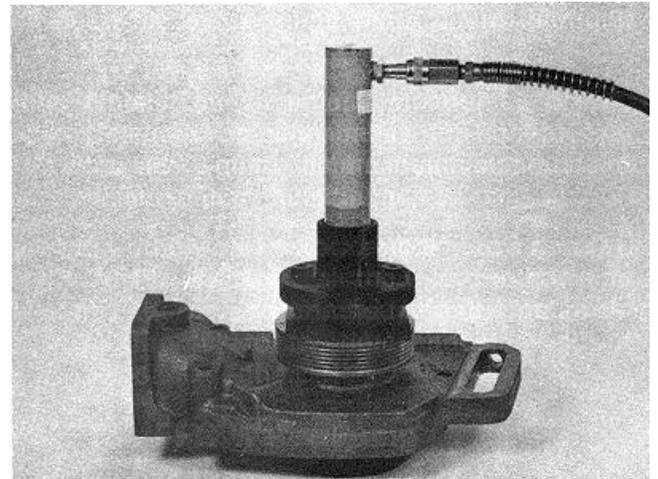


Fig. 8-35 (UW104). Remove The Pulley And Impeller.

- (phenolic) impeller that does not have puller holes:
- a. Remove the larger retaining ring that holds the bearing assembly and shaft in the housing.

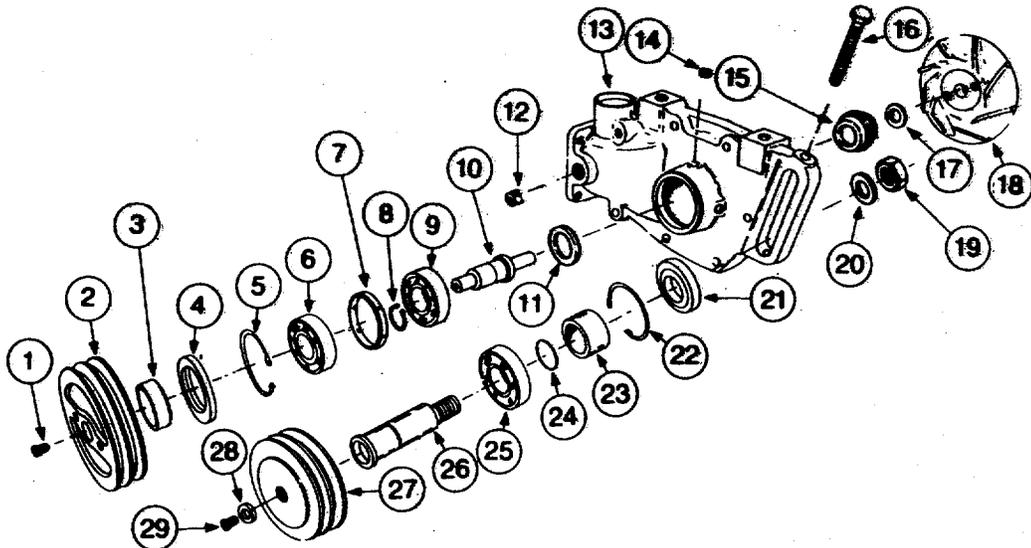

1 Pipe Plug	7 Spacer	13 water pump Housing	19 Nut	27 Ball Bearing
2 Pulley	8 Retaining Ring	14 Pipe Plug	20 Spacer	26 Idler Shaft
3 Wear Sleeve	9 Ball Bearing	15 Face Seal	21 Grease Seal	27 Idler Pulley
4 Grease Seal	10 Shaft	16 Adjusting Screw	22 Retaining Ring	28 Washer
5 Retaining Ring	11 Grease Seal	17 Cup Seat	23 Spacer	29 Capscrew
6 Ball Bearing	12 Pipe Plug	18 Impeller	24 O-Ring	

Fig 8-34 (N10875) (FFC) Water Pump - Exploded View

- b. Push on the shaft, from the impeller end, to remove the impeller.
3. Remove the grease seal (4, Fig. 8-34) from the housing (13). Use a pry bar to remove the seal, Fig. 8-36. Do not damage the bore.
4. Remove the larger retaining ring (5, Fig. 8-34) that holds the bearing and shaft in the housing.
5. Support the pulley side of the housing. Push on the impeller end of the shaft to remove the bearings and shaft from the housing.
6. Remove the cupseat (17, Fig. 8-34). Use a drift to push the grease seal (11) and face seal (15) from the housing as shown in Fig. 8-37. Discard the cupseat and seals.

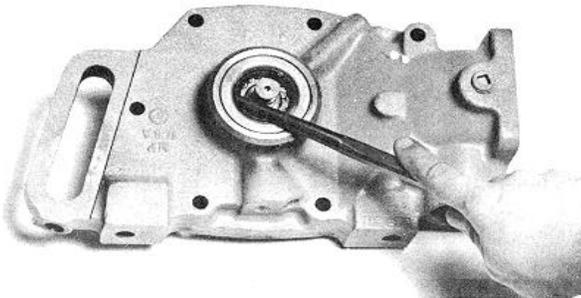


Fig. 8-36 (N10877). Remove The Seal From The Housing.

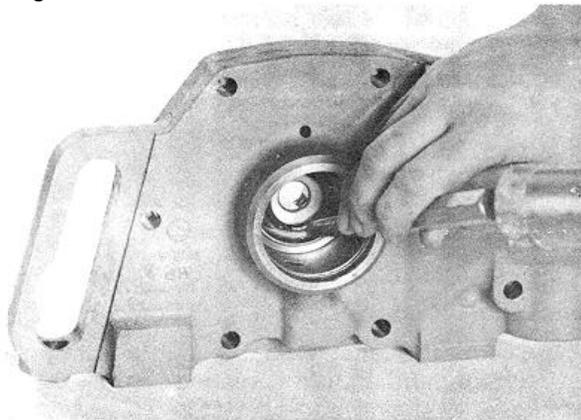


Fig. 8-37 (N10878). Remove The Seal From The Housing.

7. Use the Part No. ST-1114 Bearing Disassembly Fixture to support the outer bearing (6, Fig. 8-34) and spacer (7). Push the shaft from the bearing and spacer, Fig. 8-38.
8. Remove the retaining ring (8, Fig. 8-34). Use the ST-1114 to support the bearing (9). Push the shaft from the bearing.
9. Hold the spacer of the idler pulley assembly with a vise. The jaws of the vise must have copper plates to prevent damage to the spacer. Lightly hit the shaft with a plastic hammer to push the shaft from the spacer, Fig. 8-39.
10. Remove the oil seal (21, Fig. 8-34) from the

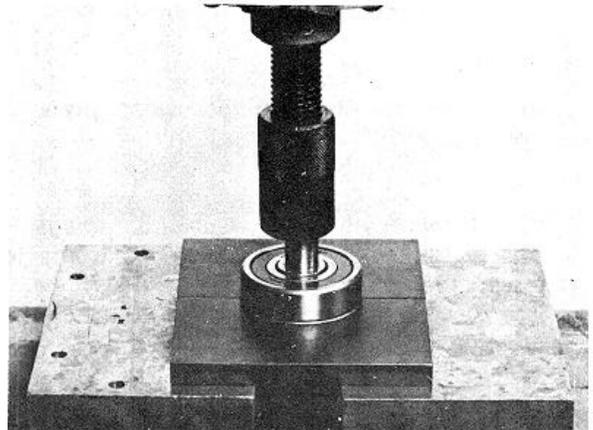


Fig. 8-38 (N10879). Remove The Shaft From The Bearing.

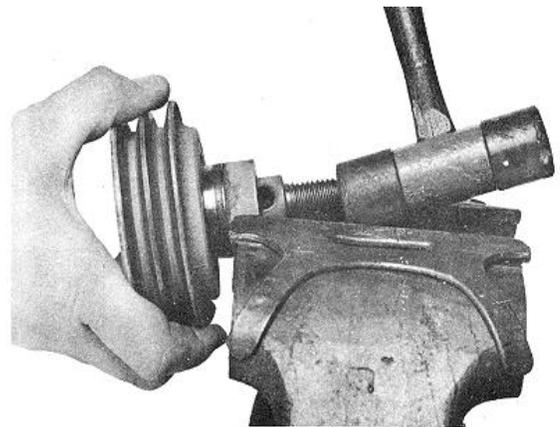


Fig. 8-39 (N10880). Remove The Pulley And Shaft From The Spacer.

pulley. Use the round end of a pry bar to remove the seal. Do not damage the bore for the seal.

11. Remove the retaining ring (22).
12. Remove and discard the O-ring (24).
13. Remove the bearing assembly from the pulley.
 - a. Remove the plug (29) from the pulley.
 - b. Hold the pulley in a vise.
 - c. Put the flat end of a punch through the plug hole. Lightly hit the punch with a plastic hammer to push the bearing assembly from the pulley, Fig. 8-40.
14. Use a press and a mandrel to push the shaft (26, Fig. 8-34) from the bearing (25).

Cleaning

Clean the parts with cleaning solvent. Dry with compressed air.

Inspection

1. Check the bearings for wear and damage. If the bearing races are damaged, be sure to check the outside diameter of the shafts and the bearing bores for damage. Discard the bearings after inspection.
2. Check the impeller for cracks, corrosion or damage.
3. Measure the bore in the impeller. Measure the outside diameter of the shaft at the impeller end of the shaft. There must be at least 0.001 inch [0.03 mm] press-fit between the impeller bore and outside diameter of the shaft.
4. Check the wear sleeve of the drive pulley for wear or damage. Remove the wear sleeve if it is worn or damaged.
 - a. Use a chisel as shown in Fig. 8-41 to cut a groove into the wear sleeve.
 - b. Use a chisel to push the sleeve from the pulley, Fig. 8-42.
 - c. Use the Part No. ST-1159 Wear Sleeve Driver to install the new wear sleeve.
5. Check the pulley grooves for wear or damage.

Note: A new belt, pushed down into the groove, must protrude 1/16 to 1/18 inch [0.06 to 0.13 mm]

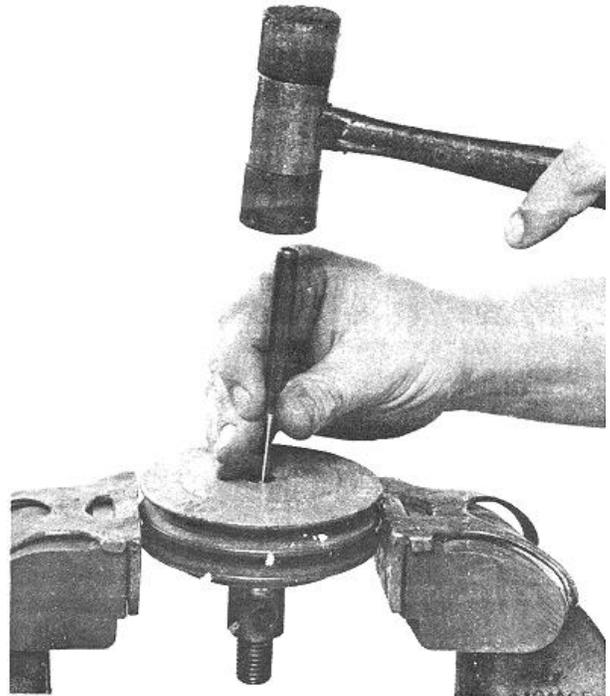


Fig. 8-40 (N10881). Remove The Bearing Assembly From The Pulley.

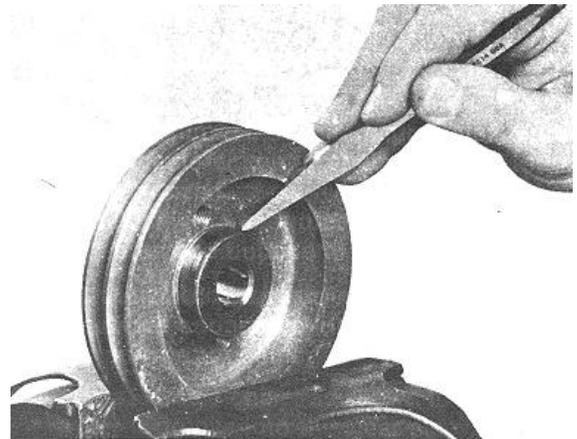


Fig. 8-41 (N10882). Cut The Wear Sleeve.

above the outside diameter of the pulley. The belt must not touch the bottom of the groove.

6. Check the shafts to make sure they are straight and are not damaged.
7. Measure the bore in the drive pulley and idler pulley. Measure the outside diameters, at the

pulley end, of the water pump and idler shafts. There must be at least 0.001 inch [0.03 mm] press fit between the pulley bores and outside diameter of the shafts.

8. Check the water pump housing for damage. Measure the housing bore, Fig. 8-43. Discard the housing if the bearing bore is larger than 2.4494 inches [62.215 mm]. Make sure the weep hole in the housing is open.

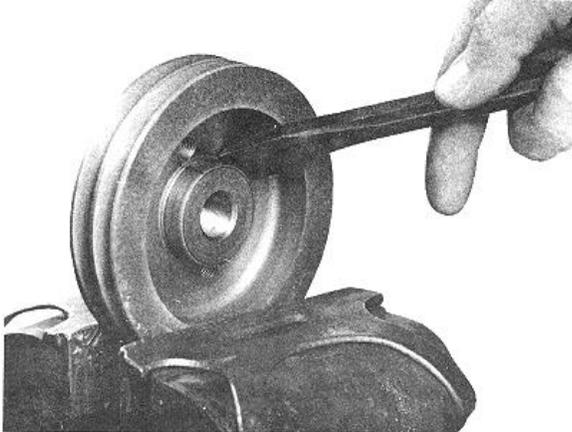


Fig. 8-42 (N10883). Remove The Wear Sleeve From The Pulley.

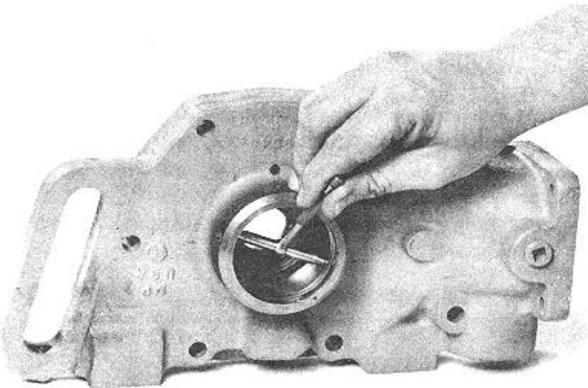


Fig. 8-43 (N10884). Measure The Bore In The Housing.

Assembly

1. Apply a thin coat of clean lubricating oil to the outside diameters of the idler shaft. Install a new bearing onto the shaft. Use the Part No. ST-658 Mandrel to support the bearing, Fig. 8-44.

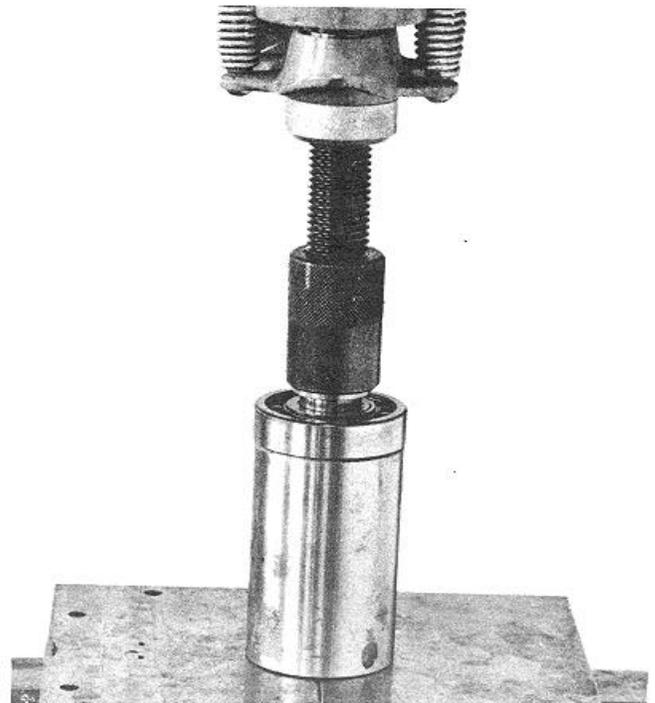


Fig. 8-44 (N10855). Install The Bearing Onto The Shaft.

2. Apply a light coat of Loctite 601 to outside diameter of the bearing. Use a press to push the bearing and shaft into the pulley until the bearing is against the bottom of the bore.
3. Install the retaining ring with the flat side next to the bearing.
4. Install a clean grease fitting into the plug hole in the pulley. Install grease, through the fitting, into the pulley until you can see the grease through the bearing. Remove the fitting and install the plug.
5. Install a new grease seal, with the lip of the seal toward the pulley, into the pulley bore.
6. Apply a light coat of clean lubricating oil to a new O-ring. Install the O-ring into the groove on the shaft.
7. Install the spacer on the shaft. Push the spacer over the O-ring until the spacer is against the bearing, Fig. 8-45.
8. Install the idler pulley assembly to the water pump housing.
9. Support the impeller side of the water pump housing. Put the rear grease seal (11, Fig.

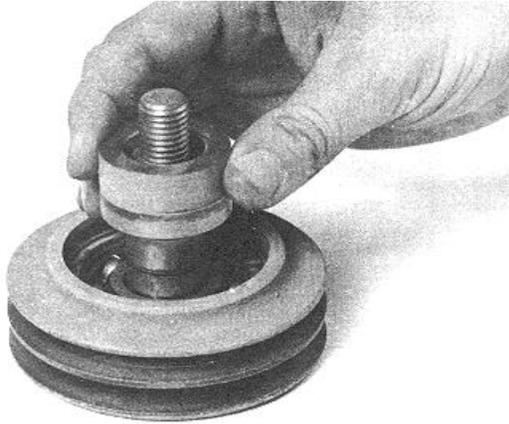


Fig. 8-45 (N10886). Install The Spacer Onto The Idler Shaft.

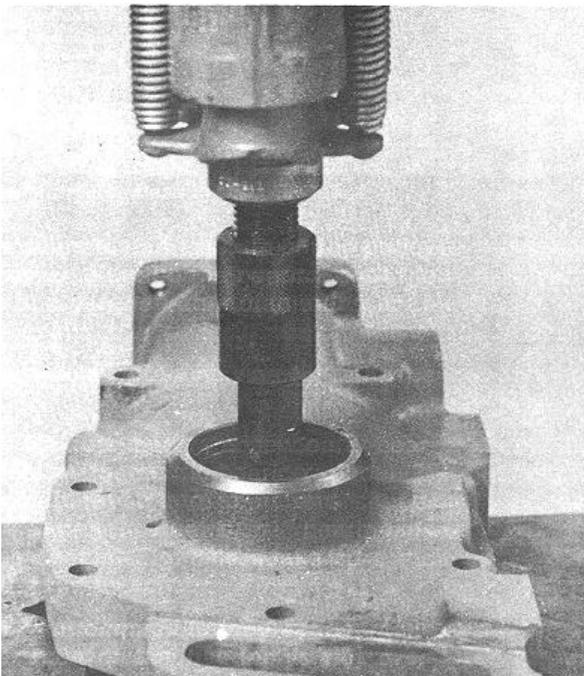


Fig. 8-46 (N10887). Install The Seal Into The Housing.

8-34) onto the Part No. ST-1191 Seal Driver. Make sure the lip of the seal is toward the driver. Push the seal into the bore of the housing until the seal is at the bottom of the bore, Fig. 8-46.

10. Apply a light coat of clean lubricating oil to the shaft (10, Fig. 8-34). Use the ST-658 to sup-

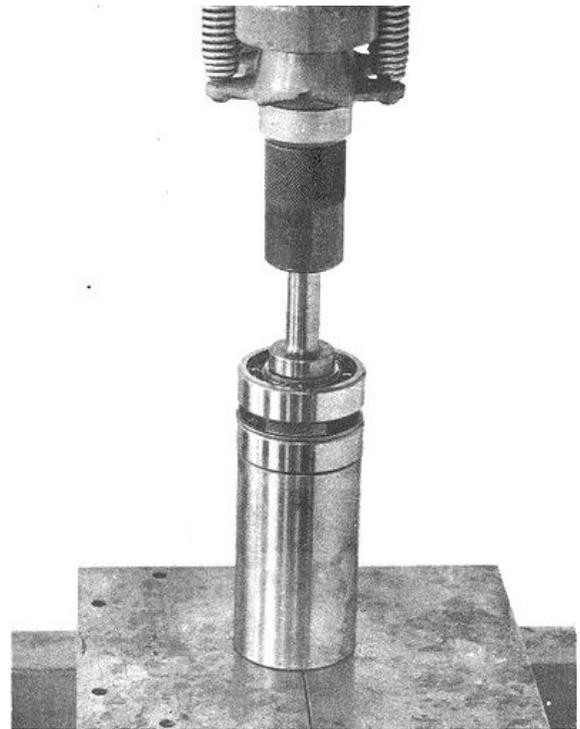


Fig. 8-47 (N10888). Install The Bearing Onto The Shaft.

port the new inner bearing (9). Push the pulley end of the shaft through the bearing until the bearing is against the larger diameter (shoulder) of the shaft.

11. Install the smaller retaining ring (8) onto the shaft.
12. Use the ST-658 to support the new outer bearing (6, Fig. 8-34). Install the bearing spacer (7) onto the shaft. Push the shaft and spacer through the bearing until the bearing is against the spacer, Fig. 8-47. Make sure the bearings turn freely.

Caution: To prevent damage to the bearing, make sure the inner race of the bearing is not over-loaded from contact with the spacer.

13. Apply a thin coat of Loctite 601 to the outside diameter of the bearings. Install the Part No. 3375180 Oil Seal Pilot to the impeller end of the shaft, Fig. 8-48. Install the bearing and shaft assembly into the bore of the housing. Use the ST-658 to push the bearing and shaft into the housing. Remove the 3375180 pilot.
14. Install the larger retaining ring, with the flat



Fig. 8-48 (N10889). Install The Pilot For The Oil Seal Onto The Shaft.

side toward the bearing, into the groove in the housing.

15. Install a clean grease fitting into the housing. Install grease into the housing, through the fitting, until you can see the grease through the outer bearing (6, Fig. 8-34). You must use grease that meets the specifications of MIL- G-3545. Do not use grease that has thickeners of sodium or soda soap.

Caution: Do not install too much grease. This can cause damage to the bearings.

16. Install the front grease seal (4, Fig. 8-34) into the water pump housing. The lip of the seal must be toward the bearing. The seal must be installed so it is even with the top edge of the bore. Use the Part No. ST-1191 Seal Driver to install the seal, Fig. 8-49.

17. Turn the water pump housing over and support the drive side of the housing. Apply a coat of Part No. 3375066 Loctite to the brass part of the seal outside diameter, Fig. 8-50. Use the Part No. 3375448 Mandrel to install the new seal into the housing.

18. Install the new cup seat (17, Fig. 8-34). Use the 3375448 to install the cupseat, Fig. 8-51.

19. Apply one drop of Loctite 290 to the cup seat. Put the drop of Loctite between the shaft and cup seat, Fig. 8-52.

Caution: Do not apply more than one drop of Loctite. More than one drop will cause the seal and cup seat to become fastened together.

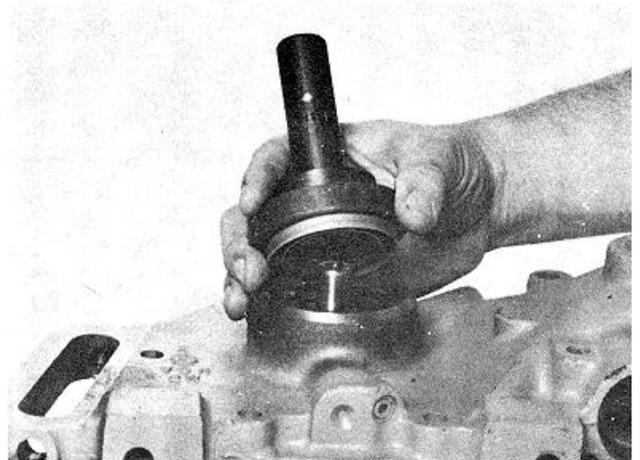


Fig. 8-49 (N10890). Install The Seal Into The Housing.

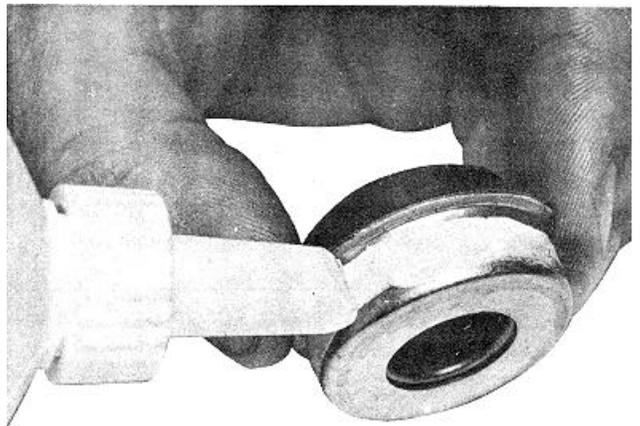


Fig. 8-50 (N10853). Apply Loctite Onto The Seal.

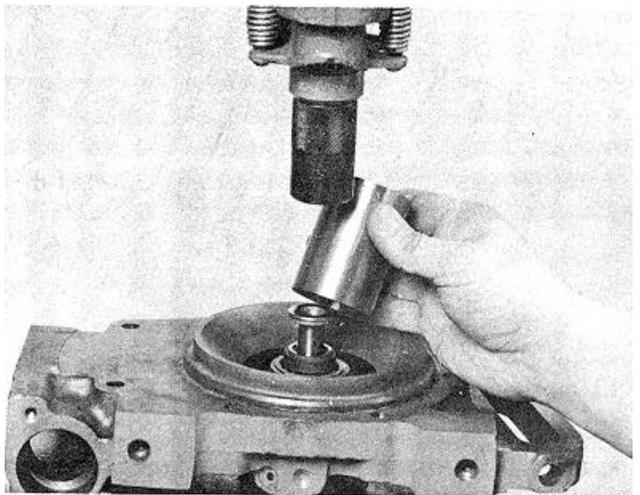


Fig. 8-51 (N10891). Install The Cup Seat.



Fig. 8-52 (UW102). Apply Loctite Between The Shaft And The Cup Seat.

20. Remove the grease fitting from the housing. Install the pipe plugs in the housing.
21. Apply a light coat of Loctite 601 to the bore in the drive pulley. Push the water pump shaft into the bore until the pulley is against the larger diameter (shoulder) of the shaft.

22. Apply a light coat of Loctite 601 to the bore in the impeller. Support the pulley end of the shaft. Push the impeller onto the shaft. The clearance between the vanes of the cast iron impeller and the housing must be 0.020 to 0.040 in [0.51 mm to 1.02 mm]. The clearance for the phenolic impeller must be 0.030 to 0.050 inch [0.76 mm to 1.27 mm].

The Fan


Check the fan blades to make sure they are not bent, cracked or have any other damage. Replace the fan if it has any damage.

Warning: Do not try to make any repairs to the fan.

Use steam to clean the fan. Dry with compressed air.

The Fan Hub

**Fan Hub with "Step-bore"
(without bearing spacer)**

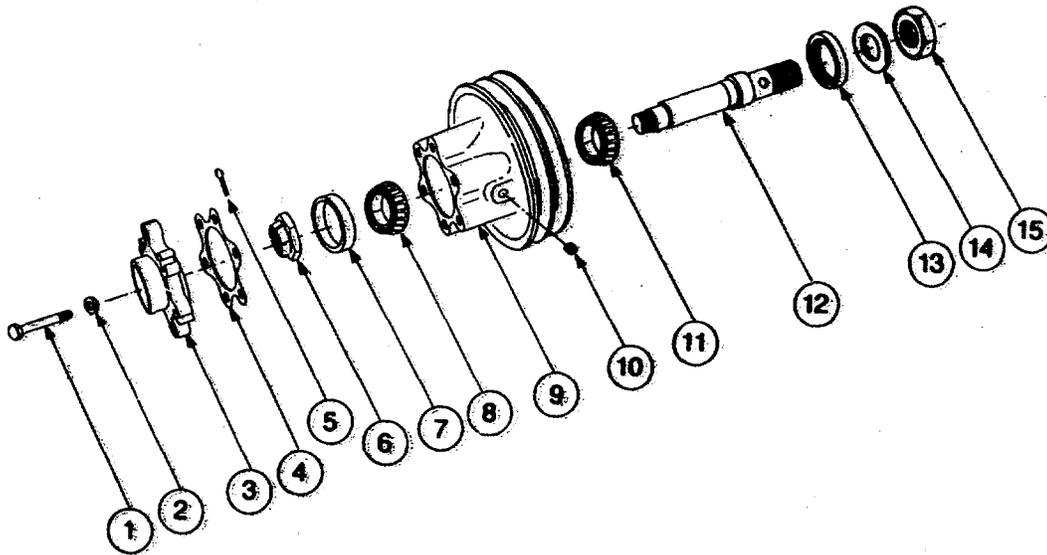

- | | | | |
|--------------|------------------|-------------------|-----------|
| 1 Capscrew | 5 Cotter Pin | 9 Pulley Hub | 13 Seal |
| 2 Lockwasher | 6 Slotted Nut | 10 Pipe Plug | 14 Washer |
| 3 Spacer | 7 Washer | 11 Roller Bearing | 15 Nut |
| 4 Gasket | 8 Roller Bearing | 12 Shaft | |

Fig. 8-53 (N10895). Fan Hub Assembly - Exploded View

Disassembly

1. Remove the pipe plugs, fan spacer (3, Fig. 8-53) and gaskets (4).
2. Remove the cotter pin (5), locknut (6) and washer (7) from the shaft (12).
3. Support the fan hub (9) with smaller end of the shaft up. Push the shaft from the hub.
4. Push the bearings (8 and 11) and oil seal (13) from the shaft.
5. Remove the bearing races from the shaft.

Cleaning

Use cleaning solvent to clean the parts. Dry with compressed air.

Inspection

1. Check the shaft for damage or wear.
2. Check the fan hub and fan spacer for cracks.
3. Check the pulley grooves in the fan hub for wear or damage.

Note: A new belt, when pushed down into the groove, must protrude 1/16 to 1/8 inch [0.06 to 0.13 mm] above the outside diameter of the pulley. The belt must not touch the bottom of the groove.

Replacement

Replace the shaft if it is damaged or worn. Replace the fan hub or fan spacer if cracked or damaged.

Assembly

Note: Apply grease to the bearings, before installation, when they are installed into a fan hub that does not use a grease seal with a lip.

1. Install the outer races for the bearings (8 and 11, Fig. 8-53) into the fan hub (9). Push the outer race, with the cupped side up, into the hub until the race is against the smaller diameter of the bore.
2. Lubricate the rear bearing (11) with grease. Install the bearing into the outer race. Push the seal (13) into the bore. The seal must be installed so it is even with the edge of the pulley bore or, not more than 0.020 inch [0.51 mm]

below the edge. Make sure the top of the seal is toward the bearing.

3. Apply a coat of clean lubricating oil to the inside diameter of the seal. Slide the shaft (12) through the seal and bearing.
4. Lubricate the front bearing (8) with grease. Install the bearing into the outer race. Install the washer (7) and locknut (6) to the shaft.
5. Slowly rotate the fan hub while you tighten the locknut. Tighten the locknut until you can feel light friction against the fan hub.

Note: The hub must be rotated while the nut is being tightened to make sure the bearing is in the correct position.

6. Loosen the locknut only enough to install the cotter pin. Do not bend the cotter pin at this time. If a "huglock" nut is used, loosen the nut approximately 30 degrees.
7. Check the end movement (end clearance of the fan hub). The clearance must be from 0.003 to 0.010 inch [0.08 to 0.25 mm]. If the end movement is more than 0.010 inch [0.25 mm], remove the cotter pin. Tighten the locknut to the next position that will let the cotter pin go through the locknut and shaft. If the end movement is less than 0.003 inch [0.08 mm], support the fan hub. Loosen the locknut one turn. Use an arbor press to push against the locknut end of the shaft. The force against the shaft must not be more than the force required to push a bearing onto a shaft. Repeat steps 5 and 6. Check the end movement of the hub. Bend the cotter pin so it will stay in position.
8. Install a clean grease fitting into the fan hub. Install grease through the fitting until the fan hub cavity is 60 to 70 percent full. Use grease that meets the specifications of MIL-G-3545. Do not use grease that has sodium or soda soap thickeners.
9. Remove the grease fitting. Install the pipe plugs. Tighten the pipe plugs to 5 to 7 ft.-lbs. [7 to 9 Nom] torque.
10. Apply 0.2 to 0.3 oz. [6 to 9 g] of grease to the outer bearing (8, Fig. 8-53). Install a new gasket (4) and the fan spacer (3).

**Fan Hub with "Through-bore"
(with bearing spacer)**

Disassembly

1. Remove the grease fitting (6, Fig. 8-54) and relief fitting (7) from the fan hub (8).
2. Remove the fan spacer (1) and locknut (2).
3. Remove the fan hub from the shaft (12).
4. Remove the front bearing (3) and spacers (4 and 5).
5. Remove the grease seal (11) and the rear bearing (10).
6. To remove the outer races for the bearings (3 and 10), hold a flat punch against the back side of the race. Hit the punch with a hammer until the race is loosened from the bore. Remove the races. Remove the retaining ring (9) from the bore.

Cleaning

Clean the parts with leaning solvent. Dry with compressed air.

Inspection

1. Check the shaft for damage or wear. Replace the shaft if it is damaged or worn.
2. Check the fan hub and fan spacer for damage.
3. Check the pulley grooves in the fan hub for wear or damage.


Note: A new belt, when pushed down into the groove, must protrude 1/16 to 1/8 inch [0.06 to 0.13 mm] above the outside diameter of the pulley. The belt must not touch the bottom of the groove.

Replacement

Replace the fan hub or fan spacer if cracked or damaged.

Assembly

1. Install the new retaining ring (9, Fig. 8-54) into the groove in the fan hub bore.
2. Install the outer race of the bearing (10) into the fan bracket end of the fan hub. Push the race into the bore until the race is against the retaining ring.

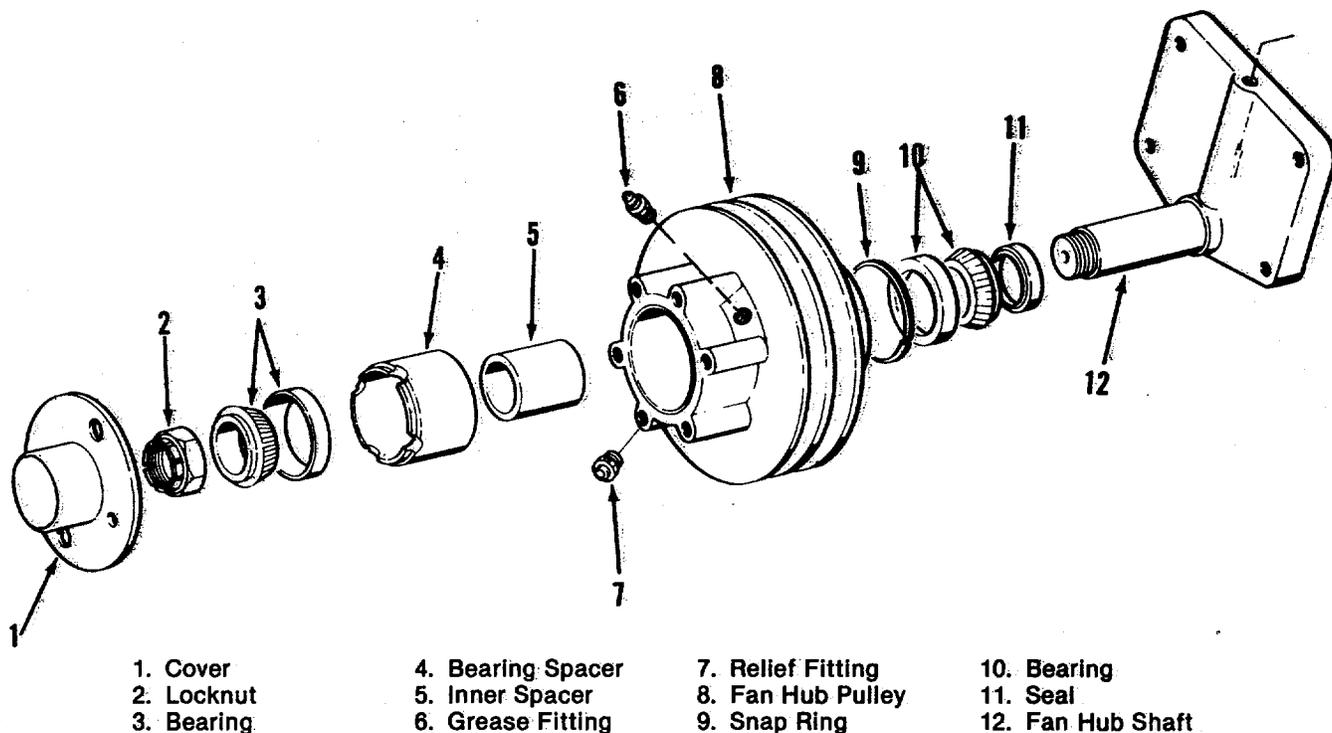

3. Install the bearing spacer (4) into the fan hub. Install the spacer from the fan spacer end of the hub. Make sure the holes in the spacer are in alignment with the grease holes in the hub.
4. Install the outer race of the bearing (3) into the fan spacer end of the fan hub. Push the race into the bore until the race is against the bearing spacer. Do not damage the retaining ring when you push the race against the spacer.
5. Lubricate the rear bearing (10) with grease. Install the bearing into the outer race. Push the seal (11) into the bore. The seal must be installed so it is even with the edge of the bore or, not more than 0.020 inch [0.51 mm] below the edge. Make sure the lip of the seal is toward the bearing.
6. Apply a coat of clean lubricating oil to the inside diameter of the seal. Slide the shaft (12) through the seal and bearing.
7. Install the inner spacer (5) into the fan spacer end of the fan hub. Slide the spacer over the shaft and into the outer spacer (4).
8. Lubricate the front bearing (3) with grease. Install the bearing into the outer race.
9. Install the washer and locknut (2) to the shaft. Tighten the locknut to 145 to 155 ft.-lbs. [196 to 210 Nom] torque. Rotate the fan hub while tightening the locknut.
10. Check the end movement (end clearance) of the fan hub. The fan hub must rotate freely and the end clearance must not be less than 0.003 inch [0.08 mm] or more than 0.016 inch [0.41 mm].
 - a. If the end clearance is not correct, check the width of the bearings (3 and 10). The bearing width can be from 0.710 to 0.714 inch [18 to 18.1 mm]. If the bearing width is more than 0.714 inch [18 mm], remove material from the end of the bearing spacer (4) to adjust the end clearance. Remove material from the end of the spacer that does not have grease holes.
11. Fill the fan hub with grease until it is 60 to 70 percent full.
12. Install the pipe plugs. Tighten to 5 to 7 ft.-lbs. [7 to 10 N-m] torque.

The Thermostat and Housing

Never operate the engine without the thermostat. The thermostat helps control the temperature of the combustion chamber in the engine.

Disassembly

1. Remove the connection for the water outlet (7, Fig. 8-55) and the gasket (6).
2. Remove the front water manifold (1) and gasket (2).
3. Remove the thermostat (3) and seal (4) from the housing (5).

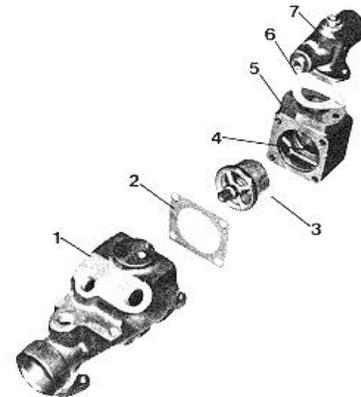


Fig. 8-55 (N10814). The Thermostat Housing And Seal.

Inspection

1. Check the connection, manifold and housing for corrosion, cracks or other damage.
2. Check the operation of the thermostat.
 - a. Check the body of the thermostat to find at what temperature the thermostat is in the open position.
 - b. Put the thermostat and a thermometer into a container of water. Use a device to hold the thermostat and thermometer so that they will not touch the container.
 - c. Heat the water. The thermostat must begin to open when the temperature of the water is at the same temperature marked on the body of the thermostat.
 - d. Continue to heat the water until the temperature is 15 ° to 20 F [8.3 ° to 11.1 °C]

more than the value marked on the thermostat. At this temperature, the thermostat must be fully opened. The thermostat is fully opened when there is at least a 0.375 in. [9.5 mm] space between the seal sleeve and the brass part of the thermostat.

Replacement

Replace the thermostat if it does not operate in the correct temperature range.

Assembly

1. Install the new seal (4, Fig. 8-55) into the thermostat housing (5). Use the Part No. ST-1225 Seal Mandrel to install the seal. Make sure the part number or metal side of the seal is against the mandrel when you install the seal.

Note: Make sure the seal is correctly installed. If the seal is not correctly installed, engine coolant can leak past the seal when the thermostat is in the closed position. This can cause the engine temperature to be colder than normal.

2. Install the thermostat into the housing. Slide the sleeve of the thermostat through the seal.

3. Install the front water manifold (1) and a new gasket (2) to the thermostat housing.
4. Install the water outlet connection (7) and a new gasket (6) to the thermostat housing.


The Raw Water or Sea Water Pump

Disassembly

1. Remove the pump drive gear or pulley. Use the Part No. 3375257 Puller to remove the gear or pulley. Remove the key (10, Fig. 8-56) from the shaft (9).
2. Remove the retaining ring (13). If the pump is driven by a belt, you must remove the rubber seal (14) before you can remove the retaining ring.
3. Remove the cover (1) and gasket (2). Remove the rubber plug (3) and the impeller (4).

Note: If the pump is to be installed in the original position. Take notice of the direction of the impeller blades. This will help you to correctly assemble the pump.

4. Push the shaft (9) from the pump housing (7).

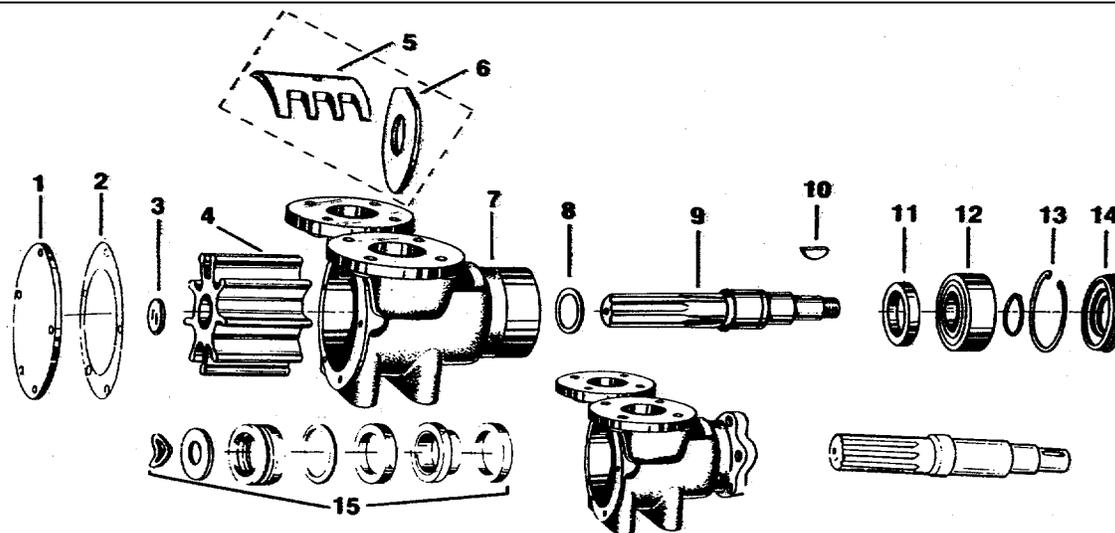

- | | | | |
|------------|-----------|-------------|------------------|
| 1 cover | 5 Cam | 9. Shaft | 13 Snap Ring |
| 2 Gasket | 6 Wear | 10 Key | 14 Rubber Seal |
| 3 Plug | 7 Housing | 11 Oil Seal | 15 Seal Assembly |
| 4 Impeller | 8 Slinger | 12 Bearing | |

Fig. 8-56 (N10806). Raw (Sea) Water Pump - Exploded View.

- Remove the slinger (8).
- 5. Remove the cam (5) and wear plate (6).
- 6. Remove the seal assembly (15).

Cleaning

Clean all parts with cleaning solvent. Dry with compressed air.

Inspection

- 1. Check the impeller for scratches, cracks or other damage.
- 2. Check the surfaces of the cam and wear plate. The surfaces must be smooth.
- 3. Check the shaft for wear and damage.
- 4. Check the housing for cracks or other damage.

Replacement

Replace any damaged parts.

Assembly

- 1. Apply lubricant to the shaft (9, Fig. 8-56). Push the bearing (12), with the part number up, onto the shaft. Push the bearing until it is against the larger diameter (shoulder) of the shaft.
- 2. Install the key (10) into the shaft.
- 3. Push the oil seal (11) into the drive side of the housing as shown in Fig. 8-57.

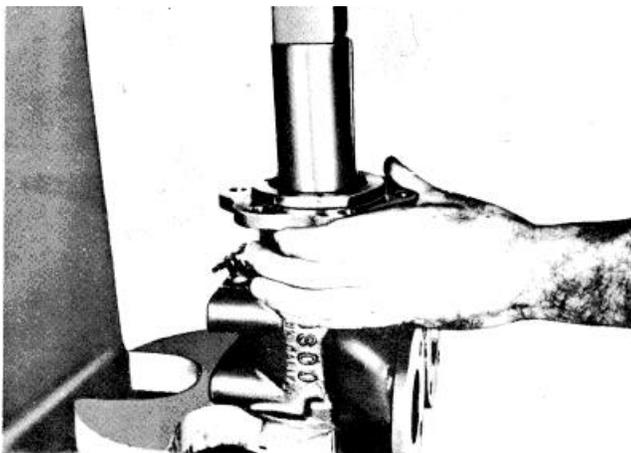


Fig. 8-57 (N20809). Install The Oil Seal Into The Housing.

Cooling System

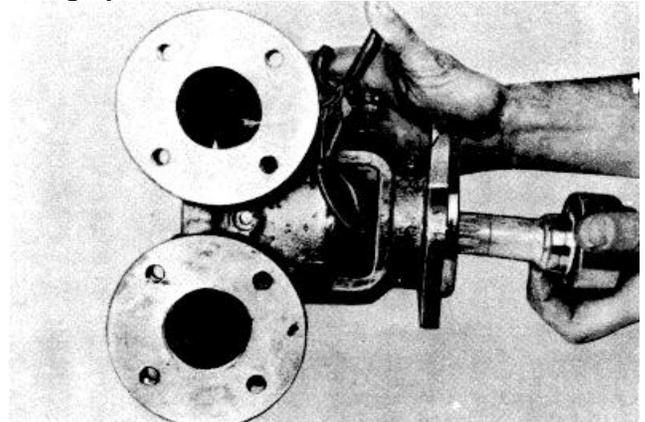


Fig. 8-58 (N20806). Install The Shaft Into The Housing.

- 4. Hold the rubber slinger (8) in the correct position in the housing. Install the shaft into the housing and through the slinger as shown in Fig. 8-58.
- 5. Push the bearing and shaft assembly into the bore in the housing. Make sure you push against the outer race of the bearing.
- 6. Install the retaining ring (13, Fig. 8-56).
- 7. Install the seal gasket, seat, carbon seal, O-ring, ferrule, washer and marcel washer (The Seal Assembly, 15, Fig. 8-56) onto the shaft and then into the housing bore.
- 8. Push the new oil seal into the housing bore. The lip of the seal must be toward the impeller.



Fig. 8-59 (N20807). Install The Cam And Wear Plate.

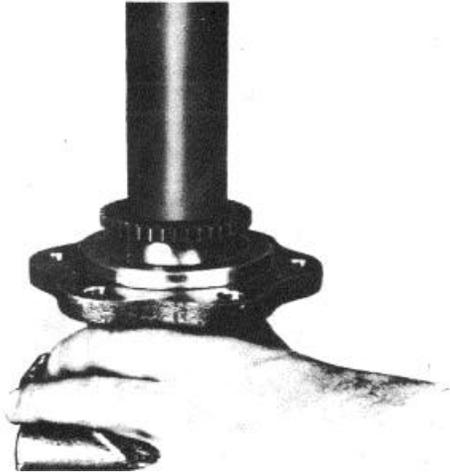


Fig. 8-60 (N20808). Install The Drive Gear Onto The Shaft.

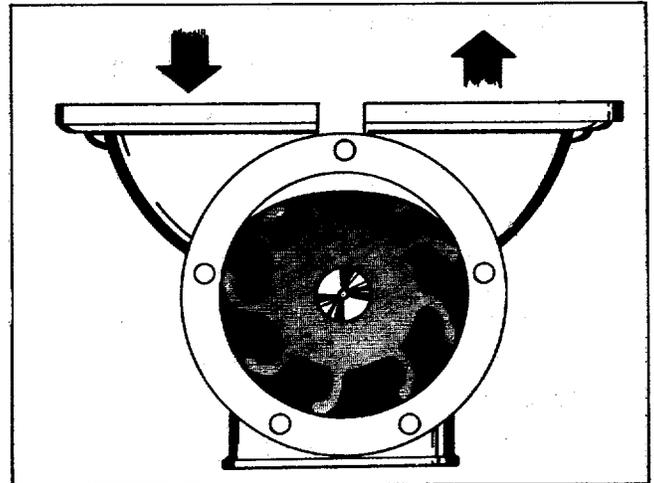


Fig. 8-62 (N20810). The Impeller Installed For Left Hand Rotation.

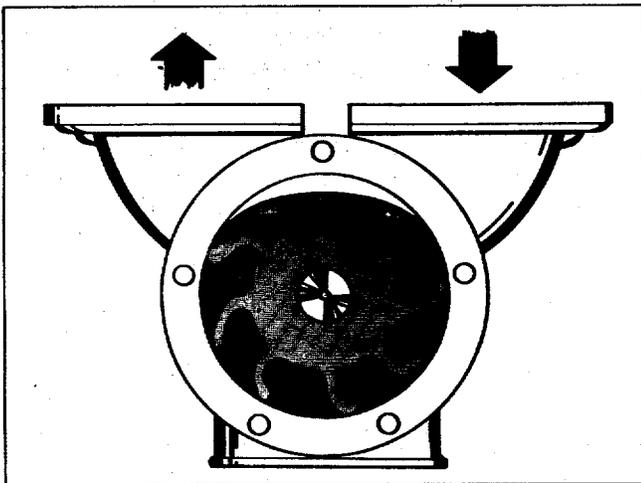


Fig. 8-62 (N20810). The Impeller Installed For Left Hand Rotation.

9. Install the cam (5) and wear plate (6) as shown in Fig. 8-59.
10. Use an over, to heat the drive gear to 200°F [93°C]. Support the impeller end of the shaft. Push the drive gear onto the shaft, Fig. 8-60.
11. Apply glycerine or soap to the edges of the impeller blades. Install the impeller. Install the rubber plug (3, Fig. 8-56).

Note: The direction of the water flow through the pump is controlled by the direction of the impeller blades. Make sure the impeller is installed correctly. Fig. 8-61 and Fig. 8-62 shows the direction of the water flow through the pump.

12. Install a new gasket (2, Fig. 8-56) and the cover(1).

Table 8-1: Specifications - Inch [mm] Eccentric and FFC Water Pump

Ref. No.	Dimension Locations	New Minimum	New Maximum	Worn Limit
	Housing Bearing Bores	2.4408 [61.996]	2.4414 [62.012]	2.4494 [62.215]
	Housing Bore	1.5000	1.5200	
	Carbon Face Seal	[38.100]	[38.608]	
1	Shaft Diameter Impeller End	0.6262 [15.905]	0.6267 [15.918]	
2	Shaft Diameter Seat Location	0.6262 [15.905]	0.6267 [15.918]	
3	Shaft Diameter Inner Bearing	0.9843 [25.001]	0.9847 [25.011]	
4	Shaft Diameter Outer Bearing	0.9843 [25.001]	0.9847 [25.011]	
5	Shaft Diameter Pulley End	0.6693 [17.000]	0.6696 [17.008]	
6	Impeller Bore	0.624 [15.85]	0.625 [15.881]	
	Impeller Vane to Body Clearance			
	(Cast Iron)	0.020 [0.51]	0.040 [1.02]	
	(Phenolic)	0.030 [0.76]	0.050 [1.27]	
	Pulley Bore Diameter	0.6663 [16.924]	0.6673 [16.949]	
	Minimum Press-Fit Between:			
	Shaft and Impeller	0.001 [0.03]		
	Shaft and Pulley	0.001 [0.03]		



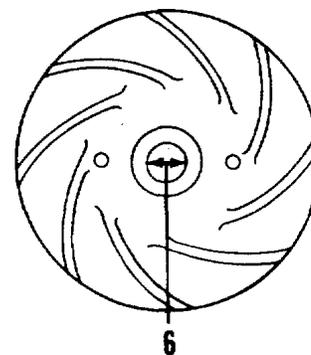


Table 8-1: Specifications - Inch [mm] Eccentric and FFC Water Pump


Ref. No.	Dimension Locations	New Minimum	New Maximum	Worn Limit
	Housing Bore Outer Bearing	2.8345 [71.996]	2.8351 [72.012]	2.8431 [72.215]
	Housing Bore Inner Bearing	2.0471 [51.996]	2.0477 [52.012]	2.0557 [52.2156]
	Housing Bore Carbon Face Seal	1.435 [36.45]	1.436 [36.47]	
	Housing Bore Outer Seal	2.9985 [76.162]	3.0015 [76.238]	
	Housing Bore Inner Seal	1.374 [34.90]	1.376 [34.95]	
1	Shaft Diameter Impeller End	0.6262 [15.905]	0.6267 [15.918]	
2	Shaft Diameter Seat Location	0.6262 [15.905]	0.6267 [15.918]	
3	Shaft Diameter Inner Seal	0.872 [22.15]	0.878 [22.30]	
4	Shaft Diameter Inner Bearing Surface	0.9842 [24.9991]	0.9846 [25.009]	
5	Shaft Diameter Outer Bearing Surface	1.1810 [29.997]	1.1814 [30.0081]	
6	Shaft Diameter Pulley End	1.1810 [29.9971]	1.1814 [30.008]	
7	Impeller Bore	0.624 [15.85]	-0.625 >[15.88]	
	Impeller Vane to Bore Clearance	0.020 to.51]	0.040 [1:02]	
	Pulley Bore	1.1787 [29.939]	1.1798 [29.967]	
	Wear Sleeve O.D. Outer Seal Surface	2.2540 [57.252]	2.2560 [57.302]	
Minimum Press-Fit Between:				
	Shaft :end Impeller	0;001 10.X3]		
	Shaft and Pulley	0D001 [0-2		

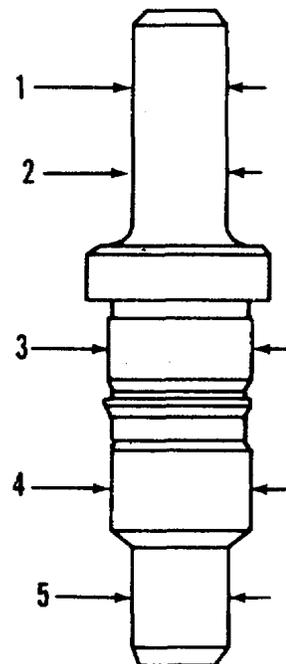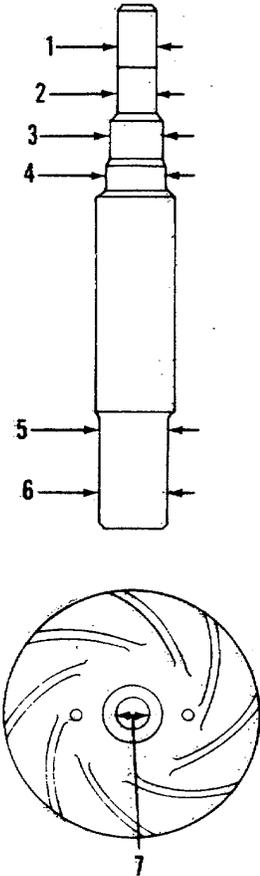

Group 9

The drive unit takes power from the crankshaft, through the camshaft gear, to actuate the fuel pump, air compressor and other assemblies.

Drive Units

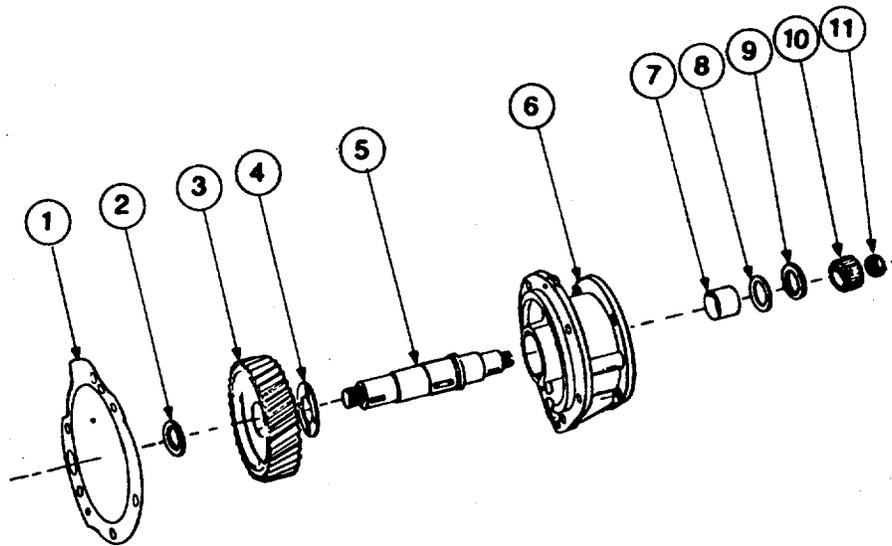

- | | | | |
|----------------|------------------|--------------------|--------------|
| 1. Gasket | 4. Thrust Washer | 7. Bushing | 10. Coupling |
| 2. Oil Slinger | 5. Shaft | 8. Thrust Washer | 11. Locknut |
| 3. Drive Gear | 6. Housing | 9. Clamping Washer | |

Fig. 9-1 (N10910). Fuel Pump Drive - Exploded View.

Service Tools (Or Equivalent) Required	
Service Tool Number	Tool Name
ST-1249	Puller
Standard Tools Required	
Arbor Press	Feeler Gauge Set
Grease Gun	0-1, 1-2, 2-3 Micrometers
Bearing Packer	Telescoping Gauges

General Information

Oil Seals

The surface of the seal must be free of damage. Before installing a new seal, always check the surface of the hub sleeve for wear and replace the sleeve if necessary.

The Bores in The Housing


The bearings or bushings must not turn in the housing retaining bore. If the old bearing has turned and ruined the housing, the housing must be discarded. The bore of the housing must be clean before you press the bearing in position.

Caution: LDL (Laydown Lip) TFE oil seals must be clean and dry when they are installed. Do not apply lubricating oil to the seal or shaft.

Thrust Washers

On accessory drive units the grooved side of the washer is installed away from housing. The steel backing against the cast iron housing will keep the thrust washers from turning. Incorrect installation of these washers will result in excessive wear and increased end play, which causes early failure of the accessory drive assembly.

Accessory Drive

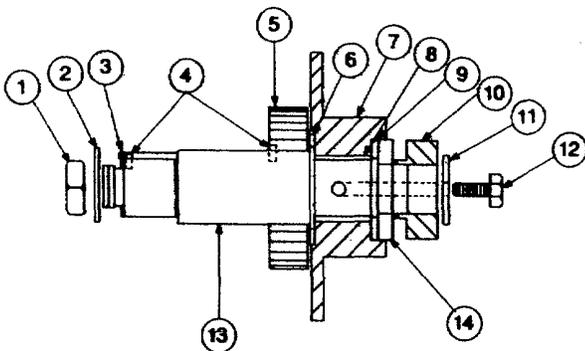

- | | |
|------------------|------------------|
| 1. Nut | 8. Bushing |
| 2. Washer | 9. Thrust Washer |
| 3. Seal | 10. Coupling |
| 4. Dowels | 11. Washer |
| 5. Gear | 12. Capscrews |
| 6. Thrust Washer | 13. Shaft |
| 7. Housing | 14. Washer |

Fig. 9-2 (N10911). Cross Section Of The Accessory Drive.

Disassembly

1. Remove the capscrew (12, Fig. 9-2) and washer (11) from the shaft. Install the capscrew (12) into the shaft after you have removed the washer.
2. Install the Part No. ST-1249 Coupling Puller onto the coupling (10). Remove the coupling.
3. Remove the washer (14).
4. Remove the thrust washers (6 and 9).
5. Remove the shaft and gear assembly (13 and 5) from the housing (7).
6. Remove the gear (5) from the shaft (13). Put the housing side of the gear onto a support and use a press to push the shaft from the gear. Remove the pulley key or pin from the shaft before you push the shaft from the gear.

Cleaning

Clean all the parts in an approved cleaning solvent and dry with compressed air.

Inspection

1. Check the bushing in the drive housing. If the bushing is worn larger than 1.321 remove and discard the bushing.
2. Check the shaft for wear distortion or damage. The outside diameter of shaft must not be worn less than 1.310 inch [33.27 mm].

Replacement

Replace the thrust washers if they are worn or damaged.

Assembly

1. Install the dowel or key into the shaft (13, Fig.9-2).
2. Install the gear (5) onto the shaft. Use a press to push the gear onto the shaft. Push the gear onto the shaft until the gear is against the shoulder on the shaft.
3. Apply a coat of lubricating oil to the thrust washer (6) and the bushing (8) in the housing.
4. Install the gear and shaft assembly through the thrust washer and into the bushing in the housing. The grooved side of the thrust washer must be away from the housing.
5. Turn the assembly over so that the gear on the shaft is down. Make sure that the thrust washer (6) remains in position.

6. Apply a coat of lubricating oil to the rear thrust washer (9). Install the thrust washer. The grooved side of the thrust washer must be away from the housing.
7. Install the clamping washer (14).
8. Install the coupling (10). Use a press to push the coupling onto the shaft. Do not damage the threads on the shaft.
9. Install the washer (11) and capscrew (12). Tighten the capscrew to 30 to 35 ft.-lbs. [41 to 47 N•m] torque.

Note: Check end clearance with unit assembled. It must be as listed in Table 9-1. The dowel pin shaft can be used to replace the 121940 and 199969 Accessory Drive Shafts.

Hydraulic Governor Drive

Disassembly

1. Remove the governor drive assembly, snap ring (11, Fig. 9-3), ball key and collar (13).
2. Press the shaft (12) opposite gear end to remove

3. all units from housing (14), separate drive gear (2) and support assembly from reservoir (21); then remove drain plug, dipstick, vent plug and elbow.
3. Remove the shaft locknut (22) and washer (23) from the drive shaft (31). Use the ST-1249 Puller to remove the coupling (24). Lift the key out (30). Remove the spacer (25) and governor drive gear (26).
4. Press the small end of the shaft to remove the shaft from the support (3) and the large end of the shaft to remove the drive gear (2). Remove keys (32) from the shaft keyway and snap ring (27) from the support. Invert support and press out rear bearing (28) and oil seal (29).

Inspection

1. Check bearing for worn race or rough action, gears for chipped or broken teeth or uneven wear and governor shaft housing oil holes to make certain they are open.
2. Inspect support and reservoir for cracks, breaks or rough mating surfaces.

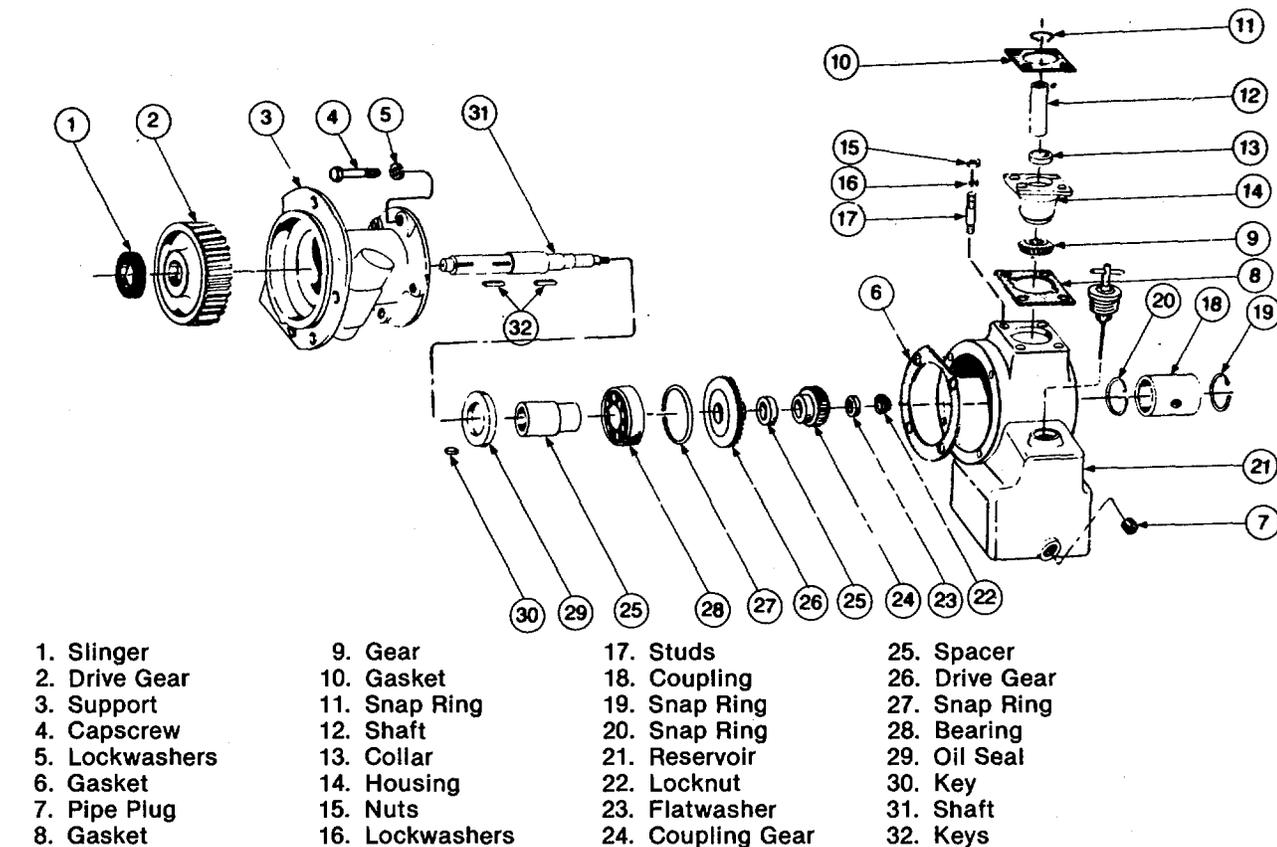


Fig. 9-3 (N10912). Fuel Pump, Hydraulic Governor Drive (Woodward Governor).

Replacement

Replace all damaged parts.

Assembly

1. Lubricate outside of oil seal (29, Fig. 9-3) and press into support from large end. Open end of seal must be down. Lubricate rear bearing (28) and press into support. Insert snap ring (27), flat side down.
2. Lubricate shaft (31) and place key (32) in shaft. Press shaft into flat side of gear (2) until shoulder seats on gear face.
3. Press small end of shaft assembly into large end of support. Press governor drive gear (26) onto shaft until it bottoms on bearing.
4. Insert key (30) and press on coupling (24). Shoulder of coupling goes against gear unless a spacer (25) is used. Install flatwasher (23) and shaft locknut (22).
5. Position reservoir (21) in vise with governor drive studs (17) up. Install dipstick, vent plug, weatherhead fitting and drain plug.
6. On governors with 2:1 gear ratio:
 - a. Install shaft (12) in housing (14) with splined end up. Drop collar (13) into housing.
 - b. Lubricate ball key and insert in drive shaft: install snap ring (11). Line up ball key with collar (13). Invert assembly and press on gear (9). Allow end clearance of 0.003 to 0.006 inch [0.08 to 0.15 mm].
7. On governor with 3:1 gear ratio:
 - a. Press governor two-piece drive shaft (12) into washer flush with bottom side. Note relief in washer to start shaft.
 - b. Press shaft assembly into cylinder until shoulder on shaft is flush with end of cylinder. Slide this assembly into governor

- drive housing so flatwasher rests on bronze bushing.
- c. Invert assembly and install ball key, collared washer (13) and snap ring (11). Press on end of cylinder until flatwasher is against bronze bushing.
 - d. Press gear into position allowing end clearance of 0.003 to 0.006 inch [0.08 to 0.15 mm].
8. Place gaskets (8) and install drive gear and housing assembly to serial number side of reservoir. Large oil hole in housing must be at top. Install slinger (1) over gear end of shaft.

Drive Pulleys

Inspection

1. Check for cracks and chips in hub, web and groove areas.
2. Check for wear in grooves and oil seal sleeve.
3. On two-piece pulleys, check for stripped or distorted threads on sheave and in capscrew holes.
4. Clean in an approved cleaning solvent and dry with moisture free compressed air.

Replacement

Replace all parts that are damaged.


Repair

If wear on sleeve is visible:

1. Remove worn oil sleeve by splitting with chisel. Do not damage pulley hub.
2. Press new sleeve onto pulley hub with mandrel, until it is flush to 0.015 inch [0.38 mm] below face of hub. Consult latest Parts Catalog for correct pulley/sleeve combination.

Table 9-1: Drive Unit Specifications - Inch [mm]

Ref. No.	Measurement	Worn Limit	New Minimum	New Maximum
1.	Shaft			
	Outside Diameter (Bushing Location)	1.310 [33.27]	1.3115 [33.312]	1.312 [33.32]
	Bushing			
	Inside Diameter	1.321 [33.55]	1.316 [33.43]	1.319 [33.50]
	Outside Diameter		1.449 [36.80]	1.450 [36.83]
	Out-of-Round	0.002 [0.05]		
	Press-Fit Between Housing and Bushing		0.002 [0.05]	0.0045 [0.11]
	Accessory Drive			
	End Clearance NHINT		0.002 [0.05]	0.012 [0.26]
	End Clearance NTA		0.004 [0.10]	0.024 [0.61]
	Hydraulic Governor Drive			
	End Clearance		0.003 [0.08]	0.006 [0.15]

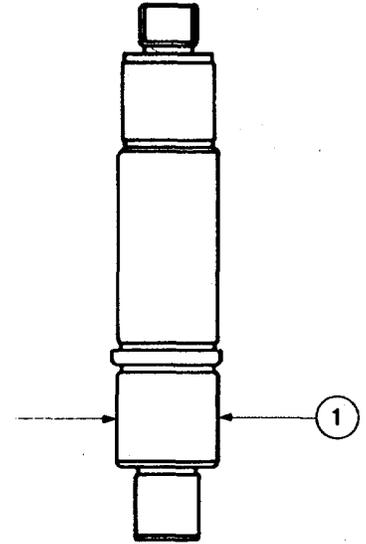

Group 10

connections and aftercoolers. The information about cold starting and air cleaners is found in the Operation and Maintenance Manuals. The information about the turbochargers is found in the Turbocharger Component Shop Manual.

The air intake section includes intake manifolds,

Air Intake System

The Intake Manifold and Connection

Cleaning

Clean the intake manifold and the connection with steam.

Inspection

Check for cracks, distortions and damaged threads.

Repair

Threads which are damaged can be repaired by installing Heli-coils.

The Aftercooler

Disassembly

1. Remove the water inlet and water outlet connections. Discard the gaskets.
2. Remove the element cover and the element from the housing. Discard the gaskets.
3. Remove and discard the O-rings from the element.

Cleaning

1. Clean the element cover and housing with steam.
2. Use a solvent that will not damage copper to clean the element. Dry with compressed air.

Note: The aftercooler elements generally are taken to a qualified radiator repair shop to be cleaned, tested and repaired.

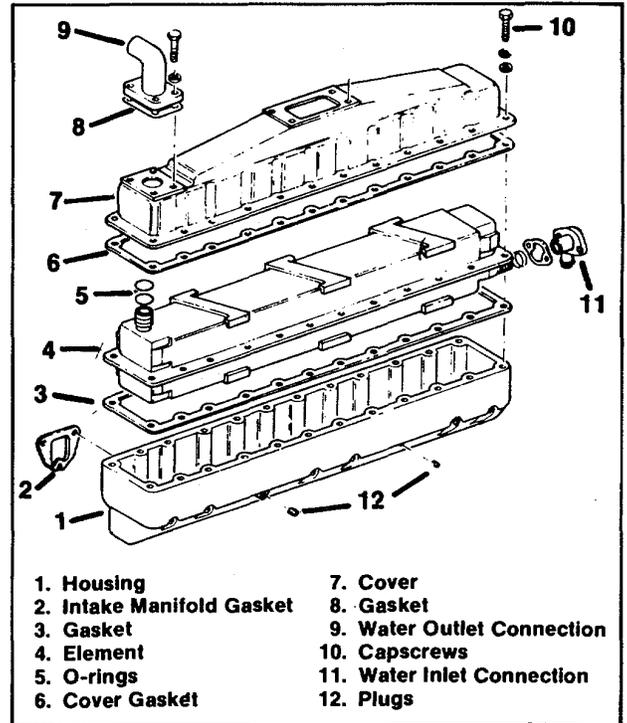


Fig. 10-1 (N10898). Aftercooler - Exploded View.

Assembly

1. Put the aftercooler housing (1, Fig. 10-1) on a workbench. Hold the housing so that it will be in the same position as it is on the engine.
2. Put the gasket (3) on the housing. Apply clean lubricating oil to the new O-rings. Install the O-rings onto the water inlet and outlet fittings of the element (4). Fit the element into the housing.
3. Install the water inlet connection (11) and new

gasket onto the inlet fitting of the element. Do not damage the O-rings. Use your fingers to tighten the capscrews that hold the connection to the housing.

4. Install the gasket (6) into the mounting flange of the element. Make sure the capscrew holes in the gaskets, element and housing are in alignment. Install the cover (7) but do not tighten the capscrews to the correct torque at this time.
5. Install the water outlet connection (9) and new gasket to the cover. Install the capscrews and -copper washers. Use your fingers to tighten the capscrews.

Caution: Make sure the O-rings are in the correct position and are not damaged.

6. Tighten the capscrews that fasten the cover (7) to the element (4) and housing (1). Do not tighten the capscrews to the correct torque value at this time.
7. Tighten the capscrews that fasten the water inlet connection (11) to the housing. Tighten the capscrews to 27 to 32 ft.-lbs. [37 to 43 N•m] torque.
8. Tighten the capscrews that fasten the cover to the housing, to 25 ft.-lbs. [34 N•m] torque. Tighten the center capscrews first. Then, tighten the capscrews, moving from one side of the cover to the other side. Work from the center toward each end of the cover.
9. Tighten the capscrews for the water outlet connection (9) to 15 to 20 ft.-lbs. [21 to 27 N•m] torque.

Assembly (Cross-bolt Design Aftercooler)

1. Put the aftercooler housing (10, Fig. 10-2) on a workbench. Hold the housing so that it will be in the same position as it is on the engine.
2. Apply clean lubricating oil to the new O-rings (2). Install the O-rings to the inlet and outlet fittings of the element (1). Install the element into the housing.

Note: The element has a precision fit in the housing. Move the element carefully as you install it into the housing. Check the clearance between the element and housing. Hold the element against one side of the

housing to check the

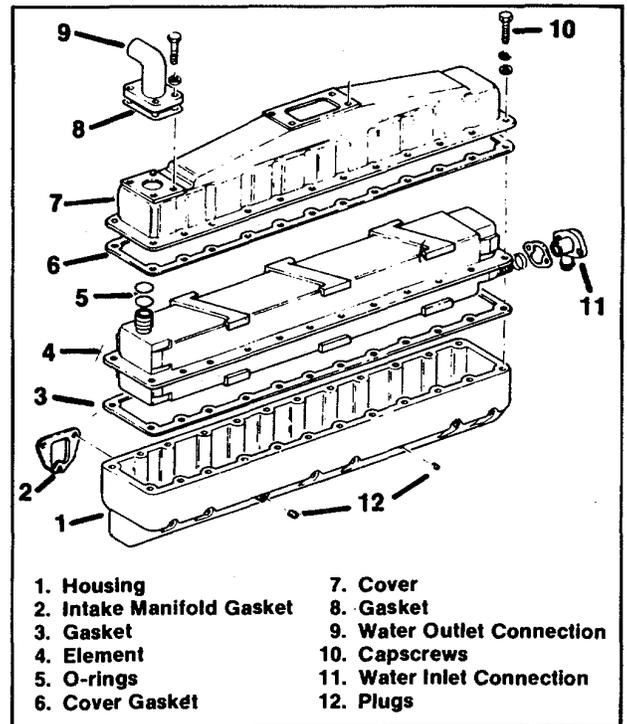


Fig. 10-2 (N10899). Cross-Bolt Design Aftercooler - Exploded View.

clearance. The clearance must not be less than 0.003 inch [0.07 mm] or more than 0.013 inch [0.33 mm].

Caution: Make sure the O-rings are in the correct position and are not damaged.

3. Align the holes in the housing and element for the cross-bolts. Install the cross-bolts (11) and hardened washers. Tighten the cross-bolts in the center of the housing first, then tighten the cross-bolts at each end. Tighten the cross-bolts to 15 ft.-lbs. [21 N•m] torque. Starting at the center, tighten the cross-bolts again to 25 ft.-lbs. [35 N•m] torque.
4. Install the water inlet connection (9) and new gasket (8) onto the inlet fitting of the element. Do not damage the O-rings. Use your fingers to tighten the capscrews.
5. Install a new gasket (3) and the aftercooler cover (4) to the housing. Make sure the holes in the gasket are aligned with the cover and housing. Use your fingers to tighten the capscrews (7).

6. Install the water outlet connection (7) and new gasket (5). Install the copper washers and capscrews. Use your fingers to tighten the capscrews.
7. Tighten the capscrews that fasten the water inlet connection (9) to 27 to 32 ft.-lbs. [37 to 43 N•m] torque.
8. Tighten the capscrews, that fasten the cover to the housing, to 25 ft.-lbs. [34 N•m] torque. Tighten the center capscrews first. Tighten the capscrews, moving from one side of the cover to the other side. Work from the center toward each end of the cover.
9. Tighten the capscrews, that fasten the water outlet connection (6), to 15 to 20 ft.-lbs. [21 to 27 N•m] torque.

Group 11

The exhaust system group includes the exhaust manifolds.

Exhaust System

Exhaust Manifolds

Dry Type

Inspection

Inspect the exhaust manifold for cracks and distortions.

When ordering replacement parts, order same part as presently used.

Wet Type

Inspection

1. The exhaust manifold is a combination water header and water-cooled exhaust manifold. Clean as outlined in Group 0, Disassembly and Cleaning. Water test at 30 to 80 psi [207 to 552 kPa]
2. Remove the inspection plate from the exhaust manifold. Inspect for cracks and distortions. Replace the manifold if it is damaged.
3. Install the inspection plate and gasket to the exhaust manifold.

Caution: Do not run the engine without coolant in a water-cooled exhaust manifold.

Group 12

The air equipment group consists of Cummins air compressors, check valve, vacuum pump and piping; it also includes the air-actuated cranking motors, which are sometimes used on Cummins engines.

Air Equipment

Air Compressor

Cummins air compressors are used on all models of Cummins Engines and are covered from a servicing standpoint in Bulletin No. 3379056.

Optional Units, such as Bendix-Westinghouse, Wagner and others are covered by publications available from the manufacturer or authorized service station.

Vacuum Pump

Cummins vacuum pump is an adaptation of the compact Cummins air compressor and is covered in Bulletin No. 3379056.

Air Cranking Motor

Air cranking motor servicing is covered by the manufacturer or authorized service station.

Group 13

The principal function of the Electrical System on Cummins Diesel Engines is that of cranking or starting and operating electrical accessories as required by the unit being powered.

Electrical Equipment

Wiring Diagram

A complete collection of wiring diagrams, as applied to all Cummins Engines, is contained in Bulletin No. 3379099. The diagrams are all in the single manual because the same diagram may apply to more than one engine model or series. This bulletin may be obtained from a local Cummins Distributor.

Electrical Components

Complete instructions for testing, repairing and adjusting alternators, generators, voltage regulators, cranking motors, batteries, electric cables and connections are available from the local electrical equipment service distributor.

If this service is not available, further specific information can be obtained as follows:

Delco-Remy Equipment

Electrical Equipment Operation and Maintenance Handbook DR-324-1 or -2, -3, -4 and Test Specifications DR-324-S-1 may be purchased from the nearest United Motor Service Station, or the Service Department, Delco-Remy Division, General Motors Corp., Anderson, Indiana.

Leece-Neville Equipment

Operation and adjustment information may be obtained from the nearest Leece-Neville distributor or the Service Department of the Leece-Neville Co., 5109 Hamilton Avenue, Cleveland 14, Ohio.

Engine Assembly and Testing

Group 14

The engine assembly section includes the assembly of all the units and subassemblies to the cylinder block. This section also includes assembly specifications, adjustments, engine testing and storage.

Engine Assembly and Testing

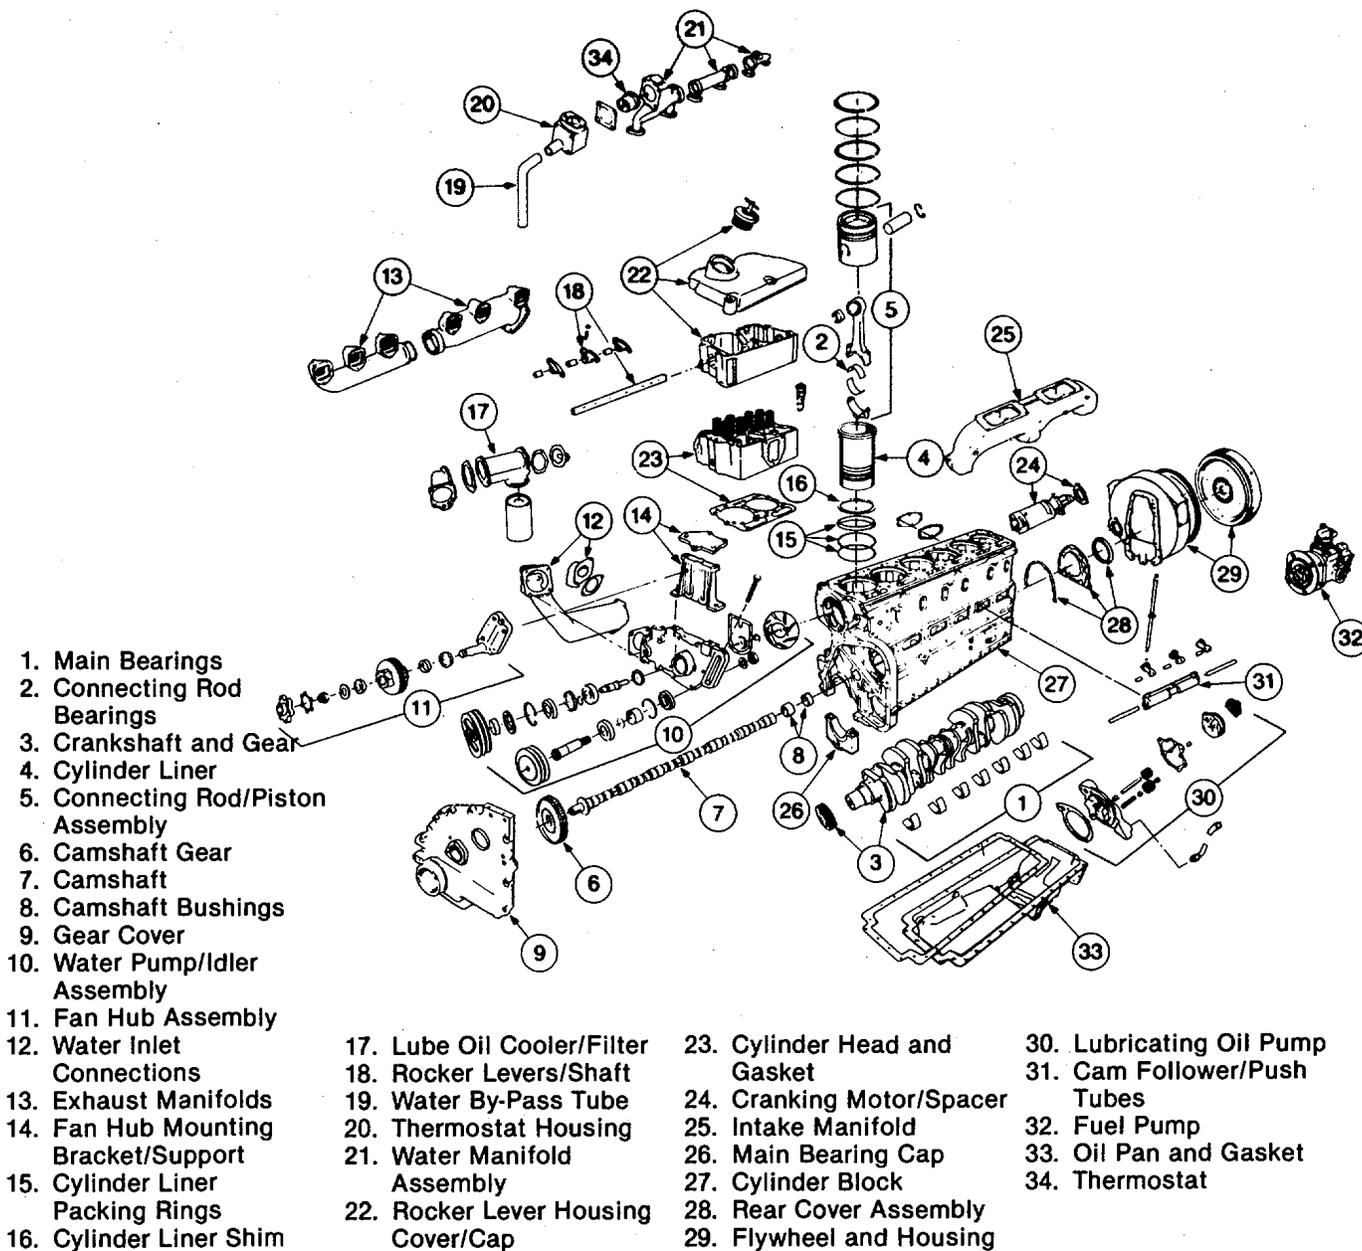


Fig. 14-0 (N114235). Engine - Exploded View

NT/NTA 855 C.I.D. Engine Shop Manual

Service Tool List

To assemble and make adjustment to the engine, according to the instructions given in this section, the following service tools or tools of equal quality are required.

Service Tools (Or Equivalent) Required

Service Tool Number	Tool Name
ST-163	Engine Support Stand
3376326	Pulley Assembly Tool
ST-547	Gauge Block
ST-593	Timing Fixture
or	
3375522	
ST-669	Torque Wrench Adapter
ST-754	Torque Wrench Kit (0-600 ft.-lbs.)
ST-763	Piston Ring Expander
ST-835	O-Ring Assembly Tool
ST-997	Seal and Sleeve Driver
ST-1135	Lube Oil Sampling Filter
ST-1138	Belt Gauge
ST-1172	Seal Mandrel
ST-1173	Seal Mandrel
ST-1182	Valve Spring Spray Nozzle Locator (80 degree Tilt Engine)

Service Tools (Or Equivalent) Required

Service Tool Number	Tool Name
ST-1184	Cylinder Liner Hold-Down Tool
ST-1190	Fuel Consumption Measuring Device
ST-1229	Liner Driver
ST-1232	Drill and Reaming Fixture
ST-1258	Engine Lifting Fixture
ST-1259	Seal Mandrel (Teflon Seal)
ST-1263	Seal Pilot (Teflon Seal) (Rear)
ST-1273	Pressure Gauge (in. hg.)
ST-1274	Belt Gauge
ST-1325	Dial Gauge Attachment
3375013	Block Mounting Plate
3375044	Torque Wrench Kit (0-150 in.-lbs.)
3375045	Torque Wrench Kit (0-175 ft.-lbs.)
3375046	Torque Wrench Kit (0-350 ft.-lbs.)
3375047	Torque Wrench Kit (50-400 ft.-lbs.)
3375049	Oil Filter Wrench (Spin-On)
3375066	Loctite Pipe Sealant
3375096	Inj./Valve Adjust Kit with Jacobs Brake
3375150	Blow-By Checking Tool
3375151	Seal Pilot (Teflon Seal) (Front)
3375159	Air Compressor Wrench
3375162	Piston Ring Compressor
3375193	Engine Rebuild Stand
3375601	Connecting Rod Guide Pins
3375958	Nylon Lifting Sling

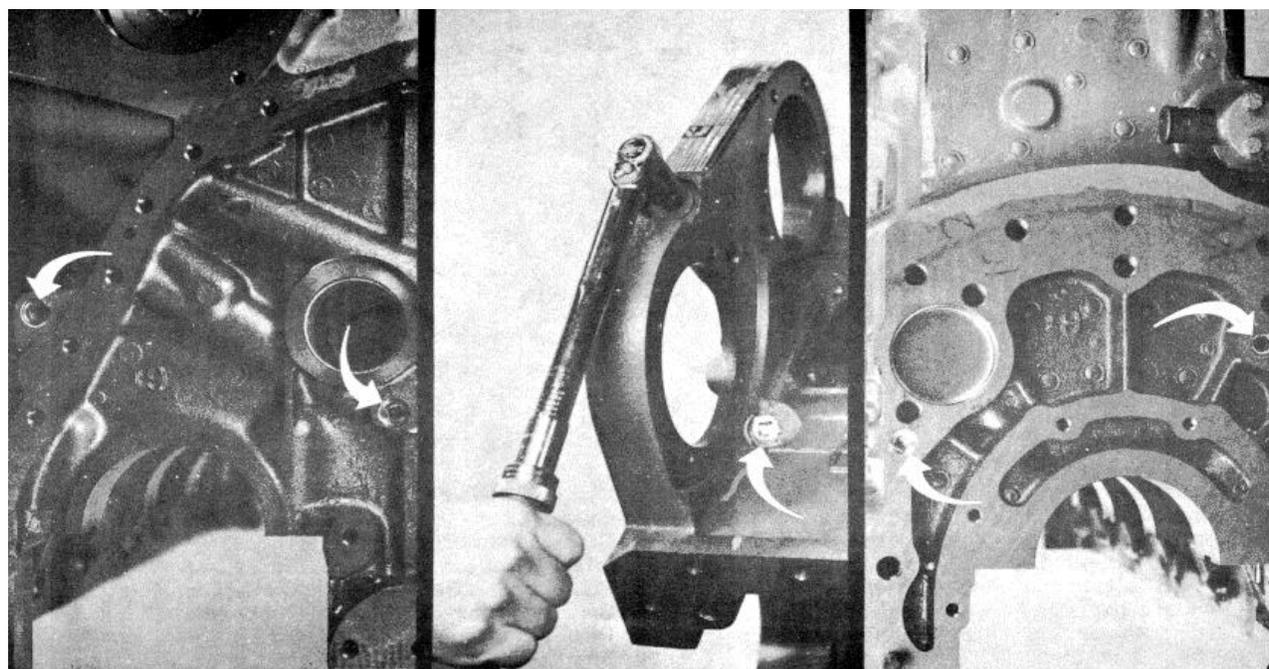


Fig. 14-1 (N114239). Install The Pipe Plugs.

Engine Assembly and Testing

Service Tools (Or Equivalent) Required

Service Tool Number	Tool Name
3376021	Actuator Retainer Adjustment Tool
3376028	Variable Timing Fixture
3376029	Bracket and Studs
3376050	Dial Indicator and Sleeve
3801048	Cylinder Liner Sealant

Standard Tools - Obtain Locally

Dial Indicator (Starret No. 196A)
 Dial Indicator Sleeve (Starret No. 196-L)
 Manometer (Mercury or Water)
 0-1 Micrometer
 Impact Wrench
 Engine and/or Chassis Dynamometer
 Hoist (Power or Chain)
 Straight Edge
 Feeler Gauge

Engine Assembly

Install The Cylinder Block To The Engine Stand

1. Install the water header adapter plate to the cylinder block. Tighten the capscrews to 6 to 8 ft.-lbs. [8.1 to 11 N•m] torque.
2. Install the Part No. 3375013 Block Mounting Plate to the Part No. 3375193 Engine Rebuild Stand. Make sure that the top of the stand and the plate are aligned correctly.
3. Put the cylinder block in the correct position on the rebuild stand. Install the lockwashers, spacers and capscrews to hold the cylinder block to the rebuild stand. Tighten the capscrews to 75 ft.-lbs. [102 N•m] torque.

Install The Pipe Plugs

Table 1. Pipe Plug Torque Value

Pipe Plug Size	Torque Ft.-Lbs. [N•m]	
	Minimum	Maximum
1/8	10 [13.5]	15 [20]
3/8	20 [27]	25 [34]
1/2	35 [47]	40 [54]
3/4	50 [68]	55 [74.5]
7/8*	60 [81]	70 [95]

*7/8-18 Straight Plug

1. Apply teflon tape or an equivalent to the pipe plugs.

Note: Apply a coat of 30W lubricating oil to the 1/8 pipe plugs to be installed for the oil galley. Do not use teflon tape with these plugs.

2. Install the pipe plugs into the cylinder block, Fig. 14-1. Tighten the pipe plugs to the torque valves listed in Table 1.

Install The Crankshaft And Main Bearings

1. Make sure the main bearing bores are clean. Use a clean cloth to clean the bores. Make sure the cloth does not leave any particles (lint) in the bores. Make sure the capscrew holes are clean and dry.
2. Install the upper main bearing shells, Fig. 14-2.

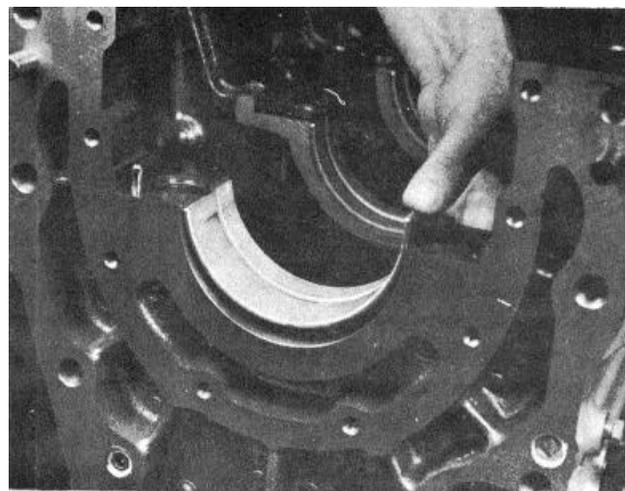


Fig. 14-2 (N114242). Install The Upper Main Bearing Shells.

Note: The upper main bearing shells have a groove and oil hole to permit lubrication of the crankshaft. The upper shells for the Nos. 2, 4 and 6 are the same. The groove in the shell for No. 7 is not in the center of the shell. Install the No. 7 shell so the wider part of the shell, from the groove, is toward the flywheel end of the cylinder block. Also, each shell has a groove for the dowel ring. Install the shell so the groove will be next to the counterbore in the cylinder block.

3. Apply a heavy coat of clean lubricating oil to the upper shells.
4. Install the main bearing dowel rings, Fig. 14-3.
5. Install the crankshaft. Use a hoist and the Part No. 3375958 Nylon Lifting Sling to lift the

NT/NTA 855 C.I.D. Engine Shop Manual

crankshaft. Check the marks on the rear counterweight of the crankshaft to find the size of the thrust rings.

6. Install the upper thrust ring. Make sure the grooved side of the thrust ring is against the crankshaft flange, Fig. 14-4.
7. Apply a coat of clean lubricating oil to the bearing surfaces of the crankshaft and to the lower bearing shells. Align the bearing shells with the dowel rings. Then, push on the side of the shell opposite the dowel ring to install the shell, Fig. 14-5.
8. Install the lower thrust ring onto the No. 7 main bearing cap. The grooved side of the thrust ring must be toward the crankshaft flange.

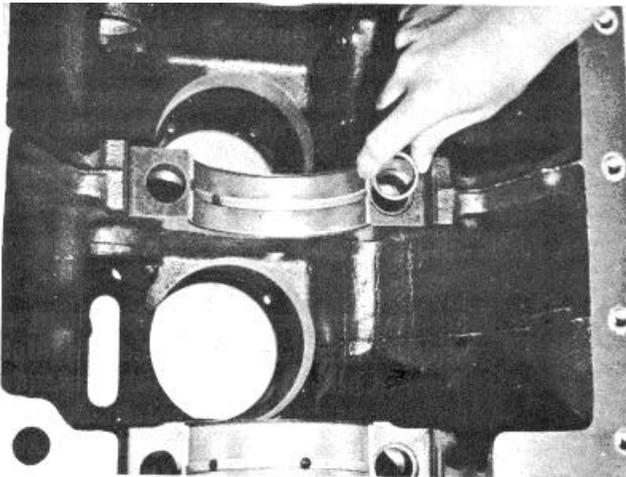


Fig. 14-3 (N11402). Install The Dowel Ring.

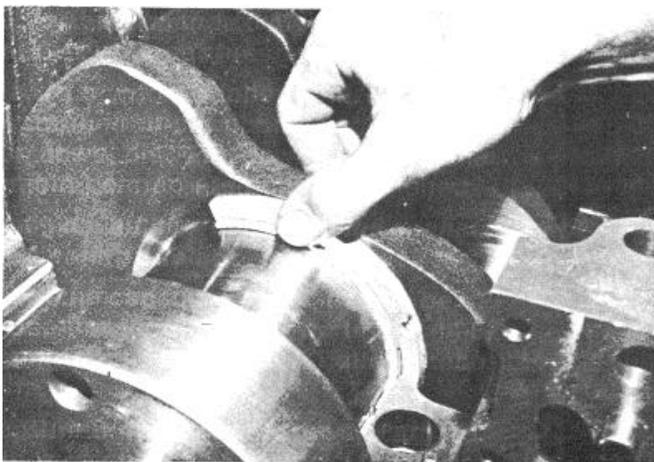


Fig. 14-4 (N11404). Install The Thrust Ring.

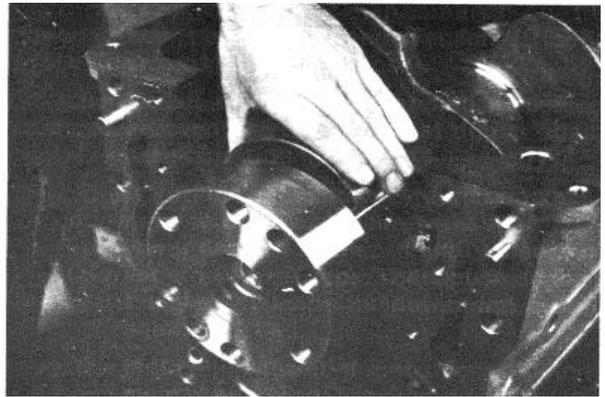


Fig. 14-5 (N114244). Install The Lower Bearing Shells.

9. Install the main bearing caps.
 - a. Put the caps into the correct location on the cylinder block. Make sure that the number on each cap is the same as the number marked on the cylinder block.
 - b. Align the capscrew holes in the caps with the holes in the cylinder block.
 - c. Install new lockplates onto the capscrews.
 - d. Lubricate the capscrew threads and the lockplates. Use SAE 30W oil to lubricate the capscrews. Use SAE 140W oil to lubricate the lockplates. Drain the excess oil from the capscrews before you install them into the cylinder block.
 - e. Install the capscrews and lockplates through the caps and into the cylinder block. Use your hand to tighten the capscrews two to three threads.
 - f. Hit the caps with a rubber mallet to push them into the correct position. Make sure that the dowel pins and dowel holes for the No. 7 main bearing are correctly aligned.
- Caution: When you hit the cap with the mallet, make sure the bearing shell does not move.**
10. Tighten all of the capscrews for the main bearing caps. Use the sequence shown in Fig. 14-6 when you tighten the capscrews. Follow these instructions.
 - a. Tighten the 3/4 inch capscrews, Part No. 208346, in steps of 85 ft.-lbs. [115 N•m] torque until the capscrews are tightened

Engine Assembly and Testing

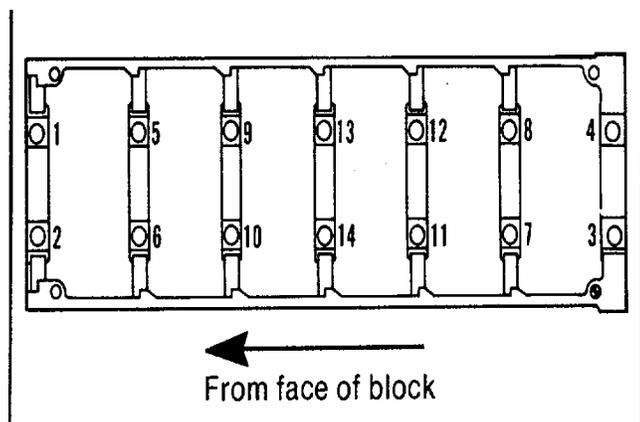


Fig. 14-6. Tightening Sequence For The Main Bearing Capscrews.

to 250 to 260 ft.-lbs. [339 to 352.5 N•m] torque. See page 18-5 for exceptions.

- b. Tighten the 1 inch capscrews, Part No. 105953, in steps of 100 ft.-lbs. [135.6 N•m] torque until the capscrews are tightened to 300 to 310 ft. - lbs. [407 to 420 N•m] torque.
 - c. Loosen all of the capscrews 3 to 5 threads.
 - d. Repeat Step a. or b.
11. Check the crankshaft to make sure it rotates freely. Use your hands to rotate the crankshaft.
 12. Check the end clearance of the crankshaft. The end clearance must be between 0.007 inch [0.18 mm] and 0.018 inch [0.45 mm] for new crankshafts and thrust rings.
 - a. Install a dial indicator gauge to the rear face of the cylinder block. Put the contact tip of the gauge against the end of the crankshaft.
 - b. Push the crankshaft toward the front of the cylinder block.
 - c. Adjust the indicator to read "0" (zero).
 - d. Push the crankshaft toward the rear of the cylinder block, Fig. 14-7. Read the indicator to find the amount of end clearance.
 13. If the end clearance is less than 0.007 inch [0.18 mm]:
 - a. Loosen the capscrews one turn.

- b. Push the crankshaft toward the front and then toward the rear of the cylinder block.

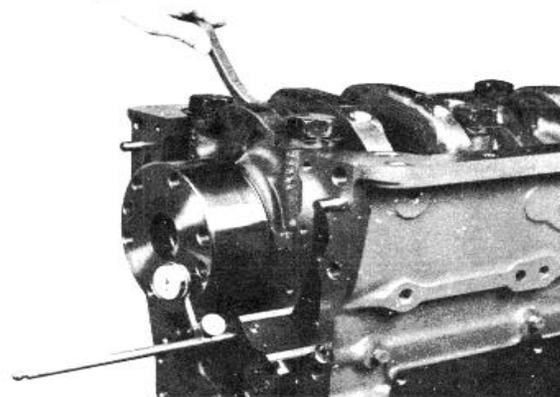


Fig. 14-7 (N114245). Measure The End Clearance Of The Crankshaft.

- c. Follow the instructions in Step 10 to tighten the capscrews.
 - d. Check the end clearance.
14. Make sure the end clearance for a used crankshaft is not more than the worn limit of 0.022 inch [0.56 mm]. If the clearance is more than 0.022 inch [0.56 mm], you must repair the crankshaft and use oversize thrust rings as described in Section 1.
 15. Bend the tang of the lockplates against the head of the capscrews.

Install the Cylinder Liners

1. Check the bore for the cylinder liner.
 - a. The bore must not have any sharp edges that would cut or damage the cylinder liner O-rings.
 - b. The counterbore in the cylinder block and the cylinder liner flange must be clean and free from oil. Use a hydrocarbon solvent to clean oil from the parts. You can use a solvent such as Naphtha, Methyl Ethyl Ketone (MEK) or Trichlorethane 1,1,1 (Methyl Chloroform).
- Caution: Naphtha and Methyl Ethyl Ketone (MEK) are flammable materials and must be used with care. Do not use starting fluid as a cleaning agent.**
2. Install new O-rings and a crevice seal onto the cylinder liner. Install the crevice seal into the top groove. The chamfer on the crevice seal

NT/NTA 855 C.I.D. Engine Shop Manual

must be toward the bottom of the cylinder liner. Install the black O-ring into the center groove. Install the red O-ring into the bottom groove. Apply a light coat of clean lubricating oil to the crevice seal and O-rings just before you install the cylinder liner into the cylinder block. Make sure that the oil does not touch the counterbore or the cylinder liner flange.

Caution: Do not lubricate the O-rings until you are ready to install the cylinder liner. The O-rings will increase in size when they are in contact with lubricating oil for an extended period of time. If the cylinder liners are not to be installed within 15 minutes after lubricating the O-rings, use vegetable oil to lubricate the O-rings.

3. Apply a bead of Cummins Sealant, Part No. 3801048, onto the counterbore or the cylinder liner flange as shown in Fig. 14-8. The diameter of the bead must be at least 3/64 inch and not more than 1/16 inch. The liner must be installed within five minutes after the sealant has been applied.

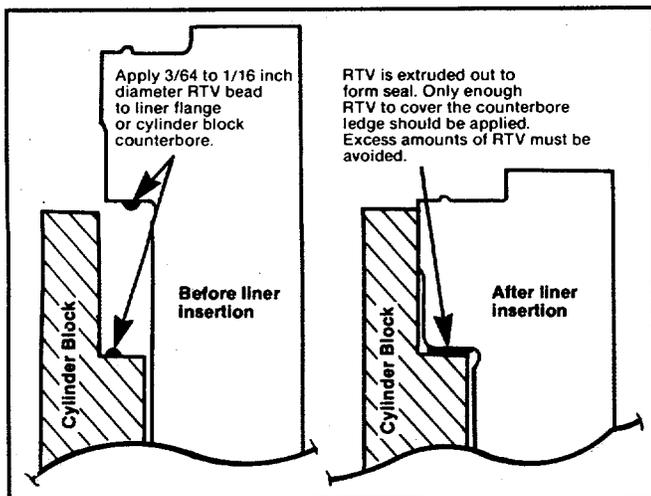


Fig. 14-8. Apply The Sealant To These Locations.

Note: Do not use an excessive amount of sealant. Excessive sealant can cause problems in the cooling system.

4. Put the cylinder liner into the bore in the cylinder block. Make sure the O-rings and crevice seal do not move from the grooves on the cylinder liner. Install the cylinder liner into the bore with a quick push as shown in Fig. 14-9.

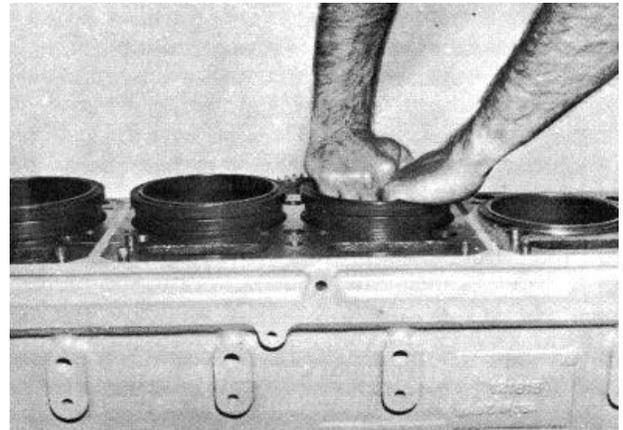


Fig. 14-9 (N114106). Use A Quick Push To Put The Liner Into The Bore.

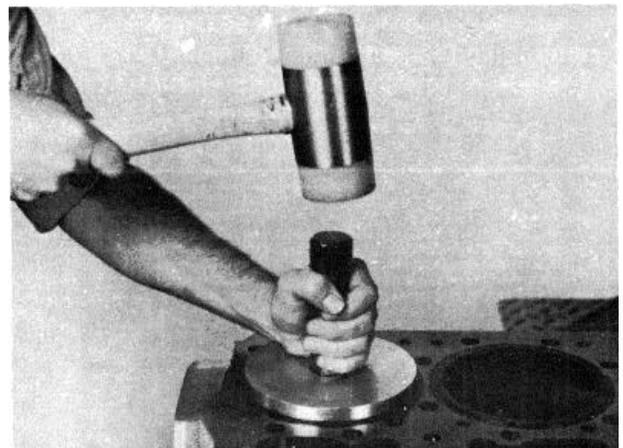


Fig. 14-10 (N114240). Install The Liner.

5. Use the Part No. ST-1229 Liner Driver and a mallet to push the flange of the cylinder liner against the counterbore ledge, Fig. 14-10.
6. Check the protrusion of the cylinder liner.
 - a. Install the Part No. ST-1184 Cylinder Liner Hold-down Tool. Make sure the tool is spaced evenly around the cylinder liner so that the tool will apply equal amounts of pressure. Make sure the tool does not damage the bead of the cylinder liner.
 - b. Tighten the capscrews to 50 ft.-lbs. [68 N•m] torque.
 - c. Use the Part No. ST-547 Gauge Block to check the protrusion of the cylinder liner,

Engine Assembly and Testing

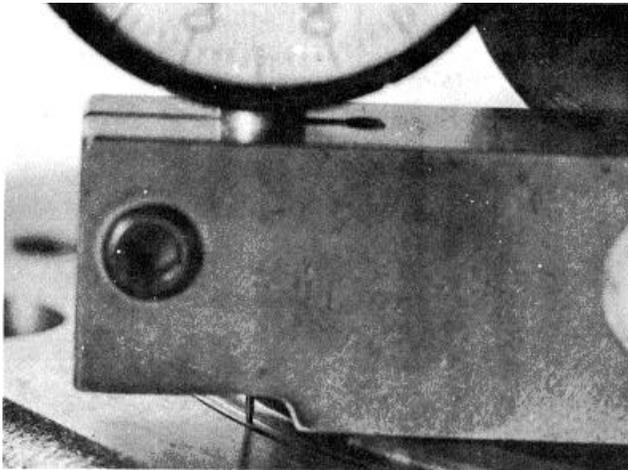


Fig. 14-11 (V514150). Check The Protrusion Of The Liner



Fig. 14-12. Measure The Bore Of The Liner.

Fig. 14-11. The amount of protrusion must be from 0.003 inch [0.08 mm] to 0.006 inch [0.15 mm].

7. Check the inside diameter of the bore in the cylinder liner for an out-of-round condition. Follow the instructions given on pages 1-5 and 1-6. Use a dial bore gauge to measure the bore, Fig. 14-12. Measure the bore at several points within the range of the piston travel. The bore must not be out-of-round more than 0.003 inch [0.08 mm] in the top 1 inch [25.4 mm] of the piston travel area, and not more than 0.002 inch [0.05 mm] in the crevice seal and O-ring area.

Install The Pistons And Connecting Rods

1. Install the rings onto the piston. One side of the ring

has a mark or the word "Top." Install the ring so that this side is toward the top of the piston. Install the oil control ring first. Use the Part No. ST-763 Piston Ring Expander to install the rings, Fig. 14-13.

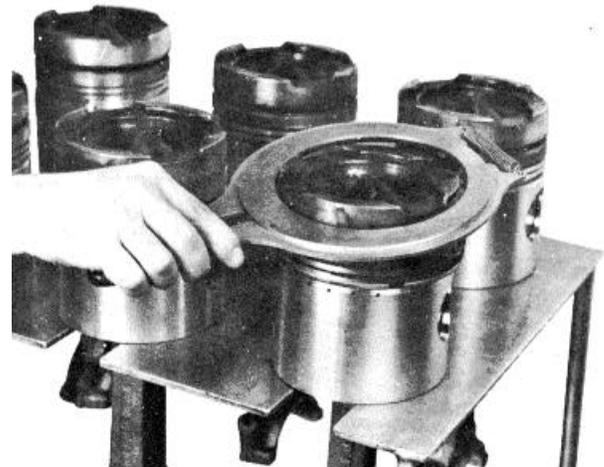


Fig. 14-13 (N114246). Install The Piston Rings.

Caution: Do not damage the rings when you install them onto the piston. Expand the ring just enough to allow it to fit over the piston.

2. Make sure the ring gap of each ring is not in alignment with the piston pin or with any other ring, Fig. 14-14. Install the two-piece oil control ring so that the gap of the expander is 180 degrees from the gap of the ring.
3. Install the upper bearing shell into the con-

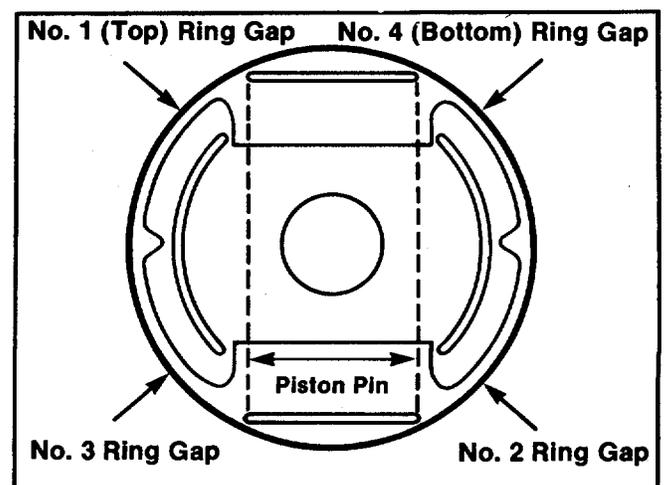


Fig. 14-14. Alignment Of The Piston Rings.

NT/NTA 855 C.I.D. Engine Shop Manual

necting rod. The tang of the bearing shell must be into the slot in the connecting rod, Fig. 14-15. Make sure the oil hole in the shell is aligned with the oil hole in the connecting rod.

4. Follow the instructions in Step 3 to install the lower bearing shell into the connecting rod cap. The connecting rod caps do not have oil holes.
5. Install the Part No. 3375601 Nylon Guide Screws into the connecting rod, Fig. 14-16.
6. Apply a coat of clean 30W lubricating oil to the bearing shells in the connecting rod and cap.
7. Put the piston and ring assembly into a container of clean 30W lubricating oil in order to apply a coat of



Fig. 14-15 (N114248). Install The Upper Bearing Shell Into The Connecting Rod.

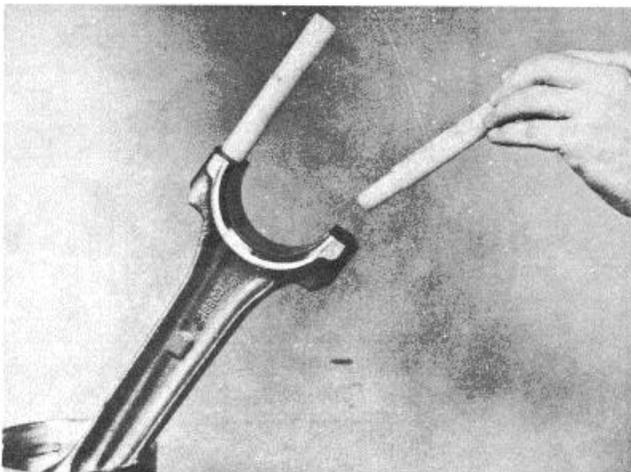


Fig. 14-16 (N114249). Install The Guide Screws Into The Connecting Rod.

oil to the piston and rings. Remove the piston and ring assembly from the container. Use the Part No. 3375162 Ring Compressor to compress the rings. Make sure that the piston rings are correctly located in the grooves in the piston.

8. Install the piston and rod assembly into the cylinder block.
 - a. Rotate the crankshaft so that the journal for the connecting rod being installed is at bottom dead center.
 - b. Use the ring compressor to hold the piston and rod assembly.
 - c. Push the piston through the ring compressor and into the cylinder liner, Fig. 14-17. Do not use a metal device to push against the piston. **Make sure the tang of the connecting rod is toward the camshaft side of the cylinder block.**
 - d. Push the piston until the top ring is into the cylinder liner. The piston must move freely from the ring compressor and into the cylinder liner. If the piston does not move freely, remove the piston and check for broken or damaged rings.
 - e. Use the nylon guide screws to pull the connecting rod into position against the crankshaft, Fig. 14-18.

Note: Guide the connecting rod onto the crankshaft as you push the piston into the cylinder liner in order to prevent damage to the crankshaft.

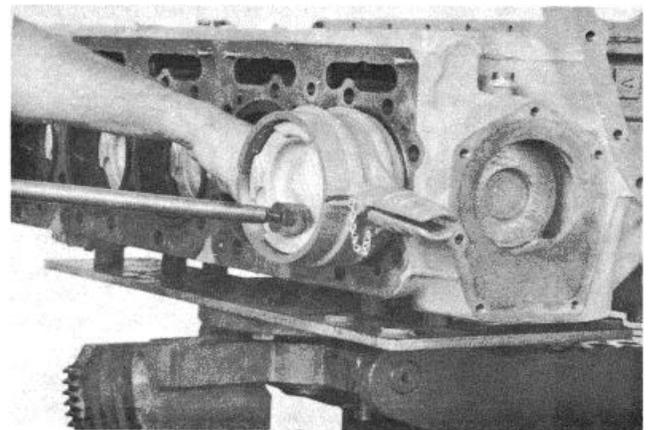


Fig. 14-17. Install The Piston And Connecting Rod Assembly.

Engine Assembly and Testing

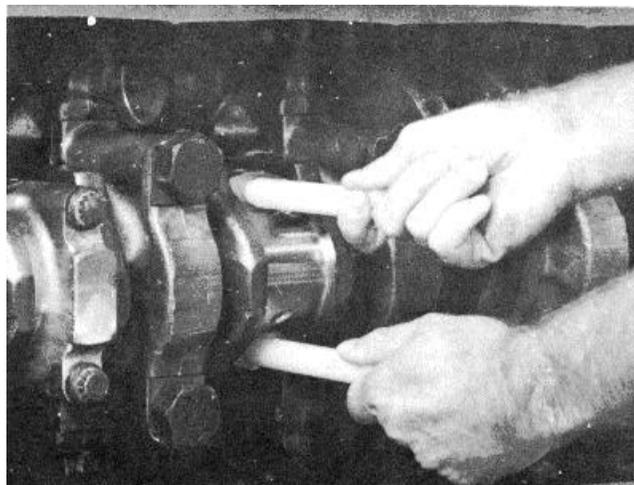


Fig. 14-18. Position The Connecting Rod Against The Crankshaft Journal.

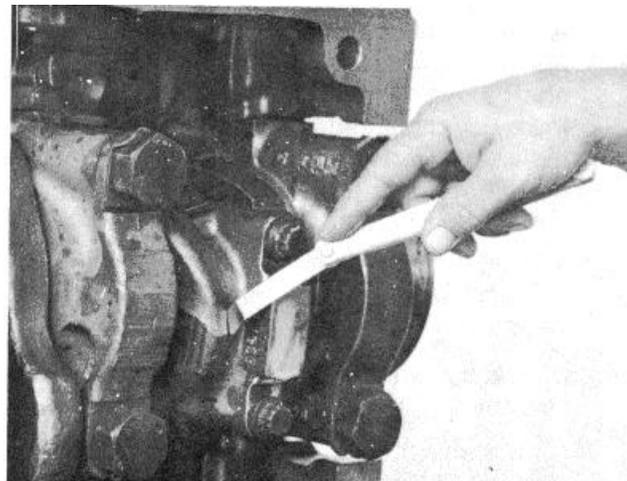


Fig. 14-19. Measure The Side Clearance.

9. Install the connecting rod cap.
 - a. Remove the nylon guide screws.
 - b. Install the connecting rod cap so that the tang side of the cap is against the tang side of the rod. Make sure that you install the correct cap for the connecting rod.
 - c. Apply a coat of clean 30W lubricating oil to the threads of the capscrews or bolts. If the connecting rod has bolts, apply a coat of 140W Lubricant to the washers.
 - d. Tighten the capscrews or bolts evenly to push the cap onto the connecting rod. Table 2 gives the correct torque values and the correct sequence to follow.

Table 2. Connecting Rod Torque Specifications

Step No.	Minimum ft.-lbs. [N•m]	Maximum ft.-lbs. [N•m]
1. Tighten To	70 [95]	75 [102]
2. Tighten To	140 [190]	150 [203]
3. Loosen Completely		
4. Tighten To	25 [34]	30 [41]
5. Tighten To	70 [95]	75 [102]
6. Tighten To	140 [190]	150 [203]

10. Check the side-to-side (side clearance) movement of the connecting rod, Fig. 14-19. The connecting rod must move freely. The side clearance must be between 0.0045 inch [0.114 mm] and 0.013 inch [0.33 mm]. If the connecting rod does not move

freely, remove the cap. Make sure the bearing shells are the correct size. Check for dirt or damage.

Install the Camshaft

1. Install the cup plug into the camshaft bore at the rear face of the cylinder block. If the bore measures 2.6245 to 2.6255 in. [66.662 to 66.688 mm], use the Part No. 3375153 Cup Plug Driver to install the plug. If the bore measures 2.6865 to 2.6875 in. [68.237 to 68.262 mm], use the Part No. 3375708 Cup Plug Driver.
2. Apply a coat of lubriplate to both sides of the thrust ring. Install the thrust ring onto the camshaft. Make sure that the oil grooves on the thrust ring are toward the camshaft gear, Fig. 14-20.

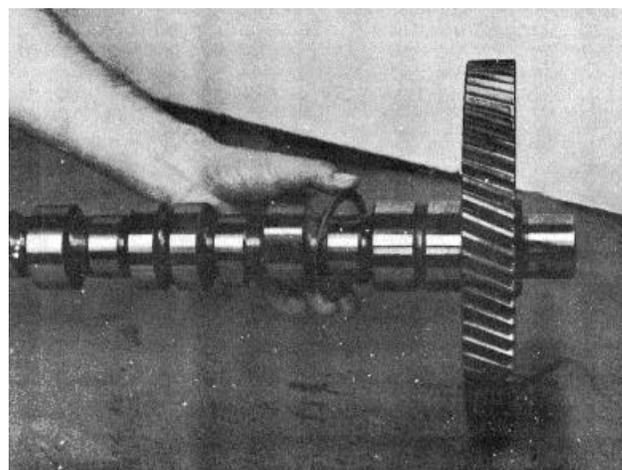


Fig. 14-20 (N114253). Install The Thrust Ring Onto The Camshaft.

NT/NTA 855 C.I.D. Engine Shop Manual

3. Apply a coat of lubriplate to the camshaft journals and camshaft bushings. Rotate the camshaft slowly as you push it through the bushings. Do not damage the camshaft or bushings. Install the Part No. 3375268 Camshaft Installation Pilots onto the 2 1/2 inch camshaft before you install the camshaft, Fig. 14-21.
4. Align the "O" mark on the camshaft gear with the "O" mark on the crankshaft gear, Fig. 14-22.
5. Check the amount of backlash between the camshaft gear and crankshaft gear.
 - a. Install a dial indicator gauge onto the front face of the cylinder block. Position the tip of the

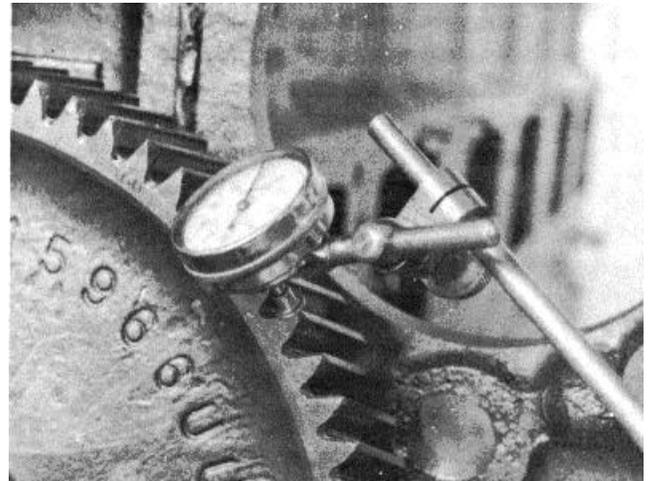


Fig. 14-23. Check The Gear Backlash.

gauge against a tooth of the camshaft gear, Fig. 14-23.

- b. Rotate the camshaft gear as far as it will freely move. Make sure that the crankshaft gear does not move. Turn the dial of the gauge to zero.
- c. Rotate the camshaft gear in the opposite direction. The reading on the gauge shows the amount of backlash between the gears.
- d. The normal amount of backlash between a new camshaft gear and a new crankshaft gear is 0.004 to 0.016 inch [0.10 to 0.40 mm]. The backlash must measure at least 0.002 inch [0.05 mm].
- e. The backlash between gears that have been used must measure no more than 0.020 inch [9.51 mm].

Install The Cylinder Heads

1. Make sure that the surfaces for the gaskets are clean.
2. Install the new gasket onto the dowel pins in the cylinder block. Make sure the side of the gasket with the word "Top" is up, Fig. 14-24.

Note: Two types of head gaskets can be used. One type has red silicone sealing beads. This gasket does not require any additional parts. The other type does not have the red silicone sealing beads and you must install water grommets into the gasket.

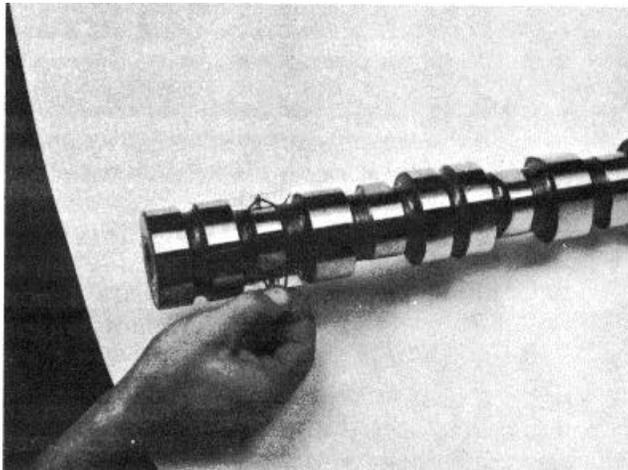


Fig. 14-21 (N114254). Install The Pilots Onto The 2-1/2 Inch Camshaft.



Fig. 14-22. Align The Timing Marks On The Camshaft Gear And Crankshaft Gear.

Engine Assembly and Testing

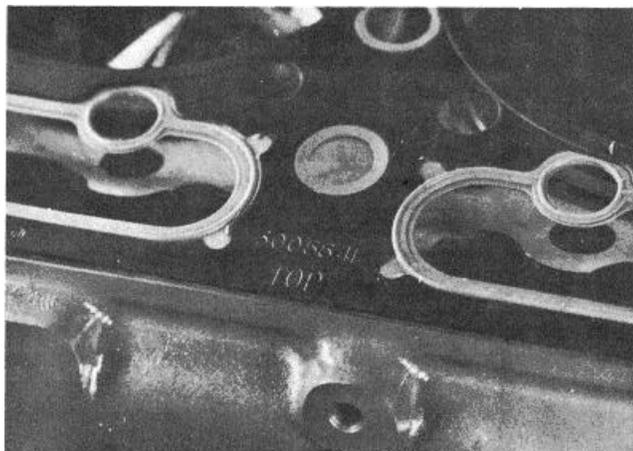


Fig. 14-24 (N114257). Install The Cylinder Head Gasket.

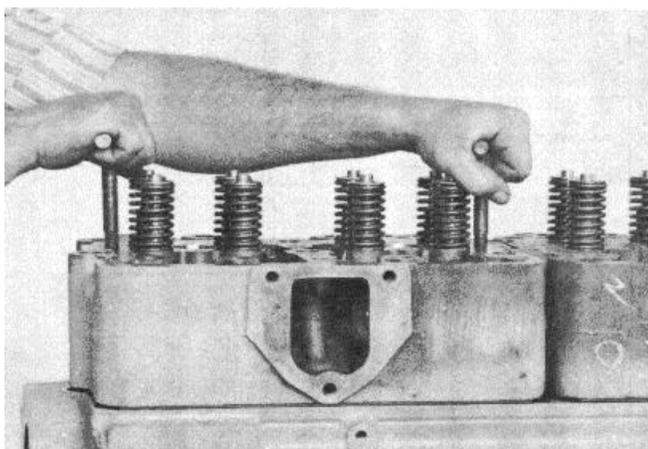


Fig. 14-25. Install The Cylinder Heads.

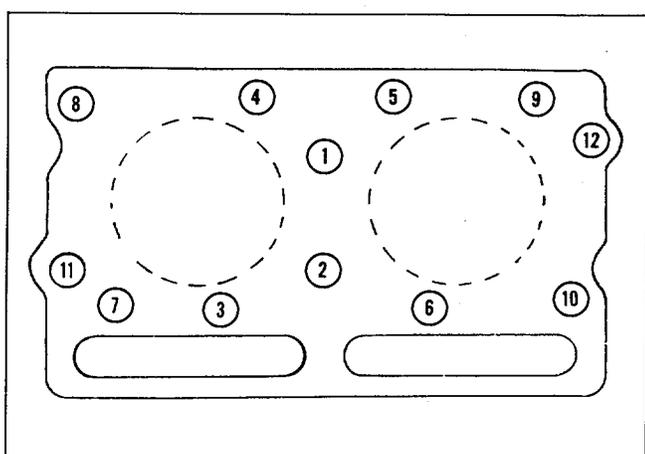


Fig. 14-26 (N11427). The Tightening Sequence For The Cylinder Head Capscrews.

3. Install two guide studs into the cylinder block. Use the guide pins to help you to install the cylinder head in the correct position on the cylinder block. Install T-handles into the cylinder head. Put the cylinder head over the guide pins and into position on the cylinder block. Use the T-handles to lift the cylinder head, Fig. 14-25.

4. Lubricate the cylinder head capscrews with preservative oil. Drain the excess preservative oil from the capscrews before you install them.

Note: The cylinder head capscrews for the turbo-charged engine must have the letters "NT" on the head of the capscrew.

5. Install the washers and capscrews. Tighten the capscrews in the sequence shown in Fig. 14-26. Tighten the capscrews to the torque values given in Table 3.

Table 3. Cylinder Head Capscrew Torque Value

Step No.	Minimum ft.-lbs. [N•m]	Maximum ft.-lbs. [N•m]
1. Tighten To	20 [27]	25 [34]
2. Tighten To	80 [108]	100 [136]
3. Tighten To	265 [359]	305 [413.5]

Install The Fuel Crossover

1. Install new O-rings into the counterbores in the cylinder heads.

2. Install the fuel crossover connections over the O-rings and onto the cylinder loads.

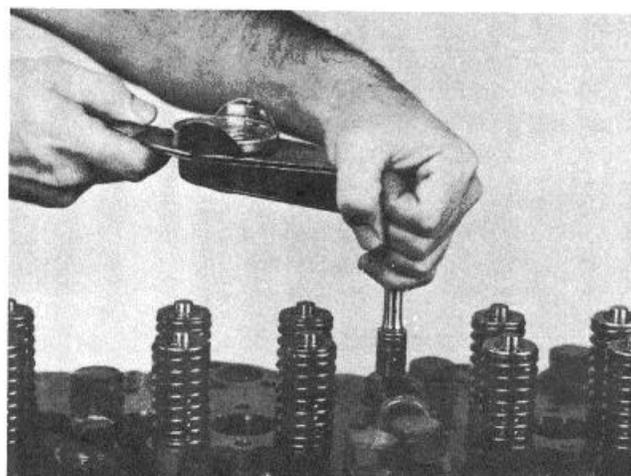


Fig. 14-27 (N114258). Tighten The Screws For The Fuel Crossover.

3. Install the screws. Tighten the screws to 34 to 38 in.-lbs. [3.8 to 4.3 N•m] torque, Fig. 14-27.

Install The Fuel Fittings And Tubing

1. Apply teflon tape or an equivalent to the fittings.
2. Install the fuel inlet and drain fittings into the cylinder heads. Install the fittings into the same locations as when they were removed.
3. Tighten the 1/8 inch angle fittings to 150 in.-lbs. [16.9 N•m] torque. If the fitting is not in alignment with the fuel tubing, turn the fitting in the tightening direction to align the fitting. Do not turn the fitting in the loosening direction.
4. Install the fuel tubing into the fitting. Tighten the tubing nuts to the torque value given in Table 4.

Table 4. Tubing Nut Torque Value

Minimum Nut Size	Maximum	
	in.-lbs. [N•m]	in.-lbs. [N•m]
1/4 inch	120 [13.5]	145 [16.4]
5/16 inch	180 [20.3]	200 [22.6]
1/2 inch	275 [31]	335 [37.8]

Install The Cam Followers And Push Rods

1. Install the cam follower gaskets to the cylinder block. Use new gaskets with the same thickness as the gaskets that were removed.
2. The Big Cam engine must have at least one "print-o-seal" gasket with a silicone sealing bead for each cam follower housing. Install the "print-o-seal" gasket so that it is against the cylinder block and the sealing bead is toward the cam follower housing, Fig. 14-28.

Note: Make sure that the total gasket thickness for the Small Cam engine is at least 0.014 inch [0.36 mm] and not more than 0.125 inch [3.2 mm]. The total gasket thickness for the Big Cam engine must be between 0.014 inch [0.36 mm] and 0.080 inch [2.0 mm].

3. Install the cam follower assembly. Hit the housing with a plastic hammer to push the housing onto the dowel pins.
4. Install the capscrews and lockwashers. Tighten the capscrews to 15 ft.-lbs. [20 N•m] torque. Then, tighten the capscrews to 30 to 35 ft.-lbs. [41 to 47 N•m] torque. Follow the sequence in Fig. 14-29 to tighten the capscrews.
5. Lubricate the ball end of the push rods with

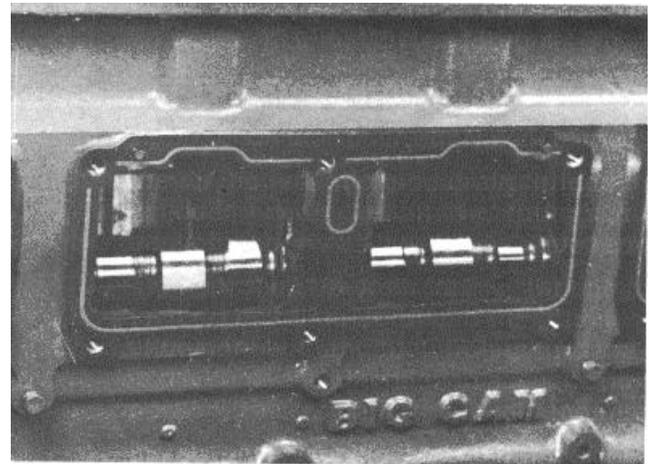


Fig. 14-28 (N114259). Install The "Print-O-Seal" Cam Follower Gasket.

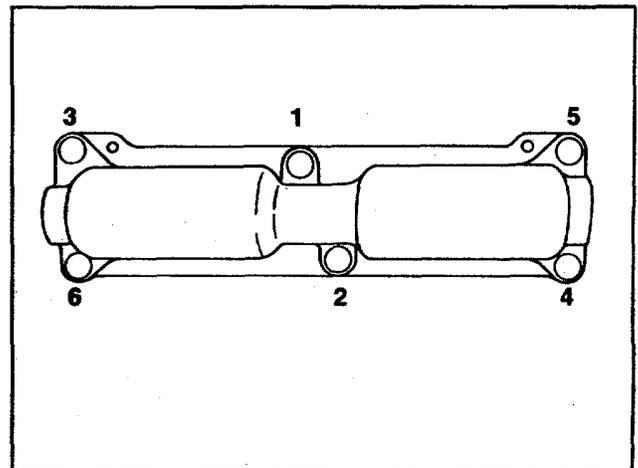


Fig. 14-29 (N114236). Tightening Sequence For The Cam Follower Housing.

140W lubricating oil. Install the ball end of the push rod into the socket of the cam follower. The outside diameter of the injector push rod is larger than the outside diameter of the valve push rod. The push rods for the intake and exhaust valves are the same. Install the injector push rod into the middle cam follower.

Note: The outside diameter of the injector push rod will be either 0.750 inch [19.05 mm] or 0.656 inch [16.67 mm]. The outside diameter of the valve push rod is 0.625 inch [15.88 mm]. (0.656 in. [16.66 mm] for the Big Cam NTC-400 only.) The valve push rod is 0.007 inch [1.78 mm] longer than the injector push rod. See Table 5 to find the difference in length between the push rods for the Big Cam engine and the push rods for the Small Cam engine.

Engine Assembly and Testing

Table 5. Push Rod Length - Inch [mm]

Push Rod	2 Inch Camshaft		2-1/2 Inch Camshaft	
	Minimum	Maximum	Minimum	Maximum
Injector	18.290 [464.56]	18.320 [465.32]	17.775 [451.48]	17.805 [452.24]
Valve	18.360 [466.34]	18.390 [467.11]	17.880 [454.15]	17.910 [454.91]

To Install the MVT Cam Follower

The three housings of the MVT cam followers must be installed to the engine as an assembly.

1. Assemble the front and rear housing assemblies to the center housing assembly.

Note: When the instructions refer to the front housing or the front of the housing, that is the housing or the end of the housing nearest the front face of the cylinder block when the assembly is installed to the engine.

- a. Install the spline coupling onto the shaft in the front of the center housing.
 - b. Install a new O-ring (rectangular seal) into each end of the center housing.
 - c. Align the splines on the shafts in the front and rear housing with the splines on the shaft in the center housing. Use the Part No. 3376027 Cam Follower Shaft Positioner to turn the shaft so that you can align the splines.
 - d. Install the shaft of the front housing into the spline coupling. Align the dowel in the center housing with the slot in the front housing. Push the shaft into the coupling until the housing is against the rectangular seal.
 - e. Install the shaft of the rear housing into the actuator gear in the center housing. Align the dowel in the center housing with the slot in the rear housing. Push the shaft into the gear until the housing is against the rectangular seal.
2. Install the Part Nos. 3376028 Variable Timing Fixture and 3379029 Bracket to the Cam follower Assembly. The 3376028 holds the housings in alignment. The 3376029 holds the cam follower levers in an upward position to prevent damage to the camshaft and rollers when the assembly is installed to the engine.

3. Make sure that the rectangular seals are in the correct position.
 4. Install the guide pins into three of the capscrew holes in the cylinder block. Install the guide pins so that they will align with the top right hand capscrew hole of each housing.
 5. Install the cam follower housing gasket onto the dowels and guide pins.
- Note:** The MVT has only one gasket and only one gasket thickness.
6. Apply a coat of clean 30W lubricating oil to the lobes of the camshaft.
 7. Install the cam follower assembly onto the guide pins and dowel pins, Fig. 14-30.

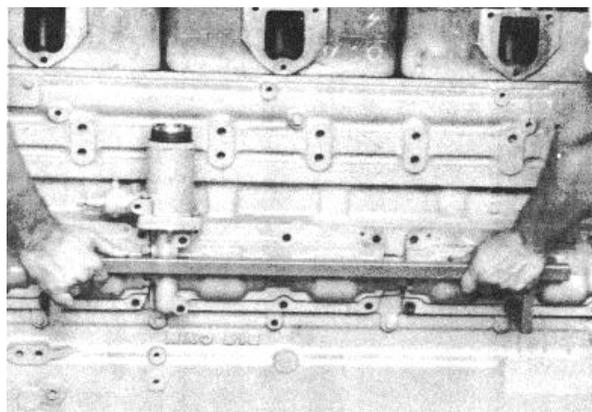


Fig. 14-30. Install The Cam Follower Assembly.

Caution: The cam follower assembly is heavy. Use another person to help lift the assembly.

8. Remove the 3376028 and the 3376029 from the assembly.
9. Hit the housings with a plastic hammer to push them onto the dowel pins.
10. Remove the guide pins.
11. Install the capscrews and lockwashers. Tighten the capscrews for the center housing first. Tighten the capscrews in the same sequence used for the small cam and Big Cam engines. Tighten the capscrews to 15 ft.-lbs. [20 N•m] torque. Then, tighten the capscrews to 30 to 35 ft.-lbs. [41 to 47 N•m] torque.

Injection Timing

For Small Cam and Big Cam Engines

Use the cylinders No. 1, 3 and 5 to check the injection timing of the Small Cam and Big Cam Engines. Use the Part No. 3375522 Injection Timing Tool to check the timing. The timing tool is used to check the timing of all Cummins engines and can be used with the rocker levers installed on the engine.

Follow these instructions to check the timing.

1. Install the support bracket for the push rod adapter (5, Fig. 14-31) into the slot nearest the clamp handle (4).
2. Install the piston plunger rod (1, Fig. 14-31) into the injector sleeve of the No. 1 cylinder. To fasten the timing tool to the cylinder head, install the adapter screws through the mounting foot (2) and into the holes for the injector holddown plate. Use the tightening rod (3) to tighten the adapter screws.
3. Loosen the clamp handle (4, Fig. 14-31) and align the push rod adapter (6) with the injector

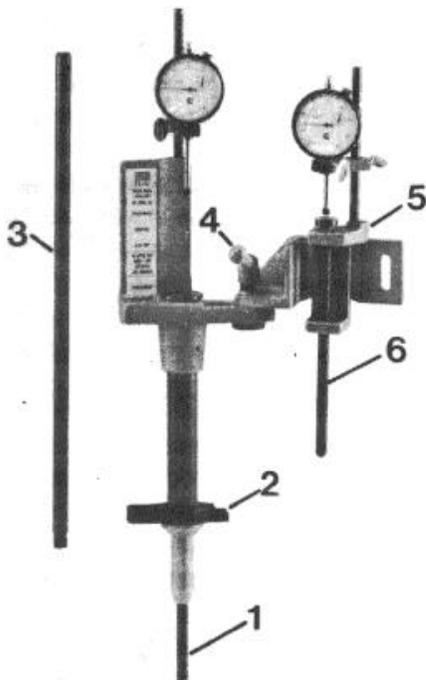


Fig. 14-31. The Part No. 3375522 Injection Timing Tool.

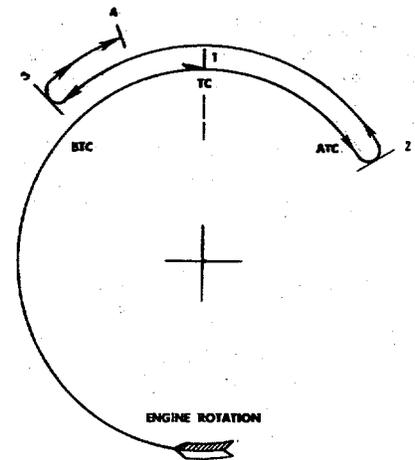


Fig. 14-32 (V31435). Injection Timing Procedure Diagram.

push rod. Tighten the clamp handle. Loosen the support bracket (5). Slide the bracket down until the adapter (6) engages the push rod. Then, compress the tension spring for the adapter approximately 0.50 inch [12.7 mm]. Tighten the support bracket. Make sure the support bracket is aligned with the vertical line on the clamp handle bracket.

4. Rotate the crankshaft in the direction of engine rotation to the Top Dead Center (TDC) position of the compression stroke for the No. 1 cylinder, (1) Fig. 14-32. Loosen the thumbscrew for the piston travel gauge. Move the gauge so that the stem of the gauge is in the center of the piston plunger rod. Lower the gauge against the piston plunger rod until the stem is fully compressed, then raise the gauge approximately 0.025 inch. Tighten the thumbscrew to hold the gauge in position. Rotate the crankshaft 2 or 3 degrees clockwise and counterclockwise to make sure the piston is at TDC. Loosen the setscrew for the gauge dial and turn the dial so that the indicator is at zero. Tighten the setscrew.

Note: Each gauge for the Timing Tool has a total travel of 1.0 inch. One revolution of the indicator needle equals 0.100 inch travel of the indicator stem. When the stem of the gauge is compressed, the indicator turns clockwise and the revolution counter turns counterclockwise. Be sure to note the reading on the revolution counter at TDC. This will help you find 0.2032 inch Before Top Dead Center (BTDC).

Engine Assembly and Testing

Table 6. Injection Timing Codes and Push Rod Travel

Timing (1) Code	Push Rod Travel (2) (Inches)		Advanced Timing MVT Only
	Fast	Slow	
A	-0.0395	-0.0435	
C	-0.0315	-0.0355	
D	-0.034	-0.038	
E	-0.028	-0.030	
Z	-0.024	-0.028	
AA	-0.030	-0.032	
AC	-0.027	-0.029	
AF	-0.044	-0.046	
AH	-0.034	-0.036	
AK	-0.040	-0.042	
AN	-0.045	-0.047	
AQ	-0.041	-0.043	
AS	-0.035	-0.037	
AU	-0.048	-0.050	
AV	-0.049	-0.051	
AW	-0.059	-0.061	
AX	-0.054	-0.056	
AY	-0.039	-0.041	
AZ	-0.058	-0.060	
BA	-0.027	-0.029	
BC	-0.023	-0.025	
BH	-0.051	-0.053	
BM	-0.052	-0.054	
BS	-0.071	-0.073	
BT	-0.080	-0.082	
BU	-0.064	-0.066	
BV	-0.061	-0.063	
BW	-0.066	-0.068	
BY	-0.069	-0.071	
CB (3)	-0.104	-0.106	-0.065 ± 0.005
CC (3)	-0.114	-0.116	-0.062 ± 0.005
CD	-0.073	-0.075	
CE	-0.025	-0.027	
CF	-0.037	-0.039	
CH	-0.051	-0.053	
CM (3)	-0.099	-0.101	-0.060 ± 0.005
CN (3)	-0.104	-0.106	-0.065 ± 0.005
CO	-0.0625	-0.0645	
CP (3)	-0.119	-0.121	-0.060 ± 0.005
CR (3)	-0.109	-0.111	-0.067 ± 0.005

- (1) Check the engine dataplate to find Timing Code.
- (2) Measure the push rod travel when the piston is at 0.2032 inch Before Top Dead Center.
- (3) Timing Code for Mechanical Variable Timing (MVT).

5. Rotate the crankshaft in the direction of engine rotation to 90 degrees After Top Dead Center (ATDC), (2) Fig. 14-32. Loosen the thumbscrew for the push rod travel gauge. Move the gauge so that the stem of the gauge is in the center of the push rod adapter. Lower the gauge against the adapter until the stem is fully compressed. Then raise the gauge approximately 0.025 inch. Tighten the thumbscrew to hold the gauge in position. Loosen the setscrew for the gauge dial. Turn the dial so that the indicator is at zero. Tighten the setscrew.
6. Rotate the crankshaft in the opposite direction of engine rotation, until you reach TDC.
 - a. Always rotate the crankshaft slowly.
 - b. Watch the piston travel indicator as you rotate the crankshaft.
 - c. Continue to rotate the crankshaft past TDC until the indicator shows 0.225 inch (two and one-fourth revolutions of the indicator needle past TDC, (3) Fig. 14-32). This step is necessary to take up the gear lash in the engine.
7. Rotate the crankshaft in the direction of engine rotation until the piston travel gauge is at 0.2032 inch BTDC (4) Fig. 14-32.

Note: The engine must be on the compression stroke. When the crankshaft is rotated to TDC on the compression stroke, the indicators on both gauges will move in the same direction. If they do not, rotate the crankshaft one complete revolution and repeat Step 5.

8. Read the push rod travel gauge. The push rod travel must be within the limits given in Table 6.

Note: Never change the cam follower gaskets to correct the injection timing until you check the following:

- a. That the Timing Tool is correctly installed.
- b. That the gauges are correctly adjusted.
- c. That the crankshaft has been rotated in the correct direction.
- d. That the capscrews for the cam follower housings are tightened to 30 to 35 ft.-lbs. [41 to 47 N•m] torque.

9. Follow Steps 4 through 8 to check the Injection Timing of cylinders No. 3 and 5.
10. If the reading on the push rod travel gauge is not within the limits given in Table 6, increase or decrease the thickness of the cam follower gaskets to correct the injection timing.
 - a. Increase the thickness of the gaskets to Advance the injection timing of *Right Hand* rotation engines.

NT/NTA 855 C.I.D. Engine Shop Manual

- b. Decrease the thickness of the gaskets to *Retard* the injection timing of *Right Hand* rotation engines.
- c. Increase the thickness of the gaskets to *Retard* the injection timing of *Left Hand* rotation engines.
- d. Decrease the thickness of the gaskets to *Advance* the injection timing of *Left Hand* rotation engines.

- 5. Follow these instructions to adjust the injection timing:
 - a. Loosen the spring retainer locknut.
 - b. Rotate the spring retainer to adjust the injection timing. Use Part No. 3376021 Retainer Adjusting Tool to rotate the spring retainer, Fig. 14-33. Rotate the retainer counterclockwise to advance the timing. Rotate the retainer clockwise to

11. See Table 7 to find the thickness of the cam follower gaskets and the amount of change in the push rod travel for each gasket.

Note: Do not increase the total gasket thickness to more than 0.125 inch [3.2 mm] for the Small Cam engine or more than 0.080 inch [2.0 mm] for the Big Cam engine. The Small Cam and Big Cam engines must have at least 0.014 inch [0.3 mm] total gasket thickness.

12. If you cannot correct the injection timing by increasing or decreasing the thickness of the gaskets, install an offset camshaft key. See Table 8 to find the correct key. Follow the instructions in Group 1 to remove and install a camshaft key.

The MVT Injection Timing

- 1. The MVT system must be completely retarded when you check the timing.
 - a. Remove the actuator cap and check the actuator plunger to make sure it is all of the way down in the housing.
 - b. If the plunger is not in the down position, rotate the crankshaft two complete revolutions. This will cause the plunger to move down in the housing.
- 2. Install the Part No. 3375522 Injection Timing Tool into the injector sleeve of the No. 3 cylinder. Follow the instructions given for the Small Cam and Big Cam engines to install the Timing Tool.
- 3. Check the retard injection timing. Follow the instructions given for the Small Cam and Big Cam engines to check the timing.
- 4. The push rod travel must be within the limits given in Table 6.

Table 7. Cam Follower Gasket Specifications

Gasket Part No.	Thickness Inch [mm]	Change In Push Rod Travel		Application
		Inch [mm]	Inch [mm]	
3020001	0.006 to 0.008 [0.15 to 0.20]	0.0015 to 0.002 [0.04 to 0.05]		Big Cam
3020002	0.014 to 0.020 [0.36 to 0.51]	0.0035 to 0.005 [0.09 to 0.13]		Big Cam
3020003	0.020 to 0.024 [0.51 to 0.61]	0.005 to 0.006 [3.13 to 0.15]		Big Cam
3020004	0.027 to 0.033 [0.66 to 0.84]	0.007 to 0.008 [0.18 to 0.20]		Big Cam
9266-A*	0.006 to 0.008 [0.15 to 0.20]	0.0015 to 0.002 [0.04 to 0.05]		Small Cam
9266	0.014 to 0.020 [0.36 to 0.51]	0.035 to 0.005 [0.09 to 0.13]		Small Cam
3011272	0.020 to 0.024 [0.51 to 0.61]	0.005 to 0.006 [0.13 to 0.15]		Small Cam
120819	0.027 to 0.033 [0.69 to 0.84]	0.007 to 0.008 [0.18 to 0.20]		Small Cam
3011273	0.037 to 0.041 [0.94 to 1.04]	0.009 to 0.010 10.23 to 0.25]		Small Cam

*Must not be used alone.

Table 8. Timing Key Information

(With Arrow Toward Camshaft Plug)				Equivalent Gasket Stack Thickness Change
3/4 Inch Key Part No.	1 Inch Key Part No.	Offset Inch [mm]	Timing Change	Inch [mm]
3021601	69550	None	None	None
3021595	200722	0.0060 [0.15]	Retard	0.012 [0.30]
3021593	200712	0.0075 [0.19]	Retard	0.015 [0.38]
3021592	200707	0.0115 [0.29]	Retard	0.023 [0.58]
3021594	200713	0.0185 [0.47]	Retard	0.037 [0.94]
3021596	200723	0.0255 [0.65]	Retard	0.051 [1.30]
3021598	208746	0.0310 [0.79]	Retard	0.062 [1.57]
3021597	202600	0.0390 [0.99]	Retard	0.078 [1.98]
3021600	3012307	0.0510 [1.30]	Retard	0.102 [2.59]
3021599	3012328	0.0115 [0.29]	Advance	0.023 [0.58]
3022352*	--	0.0185 [0.47]	Advance	--
3022353*	--	0.0310 [0.79]	Advance	--

*For Mechanical Variable Timing (MVT) Engines.

Engine Assembly and Testing

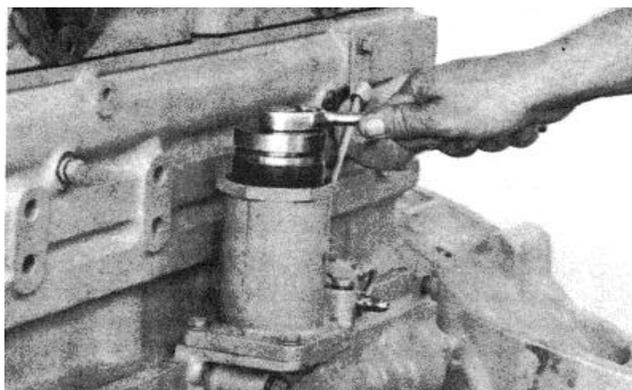


Fig. 14-33. Use The 3376021 Adjusting Tool To Rotate The Spring Retainer.

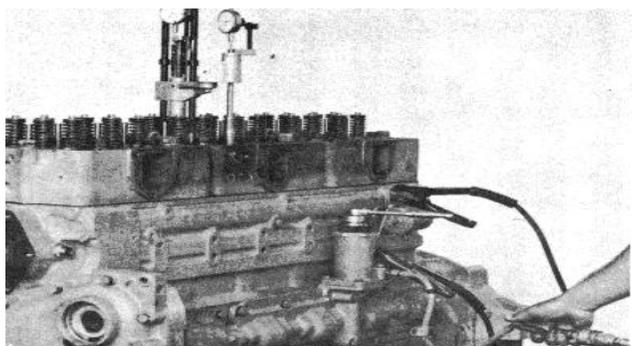


Fig. 14-34. Apply Air Pressure To Actuator Housing.

retard the timing. One complete turn of the retainer will change the push rod travel approximately 0.004 inch [0.10 mm].

- c. Hold the spring retainer in position and tighten the locknut to 30 to 35 ft.-lbs. [40 to 47 N•m].
6. Check the advance timing of the No. 3 cylinder.
 - a. Install an air supply line into the air inlet of the actuator housing. The air supply must have more than 80 psi [551 Kpa] air pressure.
 - b. Apply 12 volts of DC current to the MVT solenoid. You can use a battery charger to supply the electric current.

- c. Apply air pressure to move the actuator plunger to the advance position, Fig. 14-34. The actuator plunger must move freely to the advance position.
 - d. Check the advance timing. See Table 6 to find the correct specification for the advance timing.
 - e. Remove the air supply line and the electric current after you check the advance timing.
7. Install the 3375522 Timing Tool into the injector sleeve of the next cylinder to be checked. Follow the engine firing order. See Table 9 to find the engine firing order.

Table 9. Engine Firing Order

Cylinder Number: 1 - 5 - 3 - 6 - 2 - 4

8. Check the retard injection timing. Follow the instructions given to check the timing for the No. 3 cylinder.
9. Install the actuator cap. Tighten the cap to 25 to 30 ft.-lbs. [34 to 40 N•m] torque.

Note: The difference in timing from one cylinder to another can be +0.004 inch. The MVT engine uses a one-piece cam follower gasket. You cannot change the thickness of the gasket to adjust the timing for each cylinder.

Install the Accessory Drive Assembly

1. Rotate the crankshaft in the direction of engine rotation until the No. 1 cylinder is at Top Dead Center of the compression stroke.
2. Rotate the crankshaft in the direction of engine rotation to 90 degrees After Top Dead Center.
3. Install the accessory drive assembly. Make sure that the timing marks on the accessory drive gear align with the timing marks on the camshaft, Fig. 14-35.

Note: The timing marks on the accessory drive gear and camshaft gear must be aligned so that the valve and injector adjustment marks on the accessory drive pulley will be correctly aligned.

4. Tighten the capscrews to 40 to 45 ft.-lbs. [54 to N•m] torque.

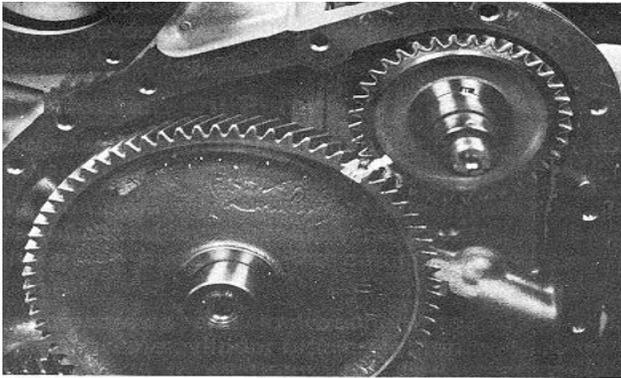
NT/NTA 855 C.I.D. Engine Shop Manual

Fig. 14-35 (N114262). Align The Timing Marks.

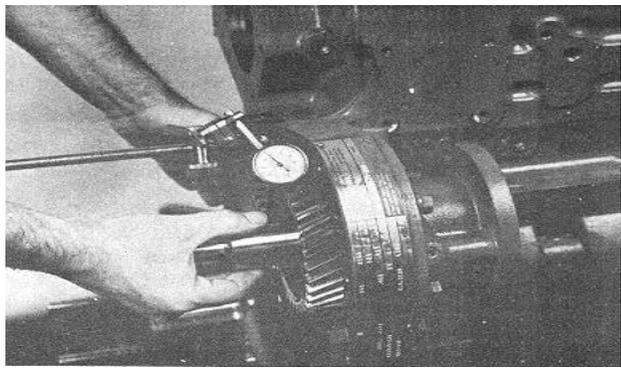


Fig. 14-36 (N114263). Check The Gear Backlash.

5. Check the accessory drive gear to camshaft gear backlash.
 - a. Install a dial indicator gauge onto the cylinder block. Position the gauge so that the stem is against a tooth on the accessory drive gear, Fig. 14-36.
 - b. Rotate the accessory drive gear as far as it will freely move. Turn the dial of the gauge to zero.
 - c. Rotate the accessory drive gear in the opposite direction. The reading and the gauge shows the amount of backlash between the gears.
 - d. The normal amount of backlash between a new accessory drive gear and a new camshaft gear is 0.004 to 0.016 inch [0.10

to 0.40 mm]. The backlash must be at least 0.002 inch [0.05 mm].

Install the Lubricating Oil Pump

1. Install a new gasket onto the mounting flange of the oil pump.
2. Position the pump into the mounting hole in the cylinder block. Make sure that the gear teeth of the pump align with the camshaft gear teeth.
3. Install the capscrews and lockwashers to fasten the pump to the cylinder block. Tighten the capscrews to 35 to 45 ft.-lbs. [47 to 61 N•m] torque.
4. Check the backlash of the pump gear, Fig. 14-37. Use the same procedure that you used to check the backlash of the accessory drive gear.

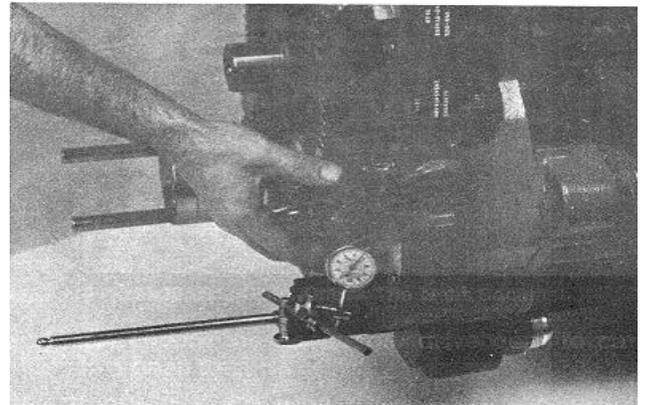


Fig. 14-37 (Ni14264). Check The Backlash Of The Pump Gear.

5. Install the power steering pump to the oil pump, if the engine is so equipped.
6. Install the oil filter assembly to the oil pump, if the engine is so equipped. Make sure that you install a new O-ring and filter element. Tighten the center bolt to 25 to 35 ft.-lbs. [34 to 47 N•m] torque.

Install the Gear Case Cover

1. Put the new gear cover gasket onto the gear case cover. Use Lubriplate or an equivalent to

Engine Assembly and Testing

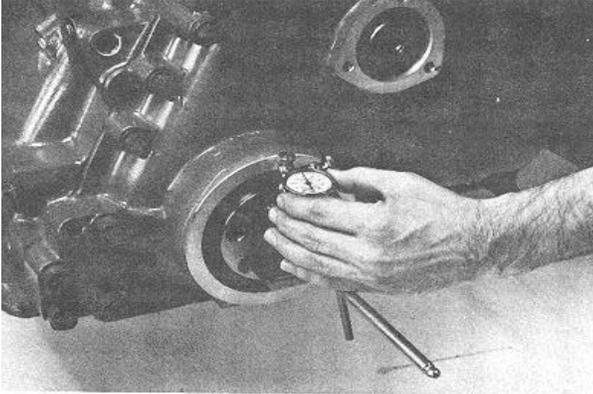


Fig. 14-38 (N114265). Check The Concentricity Of The Oil Seal Bore.

hold the gasket on the gear case cover. See the parts catalog to find the correct gasket part number.

2. Install the gear cover onto the dowel pins. Tighten the capscrews to 45 to 55 ft.-lbs. [61 to 74 N•m] torque.
3. Cut off the ends of the gear cover gasket so that the gasket is even with the mounting flange for the oil pan.
4. Check the alignment of the oil pan mounting flange of the gear cover with the oil pan mounting flange of the cylinder block. The gear cover flange must be even with the cylinder block flange within + 0.004 inch [0.10 mm].
5. The oil seal bore in the gear cover must have a common center with the crankshaft. Use a dial indicator gauge to check the concentricity, Fig. 14-38. The total indicator reading must not exceed 0.010 inch [0.25 mm]. If the reading exceeds 0.010 inch [0.25 mm], do the following:
 - a. Remove the gear cover.
 - b. Remove the gasket from the gear cover.
 - c. Make sure that the gear cover and cylinder block are clean. Make sure that the dowel pins in the cylinder block are not damaged.
 - d. Install a new gasket to the gear cover.
 - e. Install the gear cover to the cylinder block. Make sure that the gear cover is correctly installed on the dowel pins.

f. Check the concentricity.

6. Install a new oil seal into the gear cover. Use the Part No. ST-1259 Mandrel and the Part No. 3375151 Pilot to install the seal, Fig. 14-39. Use the Part No. ST-1172 Mandrel to install the seal when the end of the crankshaft is tapered.
7. Install a new accessory drive oil seal into the gear cover. Use the Part No. ST-1173 Mandrel to install the seal, Fig. 14-40.

Caution: Do not use any lubricants when you install LDL (lay down lip) TFE oil seals. The lip of the seal and the outside diameter of the shaft must be clean and dry.

8. Install the support bearing or thrust plate into the gear cover. Make sure that the clearance between the support bearing or the thrust plate and the end of the camshaft is correct.

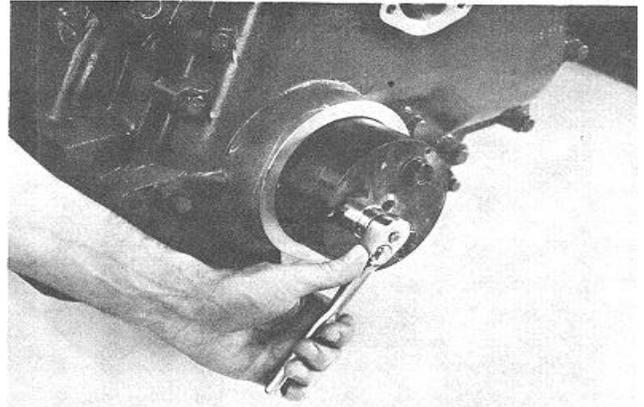


Fig. 14-39 (N114266). Install The Oil Seal.

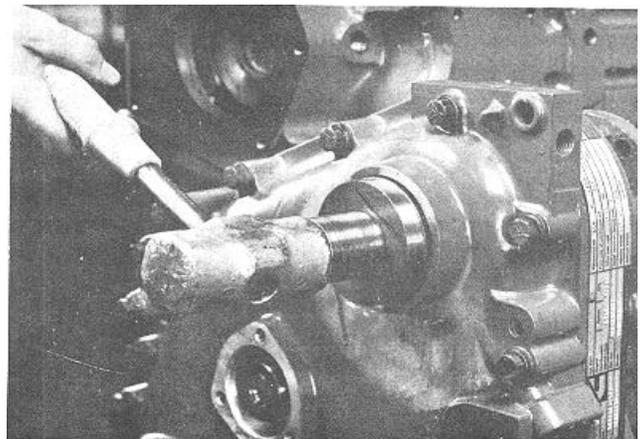


Fig. 14-40 (N114267). Install The Oil Seal For The Accessory Drive.

NT/NTA 855 C.I.D. Engine Shop Manual

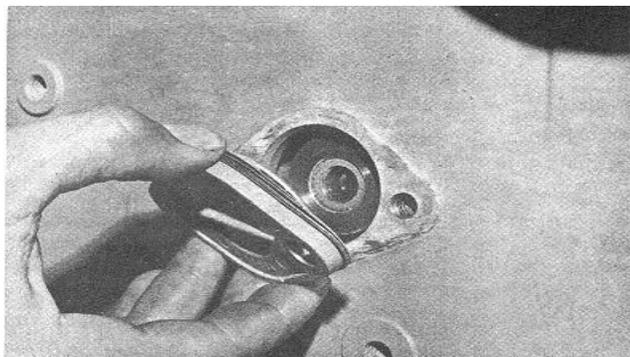


Fig. 14-41 (N11440). The Camshaft Thrust Plate.

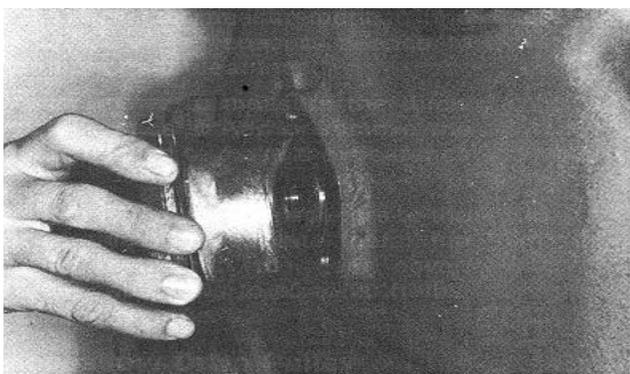


Fig. 14-42 (N114187). The Camshaft Bearing Support.

Note: Some engines use a support bearing in the gear cover and some use a thrust plate, Fig. 14-41 and Fig. 14-42. The support bearing clearance must be 0.008 to 0.013 inch [0.20 to 0.33 mm]. Thrust plate clearance must be 0.001 to 0.005 inch [0.03 to 0.13 mm].

- a. Remove the O-ring and spacers from the support bearing or thrust plate.
- b. Put the support bearing or thrust plate into the bore in the gear cover. Hold the bearing or plate so that it will be against the end of the camshaft.
- c. Use a feeler gauge to measure the space between the mounting flange of the support bearing or thrust plate and gear cover, Fig. 14-43. Use this measurement to find the thickness of the spacers needed to provide the correct clearance.

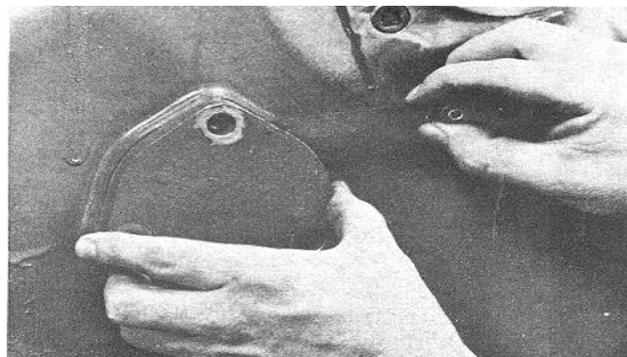


Fig. 14-43 (N114268). Measure The Clearance For The Bearing Support.

- d. Use a micrometer to measure the thickness of the spacers. Add or remove the spacers as needed to make the clearance correct.
- e. Install a new O-ring and the spacers to the support bearing or thrust plate. Install the bearing or plate into the gear cover. Tighten the capscrews to 15 to 20 ft.-lbs. [20 to 27 N•m] torque.

Install the Accessory Drive Pulley

1. Install the tapered end of the pin into the accessory drive shaft, Fig. 14-44.

Note: The pipe plug in the gear cover can be removed so that you can see the timing marks on the gears. Make sure that the timing marks are aligned, Fig. 14-45. If the pipe plug has been removed, install the plug. Tighten the pipe plug to 35 to 45 ft.-lbs. [47 to 61 N•m] torque.

2. Apply a coat of lubriplate or an equivalent to the drive shaft.
3. Align the keyway of the pulley with the roll pin in the shaft. Push the pulley over the roll pin and onto the shaft. Use your hands to start the pulley onto the shaft.
4. Install the Part No. 3376326 Pulley Assembly Tool to the drive shaft. Use the 3376326 to install the pulley onto the shaft, Fig. 14-46.

Engine Assembly and Testing

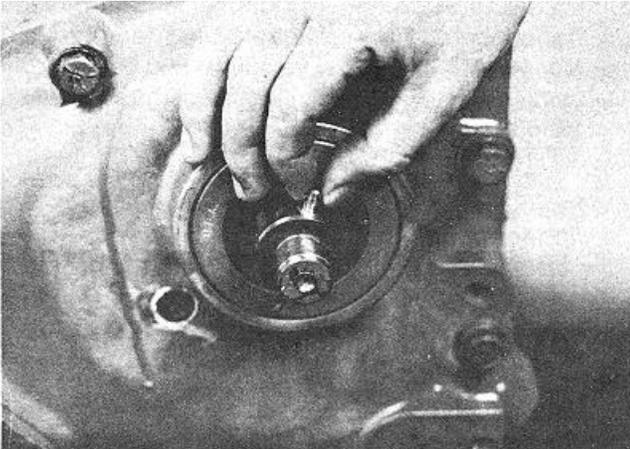


Fig. 14-44 (N114269). Install The Pin Into The Accessory Drive Shaft.

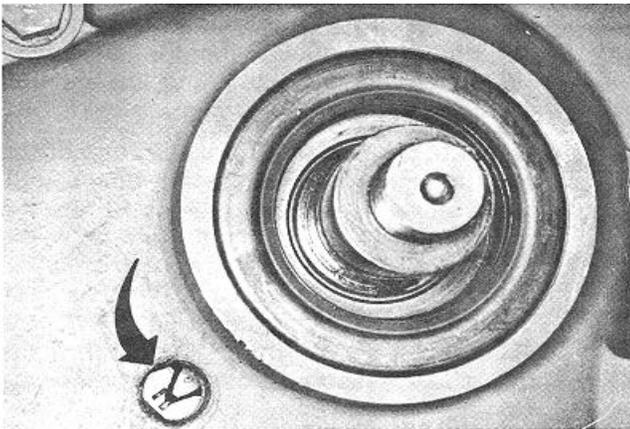


Fig. 14-45 (N114143). The Timing Marks For The Accessory Drive.

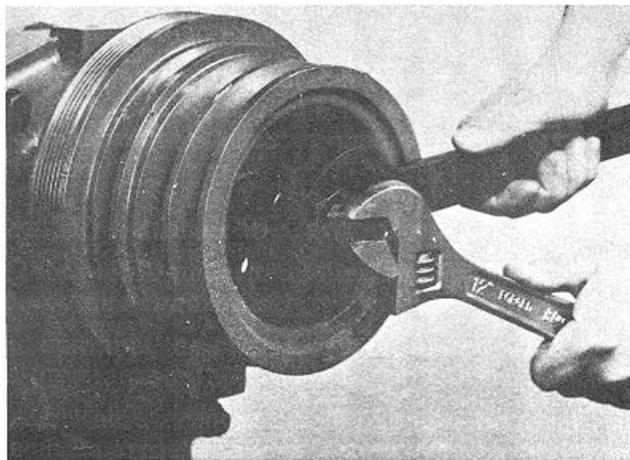


Fig. 14-46 (N114270). Install The Accessory Drive.

5. Remove the ST-386.
6. Install the rubber keyway seal into the pulley keyway. Make sure that one leg of the seal is toward the drive shaft.
7. Install the flat washer and pulley retaining nut.
 - a. Tighten the flanged retaining nut to 300 to 310 ft.-lbs. [407 to 420 N•m] torque.
 - b. Tighten the retaining nut that does not have a flange to 90 to 110 ft.-lbs. [122 to 149 N•m] torque.

Install the Air Compressor

The coupling driven single cylinder air compressor must be timed to the engine firing order. Follow these instructions to install and time the single cylinder air compressor.

1. Rotate the engine crankshaft until the "A" valve set mark on the accessory drive pulley is aligned with the pointer on the gear cover.
2. Hold the air compressor so that you are looking at the coupling end of its crankshaft. Rotate the air compressor crankshaft until the keyway or timing mark is positioned half-way between 9 o'clock and 10 o'clock.
3. Install the splined coupling to the air compressor crankshaft.
4. Install the air compressor and a new gasket to the accessory drive. Tighten the capscrews to 40 to 45 ft.-lbs. [54 to 61 N•m] torque.
5. Install the support bracket to the air compressor and the cylinder block. Tighten the capscrews to 30 to 35 ft.-lbs. [40.6 to 47 N•m] torque.

Install the Vibration Damper

The Vibration Damper Mounting Flange (Tapered End Crankshaft)

Make sure that the mounting flange fits correctly onto the crankshaft.

1. Apply an even coat of blue compound (Prussian Blue) to the tapered end of the crankshaft.
2. Put the flange onto the crankshaft.

NT/NTA 855 C.I.D. Engine Shop Manual

3. Rotate the flange approximately 1/8 of a turn. Remove the flange.
 4. Check the pattern of blue compound on the inside diameter of the flange. The pattern must show, at the larger diameter of the crankshaft, the flange has 100 percent contact with the crankshaft. The 100 percent contact must extend at least 1/2 inch [12.7 mm] toward the end of the crankshaft. The remainder of the flange must have at least 70 percent contact with the crankshaft.
 5. Clean the blue compound from the flange and the crankshaft.
 6. Use Magnaglo inspection to check the flange for cracks.
 7. If the flange does not fit onto the crankshaft correctly:
 - a. Make sure that the inside diameter of the flange and the outside diameter of the crankshaft are free of damage or rough surfaces.
 - b. Apply a coat of Grade A (280 grit) lapping compound to the inside diameter of the flange.
 - c. Put the flange onto the crankshaft. Rotate the flange one-half turn in each direction until the flange fits onto the crankshaft correctly.
 - d. Clean the lapping compound from the flange and the crankshaft.
- Caution:** *Make sure that none of the lapping compound gets onto the crankshaft seal or into the engine.*
- e. Follow Steps 1 through 5 to make sure that the flange fits correctly onto the crankshaft.

Install the Mounting Flange and Vibration Damper

1. Apply lubricant to the area of the crankshaft on which the flange will be installed. Use SAE 30 preservative oil.

Caution: *Make sure that the lubricant does not touch the crankshaft seal. Do not apply lubricant when you install any of the cast iron flanges, Part No. 115562, 115563, 175183 or 175185.*

2. Install the mounting flange onto the crankshaft. Use your hands to push the flange onto the crankshaft.

3. Install the retainer and capscrew to hold the flange onto the crankshaft. Tighten the Part No. 140410 capscrew to 180 to 200 ft.-lbs. [244 to 271 N•m] torque. Tighten the Part No. 196653 capscrew to 250 to 270 ft.-lbs. [339 to 366 N•m] torque.
4. Install the vibration damper to the mounting flange. Install the capscrews with new lockplates. Bend the ends of the lockplates against the head of the capscrews. Tighten the capscrews to 55 to 60 ft.-lbs. [74.5 to 81 N•m] torque.
5. Measure the movement of the circumference and the face of the vibration damper.
 - a. Install the dial indicator gauge to the gear cover as shown in Fig. 14-47. Position the tip of the indicator on point "A". Rotate the crankshaft. The total indicator reading must not exceed 0.003 inch [0.08 mm] per 1.0 inch [25.4 mm] of vibration damper diameter.
 - b. Measure the movement of the face of the vibration damper. Put the tip of the indicator on point "B" (Fig. 14-47). Rotate the crankshaft. The crankshaft must be at the front or rear of the thrust clearance when you measure the movement. The total indicator reading must not exceed 0.0025 inch [0.064 mm per 1.0 inch [25.4 mm] of the radius (as measured from the center of the vibration damper).

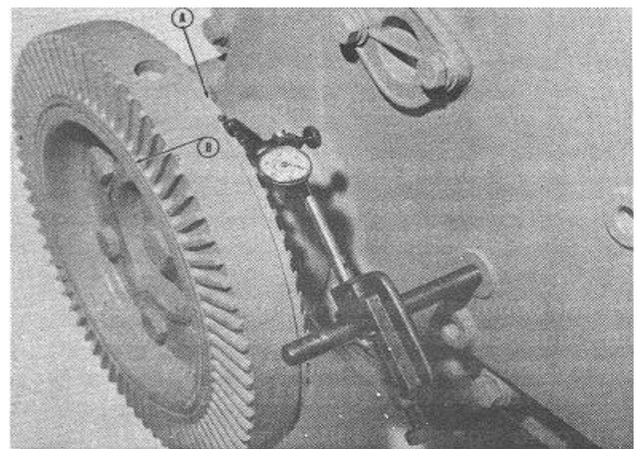


Fig. 14-47 (N114140). Measure The Movement On The Circumference And The Face Of The Vibration Damper.

Install the Vibration Damper and Pulley (Straight End Crankshaft)

1. Install the front engine support, if the engine has one. Tighten the capscrews to 55 ft.-lbs. [75 N•m] torque.

Caution: Make sure that the mounting surfaces of the vibration damper and pulley are clean and dry. Do not apply any lubricant.

2. Install two guide pins into the end of the crankshaft.
3. Install the pulley and vibration damper onto the guide pins.
4. Apply a coat of clean SAE 30 lubricating oil to the threads of the capscrews and face of the washers.
5. Install the capscrews and washers to hold the pulley and vibration damper onto the crankshaft. Tighten the capscrews to the torque values given in Table 10.

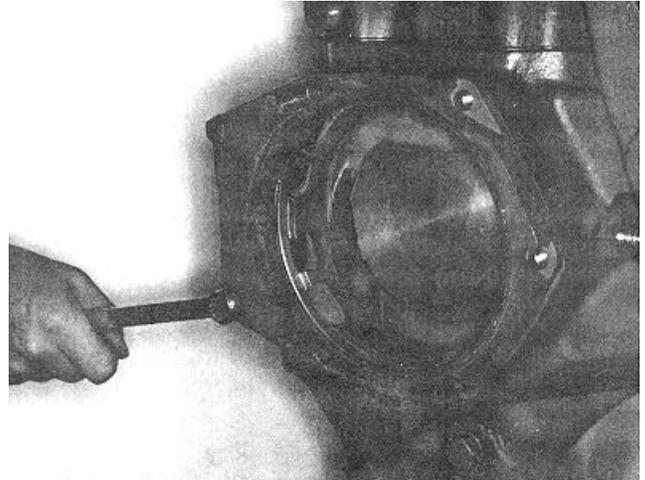


Fig. 14-48 (N114191). Install The Water Pump Support

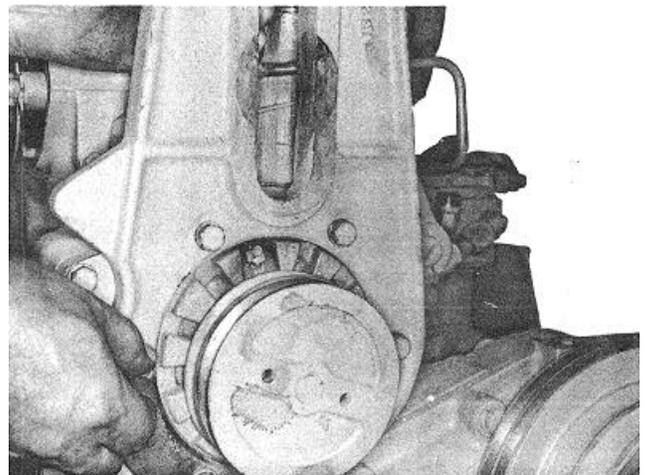


Fig. 14-49 (N114144). Install The Fan Bracket.

Table 10. Vibration Damper Capscrew Torque Values

Capscrew Size	SAE Grade Number	Minimum ft.-lbs. [N•m]	Maximum ft.-lbs. [N•m]
1/2 inch	8	115 [156]	125 [170]
5/8 inch	8	180 [244]	200 [271]
5/8 inch	5	150 [203]	170 [231]

6. Measure the movement on the circumference and the face of the vibration damper. Follow the procedure given to install the Mounting Flange and Vibration Damper, Steps 5a and 5b.

Install the Water Pump

The Eccentric Water Pump

1. Install the water pump support and a new gasket to the cylinder block, Fig. 14-48. Tighten the capscrews to 30 ft.-lbs. [41 N•m] torque.
2. Install the water pump into the support. Install the fan bracket (Fig. 14-49) or clamp ring if the engine does not have a fan bracket. Install the lockwashers and capscrews. Tighten the capscrews to 3 to 5 ft.-lbs. [4 to 6.8 N•m] torque. Turn the body of the pump clockwise so that the water pump pulley moves toward the accessory drive pulley.

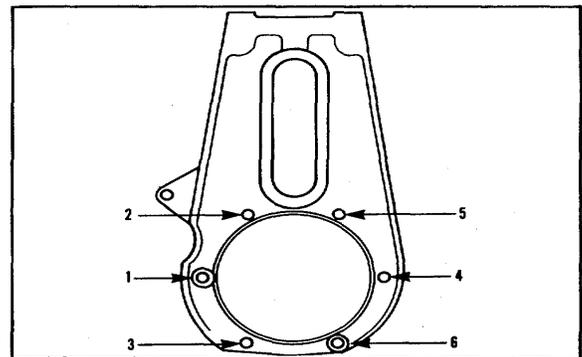


Fig. 14-50. The Tightening Sequence For The Fan Bracket.

NT/NTA 855 C.I.D. Engine Shop Manual

3. Install the belt onto the water pump pulley and accessory drive pulley. Tighten the belt so that it has 90 to 110 lb. [400 to 489 N] belt tension. Put a large screwdriver into the slots in the pump body and turn the body counterclockwise to tighten the belt. Use the Part No. ST-1138 Belt Tension Gauge to check the belt tension.
4. Tighten the capscrews for the fan bracket or clamp ring. Follow the tightening sequence shown in Fig. 14-50. Tighten the capscrews to 12 to 15 ft.-lbs. [16 to 20 N•m] torque.

- b. Turn the adjusting screw to tighten the belts. Tighten the belts so that they have 100 to 110 lbs. tension. Use the Part No. ST-1274 Belt Tension Gauge to check the belt tension, Fig. 14-53.
- c. Tighten the locknut for the idler pulley shaft to 45 to 55 ft.-lbs. [61 to 74 N•m] torque.
- d. Check the belt tension again after you have tightened the locknut. The belt tension must be 120 to 140 lbs. [534 to 623 N]. If the tension is not correct, loosen the locknuts and repeat steps a, b and c.

The Water Pump with Idler Pulley

1. Install the water pump and idler assembly and a new gasket to the cylinder block, Fig. 14-51.

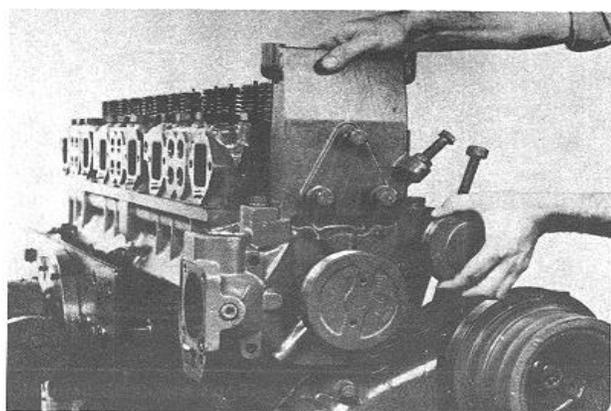


Fig. 14-51 (N114271). Install The Water Pump And Idler Pulley.

2. Tighten the capscrews in the sequence shown in Fig. 14-52.
 - a. Tighten the capscrews to 10 ft.-lbs. [14 N•m] torque.
 - b. Tighten the capscrews to 20 ft.-lbs. [27 N•m] torque.
 - c. Tighten the capscrews to 30 to 35 ft.-lbs. [41 to 47 N•m] torque.
3. Install the belts onto the water pump, water pump idler and accessory drive pulleys.
 - a. Tighten the locknut for the idler pulley shaft to 5 to 6 ft.-lbs. [6.7 to 8 N•m] torque.

4. Install the fan hub bracket to the water pump housing. Tighten the capscrews to 70 to 80 ft.-lbs. [95 to 108 N•m] torque.

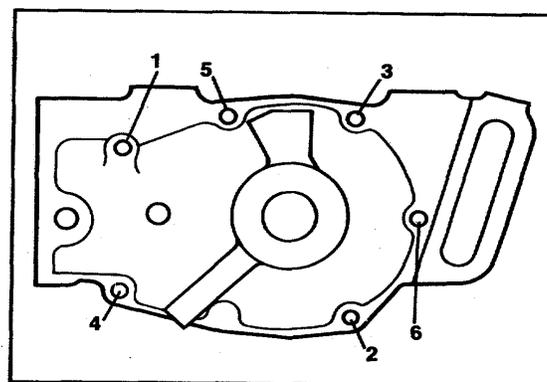


Fig. 14-52. The Tightening Sequence For The Water Pump With Idler Pulley.

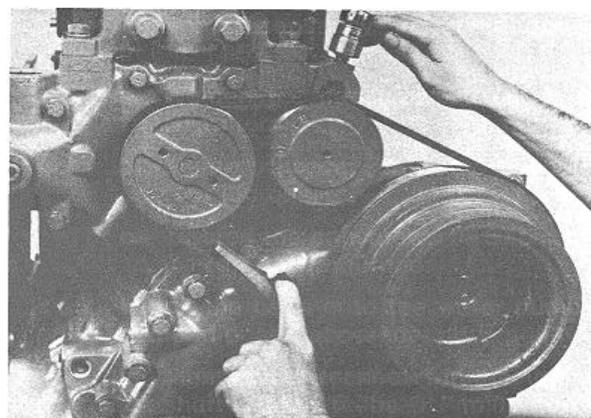


Fig. 14-53 (N114272). Adjust The Belt Tension.

Engine Assembly and Testing

Install the Rear Cover and Oil Seal

1. Make sure that the oil seal area on the crankshaft is clean and dry. Use a crocus cloth to polish the crankshaft. Use a clean cloth to clean the crankshaft.
2. Install the rear cover and a new gasket to the cylinder block. Tighten the capscrews only enough to hold the rear cover in position.
3. Install the Part No. ST-997 Oil Seal Driver onto the crankshaft and into the bore of the rear cover. Use the ST-997 to align the rear cover with the crankshaft. The ST-997-6 Buttons must be removed from the ST-997 Driver.
4. Check the alignment of the rear cover with a dial indicator gauge, Fig. 14-54.

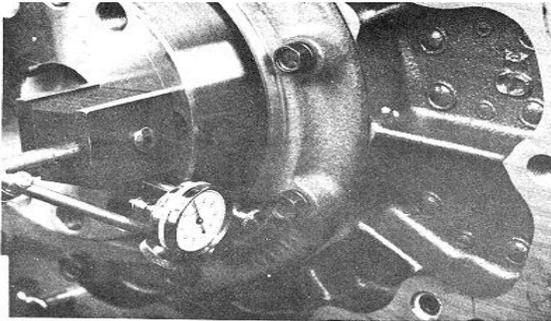


Fig. 14-54 (N114273). Check The Alignment Of The Rear Cover.

- a. The rear cover must be on a common center with the crankshaft within 0.010 inch [0.25 mm] total indicator reading.
 - b. The rear cover must be square to the centerline of the crankshaft within 0.010 inch [0.25 mm] total indicator reading.
 - c. The rear cover must be within 0.004 inch [0.10 mm] of being flat with the oil pan flange of the cylinder block.
 - d. Tighten the capscrews to 30 to 35 ft.-lbs. [40.6 to 47 N•m] torque.
5. Remove the ST-997 from the crankshaft.
 6. Cut off the excess gasket material so that the gasket is even with and not more than 0.010 inch [0.25 mm] above the oil pan flange.

7. Install the seal assembly tool onto the crankshaft. Put the largest inside diameter part of the tool toward the cylinder block.

Note: "LDL TFE" (Lay-down Lip, Teflon) oil seals for service replacement have an assembly tool which protects the seal lip during shipment and installation.

Caution: The "LDL TFE" oil seal must be installed with the lip of the seal and the crankshaft clean and dry. Do not use any kind of lubricant.

8. Push the oil seal from the assembly tool onto the crankshaft. Remove the assembly tool.
9. Install the oil seal into the rear cover. Install the ST-997-6 Buttons into the ST-997 Seal Driver. Use the seal driver to push the oil seal into the rear cover, Fig. 14-55.

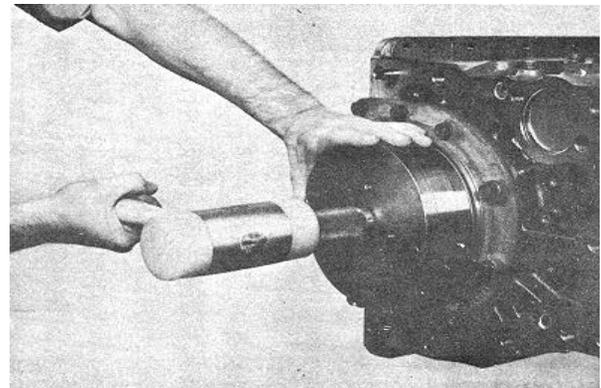


Fig. 14-55 (N114274). Install The Oil Seal.

Install the Flywheel Housing

The Dry Flywheel Housing

1. Make sure that the mounting surface of the flywheel housing is clean and free from damage.
2. Install a new camshaft bore gasket onto the flywheel housing. Use gasket cement to install the gasket to the housing. The cement must be completely dry before you install the flywheel housing.

Note: The 2 1/2 inch cam (Big Cam) engines use a cup plug seal in the rear camshaft bore. These engines do not require a camshaft bore gasket in the flywheel housing.

NT/NTA 855 C.I.D. Engine Shop Manual

3. Remove the dowels when you install a new flywheel housing. Remove the dowels if they are damaged or the outside diameter of the dowels measure less than 0.5005 inch [12.71 mm].
4. Install two studs into the cylinder block to support the flywheel housing.
5. Install the flywheel housing. Tighten the capscrews to 10 to 20 ft.-lbs. [13.5 to 27 N•m] torque.
6. Remove the studs. Install and tighten the remaining capscrews.

5. Check the circumference of the bore. The total indicator reading must not exceed the limits given in Table 11.
6. After the readings are within the limits, tighten the capscrews in the sequence given in Fig. 14-57 to 140 to 160 ft.-lbs. [190 to 217 N•m] torque.

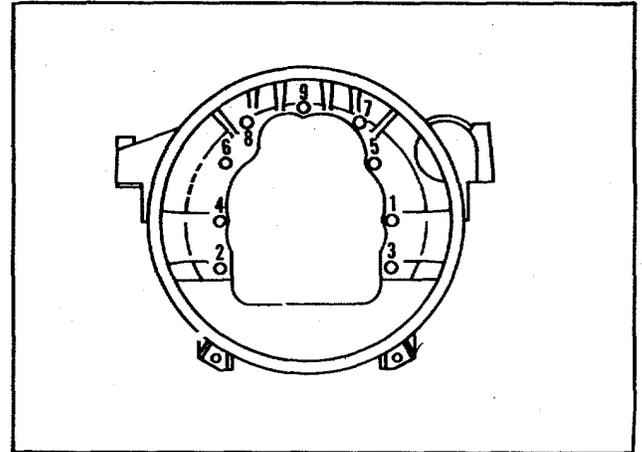


Fig. 14-57. Tightening Sequence For The Flywheel Housing Capscrews.

Check the Location of the Bore

1. Install the Part No. ST-1325 Dial Gauge Attachment to the crankshaft. Install the Part No.3376050 Dial Gauge to the attachment, Fig.14-56.

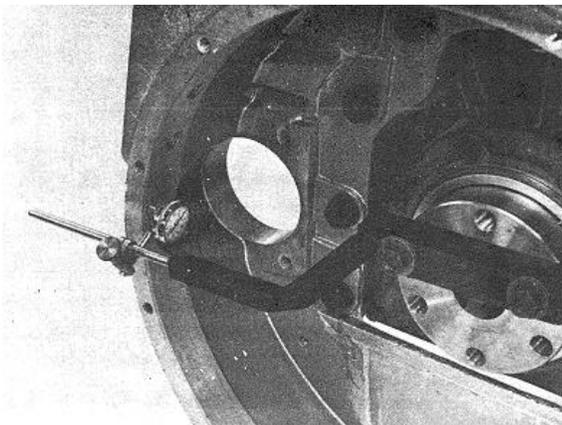


Fig. 14-56 (N114275). Check Location Of The Bore.

2. Use chalk to mark the housing at the positions of 12, 3, 6 and 9 o'clock.
3. Rotate the crankshaft to check the housing bore at 3 o'clock and 9 o'clock. If the total indicator reading exceeds the limits given in Table 11, move the housing in a horizontal direction one-half of the distance of the total indicator reading. Use a pry bar to move the housing.
4. Rotate the crankshaft to check the housing bore at 12 o'clock and 6 o'clock. Follow the procedure given in Step 3, but move the housing in a vertical direction until the reading is within the limits.

Check the Alignment of the Housing Face

1. Install the dial gauge attachment and dial gauge as shown in Fig. 14-56.
2. Push the crankshaft toward the front of the engine to remove the crankshaft end clearance.

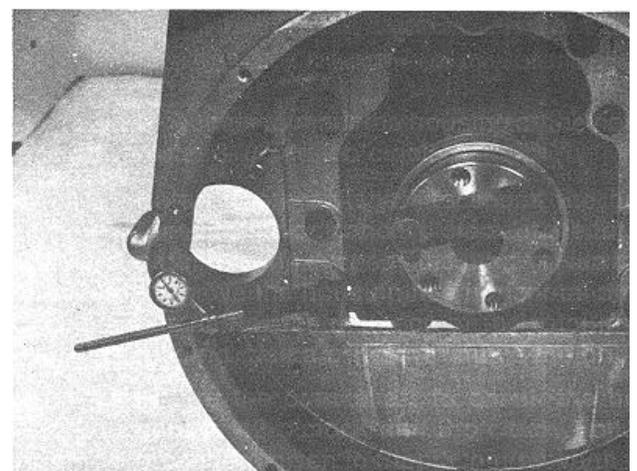


Fig. 14-58 (N114276). Check The Alignment Of The Housing Face.

Table 11. Flywheel Housing Specifications - Inch [mm]

SAE No.	Bore Diameter (For Reference Only)	Bore Location Tolerance	Face Alignment Tolerance
00	31.000 to 31.010 [787.40 to 787.65 mm]	0.012 [0.30 mm] TIR	0.012 [0.30 mm] TIR
0	25.500 to 25.520 [647.70 to 647.95 mm]	0.010 [0.25 mm] TIR	0.010 [0.25 mm] TIR
1/2	23.000 to 23.008 [584.00 to 584.20 mm]	0.010 [0.25 mm] TIR	0.010 [0.25 mm] TIR
1	20.125 to 20.130 [534.27 to 534.40 mm]	0.008 [0.20 mm] TIR	0.008 [0.20 mm] TIR
2	17.625 to 17.630 [447.68 to 447.80 mm]	0.008 [0.20 mm] TIR	0.008 [0.20 mm] TIR
3	16.125 to 16.130 [409.58 to 409.70 mm]	0.008 [0.20 mm] TIR	0.008 [0.20 mm] TIR
4	14.250 to 14.255 [361.95 to 362.08 mm]	0.006 [0.15 mm] TIR	0.006 [0.15 mm] TIR
5	12.375 to 12.380 [314.33 to 314.45 mm]	0.006 [0.15 mm] TIR	0.006 [0.15 mm] TIR
6	10.500 to 10.505 [266.70 to 266.83 mm]	0.006 [0.15 mm] TIR	0.006 [0.15 mm] TIR

3. Rotate the crankshaft and check the alignment of the face of the flywheel housing. Make sure that the crankshaft is pushed toward the front of the engine as you check the alignment.
4. The total indicator reading must not exceed the limits given in Table 11.

6. Check the alignment of the seal carrier. Align the seal carrier so that it is on a common center with the crankshaft within 0.008 inch [0.20 mm] total indicator reading.
7. Tighten the capscrews to 8 to 9 ft.-lbs. [10.8 to 12.2 N•m] torque.

The Dowel Pins

1. If the dowel pins were removed from the cylinder block, use a drill and reaming fixture to ream the dowel holes to the next oversize.
2. Install the dowel pins. The dowels must be even with or 0.010 inch [0.25 mm] below the surface of the housing that is closest to the flywheel.

Caution: *Never operate the engine without clutch oil in the housing. Operating without clutch oil will damage the clutch seal and clutch.*

Install the Flywheel

Note: When you install a new flywheel, remove the dowels.

1. Install two guide studs that have 518-18 threads and are 6 inches [152 mm] long into the crankshaft flange.
2. Install the flywheel onto the studs. Align the dowel holes in the flywheel and crankshaft.
3. Install and tighten the capscrews.
 - a. Lubricate the threads of the capscrews and the face of the hardened washers with 30W oil.
 - b. Use the sequence shown in Fig. 14-59 and tighten the capscrews until the flywheel is flat against the crankshaft flange.
 - c. Remove the guide studs and install the remaining two capscrews.
 - d. Tighten the capscrews that use the hardened flatwashers to 200 to 220 ft.-lbs. [271 to 298 N•m] torque.
 - e. Tighten the capscrews that have safety wire holes in the head of the capscrow to 190 to 200 ft.-lbs. [258 to 271 N•m] torque.

The Flywheel Housing with Wet Clutch Seal

If the engine is to be tested with a dynamometer, do not install the wet clutch seal until after the engine is tested. Any usage without clutch oil will destroy the clutch seal.

1. Install the housing and a new O-ring onto the cylinder block.
2. Check the location of the bore and the alignment of the face. Use the same procedure to check the location and alignment as for the dry flywheel housing.
3. Use the same procedure to install oversize dowel pins as for the dry housing.
4. Install a new seal into the seal carrier. The lip of the seal must be toward the flywheel. Use the parts catalog to find the correct seal part number.
5. Install the seal carrier and new gasket onto the flywheel housing. Tighten the Nylok capscrews to 2 to 3 ft.-lbs. [2.7 to 4 N•m] torque.

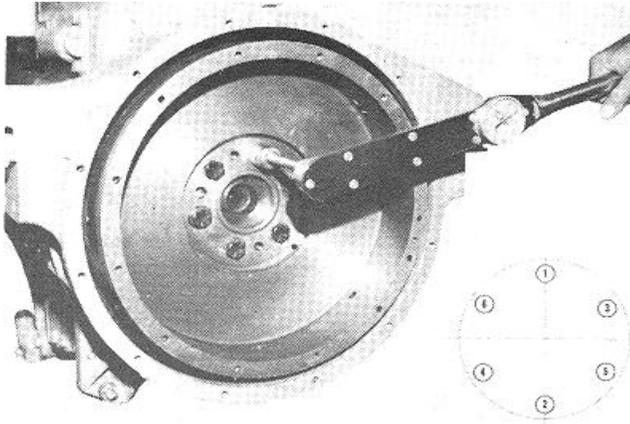


Fig. 14-59 (N11451). Tightening Sequence For The Flywheel Capscrews.

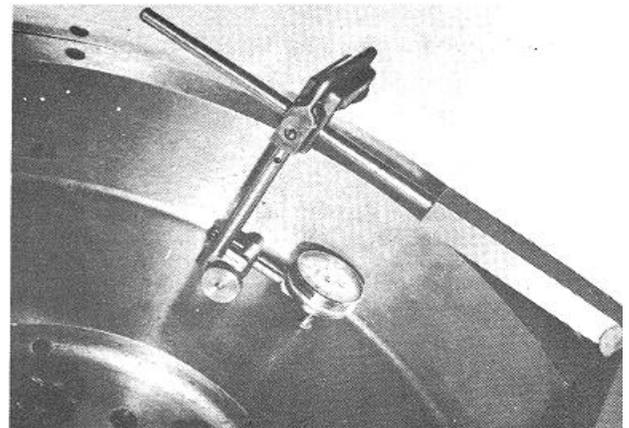


Fig. 14-61 (N114139). Check The Alignment Of The Face.

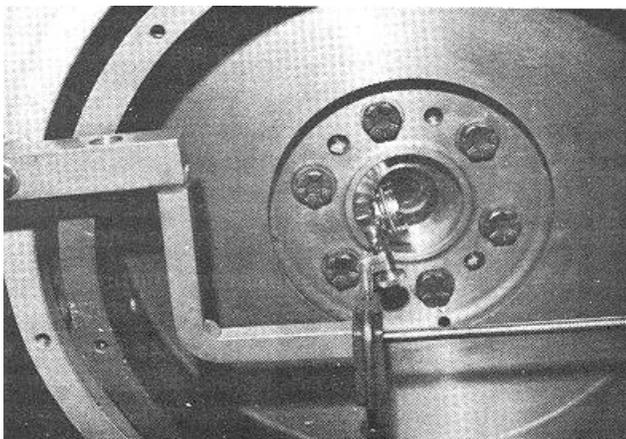


Fig. 14-60 (N114138). Check The Location Of The Bearing Bore.

- b. Rotate the crankshaft and read the indicator. The total indicator reading must not exceed 0.0005 inch [0.013 mm] per 1 inch [25.4 mm] of flywheel diameter.

Install the Oil Pan Note

Note: The oil pan used for the 80 degree tilt engine has machined bosses for the oil gauge and filter bracket, the alternator bracket and lifting eyes. Install those parts when you install the oil pan.

1. Install two guide studs into the oil pan flange of the cylinder block.
2. Put the oil pan and new gasket over the guide studs. Use your hand to install the capscrews with washers and lockwashers.

4. Check the location of the pilot bearing bore.

- a. Install the ST-1325 attachment and 3376050 gauge onto the flywheel housing. Put the trip of the indicator in the position shown in Fig. 14-60.

- b. The total indicator reading must not exceed 0.005 inch [0.13 mm] in one complete revolution of the flywheel.

5. Check the alignment of the clutch face of the flywheel. The crankshaft end movement will change the indicator reading. Make sure that the crankshaft is moved all of the way toward the front of the engine.

- a. Move the indicator so that it is positioned as shown in Fig. 14-61.

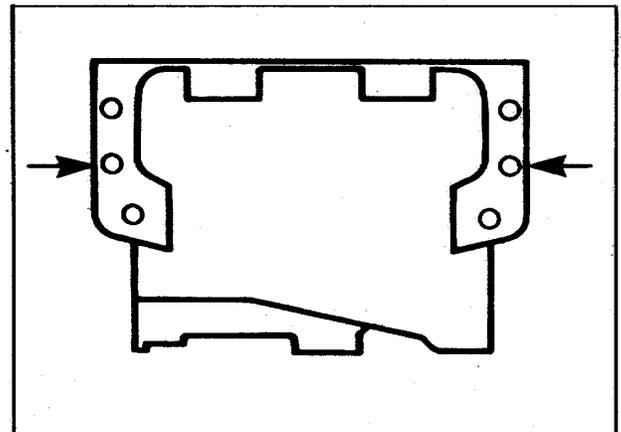


Fig. 14-62. Install Two Capscrews Into The Buttress End Of The Oil Pan.

Engine Assembly and Testing

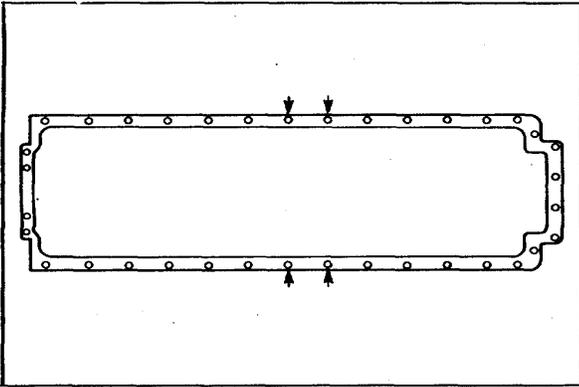


Fig. 14-63. Install The Capscrews Into The Oil Pan.

3. Use the following sequence to tighten the capscrews. This will prevent damage to the oil pan or flywheel housing.
 - a. Install and tighten the middle capscrew in each of the two butresses on the flywheel housing, Fig. 14-62.
 - b. Tighten two capscrews on each side of the oil pan flange. Tighten the capscrews that are located halfway between the front and the rear of the oil pan, Fig. 14-63.
 - c. Remove the capscrews that were installed in Step 3a. This is necessary to provide the clearance to perform the following step.
 - d. Tighten the capscrews to hold the rear corners of the oil pan to the cylinder block.
 - e. Remove the guide studs and install the capscrews.
 - f. Tighten the capscrews that hold the oil pan to the cylinder block and front cover. Tighten the capscrews to 35 to 40 ft.-lbs. [47 to 54 N•m] torque.
 - g. Tighten the capscrews that hold the oil pan butress to the flywheel housing butress. Tighten the capscrews to 70 to 80 ft.-lbs. [95 to 108 N•m] torque.
 - h. Tighten the capscrews that hold the oil pan to the rear cover plate. Tighten the capscrews to 15 to 20 ft.-lbs. [20 to 27 N•m] torque.

Install the Oil Suction Tube

1. Apply clean lubricating oil to the tube nuts and tube sleeves. Assemble the tube sleeve and nuts onto the oil suction tube. Install the oil pump adapter and oil pan flange onto the tube nuts but do not tighten.
2. Install the oil pan flange and a new gasket onto the oil pan. Do not tighten the capscrews.
3. Push the tube and sleeve assembly into the oil pump adapter until it is against the bottom in the adapter. Use your hand to tighten the nut. Then tighten the nut an additional 1 to 1-1/4 turn, Fig. 14-64.
4. Use your hand to tighten the tube nut on the oil pan suction flange. Tighten the capscrews that hold the suction flange to the oil pan to 30 to 35 ft.-lbs. [41 to 47 N•m] torque. Tighten the tube nut until it is against the stop on the suction flange.

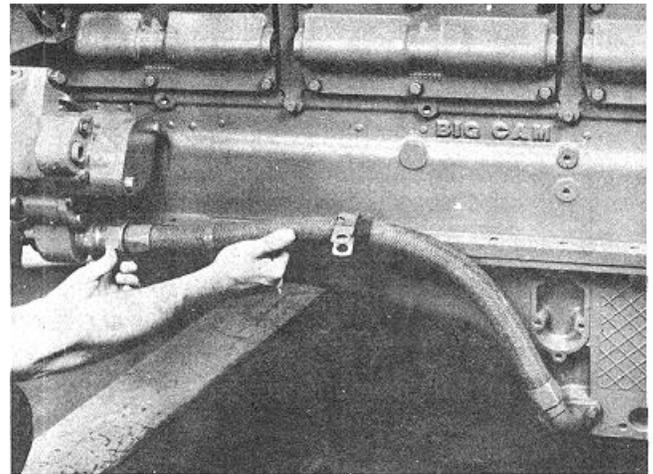


Fig. 14-64 (N114277). Install The Oil Suction Tube.

Install the Fuel Pump

1. Install the buffer or spline to the coupling of the air compressor or accessory drive.
2. Install the fuel pump and new gasket to the air compressor or accessory drive. Tighten the capscrews to 30 to 35 ft.-lbs. [41 to 47 N•m] torque, Fig. 14-65.
3. Install the fuel line to the solenoid valve.

NT/NTA 855 C.I.D. Engine Shop Manual

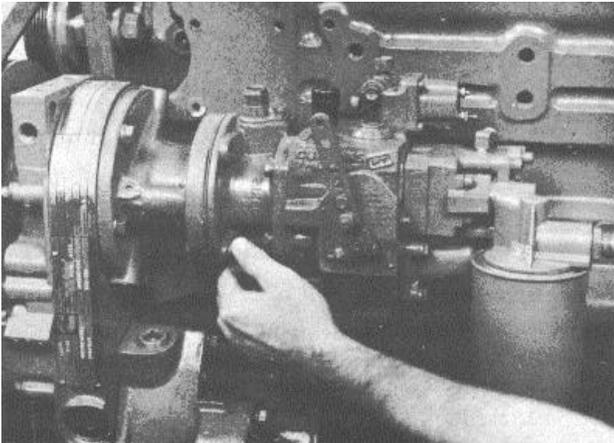


Fig. 14-65 (N114278). Install The Fuel Pump.

Install the Injectors

1. Install new O-rings onto the injectors.
2. Apply a light coat of clean lubricating oil to the injector body and O-rings.
3. Install the injector into the cylinder head. Align the screen on the fuel inlet hole so that it is toward the exhaust side of the cylinder head.
 - a. Use the Part No. 3376000 Injector Puller to install the PT (type D) Injectors. Install the tool onto the injector and use a quick hand push to push injector into the bore.
 - b. Use the Part No. 3375161 Injector Puller to install the top stop injectors. Use same procedure as for the PT (type D) injectors.
4. Install the hold-down plate, with the counterbore up, onto the injector.
5. Install the plunger link into the injector. Tighten the capscrews for the hold-down plate in increments of 4 ft.-lbs. [5 N•m] torque until they are tightened to 10 to 12 ft.-lbs. [14 to 16 N•m] torque. Tighten the Nylok capscrews to 12 to 14 ft. lbs. [16 to 19 N•m] torque.
6. Check the injector plungers for free movement after you tighten the hold-down plate. If the plunger does not move freely, loosen the capscrews then tighten to the correct torque. Check the injector plungers for the top-stop injectors. The injector plunger must rotate freely.

Install the Thermostat Housing and Water Manifold

1. Install new O-rings onto the water manifold coupling pipes. Install the coupling pipes into the water manifold sections.
2. Apply grease to the sealing rings for the water manifold and thermostat housing. Install the sealing rings into the counterbores in the cylinder heads.
3. Position the water manifold assembly onto the cylinder heads. Install and tighten capscrews to 30 to 35 ft.-lbs. [41 to 47 N•m] torque.
4. Install the front section of the thermostat housing and a new gasket. Make sure that the thermostat has been correctly installed into the housing according to the instructions given in Group 8. Tighten the capscrews to 30 to 35 ft.-lbs. [41 to 47 N•m] torque. Install the water bypass tube.

Install and Adjust the Crossheads

1. Lubricate the end of the valve stems and the entire crosshead guide with clean oil.
2. Install the crossheads onto the crosshead guides. The adjusting screw must be toward the water manifold.
3. Loosen the adjusting screw locknut. Loosen the adjusting screw one full turn.

Note: Engines equipped with Jacobs Brake use special crossheads for the exhaust valves. See Group 20.

4. Hold the crosshead down against the valve stem that is nearest to the push rod. Use light pressure to hold the cross head. Turn the adjusting screw in until it touches the valve stem, Fig. 14-66.
5. Hold the crosshead adjusting screw in position and tighten the locknut. Tighten the locknut to 25 to 30 ft.-lbs. [34 to 41 N•m] torque.

Note: When the Part No. ST-669 Torque Wrench Adapter is used, tighten the locknut to 22 to 26 ft.-lbs. [30 to 35 N•m] torque.

6. Check the clearance between the crosshead and valve spring retainer, (1 and 2) Fig. 14-67. Use a wire gauge to check the clearance. The clearance must be a minimum of 0.025 inch [0.64 mm].

Engine Assembly and Testing

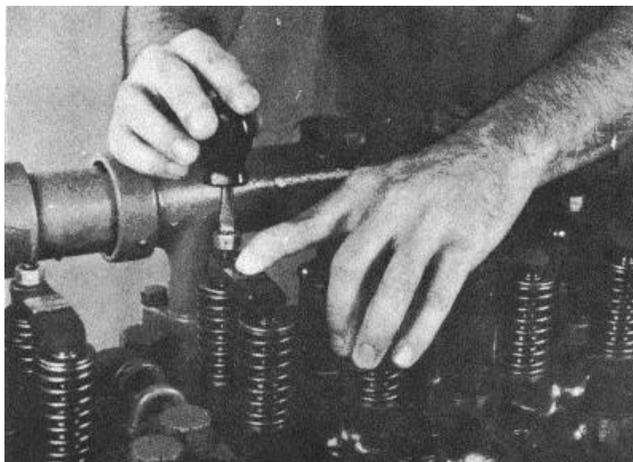


Fig. 14-66 (N114279). Adjust The Crosshead.

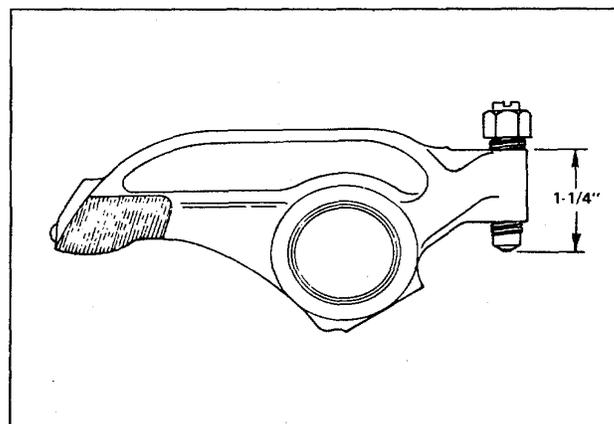


Fig. 14-68. The Correct Position For The Adjusting Screw.

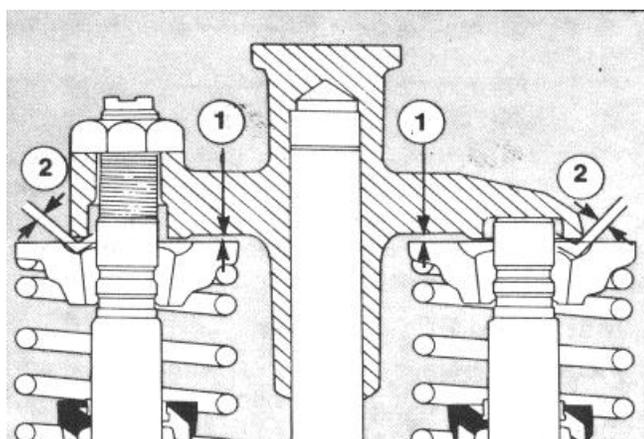


Fig. 14-67. Check These Areas For Clearance.

Install the Rocker Lever Housing

1. Put new rocker lever gaskets onto the cylinder heads. Install two guide pins into each cylinder head. The guide pins must be long enough to protrude above the top surface of the housing.
2. Loosen the locknuts for the adjusting screws. Loosen the adjusting screws so that there is a maximum of 1.250 inch [31.8 mm] from the top surface of the lever and the ball end of the adjusting screw, Fig. 14-68.

Caution: If the adjusting screw protrudes beyond the maximum shown in Fig. 14-68, the push rods can be damaged when you tighten the capscrews for the housing.

3. Hold the levers in position and install the housing onto the guide pins and cylinder head. Put the ball end of the adjusting screws into the sockets of the push rods. Remove the guide pins.
 4. Install the fan bracket brace, if the engine is so equipped, and the engine lifting brackets. Use the longest capscrews to install the fan bracket brace and the lifting brackets.
- Note:** Check the alignment of the oil spray nozzles for the 80 degree tilt engines. Use the ST-1182 spray nozzle locator to check the alignment.
5. Tighten the capscrews in the sequence shown in Fig. 14-69 to 55 to 65 ft.-lbs. [75 to 89 N•m] torque.

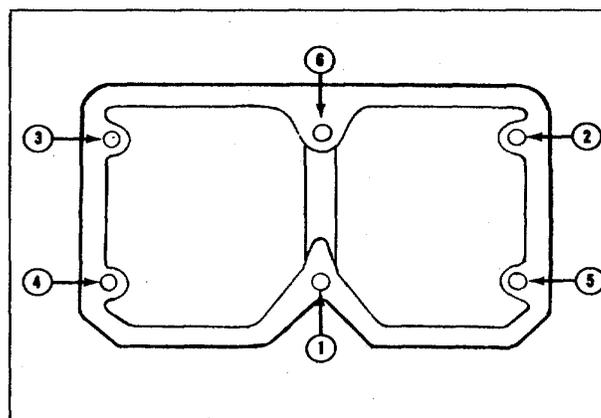


Fig. 14-69 (N11463). The Tightening Sequence For The Rocker Lever Housing Capscrews.

NT/NTA 855 C.I.D. Engine Shop Manual**Install the Fan Hub and Pulley**

1. Tighten the capscrews for the fan bracket brace to 70 to 80 ft.-lbs. [95 to 108 N•m] torque.
2. Install the fan hub assembly onto the fan hub bracket.
 - a. Install the fan hub adjusting screw.
 - b. If capscrews fasten the assembly to the bracket, tighten the capscrews to 3 to 5 ft.-lbs. [4 to 7 N•m] torque.
 - c. If a Marsden nut is used to fasten the assembly to the bracket, tighten the nut to 45 to 55 ft.-lbs. [61 to 74 N•m] torque.
3. Loosen the adjusting screw so that the fan hub is in its lowest position.
4. Install new belts onto the fan hub pulley and accessory drive pulley.
5. Tighten the fan hub adjusting screw until the belts have 90 to 110 lbs. [400 to 489 N] tension. Use the ST-1138 gauge to check the belt tension.
6. Tighten the capscrews or Marsden nut to the correct torque value.
 - a. Tighten the capscrews to 70 to 80 ft.-lbs. [95 to 108 N•m] torque.
 - b. Tighten the Marsden nut to 400 to 450 ft.-lbs. [542 to 610 N•m] torque.
7. Loosen the fan hub adjusting screw 1/2 turn.

Belt Installation and Tension

1. To install the belts:
 - a. When two or more identical belts are used on the same pulley, all of the belts must be replaced at the same time.
 - b. Make sure the distance between the pulley centers is as short as possible when you install the belts. Do not roll the belts over the pulley. Do not use a tool to pry the belts onto the pulley.
 - c. The pulleys must not be out of alignment more than 1/16 inch [1.59 mm] for each 12 inches [30.5 cm] of distance between the pulley centers.
 - d. The belts must not touch the bottom of the pulley grooves. The belts must not

protrude more than 3/32 inch [2.38 mm] above the outside diameter of the pulley.

- e. When identical belts are installed on a pulley, the protrusion of the belts must not vary more than 1/16 inch [1.59 mm].
 - f. Make sure that the belts do not touch or hit against any part of the engine.
2. To adjust the belts:
 - a. Use the Part No. ST-1274 Belt Tension Gauge to check the tension of belts that are from 3/8 to 1/2 inch [9.53 to 12.70 mm] wide. Use the ST-1138 gauge to check belts that are from 11/16 to 7/8 inch [17.46 to 22.23 mm] wide. Use the ST-1293 gauge to check the "Poly-V" belts.
 - b. Tighten the 3/8 to 1/2 inch [9.53 to 12.70 mm] wide belts until a reading of 120 to 140 lbs. is indicated on the gauge. Tighten the 11/16 to 7/8 inch [17.46 to 22.23 mm] wide belts until a reading of 90 to 110 lbs. is indicated on the gauge. Tighten the "Poly-V" belt until a reading of 140 to 160 lbs. is indicated on the gauge.
 - c. After the engine has been running for at least 1 hour, stop the engine and check the belt tension. If the tension is less than the value given in Step b, adjust the belt to the correct value.

Install the Engine Brake

Install the engine brake or Jacobs Brake if the engine is so equipped. Follow the instructions given in Group 20.

Adjust the Valves and Injectors

The valves and injectors must always be in the correct adjustment for the engine to operate efficiently.

The adjustment value for the injectors is determined by which type of rocker lever housings are used on the engine. See Table 14 to find the correct value for the aluminum and the cast iron rocker housings.

Note: When you adjust the valves and injectors for a left hand rotation engine, make sure that you use the correct sequence shown in Table 12.

The Dial Indicator Method to Adjust the Injectors

Caution: Do not use this method to adjust the top-stop injectors.

1. Rotate the crankshaft in the direction of engine rotation. Align the "A" or "1-6 VS" mark

Engine Assembly and Testing

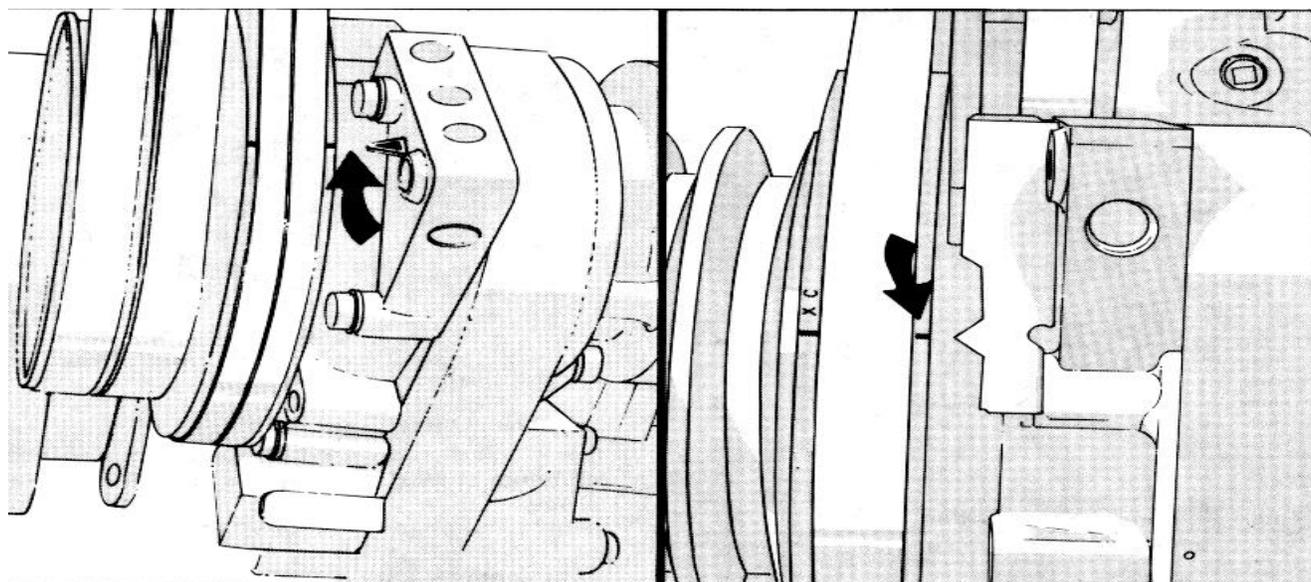


Fig. 14-70 (OM1050L). Align The Timing Marks With Pointer On The Gear Cover.

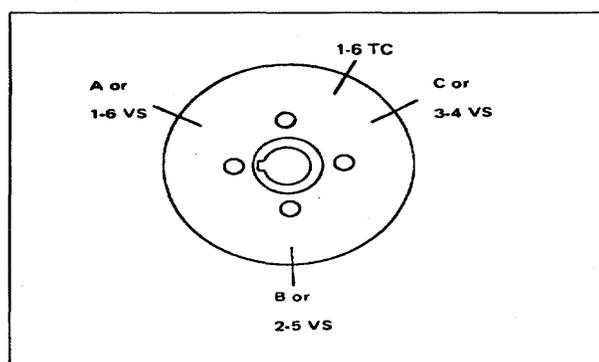


Fig. 14-71 (N114230). The Timing Marks On The Accessory

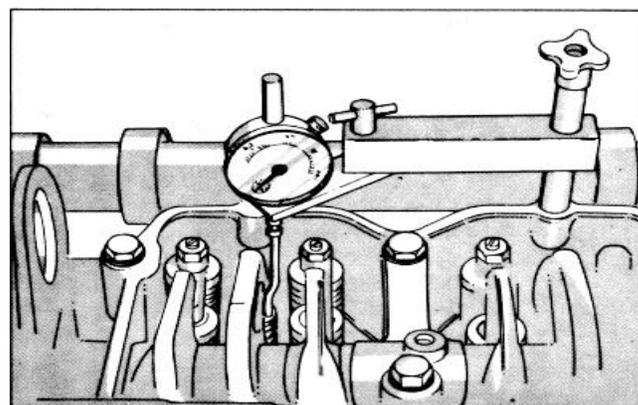


Fig. 14-72 (OM 1051 L). Check The Travel Of The Injector Plunger.

Drive Pulley.

on the accessory drive pulley with the pointer on the gear cover, Fig. 14-70 and Fig. 14-71.

2. When the "A" or "1-6 VS" mark is aligned with the pointer, the intake and exhaust valves for cylinder number 5 must be in the closed position. The injector plunger for cylinder number 3 must be at the

top of its travel. When the valves are closed, the rocker levers for cylinder number 5 will be loose. If they are not, rotate the crankshaft 360 degrees and align the marks on the pulley with the pointer.

Note: The instructions using cylinder No. 3 to begin the injector adjustments are for illustration purposes. You can begin the adjustments with any of the cylinders as shown in Table 12.

NTINTA 855 C.I.D. Engine Shop Manual.

Table 12: Injector and Valve Set Position

Right Hand Rotation Engine			
Bar in Direction	Pulley Position,	Set Cylinder Injector	Valve
Start	A or 1-6 VS	3	5
Adv. To	B or 2-5 VS	6	3
Adv. To	C or 3-4 VS	2	6
Adv. To	A or 1-6 VS	4	2
Adv. To	B or 2-5 VS	1	4
Adv. To	C or 3-4 VS	5	1

Left Hand Rotation Engine			
Bar in Direction	Pulley Position	Set Cylinder Injector	Valve
Start	1-6 VS	2	4
Adv. To	3-4 VS	6	2
Adv. To	2-5 VS	3	6
Adv. To	1-6 VS	5	3
Adv. To	3-4 VS	1	-5
Adv. To	.2-5 VS	4	1

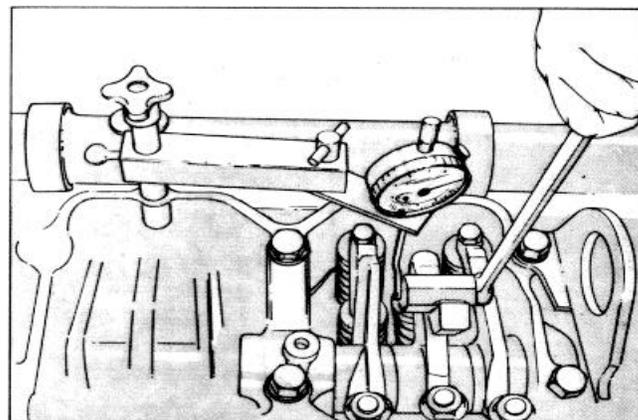


Fig. 14-73 (OM1052L). Actuate The Rocker Lever.

Table 13: Engine Firing Order

Right Hand: 1-5-3-624 Left Hand: 1-4-2-63-5

Table 14: Adjustment Limits

Using Dial Indicator Method - Inch [mm]			
Oil Temp.	Injector Plunger Travel	Valve Clearance Intake	Exhaust
Aluminum Rocker-Housing			
Cold	0.170 + 0.001 [4.32 + 0.03]	0.011 [0.28]	0.023 [0.58]
Hot	0.170 + 0.001 [4.32 + 0.03]	0.011 [0.28]	0.023 [0.58]
Cast Iron Rocker Housing			
Cold	0.175 + 0.001 [4.45 + 0.031]	0.013 [0.33]	0.025 [0.64]
Hot	0.170 + 0.001 [4.32 + 0.03]	0.011 [0.28]	0.023 [0.58]
NTE.855 (European Big Cam Only)			
	0.225 [5.72]	0.011 [0.28]	0.023 [0.58]
NT-55 (Australian Big Cam Only)			
	0.228 [5.79]	0.011 [0.28]	0.023 [0.58]

Note: Always check the engine dataplate for the injector and valve adjustment values.

Definition of "Cold"

The engine must be at any stabilized water temperature of 140°F [600C] or below.

Definition of "Hot" The oil sump (oil pan) temperature must be a minimum of 190°F [88 °C] and the water (coolant) temperature a minimum of 1850F [85°C]. The "Hot" values are given for when the engine is being tested on a dynamometer. At these times the adjustments must be made quickly.

- Use the Part No. 3375842 Injector Adjustment Kit to check the travel of the injector plunger. Install the dial indicator and support so that the extension for the dial indicator is against the injector plunger, Fig. 14-72. Make sure that the extension is correctly installed into the indicator stem and that it does not touch the rocker lever.
- Actuate the rocker lever to push the injector plunger to the bottom of its travel. Use the ST-1193 Rocker Lever Actuator from the 3375842 Adjustment Kit to actuate the rocker lever, Fig. 14-73. Let the plunger rise to the top of its travel. Actuate the lever again and set the indicator at zero as you hold the plunger at the bottom of its travel.
- Tighten the rocker lever adjusting screw until the injector plunger has the correct travel. as shown in Table 14.
- Hold the adjusting screw in position and tighten the locknut to 40 to 45 ft.-lbs. [54 to 61 N•m] torque. Actuate the rocker lever two or three times to make sure that the adjustment is correct. When you use the ST-669 Adapter to tighten the locknut, tighten the locknut to 30 to 35 ft.-lbs.[41 to 47 N•m] torque.

Engine Assembly and Testing.

Adjust the Valves

After you adjust the injector, the valves must be adjusted for the cylinder shown in Table 12 before you rotate the crankshaft to the next adjustment mark.

1. Make sure that the locknuts for the adjusting screws are loose.
2. Put a feeler gauge between the rocker lever and the contact surface of the crosshead, Fig. 14-74. See Table 14 to find the correct thickness of the feeler gauge.

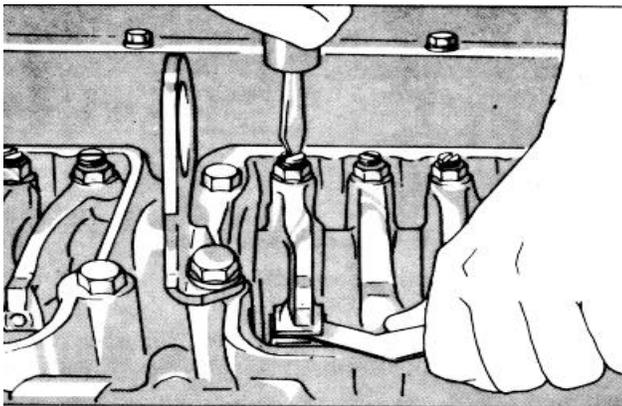


Fig. 14-74 (OM1055L). Adjust The Valves.

3. Tighten the adjusting screw until the rocker lever touches the feeler gauge. Hold the adjusting screw in position and tighten the locknut to 40 to 45 ft.-lbs. [54 to 61 N•m] torque. When you use the ST-669 Adapter, tighten the locknut to 35 to 40 ft.-lbs. [47 to 54 N•m] torque.
4. Repeat the procedure to adjust all of the remaining valves.

To Adjust the Top-Stop Injectors **Note:** To adjust the injectors for engines with MVT, the MVT actuator must be in the fully retarded position.

Caution: The top-stop injector plunger travel can only be adjusted when the injectors are removed from the engine. Use the Part No. 3379160 Adjusting Tool to adjust the plunger travel.

1. Rotate the crankshaft in the direction of engine rotation and align the "VS" mark on the accessory

drive pulley with the pointer on the gear cover.

2. Loosen the locknut for the rocker lever adjusting screw. Tighten the adjusting screw until all of the clearance is removed from between the rocker lever and injector link. Then tighten the adjusting screw one additional turn.
3. Loosen adjusting screw until the spring washer is against the stop of the injector, Fig. 14-75.

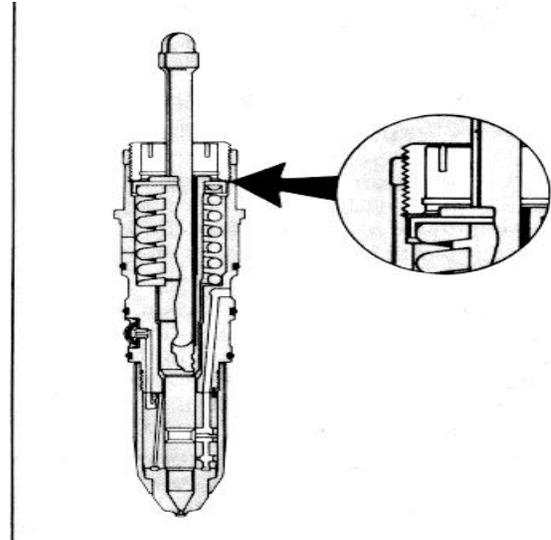


Fig. 14-75. Top-Stop Injector - The Washer Against The Stop.

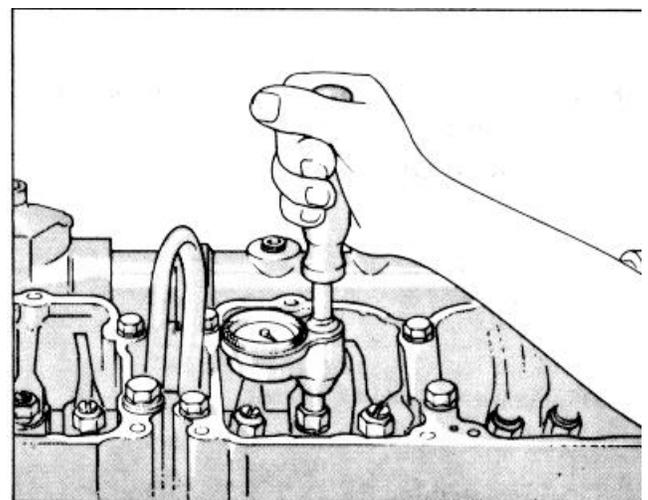


Fig. 14-76. Tighten The Adjusting Screw.

NTINTA 855 C.I.D. Engine Shop Manual.

4. Tighten the adjusting screw to 5 to 6 in.-lbs. [0.56 to 0.68 N•m] torque. Use the Part No. 3375232 Torque Wrench to tighten the screw, Fig. 14-76. If you do not have a torque wrench, tighten the screw until there is light pressure against the injector link. The link must be free enough that you can rotate it with your hand.
5. Hold the adjusting screw in position and tighten the locknut to 40 to 45 ft.-lbs. [54 to 61 N •m] torque. When you use the ST-669 Adapter tighten the locknut to 30 to 35 ft.-lbs. [41 to 47 N•m] torque.

The Torque Method to Adjust the Injectors

1. Rotate the crankshaft in the direction of engine rotation. Align the mark on the pulley with the pointer on the gear cover. Check both cylinders indicated on the pulley (Fig. 14-71) to see which valve rocker levers are loose. Adjust the injector of the cylinder in which the rocker levers are loose.
2. Loosen the adjusting screw locknut. Tighten the adjusting screw until the injector plunger is at the bottom of its travel. Tighten the adjusting screw an additional 15 degrees to remove all of the oil from the injector cup. Loosen the adjusting screw one full turn.
3. Use a torque wrench that is calibrated in inch-lbs. to adjust the injectors. The torque wrench must have a screwdriver adapter. Tighten the adjusting screw to the correct torque value shown in Table 15. Loosen the adjusting screw and adjust it to the torque value two or three times to make sure that it is correctly adjusted.

Table 15: Injector Adjustment (Torque Method)

	Cold Set	Hot Set
Cast Iron Rocker Housing	48 inch-lb. [5.4 N•m]	72 inch-lb. [8.1 N•m]
Aluminum Rocker Housing	72 inch-lb. [8.1 N•m]	72 inch-lb. [8.1 N•m]

4. Hold the adjusting screw in position and tighten the locknut to 40 to 45 ft.-lbs. [54 to 61 N•m] torque. When you use the ST-669 Adapter, tighten the locknut to 30 to 35 ft.-lbs. [41 to 47 N•m] torque.

Valve Adjustment

When using the Torque Method, the valves and injector are adjusted on the same cylinder before rotating the crankshaft for the next cylinder. See Table 16 to find the correct valve clearance. Tighten the locknuts to 40 to 45 ft.-lbs. [54 to 61 N•m] torque.

Table 16: Valve Clearance (Torque Method) - Inch [mm]

	Intake Valves		Exhaust Valves	
	Cold Set	Hot Set	Cold Set	Hot Set
Aluminum Rocker Housing	0.014 [0.36]	0.014 [0.36]	0.027 [0.69]	0.027 [0.69]
Cast Iron Rocker Housing	0.016 [0.41]	0.014 [0.36]	0.029 [0.74]	0.027 [0.69]

Install the Rocker Housing Covers

1. Install the rocker housing covers and new gaskets onto the rocker housing.
 - a. Tighten the capscrews for the aluminum cover to 12 to 17 ft.-lbs. [16 to 23 N•m] torque.
 - b. Tighten the capscrews for the steel cover to 10 to 15 ft.-lbs. [14 to 21 N•m] torque.
 - c. Tighten the capscrews for the aluminum cover that uses gaskets made of cork and rubber to 75 to 95 in.-lbs. [8.5 to 10 N•m] torque.

Note: Refer to the parts catalog to find the correct gasket to use.

Install the Intake Manifold or Aftercooler

1. Put new manifold gaskets onto the intake ports of the cylinder heads. Use a small amount of Lubriplate to hold the gasket against the cylinder head.
2. Follow these instructions to install the intake manifold.
 - a. Install a capscrew and washer assembly into the bottom capscrew hole of each intake port on the cylinder head. Tighten the capscrews 3 to 5 turns.
 - b. Install the manifold with slots onto the capscrews and washers. Make sure that the washers are not between the cylinder head and manifold.

Engine Assembly and Testing.

- c. Install the remaining capscrews and washers into the manifold and cylinder heads. Tighten the capscrews to 20 to 25 ft.-lbs. [27 to 34 N•m] torque.
3. Follow these instructions to install the aftercooler.
 - a. Install a guide pin into a capscrew hole in the intake port of each cylinder head.
 - b. Install the aftercooler onto the guide pins.
 - c. Install the capscrews and washers. Remove the guide pins and install the remaining capscrews and washers. Tighten the capscrews to 20 to 25 ft.-lbs. [27 to 34 N•m] torque.
4. Install the air inlet connection and a new gasket onto the intake manifold. Tighten the capscrews to 20 to 25 ft.-lbs. [27 to 34 N•m] torque.
5. Install the front and the rear water crossover tubes to the aftercooler. Make sure that the hoses for the water crossover tubes are not damaged. Tighten the hose clamps to 35 to 45 in.-lbs. [4 to 5 N•m] torque.

Install the Aneroid Control

1. Install the aneroid control and bracket assembly, if the engine is so equipped, to the fuel pump side of the engine. Tighten the capscrews to 25 to 30 ft.-lbs. [34 to 40.6 N•m] torque.
2. Install the fuel pressure line, from the bottom of the fuel pump, to the connection on the aneroid that is marked "IN". Install the fuel return line from the fuel inlet connection on the aneroid that is marked "OUT".
3. Install the air line to the top of the aneroid and to the intake manifold.
4. Tighten the 1/4 inch tube nuts to 10 to 15 ft.-lbs. [13.5 to 20 N•m] torque. Tighten the 5/16 inch tube nuts to 15 to 20 ft.-lbs. [20 to 27 N•m] torque.

Install the Fuel Filter

The Filter Cartridge

Note: All construction engines and engines that have a rating of above 350 horsepower must be equipped with dual fuel filters. Install the filter cartridges to a dual cartridge filter head.

1. Install the mounting bracket for the filter. Install the bracket to the same location on the engine as when

it was removed. Tighten the capscrews to 25 to 30 ft.-lbs. [34 to 40.6 N•m] torque.

2. Install the filter head on to the bracket. Tighten the capscrews to 15 to 20 ft.-lbs. [20 to 27 N•m] torque.
3. Apply a light coat of lubricating oil to a new cartridge seal and to the gasket of a new cartridge. Install the seal and cartridge onto the filter head. Use your hand to tighten the cartridge. Tighten the cartridge until the gasket is against the filter head and then tighten the cartridge an additional one-half turn.
4. Install the fuel line from the fuel pump to the filter head. Install the line to the connection that is marked "OUT".

The Filter Element

1. Install the mounting bracket and filter head to the engine. Install the bracket to the same location on the engine as when it was removed.
2. Check the connections in the filter head for leaks. Make sure that the connections are tightened to 30 to 40 ft.-lbs. [41 to 54 N•m] torque.
3. Install a new gasket to the filter head. Install a new element into the filter shell. Install the element and shell assembly onto the filter head. Tighten the center bolt to 20 to 25 ft.-lbs. [27 to 34 N•m] torque.
4. Install the fuel line from the fuel pump to the filter head. Install the line to the connection that is marked "OUT".

Remove the Engine from the Stand

1. Install the lifting fixture to the engine.
2. Remove the capscrews that hold the engine to the stand.

Caution: *Make sure that the lifting fixture is correctly installed to the engine.*

3. Install the front and rear supports onto the engine. Lower the engine until it is supported by the front and rear supports.
4. Remove the lifting fixture.
5. Remove the engine stand support plates. Install the cover plates and new gaskets to the water header.

Install the Exhaust Manifold

1. Install new exhaust manifold gaskets onto the

NTINTA 855 C.I.D. Engine Shop Manual.

cylinder heads. The side of the gaskets marked "OUT" must be away from the cylinder heads. Apply a small amount of "Man-Gil No. 1865" paste or an equivalent to the gaskets to hold them in position on the cylinder heads.

2. Assemble the sections of the exhaust manifold and install them onto the engine. Install new lockplates, if the engine is so equipped, onto the capscrews. Apply a coat of anti-seize compound onto the threads of the capscrews. Start all of the capscrews two to three turns. Install the special capscrews for the heat shield, if the engine is so equipped.
3. Tighten the capscrews evenly to 15 to 20 ft.-lbs. [20.3 to 27 N•m] torque. If the engine uses bar clamps to hold the manifold, make sure that the clamps are parallel to the mounting surface of the cylinder heads when tightened. Tighten the capscrews again to 40 to 45 ft.-lbs. [54 to 61 N•m] torque.
4. Bend the tabs of the lockplates until they are against the heads of the capscrews.

Install the Piston Cooling Nozzles

1. Apply vegetable oil to new O-rings for the piston cooling nozzles. Install the O-rings into the groove of the nozzle. Use the Part No. ST-835 O-ring Assembly Tool to install the O-ring. Make sure that the O-ring is not twisted in the groove.

Note: Do not soak the O-rings in oil.

2. Install the nozzles into the cylinder block, Fig. 14-77. Tighten the slotted head screw to 60 to 96 in.-lbs. [7 to 11 N•m] torque. Tighten the hex head screw to 100 to 140 in. lbs. [11 to 15.8 N•m] torque, Fig. 14-78.

Install the Oil Cooler

1. Install guide pins into the cylinder block to help you to install the cooler assembly.
2. Install a new oil cooler support gasket over the guide pins.
3. Install the oil cooler assembly onto the cylinder block, Fig. 14-79.
4. Install the capscrews and lockwashers. Remove the guide pins. Tighten the capscrews to 30 to 35 ft.-lbs. [40.6 to 47.4 N•m] torque.
5. Install the support bracket, if the engine is so equipped, onto the rear of the cooler and onto

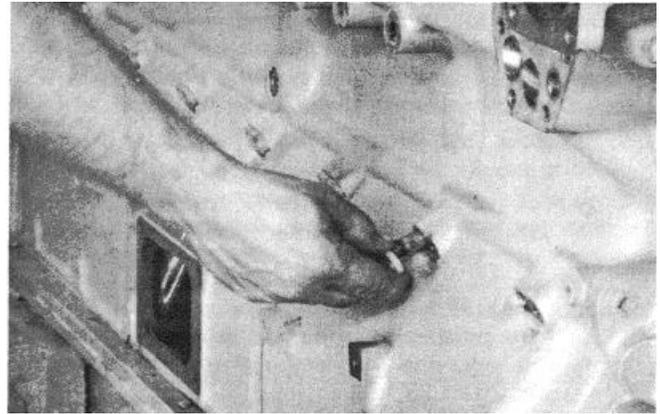


Fig. 14-77. Install The Piston Cooling Nozzles.

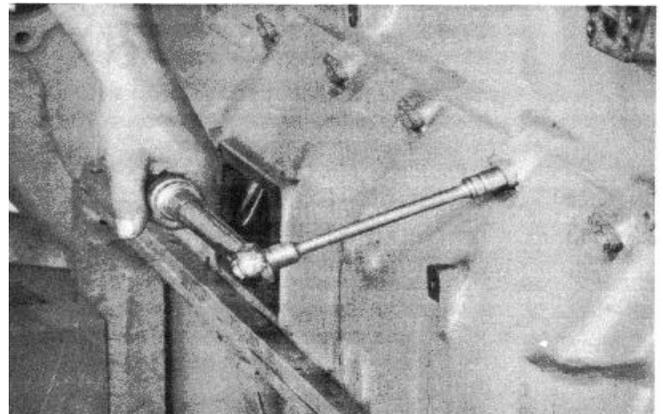


Fig. 14-78. Tighten The Screw For The Piston Cooling Nozzle.

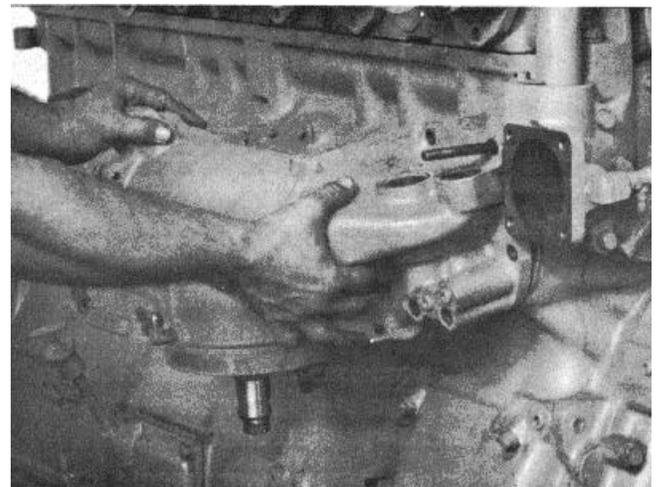


Fig. 14-79. Install The Oil Cooler Assembly.

Engine Assembly and Testing.

the cylinder block. Tighten the capscrews for the bracket to the following values: a. 3/8 inch capscrews 30 to 35 ft.-lbs. [40.6 to 47.4 N•m] torque.

- b. 7/16 inch capscrews 50 to 55 ft.-lbs. [68 to 74.5 N•m] torque.
 - c. 1/2 inch capscrews 75 to 85 ft.-lbs. [101.7 to 115 N•m] torque.
6. Install the water transfer tube into the rear of the cooler housing and onto the connection on the rear water header cover. Tighten the hose clamps to 35 to 45 in.-lbs. [4 to 5 N•m] torque.
 7. Install new O-rings onto the water transfer tube. Install the tube into the thermostat housing and the oil cooler. Tighten the retaining capscrew to 30 to 35 ft.-lbs. [40.6 to 47.4 N•m] torque, Fig. 14-80.

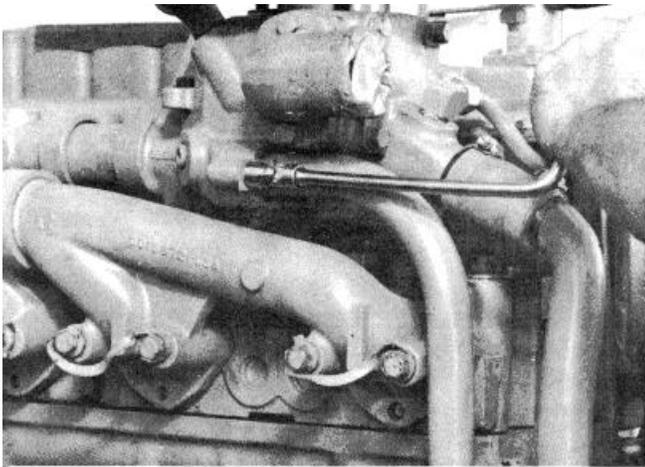


Fig. 14-80. Install The Water Transfer Tube.

8. Apply a coat of clean oil to the sealing gasket of the oil filter element. Install the oil filter.
 - a. Use the installation instructions that are printed on the spin-on filter cartridge in order to install it.
 - b. Install the element and filter shell assembly onto the filter head. Tighten the center bolt to 25 to 35 ft.-lbs. [34 to 47.4 N•m] torque.

Note: Make sure that there is a minimum of 0.250 inch [6.3 mm] clearance between the filter and the oil pan flange of the cylinder block.

Install the Water Inlet Connection

Install a new gasket and the water inlet connection onto the water pump. Tighten the capscrews to 30 to 35 ft.-lbs. [40.6 to 47.4 N•m] torque.

Install the Air Compressor Water Lines

1. Install the water inlet and outlet lines to the air compressor, the cylinder block and the water bypass connection.
2. Tighten the tube nuts to the following values:
 - a. 1/2 inch 10 to 15 ft.-lbs. [14 to 20 N•m] torque.
 - b. 7/8 inch 15 to 20 ft.-lbs. [20 to 27 N•m] torque.
 - c. 1-1/4 inch 20 to 25 ft.-lbs. [27 to 34 N•m] torque.

Install the Alternator or Generator

1. Follow those instructions to install the alternator/generator that uses the spool type of mounting bracket.
 - a. Install the mounting bracket onto the cylinder block. Do not tighten the capscrews at this time.
 - b. Align the alternator/generator mounting holes with the mounting holes of the bracket. Put the hardened washers or spacers between the mounting lugs of the alternator/generator and the mounting bracket. Install the bolt onto the mounting holes in the alternator/generator and the mounting bracket. Do not tighten the bolt at this time.
 - c. Install the adjusting link onto the cylinder block.
 - d. Install the belt(s) onto the alternator/generator pulley and the pulley on the engine. Check the alignment of the pulleys. The pulleys must be aligned within 0.062 inch [1.57 mm] for each 12.0 inches [305 mm] of distance between the centers of the pulleys. Move the mounting bracket until the alignment is correct. Then tighten the capscrews for the mounting bracket.
 - e. Adjust the belt(s) to the correct tension. Use a pry bar to push the alternator/generator away from the cylinder block to.

NTINTA 855 C.I.D. Engine Shop Manual.

tighten the belt(s). Tighten the capscrews for the adjusting link. See Table 17 to find the correct torque value.

Table 17: Torque Values (To Adjusting Link)

Nominal Bolt Size	Torque
Inch	Ft.-Lb. [N•m]
5/16	15 to 19 [20 to 26]
7/16	25 to 30 [34 to 41]
1/2	50 to 55 [68 to 75]

- f. Tighten the alternator/generator mounting bolt. See Table 18 to find the correct torque value.

Table 18: Torque Values (To Bracket)

Nominal Bolt Size	Torque
Inch	Ft.-Lb. [N•m]
3/8	29 to 31 [39 to 42]
7/16	63 to 65 [85 to 88]
1/2	77 to 80 [104 to 108]

Table 19: Torque Values

(Pulley to Alternator or Generator)

Nominal Bolt Size	Torque
Inch	Ft.-Lb. [N•m]
1/2	50 to 60 [68 to 81]
5/8	55 to 65 [75 to 88]
3/4	90 to 100 [122 to 126]

Note: Exceptions to the above limits are:

DelcoRemy Alternators	Torque
	Ft.-Lb. [N•m]
10 DN 150	70 to 80 [95 to 108]
25 SI	
CAV Alternators	
AC 5	40 to 42 154 to 571
AC 7	60 to 70, [81 to 95]
AC 90	60 to 70 181 to 95]

- 1. Install the starting motor and if used, the spacer onto the mounting pad of the flywheel housing. Make sure that the starting motor drive gear will engage with the flywheel ring gear when the starting motor is activated.

Note: When the engine is equipped with a wet clutch, use a new gasket and nylok capscrews to install the starting motor.

- 2. Tighten the capscrews to 150 to 170 ft.-lbs. [203 to 230 N•m] torque.

Install the Oil Gauge Bracket

Install the oil gauge bracket and new gasket to the cylinder block. Tighten the capscrews to 30 to 35 ft.-lbs. [40.6 to 47.4 N•m] torque.

- 2. Follow these instructions to install the alternator/generator that uses a two-lug type of mounting bracket:

- a. Install the mounting bracket onto the cylinder block. Do not tighten the capscrews at this time.
- b. Align the mounting holes as described in Step 1b. Install the mounting bolts so that the nuts for the bolts are toward each other.
- c. Follow the procedures in Steps 1c, 1d and 1e to install the adjusting link, to check the alignment and to tighten the belt(s).
- d. Tighten the alternator/generator mounting bolts. Tighten the bolt nearest to the pulley first. Then use a hammer to hit the head of the bolt in the opposite end of the alternator/generator. Hit the bolt until the bushing that is in the mounting hole of the alternator/generator is against the mounting bracket. Tighten the bolt. See Table 18 to find the correct torque value.

- 3. Follow the same instructions to install the alternator/generator that uses the fabricated steel mounting bracket.

- 4. When you install a pulley onto the alternator/generator, always use the locknut and hardened washer that are supplied with the alternator/generator. Tighten the locknut to the torque value given in Table 19.

Install the Breather Tube

- 1. Install the breather tube, if the engine is so equipped, onto the crankcase breather. Be sure to install a new O-ring for the breather tube.
- 2. Use a tube clamp to fasten the tube to the cylinder block.

Install the Starting Motor

If a new starting motor is to be installed, make sure that it is the same type of starting motor that was removed.

Engine Assembly and Testing.

Install the Water Filter

1. Install the bracket and filter head onto the cylinder block. Install the bracket and filter head at the same location on the engine as when it was removed. Tighten the capscrews to 30 to 35 ft.-lbs. [40.6 to 47.4 N•m] torque.
2. Install the valves and hoses to the filter head.
3. Apply a light coat of oil to the sealing gasket of a new filter cartridge.
4. Install the new filter cartridge onto the filter head. Tighten the cartridge until the sealing gasket touches the filter head. Then, tighten the cartridge an additional one-half to three-fourth turn.

Caution: Do not use a wrench to tighten the cartridge. Over-tightening can damage the threads and the seal.

Install the Turbocharger

To Install the Single Turbocharger

1. Apply a coat of anti-seize compound to the threads of the turbocharger mounting studs.
2. Install a new turbocharger gasket onto the exhaust manifold. The raised bead on the gasket must be toward the turbocharger.
3. Install the turbocharger onto the exhaust manifold. Tighten the mounting nuts to 20 to 25 ft.-lbs. [27 to 34 N•m] torque, Fig. 14-81.
4. Install the oil drain tube or hose onto the connection in the bottom of the bearing housing.

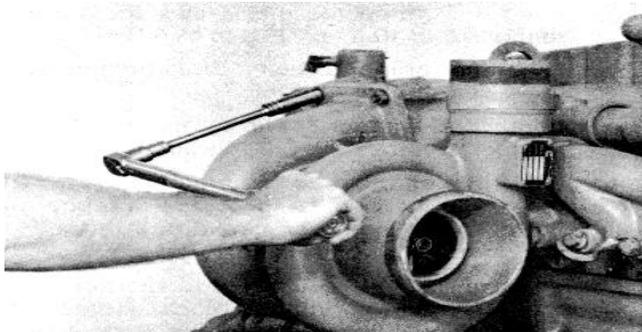


Fig. 14-81. Install The Turbocharger Onto The Exhaust Manifold.

- a. Align the tube with the connection in the bearing housing and the connection in the cylinder block.
- b. Tighten the tube nut to 50 to 60 ft.-lbs. [68 to 81 N•m] torque.
- c. Tighten the hose clamps to 35 to 45 in.-lbs. [4 to 5 N•m] torque.
- d. If the drain tube uses a "Flex" type of tube nut, tighten the nut until it is against the stop.
- e. Tighten the hose swivel nut to 50 to 60 ft.-lbs. [68 to 81 N•m] torque.

Note: The centerline of the oil drain hole must be within 30 degrees of vertical when the turbocharger is installed onto the engine. If you loosen the Vee clamps of the housing to align the oil drain hole, tighten the clamp nuts to 32 to 36 in.-lbs. [3.6 to 4.1 N•m] torque. Then, use a plastic hammer to lightly hit around the circumference of the clamps. Tighten the clamp nuts again to 32 to 36 in.-lbs. [3.6 to 4.1 N•m] torque.

5. Install the oil supply hose to the connections in the top of the turbocharger and on the oil cooler. Tighten the swivel nuts to 19 to 26 ft.-lbs. [25.7 to 35 N•m] torque.
6. Install the air intake crossover onto the turbocharger and the air intake manifold or the aftercooler, Fig. 14-82. Use a new rubber tubing connection and new gasket. Tighten the capscrews into the air intake manifold or after-

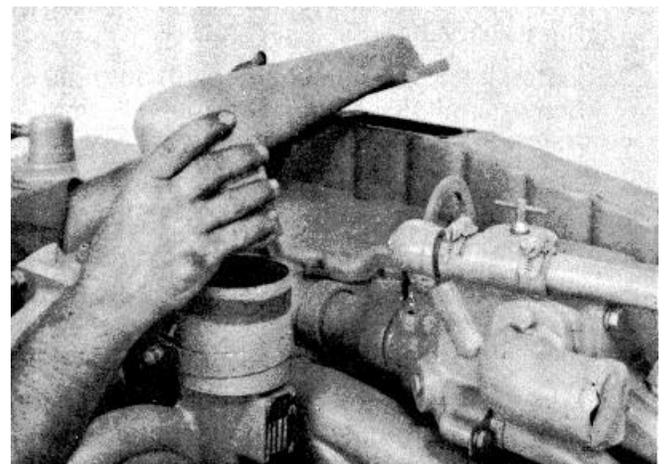


Fig. 14-82. Install The Air Intake Crossover.

NTINTA 855 C.I.D. Engine Shop Manual.

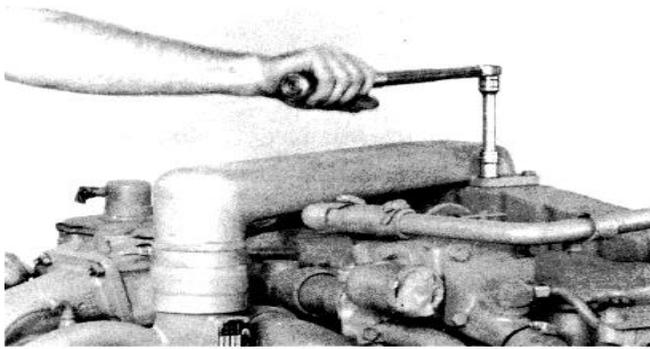


Fig. 14-83. Tighten The Capscrews For The Crossover.

cooler to 20 to 25 ft.-lbs. [27 to 34 N•m] torque, Fig. 14-83. Tighten the nuts for the clamps to 65 to 75 in.-lbs. [7.4 to 8.5 N•m] torque.

To Install the Series Turbochargers

The High Pressure (H.P.) turbocharger installs onto the exhaust manifold. The Low Pressure (L.P.) turbocharger installs onto the exhaust inlet connection. Follow these instructions to install the turbocharger.

Install the H.P. Turbocharger

1. Apply a coat of anti-seize compound onto the threads of the mounting studs that are in the exhaust manifold.
2. Install a new gasket (9, Fig. 14-84) for the H.P. Turbocharger (10) onto the exhaust manifold. The raised bead on the gasket must be toward the turbocharger.
3. Install the H.P. Turbocharger (10) onto the exhaust manifold. Tighten the nuts to 5 to 10 ft.-lbs. [6.8 to 13.5 N•m] torque.
4. Install the supports (3) onto the exhaust manifold. Tighten the nuts to 5 to 10 ft.-lbs. [6.8 to 13.5 N•m] torque.
5. Install the oil drain tube onto the turbocharger. Tighten the capscrews for the tube flange to 5 to 10 ft.-lbs. [6.8 to 13.5 N•m] torque.
6. Install a new gasket (8) and the exhaust outlet connection (4) onto the turbocharger. Install the gasket so that the bead is toward the turbocharger.

7. Install the adapter (6), clamp (5) and inlet connection (7) onto the outlet connection (4). Align the connection (7) with the supports (3) and install the capscrews, washers and nuts to fasten the connection onto the supports.
8. Align and tighten the parts in the following sequence.
 - a. Tighten the clamp for the exhaust connection to 70 to 80 in.-lbs. [8 to 9 N•m] torque.
 - b. Tighten the mounting nuts for the turbocharger to 30 to 35 ft.-lbs. [40.6 to 47.4 N•m] torque.
 - c. Tighten the mounting nuts that fasten the exhaust connection to the turbocharger to 30 to 35 ft.-lbs. [40.6 to 47.4 N•m] torque.
 - d. Tighten the capscrews that fasten the supports to the exhaust manifold to 50 to 60 ft.-lbs. [68 to 81 N•m] torque.
 - e. Tighten the capscrews and nuts that fasten the inlet connection to the supports to 30 to 35 ft.-lbs. [40.6 to 47.4 N•m] torque.


Note: The centerline of the oil drain hole must be within 30 degrees of vertical when the turbocharger is installed onto the engine.

Install the L.P. Turbocharger

1. Install the L.P. Turbocharger(1, Fig. 14-84) and a new gasket (2) onto the exhaust connection (7). The bead on the gasket must be toward the turbocharger. Tighten the capscrews and nuts to 5 to 10 ft.-lbs. [6.8 to 13.5 N•m] torque.
2. Install the oil drain tube onto the turbocharger. Tighten the capscrews for the tube flange to 5 to 10 ft.-lbs. [6.8 to 13.5 N•m] torque.

Note: The centerline of the oil drain hole must be within 30 degrees of vertical.

3. Install the air connection (16), hose (14) and clamps (15) onto the L.P. Turbocharger (10).
4. Install the air crossover, air inlet pipe (12) and new O-rings (11) onto the H.P. Turbocharger. Install the retaining braces (13) onto the H.P. Turbocharger.
5. Install the oil drain tubes into the hose connections on the cylinder block. Tighten the hose clamps to 30 to 35 in.-lbs. [3 to 4 N•m] torque.

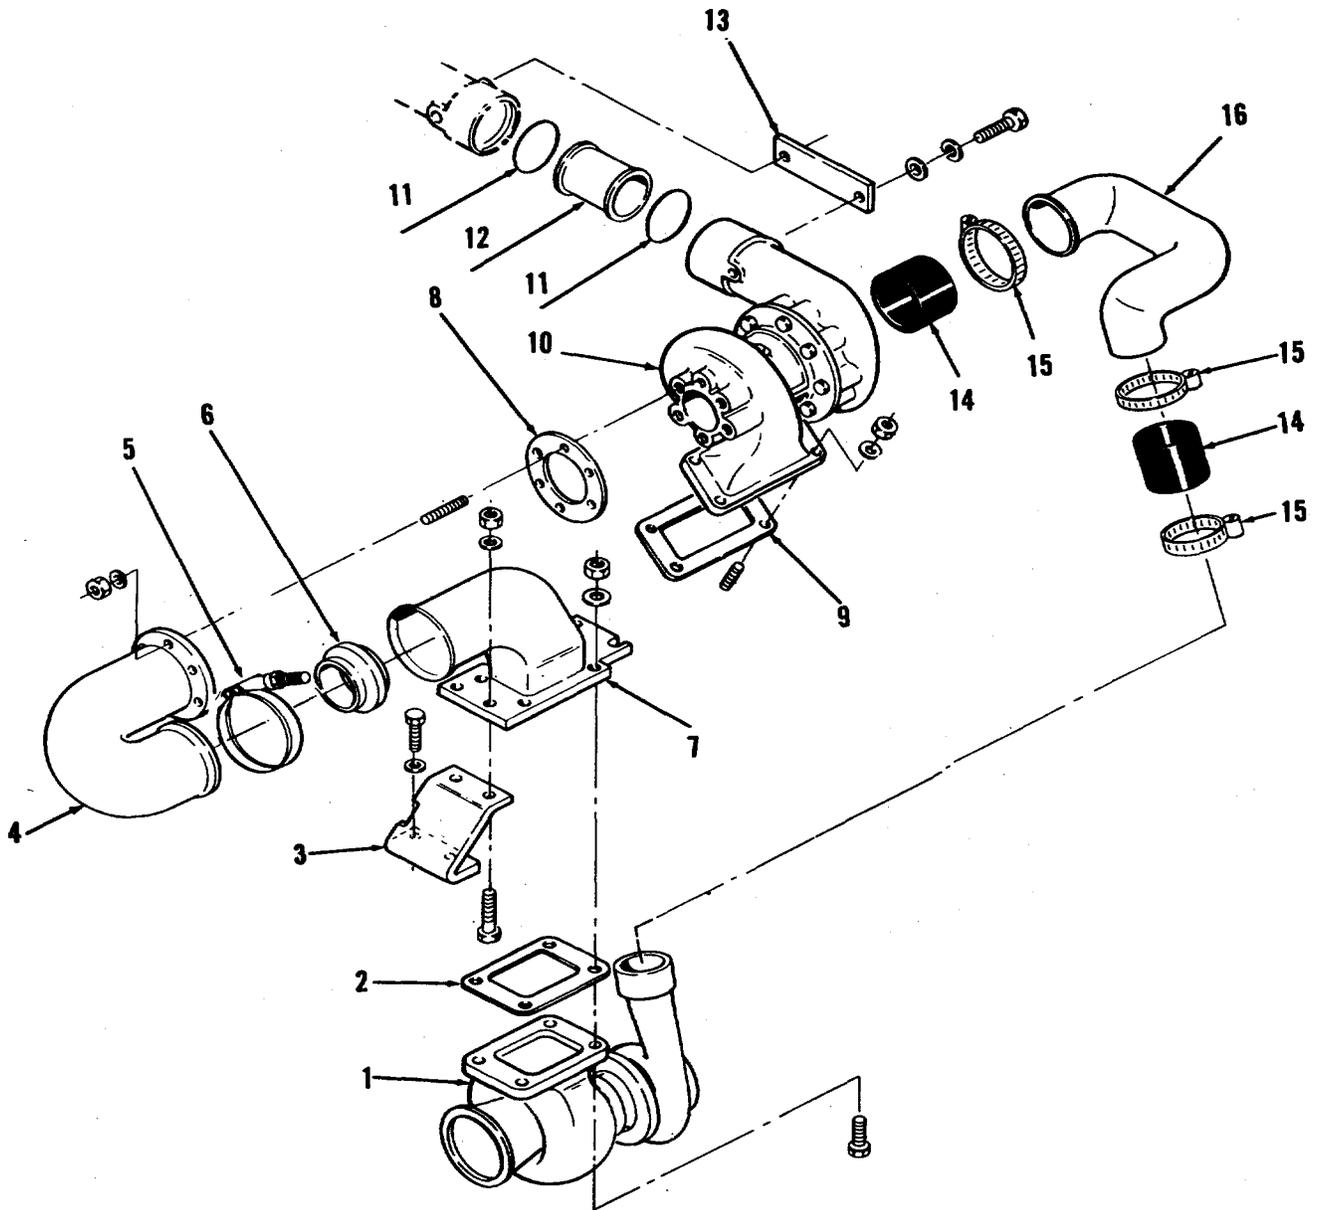

- | | | | |
|------------------------------|-----------------------------|--------------------------------|--------------------|
| 1. Low Pressure Turbocharger | 5. Clamp | 9. Gasket | 14. Hose |
| 2. Gasket | 6. Exhaust Outlet Adapter | 10. High Pressure Turbocharger | 15. Clamp |
| 3. Support | 7. Exhaust Inlet Connection | 11. O-Ring | 16. Air Connection |
| 4. Exhaust Outlet Connection | 8. Gasket | 12. Air Inlet Pipe | |
| | | 13. Brace. | |

Fig. 14-84. Series Turbochargers - Exploded View.

NTINTA 855 C.I.D. Engine Shop Manual'

6. Align and tighten the parts. Use the following torque values.
 - a. Tighten mounting capscrews and nuts for the turbocharger to 30 to 35 ft.-lbs. [40.6 to 47.4 N•m], torque.
 - b. Tighten the capscrews for the oil drain tube flange to 30 to 35 ft.-lbs. [40.6 to 47.4 N•m] torque.
 - c. Tighten the clamps for the air connection to 65 to 75 in.-lbs. [7.3 to 8.5 N•m] torque.
 - d. Tighten the capscrews for the retaining braces to 15 to 20 ft.-lbs. [7.3 to 8.5 N•m] torque.
7. Install the oil supply hoses onto both of the turbochargers. Tighten the swivel nuts to 19 to 26 ft.-lbs. [25.7 to 35 N•m] torque.
8. Install the clamps to hold the oil hoses as shown in Fig. 14-85. Install the hoses onto the connections in the oil cooler and filter head as shown in Fig. 14-85. Tighten the hose nuts to 5 to 10 ft.-lbs. [6.89 to 13.5 N•m] torque.

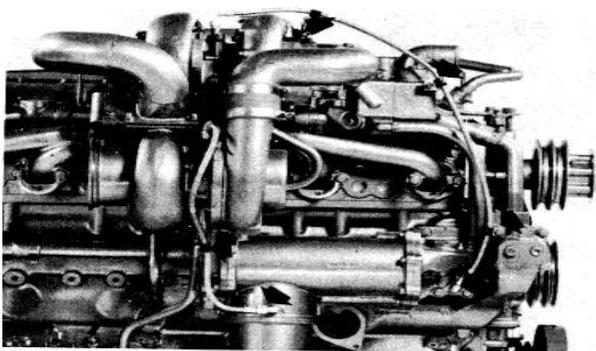


Fig. 14-85. Location Of Hose Clamps And Oil Connections.

To Test the Engine

The run-in period of the engine is completed during the testing of the engine. It is necessary to test the engine to find errors that can occur during the assembly process. Testing also lets you make final adjustments and check the performance.

Engine Dynamometer Test

Check the dynamometer capacity. Make sure the capacity is enough to permit

testing at least 96 percent of the maximum engine horsepower. If the capacity is not enough, the testing procedures must be changed to prevent damage to the dynamometer.

Caution: Make sure the dynamometer can operate at engine speeds. The couplings must have the centrifugal forces balanced.

Installation

1. Use the correct lifting device to put the engine on the dynamometer test stand.
2. Install and fasten the engine to the supports.
3. Put the dynamometer drive shaft flange onto the engine flywheel. Use the correct flywheel adapter flange for the flywheel capscrew holes.
4. Check for correct alignment.
 - a. If the drive coupling is direct or flexible, put an indicator holding fixture on the face of the flywheel housing. Put the pointer of the indicator on the hub of the adapter flange. Rotate the engine to get a reading. The flywheel adapter flange must be to the center of the flywheel and the flywheel housing within 0.002 inch [0.05 mm]. Move the flange hub on the flywheel as needed and tighten the capscrews. On direct coupling dynamometers, measure from the face of the flywheel housing to the outer edge of the dynamometer drive flange. When the dynamometer is turned one revolution the reading must not exceed 0.003 inch [0.08 mm].
 - b. If a universal drive coupling is used, the drive flange on the flywheel must be to the center within 0.003 inch [0.08 mm]. The drive flange on the dynamometer must also be to the center within .003 inch [0.08 mm]. Measure the center of these flanges as described in "a" above. Install the engine so that the center of the engine crankshaft and the center of the dynamometer drive shaft are out of alignment by 1/4 inch [6.35 mm] to 1/2 inch [12.7 mm]. Fasten the flywheel to the drive flange.

Preparation for Starting

Before priming the fuel and the lubricating systems, remove and fill all the filters with the correct fluid.

Engine Assembly and Testing.

Fill Cooling System

1. Install the drain plugs and close all draincocks.
2. Open the cooling system vents, if applied.
3. Fill the system with coolant until it flows from the vents. Close the vents and finish filling the system.

Note: For cold weather operation, see Service Bulletin No. 3379009.

Preparing the Fuel System

1. Attach the fuel return tube from the flow tank to the fuel drain connection.
2. Attach the fuel supply tube of the flow tank to the suction connection of the fuel pump.
3. Connect the electrical wiring to the starting motor if the motor is to be used for starting. If another method of starting is to be used, make the necessary connections.
4. Connect the throttle linkage and all the instruments on the control panel of the dynamometer.
5. Fill the fuel pump with fuel before starting the engine for the first time.
6. Check the fuel tanks. There must be a supply of a clean, good grade No. 2 diesel fuel in the tanks. See "Fuel Oil", Group 18, for the correct specifications.
7. Connect the exhaust piping to the engine exhaust manifold or turbocharger.
8. Connect the air intake pipe to the intake manifold or turbocharger. Use a standard air cleaner for the engine model being tested.

Preparing the Lubricating System

1. If the engine has a turbocharger, remove the oil inlet hose and lubricate the bearing with 2 ounces [33 cc] of clean engine oil. Install the oil inlet line.
2. Fill the crankcase to "L" (low) mark on the dipstick.
3. Remove the plug from the lubricating oil crossover passage as shown in Fig. 14-86.

Caution: Do not prime the engine lubricating system from the by-pass filter.

4. Connect a priming pump line from a supply of clean engine oil to the pipe plug hole.

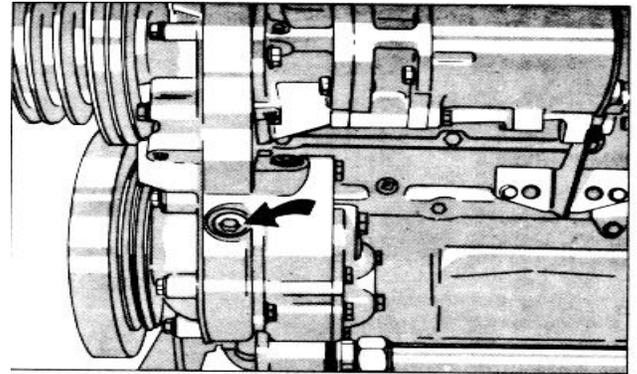


Fig. 14-86 (OM1001L). The Priming Location For The Lubricating System.

5. A 30 psi [207 kPa] minimum pressure must be reached.
6. Use the starter to rotate the crankshaft. Make sure that the fuel shut-off valve is closed to prevent starting the engine. Rotate the crankshaft for 15 seconds. Keep the oil pressure at a minimum of 15 psi [103 kPa] while you rotate the crankshaft.
7. Remove the external oil supply line. Install the pipe plug. Tighten the plug to 60 to 70 ft.-lbs. [81 to 95 N•m] torque.
8. Fill the crankcase to the "H" (high) mark on the dipstick with oil meeting the specifications listed in Group 18. The oil which is best for engine operation is also best for the run-in period. No change in the oil viscosity or type is needed for new or rebuilt engines.

Warning: Always clean off any lubricating oil which was spilled while priming or filling the crankcase.

Caution: Stop the engine after it has run for 5 minutes and check the oil level. Keep the oil level as near as possible to the "H" mark on the dipstick. Never operate the engine with the oil level below the "L" mark or above the "H" mark.

Fill the Hydraulic Governor

1. Fill the oil sump of the hydraulic governor, if the engine is so equipped, with the same type of lubricating oil that is used in the engine.
 - a. Fill the sump until the oil level is at the full mark on the dipstick.

NTINTA 855 C.I.D. Engine Shop Manual.

- b. If the governor sump has an inspection glass instead of a dipstick, the oil level must be at the centerline of the glass.

Check the Oil Flow to the Turbocharger

1. Remove the oil drainline from the turbocharger.
2. Start the engine and keep the engine RPM at low idle.
3. Check the oil drain from the turbocharger. The oil must drain from the turbocharger in 10 to 15 seconds. If it does not, stop the engine and correct the problem.

Starting the Engine

To start the engine requires clean air and fuel supplied to the combustion chamber in proper quantities and a starting system meeting minimum Cummins recommendations.

Normal Starting Procedure

If the fuel system is equipped with an overspeed stop, push the "Reset" button before attempting to start the engine.

1. Set the throttle for idle speed.

Caution: *To prevent damage to the turbocharger, do not accelerate the engine above 1000 RPM until the reading on the oil pressure gauge indicates normal oil pressure at idle speed.*

2. Disengage the transmission or make sure the gears are in neutral.
3. Open the manual fuel shutoff valve on the fuel pump if the engine is so equipped. The electric shutoff valve operates as the switch is turned on.
4. Press the starter button or turn the switch-key to the "start" position.

Caution: *To prevent damage to the starting motor, do not engage the starting motor continuously for more than 30 seconds. If the engine does not start within the first 30 seconds, wait two minutes before attempting to restart*

5. A manual override knob provided on the forward end of the electric shutoff valve allows the valve to be opened in case of electric power failure. To use the override manually, open it by turning the knob completely clockwise. Return the knob to the run position after the repair has been completed.

General Test Procedures**1. Air Compressors.**

- a. All Cummins-manufactured air compressors are to be operated in a pumping mode during engine run-in.
- b. Cummins single-cylinder air compressors must pump through a 0.125 to 0.130 inch [3.18 to 3.30 mm] diameter orifice located down line from a 150 psi pressure relief valve.
- c. Adjust the Cummins two-cylinder air compressors to maintain 50 to 75 psi [345 to 517 kPa] in the air tank regardless of the engine speed.
- d. Air compressors of another manufacturer can be operated in a pumping or a nonpumping mode at the option of the tester.
- e. Engine performance checks are to be made with the air compressor operating in a non-pumping mode.

2. Blow-by Measurement.

- a. If a water manometer is used to measure blow-by, you can add or remove water to raise or lower the height of the water column to the "0" position. Dye can be added to the water to make the column easier to read.
- b. Record the blow-by readings along with the respective engine speed and load at one-minute intervals during engine run-in. This will inform the tester of any unexpected increase or fluctuation in blow-by.

3. Engine Starting.

- a. To start the engine, put the throttle in the low idle position and activate the starter. After the engine starts, operate it at low idle only long enough (five to ten minutes) to check for proper oil pressure and inspect for any fuel, oil, water or air leaks.

Note: Do not allow the engine speed to exceed 1000 rpm before run-in. Do not run the engine at idle speed for prolonged periods of time before run-in.

4. Engine Run-in performance data.

- a. Refer to the Mechanics Specification Handbook to find the engine performance data. Check the engine dataplate to find the year that the engine

Engine Assembly and Testing.

Table 20: Mechanics Specifications Handbook

Engine Build Date	Use Bulletin No.
1976	3379116-00
1977	3379138-00
1978	3379156-00
1979	3379212-00

*For engines built prior to 1976 use Bulletin No. 3379116-00.

was built. See Table 20 to find the correct Mechanics Specification Handbook.

5. Leakage Inspection.
 - a. After each run-in step has been completed, carefully inspect the engine for fuel, oil, water, air, or exhaust leaks and correct as necessary.
6. Engine is shutoff.
 - a. After the run-in has been completed, allow the engine to run at low idle for a minimum of three minutes before stopping the engine.

Note: Do not stop the engine immediately after the last run-in step is completed as serious engine damage can result.

Maintenance of Dynamometer

Follow the manufacturer's maintenance instructions to get the best service from the dynamometer.

Calibration of Instruments

1. Keep the scales properly calibrated.
2. Follow the manufacturer's recommendations when calibrating is necessary.
3. If the instruments need adjustment, follow the manufacturer's instructions.

NHINT-855 Engine Run-In Test

Refer to "General Test Procedures" section before beginning run-in.

1. Engine dynamometer run-in schedule: Step 1, 1200 rpm and 25% of rated load until water temperature reaches 160°F [71 °C].

Step 2, 1200 rpm and 40% of rated load for two minutes.

Step 3, 1600 rpm and 65% of rated load for five minutes.

Step 4, Nominal torque peak rpm* and full load for four minutes.

Step 5, Rated speed and full load for four minutes.

*100 rpm below torque peak rpm.

2. Chassis dynamometer run-in schedule.
 - a. Use the engine dynamometer run-in schedule, but multiply the load values by 0.8 (to compensate for lower drive line efficiency) for a readout on the chassis dynamometer load scale.
3. In-chassis run-in schedule.
 - a. Operate the engine on the torque curve at less than rated speed for the first 50 to 100 miles after rebuild (e.g. pulling a loaded trailer at 1500 to 1800 rpm in high gear).

Note: Do not idle the engine for more than five minutes at any one-time during the first 100 miles of operation.

4. Blow-by measurement.
 - a. If the engine is naturally aspirated, plug the breather holes in the cylinder heads. Remove the plugs after the blow-by check has been completed.
- b. Put a plug in the crankcase breather vent. Remove the "bottle stopper" oil filler cap and replace it with the blow-by tool containing a 0.302 inch [7.67 mm] diameter orifice, Part No. 3375150. Connect the blow-by tool to the blow-by gauge.

Note: Do not attempt to contain the blow-by gases when a labyrinth type seal cover is used.

- c. Refer to the "Blow-by Measurement" section of the "General Test Procedures" for the actual measurement-recording procedure.
- d. If a sudden increase in blow-by occurs, or if blow-by exceeds the maximum allowable limit listed in (e.) during any run-in step, return to the previous step and run the engine an additional 15 minutes. When blow-by reaches an accept-

NTINTA 855 C.I.D. Engine Shop Manual.

table level, proceed to the next step and continue the run-in.

Note: If blow-by does not reach an acceptable level after repeating the previous step for 15 minutes, discontinue the run-in and determine the cause of the excessive blow-by.

- e. Maximum allowable blow-by during run-in:

Naturally aspirated	8 inch H ₂ O
Turbocharged	12 inch H ₂ O

Checks During the Engine Run-in Test

During the engine run-in test, make the following checks frequently:

Lubricating Oil

1. After the lubricating oil has reached normal operating temperature, the oil pressure must not change while the engine is operating at a given RPM and load. See Table 21 to find the correct oil pressure limits.
 - a. If the oil pressure is above the limit, check for restrictions in the oil lines.
 - b. If the oil pressure is below the limits, check for restrictions in the oil supply line to the oil pump or damaged bearings in the engine.
2. Check the temperature of the oil in the oil pan. If the oil temperature rises above 225°F [107°C], stop the engine and make the necessary corrections.

Table 21: Lubricating Oil Pressure for New or Rebuilt Engines

Engine Series	Oil Pressure At Idle Speed PSI [kPa]	Oil Pressure At Rated Speed PSI [kPa]
NH/NT and Big Cam	15 [103]	50 to 70 [345 to 4831]
Big Cam II, NTE.	10 [69]	35 to 45 [241 to 310]

Note: Measure the oil pressure when the temperature of the oil in the oil pan is at 200 to 225°F [93 to 107°C].

Engine Coolant

After the engine is started, add enough coolant to completely fill the cooling system. The temperature.

of the coolant must not exceed 2000F 193°C] or be less than 160°F [71]1 during operation of the engine.

Overspeed Stop

The overspeed stop is used to shut off the fuel supply when the engine speed is approximately 15 percent in excess of the maximum rated engine speed. If the engine is equipped with an overspeed stop and the overspeed stop has become activated, correct the cause and reset the overspeed stop.

Fuel Pressure and Fuel Rate

Refer to the Fuel Pump Calibration Manuals to find the values for the fuel pressure and fuel rate and for the adjustment procedure. Check the engine dataplate to find the fuel rate and the year that the engine was built. Check the fuel pump nameplate to find the fuel pump calibration code.

See Table 22 to find the correct manual. Use the Part No. ST-1190 or 3376375 Fuel Measuring Instrument to measure the rate of fuel consumption.

Table 21: Fuel Pump Calibration and Instructions Manuals

Bulletin No.	Title	Engine Model Year
3379077	PT (type G) Calibration Values	1963-1969
3379068	PT (type G) Calibration Values	1970-1975
3379182	PT (type G) Calibration Values	1976-1980
3379101	PT (type R) Rebuild and Calibration Instructions	All
3379084	PT (type G & H) Rebuild and Calibration Instructions.	All

Torque Converter Governor - PT (type R) Fuel Pump

Refer to the PT (type R) Fuel Pump Manual, Bulletin No. 3379101 to find the correct procedure to adjust the engine governor and torque converter governor.

Aneroid Control Adjustment

Refer to the Fuel Pump Manual, Bulletin No. 3379068 to find the correct procedure to adjust the aneroid control.

Paint the Engine

1. Make sure all engine surfaces are clean and dry before painting them.

Engine Assembly and Testing

2. Put tape over all openings that must not be painted.
3. Put tape over all belts or remove them.
4. Protect the fuel pump dataplate, engine data-plate and other dataplates on the engine from paint.
5. Exposed threads, wire terminals and hose fittings must be protected with tape. Pipe openings, fuel pump drain, fuel manifold drain and oil cooler openings must have a cap installed.
6. Protect the clutch contact surface of the flywheel with a rust preventing compound if the engine is not going into immediate service.
7. Apply a coat of primer to the outside surfaces of the engine.
8. Apply enamel paint to the outside surfaces of the engine after the primer is dry.

Engine Storage

All surfaces of an engine will rust or corrode if they are not protected. Make sure all outside surfaces are painted before the engine is put in storage. Protect the inside of the engine during storage as described below.

Temporary Storage

If an engine remains out of service for three or four weeks (maximum six months), take steps to prevent rust. The operations listed below are required to prevent damage to engines in temporary storage.

1. The engine must be started and the speed gradually increased to 1200 rpm with no load. Operate the engine until the water temperature is at least 1600F [71 °C].
2. Disconnect both fuel lines at the fuel supply tank. Fill two portable containers, one with diesel fuel and a second with preservative oil U.S. Military Specification MIL-L-644 Type P-9. Preservative oil to this specification is Daubert Chemical Co., Nox-Rust No. 518. Daubert Chemical address is 2000 Spring Road, Chicago, Illinois.
3. Start the engine with the fuel inlet line pulling fuel from the can with the diesel fuel. Let the drain line flow into the container with the diesel fuel. After the engine is started and is running at idle, move the

fuel line to the container with the preservative oil. Operate the engine five to ten minutes on the preservative oil. Stop the engine and reconnect the fuel lines to the supply tank.

4. The oil sump, fuel filters and fuel tank, must be drained and the drain plugs installed. New oil can be added.
5. Remove the intake hose from between the air cleaner and the intake manifolds. 6. Disconnect the electrical wiring. Turn the shutoff valve on the fuel pump counterclockwise so that the engine will not start. Rotate the crankshaft of the engine while applying a spray of 10W oil into the intake manifold and the air compressor.
7. Put tape over all the intake manifold openings to keep out dirt and moisture.
8. Put tape over all the engine openings, including the coolant inlets, cylinder block, oil breather and crankcase.
9. Drain the coolant from the cooling system, unless it is a permanent antifreeze with a rust inhibitor added.
10. Put the engine in a place protected from the weather where the air is dry and the temperature is even.
11. Rotate the engine crankshaft two or three revolutions each three to four weeks.

Long Term Storage

1. When an engine is to be in storage for six months or more, it must be protected against rust and corrosion.
2. The engine must be started and the speed gradually increased to 1200 rpm with no load. Operate the engine until the water temperature reaches 160°F [71°C]. Stop the engine and drain the old oil.
3. Fill the crankcase to the full mark on the dipstick with preservative oil, U.S. Military Specification MIL-L-21260, Type P-10, Grade 2, SAE 30. This specification can be obtained as Shell Brand Code 676202 or Texaco Preservative Oil 30.
4. Disconnect both fuel lines at the fuel supply tank. Fill two portable containers, one with

NT/NTA 855 C.I.D. Engine Shop Manual

diesel fuel and the second with preservative oil U.S. Military Specification MIL-L-644, Type P-9. Preservative oil to this specification is Daubert Chemical Co., Nox-Rust No. 518. Daubert Chemical address is 2000 Spring Road, Chicago, Illinois.

5. Start the engine with the fuel inlet line pulling fuel from the can with the diesel fuel. The injector drain line can flow into the container with the diesel fuel. After the engine is started and is running at idle, move the fuel inlet line to the container with the preservative oil. Operate the engine five to ten minutes on the preservative oil. Stop the engine and reconnect the fuel lines to the supply tank.
 6. The fuel tank must be drained and the drain plug installed. Make a cover for the filler vent with tape.
 7. Drain all the pumps, compressors, coolers, filters and the crankcase. Replace all the plugs after draining.
 8. Remove the intake and exhaust manifolds. Apply the preservative oil in a spray into the intake and exhaust parts of the engine. Also apply it into the intake part of the air compressor. Install the intake and exhaust manifolds.
 9. Inspect the coolant in the cooling system. If the coolant contains rust, drain and flush the system. Then fill it with a rust preventing compound. Drain the system while it is hot and then replace the plug. Use an oil which has rust inhibitors that will mix with the water. Flush the cooling system before returning it to service.
 10. If an air starter is used, remove the exhaust plate from the top of the starting motor. Protect the air starter with a spray of preservative oil into the exhaust part. Install the exhaust plate. Loosen the tension on the V-belt.
 11. Make sure all outside surfaces of the engine are painted.
 12. Remove the valve covers and apply preservative oil to the rocker levers, valve stems, springs, guides, crossheads and push tubes. Install the covers.
 13. All engine openings must have a cover of heavy paper and tape.
14. Put a tag on the engine to show the following:
 - a. The engine has been prepared for storage.
 - b. The coolant has been removed.
 - c. The crankshaft must not be rotated.
 - d. The date the engine was prepared for storage.
 - e. The compound used for storage must be removed before running the engine.
 15. Put the engine in a place protected from the weather and where the air is dry and the temperature is even.

Note: After the engine has been in storage for 24 months, flush it with solvent and repeat the preparation for storage.
 16. Keep all rust preventing compounds clean.

Preparing an Engine from Storage to Service

When an engine is removed from storage and put into service, the operations listed below must be completed. Inspections will be limited to operations indicated for the length of the storage time.

Clean the Engine

1. Remove all dirt from the outside of the engine.
2. Remove all the paper covers and tape.
3. Use solvent to remove rust preventing compound from the surfaces of the engine.
4. Fill the crankcase with clean oil.
5. Flush the cooling system.

Inspection

1. Engines in storage six months or less must have the adjustment of the injectors, valves and the belts checked. Also check the oil filters, air filters, connections and the torque of the cylinder head capscrews.
2. When an engine has been in storage for six months or more, the following inspection procedure must be followed:
 - a. Flush the fuel system with fuel oil until the fuel system is clean.
 - b. Remove the plug from the oil filter head and run hot, light mineral oil through the

oil passages. Rotate the engine three or four times during the flushing operation.

- c. Remove all screens and make sure they are clean before the engine is started.

Precautions

1. Too much oil in the combustion chamber can cause a hydraulic lock. Damage to the engine will occur if it is started before the oil is removed.
2. When returning an engine to service from storage, make sure all foreign matter is re-moved from the screens and strainers.
3. Apply oil under pressure to the lubricating system before starting the engine.
4. The engine is now ready to start.

Caution: Always check with the nearest Cummins Distributor for the correct preservative oil for the engine.

Starting the Engine

After inspecting the engine and parts, make sure all the preservative oil has been flushed away. Start the engine as described in "Preparation for Starting," on page 14-44.

Mounting Adaptations

Group 16

This group includes the inspection of the flywheel flywheel ring gear, removal and installation of the flywheel ring gear.

Mounting Adaptations

The Flywheel

The flywheel must be inspected for cracks or other damage any time that it is removed from the engine.

Inspection

1. Use the Part No. ST-1166 Magnetic Crack Detector to inspect the flywheel for cracks.
 - a. Remove the keeper bar from the magnet poles.
 - b. Put the magnet onto the area to be inspected.
 - c. Spray the powder onto the area to be inspected. Use low pressure air to remove the excess powder. The powder will show the cracks as a white line.

Warning: Never use a flywheel that has cracks in the bolt circle (mounting) area.

2. Inspect the clutch face of the flywheel. Heat from operation of the clutch can cause small cracks or marks on the clutch face of the fly-wheel. You can use a machine to remove the cracks or marks.

Warning: Do not machine the flywheel unless the equipment in the shop can keep the factory standards for flywheel dimensions and static balance. The clutch face of the flywheel must not be machined to less than 0.625 inch [15.87 mm] thick. Do not machine the flywheel within a 4.0 inch [101.6 mm] radius of the center of the flywheel. The static balance of the flywheel must be 2 inch ounces [1440 g mm] or less.

The Flywheel Ring Gear

Inspection

Inspect the ring gear for broken or damaged teeth. Replace the ring gear if the teeth are broken or damaged.

Removal

Use a heating torch to heat the ring gear. Do not use a cutting torch. Use a blunt chisel and hit the chisel with a hammer to push the ring gear from the flywheel.

Replacement

1. Use an oven to heat the ring gear to 600°F [316 °C].
 - a. If an oven is not available, use a heating torch. Do not use a cutting torch. Apply the heat to the inside diameter of the ring gear. Use a 600°F [316°C] tempilstick crayon or an equivalent to find the temperature of the ring gear. Apply the crayon to the ring gear. When the temperature is correct, the chalk mark left by the crayon will become a liquid. Do not overheat the ring gear, this will change the hardness of the metal.
2. After the ring gear has been heated to the correct temperature, quickly install it onto the flywheel.

Warning: Always wear protective gloves when handling parts that have been heated.

Wear Limits, Specifications and Torque

Worn limits as stated in this manual indicate that the part may be reused if it is at the worn limit. Discard only if it exceeds the worn limit. All engine models are the same unless otherwise stated. Limits are given in U.S. and metric measurements. All metric units are enclosed in brackets [].

Group 18

Wear Limits, Specifications and Torque

Group 1: Cylinder Block Specifications - inch [mm]

Ref. No.	Measurement	2 Inch Cam Engines			2-1/2 Inch Cam Engines Specifications not listed are the same as 2 Inch Cam Engines		
		Worn Limit	New Minimum	New Maximum	Worn Limit	New Minimum	New Maximum
1.	Camshaft Bushing	2.0015	1.999	2.0005	2.5023	2.4983	2.4998
	Inside Diameter	[50.838]	[50.774]	[50.813]	[63.558]	[63.457]	[63.495]
	Camshaft Bushing Bore	2.1305	2.1285	2.1295	2.6265	2.6245	2.6255
	Inside Diameter	[54.115]	[54.064]	[54.089]	[66.721]	[66.662]	[66.688]
2.	Cylinder Liner Counterbore		6.5615	6.5635			
	Inside Diameter		[166.662]	[166.713]			
	Depth	0.412	0.350	0.352			
		[10.46]	[8.89]	[8.94]			
3.	Liner to Block Clearance		0.002	0.006			
	Lower Bore		[0.05]	[0.15]			
4.	Lower Liner Bore		6.124	6.126			
	Inside Diameter		[155.55]	[155.60]			
5.	Main Bearing Bore	4.7505	4.7485	4.750			
	Inside Diameter	[120.663]	[120.612]	[120.650]			
	Block (Ref. Fig. 1-37)						
	Height from Main Bearing Centerline	18.994	19.003	19.007			
		[482.45]	[482.68]	[482.78]			
	Height from Installed Alignment Bar	16.619	16.628	16.632			
		[422.12]	[422.35]	[422.45]			
	Cylinder Liner	5.505	5.4995	5.501			
	Inside Diameter	[139.83]	[139.687]	[139.73]			
	Note: New cylinder liners dimensions at 60° to 70°F [16° to 21 °C] may be 0.0002 to 0.0006 inch [0.005 to 0.0015 mm] smaller than indicated due to lubrite coating.						
	Protrusion (Installed)		0.003	0.006			
			[0.08]	[0.15]			
6.	Crankshaft						
	Connecting Rod Journal Outside Diameter	3.122	3.1235	3.125			
		[79.30]	[79.337]	[79.38]			

NT/NTA 855 C.I.D. Engine Shop Manual

Group 1: Cylinder Block Specifications - inch [mm] (Cont'd.)

Ref. No.	Measurement	2 Inch Cam Engines			2-1/2 Inch Cam Engines Specifications not listed are the same as 2 Inch Cam Engines		
		Worn Limit	New Minimum	New Maximum	Worn Limit	New Minimum	New Maximum
	Main Bearing Journal Outside Diameter	4.4975 [114.237]	4.4985 [144.262]	4.500 [114.30]			
	Thrust Bearing Surface to Rear Counterweight	3.006 [76.35]	3.001 [76.23]	3.003 [76.28]			
	Main and Rod Journals Out-of-round T.I.R.*	0.002 [0.05]			*T.I.R- Total Indicated Runout		
	Main and Rod Journal Taper (Length of Journal)	0.0005 [0.013]					
7	Main Bearings**	0.1215	0.123	0.1238	**Also available in 0.010, 0.020, 0.030 and 0.040 inch undersize.		
	Shell Thickness	[3.086]	[3.12]	[3.145]			
	Journal Clearance	0.007 [0.18]	0.0015 [0.038]	0.005 [0.13]			
8	Rod Bearings**	0.071	0.0724	0.0729	0.093	0.0942	0.0947
	Shell Thickness	[1.80]	[1.839]	[1.852]	[2.362]	[2.393]	[2.405]
9	Crankshaft Thrust Ring	*	0.245	0.247			
	157280 Std Thickness		[6.22]	[6.27]			
	1572810.010 O.S. Thickness [0.25]	*	0.255 [6.48]	0.257 [6.53]			
	1572820.020 O.S. Thickness [0.51]	*	0.265 [6.73]	0.267 [6.78]			
	* Use Crankshaft End Clearance						
10	Crankshaft End: Clearance	0.022	0.007	0.017			
	End Clearance (Installed)	[0.56]	[0.18]	[0.43]			
11	Connecting Rod						
	Crankpin Bore		3.2722	3.2732		3.3157	3.3167
	Inside Diameter		[83.114]	[83.139]		[84.219]	[84.244]
	Center to Center Length		11.998 [304.75]	12.000 [304.80]			
	Piston Pin Bushing	2.0022	2.0010	2.0015			
	Inside Diameter	[50.856]	[50.825]	[50.838]			
	Connecting Rod						
	Bend Without Bushing	0.010 [0.25]		0.010 [0.25]			
	Bend With Bushing	0.004 [0.10]		0.004 [0.10]			
	Twist Without Bushing	0.020 [0.51]		0.020 [0.51]			
	Twist With Bushing	0.010 [0.25]		0.010 [0.25]			
	Connecting Rod Bolt	0.540	0.541	0.545			
	Minimum Outside Diameter	[13.72]	[13.74]	[13.84]			
	Pilot	0.6242	0.6245	0.6250			
	Outside Diameter	[15.855]	[15.862]	[15.875]			

Wear Limits, Specifications and Torque

Group 1: Cylinder Block Specifications - inch [mm] (Cont'd.)

Ref No	Measurement	2 Inch Cam Engines			2-1/2 Inch Cam Engines Specifications not listed are the same as 2 Inch Cam Engines		
		Worn Limit	New Minimum	New Maximum	Worn Limit	New Minimum	New Maximum
	Connecting Rod Capscrew	0.583	0.584	0.590			
	Outside Diameter	[14.81]	[14.83]	[14.99]			
	Pilot	0.637	0.638	0.643			
	Outside Diameter	[16.18]	[16.21]	[16.33]			
	Bolt Hole Pilot (2 Bolt Rods)						
	Rod	0.6249	0.6243	0.6248			
		[15.872]	[15.857]	[15.870]			
	Cap	0.6252	0.6246	0.6251			
		[15.880]	[15.865]	[15.878]			
	Dowel and Pilot (2 Capscrew Rod)						
	Dowel Diameter		0.3127				
			[7.943]				
	Rod Dowel Hole		0.3128	0.3133			
			[7.945]	[7.958]			
	Dowel Protrusion		0.220	0.250			
			[5.59]	[6.35]			
	Dowel Press Fit In Cap		0.0001	0.0006			
			[0.003]	[0.015]			
12	Piston						
	Skirt Diameter	5.483	5.487	5.488			
	at 70°F [21 °C]	[139.27]	[139.37]	[139.40]			
	Piston Pin Bore Inside	2.0000	1.9985	1.9990			
	Diameter at 70°F [21 °C]	[50.800]	[50.762]	[50.775]			
13	Piston Pin						
	Outside Diameter	1.9985	1.99875	1.9990			
	at 70 F [21 °C]	[50.762]	[50.768]	[50.775]			
14	Piston Ring						
	Gap in Ring Travel Area of Liner						
	Part Number	Minimum	Maximum				
	147670	0.023	0.033				
		[0.58]	[0.84]				
	218025*	0.017	0.027				
		[0.43]	[0.68]				
	3012331**	0.017	0.027				
		[0.43]	[0.68]				
	132880***	0.019	0.029				
		[0.48]	[0.74]				
	214730	0.019	0.029				
		[0.48]	[0.74]				
	216383*	0.020	0.030				
		[0.51]	[0.76]				
	3012332	0.019	0.029				
		[0.48]	[0.74]				
	218732	0.010	0.025				
		[0.25]	[0.64]				

Add 0.003 inch [0.08 mm] ring gap to new maximum limit for each 0.001 inch [0.03 mm] wear in cylinder liner wall.

*NTC-475 only

**Big Cam II only

***NTE Engine only

NTINTA 855 C.I.D. Engine Shop Manual

Group 1: Cylinder Block Specifications - inch [mm] (Cont'd.)

Ref No	Measurement	2 Inch Cam Engines			2-1/2 Inch Cam Engines Specifications not listed are the same as 2 Inch Cam Engines		
		Worn Limit	New Minimum	New Maximum	Worn Limit	New Minimum	New Maximum
15.	Camshaft Journal	1.996	1.997	1.998	2.495	2.496	2.497
	Outside Diameter	[50.70]	[50.72]	[50.75]	[63.37]	[63.40]	[63.42]
	Thrust Bearing Thickness	0.083 [2.11]	0.093 [2.36]	0.098 [2.49]			
	Support Bushing	1.370	1.3725	1.3755			
	Inside Diameter	[34.80]	[34.862]	[34.938]			
	Outboard Bearing Support	1.757	1.751	1.754			
	Inside Diameter	[44.63]	[44.481]	[44.55]			
16.	Gear Case Cover						
	Accessory Drive Bushing						
	Part No. 132770 Std	1.571	1.565	1.569			
	Inside Diameter	[39.90]	[39;75]	[39.851]			
	132771 0.010 [0.25] U.S	1.561	1.555	1.559			
	Inside Diameter	[39.65]	[39.50]	[39.60]			
	132772 0.020 [0.51] U.S	1.551	1.545	1.549			
	Inside Diameter	[39.40]	[39.24]	[39.34]			
	20822 Std. (NTA Series)	1.7585	1.7525	1.7565			
	Inside Diameter	[44.666]	[.44.513]	[44.615]			

Torque Specifications - ft.-lbs. [N•m],

17.	Pipe Plug; Size	Minimum	Maximum		
	1/8	15 [20]	20 [27]		
	1/4	30 [41]	35 [47]		
	3/8	35 [47]	45 [61]		
	1/2	45 [61]	55 [75]		
	3/4	60 [81]	70 [95]		
	1-1/4	75 [102]	85 [115]		
	1,-1/2	90 [122]	100 [136]		
18.	Main Bearing Capscrews*	3/4 Inch Minimum	3/4 Inch Maximum	1 Inch Minimum	1 Inch Maximum
	Step 1. Tighten to	80 [108.5]	90 [122]	100 [135.6]	110 [149]
	Step 2. Tighten to	160 [217]	170 [230]	200 [271]	210 [285]
	Step 3. Tighten to	250 [339]	260 [352]	300 [407]	310 [420]
	Step 4. Loosen Completely	All	All	All	All
	Step 5. Tighten to	80 [108.5]	90 [122]	100 [135.6]	110 [149]
	Step 6. Tighten to	160 [217]	170 [230]	200 [271]	210 [285]
	Step 7. Tighten to	250 [339]	260 [352]	300 [407]	310 [420]
19.	Connecting Rod Nuts or Capscrews	Minimum	Maximum		
	Step 1. Tighten to	70 [95]	75 [102]		
	Step 2. Tighten to	140 [190]	150 [203]		
	Step 3. Loosen Completely	All	All		
	Step 4. Tighten to	25 [34]	30 [41]		
	Step 5. Tighten to	70 [95]	75 [102]		
	Step 6. Tighten to	140 [190]	150 [203]		

* During 1978, some engines were built with special main bearing caps and 3/4 inch capscrews. Check the serial number and build date of your engine against the list on the next page. If your engine is one of those listed, the main bearing capscrews must be tightened to 330 ft.-lbs. [447.4 N•m] maximum torque.

Wear Limits, Specifications and Torque

Engine Serial No.	Date Built						
10718349	2- 8-78	10719402	2-10-78	10721426	2-17-78	10729428	3-16-78
thru 10718373		10719405	2-10-78	thru 10721429		10729451	
10718391	2-8-78	10719412	2-10-78	10721549	2-17-78	10752302	6-9-78
thru 10718394		10719682		thru 10721563		thru 10752331	
10718413	2-8-78	10719691	2-16-78	10721864	2-20-78	10752414	6-9-78
thru 10718420		10721117		thru 10721867		thru 10752443	
10718672	2-8-78	10721121	2-16-78	10721963	2-20-78	10759241	7-11-78
thru 10718674		10721127		thru 10721972		thru 10759275	
10718737	2-8-78	10721131	2-16-78	10722061	2-20-78	10759566	7-11-78
thru 10718746		10721161		thru 10722070		thru 10759586	
10719293	2-10-78	10721175	2-16-78	10722677	2-22-78		
thru 10719309		10721420		thru 10722701			
10719311	2-10-78	10721424	3-16-78	10729153			
thru 10719319		10729177					

Group 2: Cylinder Head Specifications - inch [mm]

Ref No	Measurement	Worn Limit	New Minimum	New Maximum
1	Cylinder Head Height	4.340 [110.24]	4.370 [111.00]	4.380 [111.25]
2	Valve, Stem Outside Diameter	0.449 [11.41]	0.450 [11.43]	0.451 [11.46]
3	Face Angle Valve Guide Inside Diameter		30 degree	30 degree
	Assembled Height	0.455 [11.56]	0.4525 [11.494]	0.4532 [11.511]
4	Valve Seat Insert* Outside Diameter		2.0025 [50.864]	2.0035 [50.889]
	Cylinder Head Inside Diameter		1.9995 [50.787]	2.0005 [50.813]
	Insert Height		0.278 [7.06]	0.282 [7.16]
	Run Out in 360 Degrees	0.002 [0.05]		
	Refaced Seat Width		0.063 [1.59]	0.125 [3.18]
5	Valve Spring** Assembled Height			2.250 [57.15]
6	Crosshead Guide Outside Diameter	0.432 [10.97]	0.433 [11.00]	0.4335 [11.011]
	Assembled Height		1.860 [47.24]	1.880 [47.75]
	Crosshead Bore	0.440 [11.18]	0.434 [11.02]	0.436 [11.07]
7	Injector Sleeve Tip Protrusion		0.060 [1.52]	0.070 [1.78]

*See Ref. No. 8 for oversize valve seat inserts.

**See Ref. No. 9 for valve spring data.

NTINTA 855 C.I.D. Engine Shop Manual

Group 2: Cylinder Head Specifications - inch [mm] (Cont'd.)

Ref. No.	Valve Seat Insert Part No.	Oversize Diameter	Oversize Depth	Insert O.D.	Cylinder Head I.D.	Insert Thickness
8	127935	0.005 [0.13]	Std	2.0075/2.0085 [50.991/51.016]	2.0045/2.0055 [50.914/50.940]	0.278/0.282 [7.06/7.16]
	127931	0.010 [0.25]	Std	2.0125/2.0135 [51.118/51.143]	2.0095/2.0105 [51.041/51.067]	0.278/0.282 [7.06/7.16]
	127932	0.020 [0.50]	0.005 [0.13]	2.0225/2.0235 [51.372/51.397]	2.0195/2.0205 [51.295/51.321]	0.283/0.287 [7.19/7.29]
	127933	0.030 [0.76]	0.010 [0.25]	2.0325/2.0335 [51.626/51.651]	2.0295/2.0305 [51.549/51.575]	0.288/0.292 [7.32/7.42]
	127934	0.040 [1.02]	0.015 [0.38]	2.0425/2.0435 [51.880/51.905]	2.0395/2.0405 [51.803/51.829]	0.293/0.297 [7.44/7.54]

Be sure to measure the insert before machining the head or installing the insert.

Required Load for Length

Ref No	Valve Spring Part No	Approximate Free Length Inch [mm]	No Coils	Wire Diameter Inch [mm]	Length Inch [mm]	Lb. [N] Worn Limit	Lb. [N] New Minimum	Lb. [N] New Maximum
9	178869	2.920 [74.17]	9.5	0.177 [4.50]	1.765 [44.83]	150 [667]	155 [689]	189 [841]
	211999	2.685 [68.20]	9	0.177 [4.50]	1.724 [43.79]	143 [636]	147.25 [655]	162.75 [724]

Cylinder Head Pipe Plug Torque - Ft.-Lbs. [N-m]

Ref. No.	Plug Size	Minimum	Maximum
10	1/16 Inch	3 [4]	6 [8]
	1/8 inch	5 [7]	10 [14]
	3/8 Inch	35 [47]	45 [61]
	1/2 Inch	60 [81]	70 [95]
	3/4 Inch	65 [88]	75 [102]
	1 Inch	135 [182]	145 [197]

Group 3: Rocker Lever Specifications - inch [mm]

Ref No	Measurement	2 Inch Cam Engines			2-112 Inch Cam Engines		
		Worn Limit	New Minimum	New Maximum	Worn Limit	New Minimum	New Maximum
1	Bushings	1.1286	1.1245	1.1275	1.1286	1.1245	1.1275
	Inside Diameter	[28.664]	[28.562]	[28.639]	[28.664]	[28.562]	[28.639]
2	Shaft	1.122	1.123	1.124	1.122	1.123	1.124
	Outside Diameter	[28.50]	[28.52]	[28.55]	[28.50]	[28.521]	[28.55]

Wear Limits, Specifications and Torque

Group 4: Cam Follower Dimensions - inch [mm]

Measurement	2 Inch Cam Engines			2-112 Inch Cam Engines		
	Worn Limit	New Minimum	New Maximum	Worn Limit	New Minimum	New Maximum
Shaft Outside Diameter	0.748 [19.00]	0.7485 [19.012]	0.749 [19.02]	0.748 [19.00]	0.7485 [19.012]	0.749 [19.02]
Bushing Inside Diameter	0.752 [19.10]	0.7501 [19.053]	0.7511 [19.078]	0.752 [19.10]	0.7501 [19.053]	0.7511 [19.078]
Injector Cam Roller Inside Diameter	0.505 [12.83]	0.503 [12.78]	0.504 [12.80]	0.705 [17.91]	0.703 [17.86]	0.704 [17.88]
Outside Diameter	1.2485 [31.71]	1.2490 [31.72]	1.251 [31.77]	1.2485 [31.71]	1.2495 [31.73]	1.2505 [31.76]
Valve Cam Rollers Inside Diameter	0.503 [12.78]	0.5005 [12.713]	0.5015 [12.738]	0.503 [12.78]	0.5005 [12.773]	0.5015 [12.708]
Outside Diameter	1.248 [31.71]	1.2490 [31.72]	1.2500 [31.75]	1.2485 [31.71]	1.2495 [31.73]	1.2505 [31.76]
Roller Pin Diameter Valve	0.497 [12.62]	0.4995 [12.687]	0.500 [12.70]	0.497 [12.62]	0.4997 [12.692]	0.500 [12.70]
Injector	0.497 [12.62]	0.4995 [12.687]	0.500 [12.70]	0.697 [17.70]	0.6997 [17.772]	0.7000 [17.780]
Diameter of the Bore for the Roller Pin Valve		0.4990 [12.674]	0.4997 [12.692]		0.4990 [12.674]	0.4995 [12.687]
Injector		0.4990 [12.674]	0.4997 [12.692]		0.6992 [17.759]	0.6997 [17.772]

Group 4: MVT Cam Follower Dimensions - inch [mm]

Measurement	Worn Limit	New Minimum	New Maximum	Measurement	Worn Limit	New Minimum	New Maximum
Cam Follower Shaft Outside Diameter	0.748 [19.00]	0.7485 [19.01]	0.7490 [19.02]	Outside Diameter	1.2485 [31.71]	1.2495 [31.73]	1.2505 [31.76]
Bushing Inside Diameter				Roller Pin Outside Diameter			
Valve	0.752 [19.10]	0.7501 [19.05]	0.7511 [19.07]	Valve	0.497 [12.62]	0.4997 [12.692]	0.5000 [12.70]
Injector		1.3765 [34.96]	1.3775 [34.98]	Injector	0.697 [17.70]	0.6997 [17.772]	0.7000 [17.78]
Injector Cam Roller Inside Diameter	0.705 [17.91]	0.703 [17.86]	0.704 [17.88]	Diameter Of The Bore For The Roller Pin Valve		0.4990 [12.67]	0.4995 [12.68]
Outside Diameter	1.2485 [31.71]	1.2495 [31.73]	1.2505 [31.76]	Injector		0.6992 [17.76]	0.6997 [17.77]
Valve Cam Roller Inside Diameter	0.503 [12.78]	0.5005 [12.71]	0.5015 [12.73]	Eccentric Outside Diameter	1.3743 [34.90]	1.3748 [34.92]	

NT/NTA 855 C.I.D. Engine Shop Manual

Group 4: Push Rod Length - inch [mm]

	2 Inch Cam	2-112 Inch Cam
Injector	18.290 [464.57]	17.775 [451.49]
	18.320 [465.32]	17.805 [452.25]
Valve	18.360 [466.34]	17.880 [454.15]
	18.390 [467.11]	17.910 [454.91]

Group 7: Lubricating Oil Pump Specifications - Inch [mm]

Ref. No. Measurement	Worn Limit	New Minimum	New Maximum
Single Lubricating Oil Pump			
1. Bushings			
Inside diameter	0.6185 [15.710]	0.6165 [15.659]	0.6175 [15.684]
2. Idler and Drive Shaft			
Outside diameter	0.6145 [15.608]	0.615 [15.62]	0.6155 [15.634]
3. Drive Gear to Body Clearance			
	0.012 [0.30]		
4. Drive Shaft			
End Movement		0.002 [0.05]	0.005 [0.13]
Idler shaft			
Shaft Protrusion Inside Body		0.720 [18.29]	0.740 [18.80]
Driven Gear/Drive Shaft			
Shaft Protrusion		0.855 [21.72]	0.875 [22.22]
Single (Double Capacity) Lubricating Oil Pump			
1. Bushings			
Inside Diameter	0.879 [22.33]	0.8767 [22.268]	0.8777 [22.293]
2. Idler and Drive Shaft			
Outside Diameter	0.874 [22.17]	0.8745 [22.212]	0.875 [22.22]
3. Drive Gear to Body Clearance			
	0.012 [0.30]		
4. Drive Shaft			
End Movement		0.002 [0.05]	0.008 [0.20]
Idler Shaft			
Shaft Protrusion Above body to Cover Face			0.955 [24.26]
Driven Gear/Drive Shaft			
Shaft Protrusion		1.035 [26.29]	1.055 [26.80]
5. Piston Cooling Oil Tube			
Protrusion Above Body Mounting Face		2.970 [75.44]	3.000 [76.20]
Double Lubricating Oil Pump			
1. Bushings			
Inside Diameter	0.6185 [15.710]	0.6165 [15.659]	0.6175 [15.684]

Wear Limits, Specifications and Torque

Group 7: Lubricating Oil Pump Specifications - Inch [mm] (Cont'd.)

Ref. No. Measurement	Worn Limit	New Minimum	New Maximum
2. Idler and Drive Shaft			
Outside Diameter	0.6145 [15.608]	0.615 [15.62]	0.6155 [15.634]
3. Drive Gear to Body Clearance	0.012 [0.30]		
4. Drive Shaft			
End Movement		0.004 [0.10]	0.007 [0.18]
Idler Shaft Shaft Protrusion Above Back Surface of Body		2.600 [66.04]	2.620 [66.55]
Idler Shaft Suffix Letter L		2.680 [68.07]	2.690 [68.33]
Drive Gear/Drive Shaft Shaft Protrusion		0.040 [1.02]	0.060 [1.52]
Single Scavenger Pump			
1. Bushings			
Inside Diameter	0.6185 [15.710]	0.6165 [15.659]	0.6175 [15.684]
2. Idler and Drive Shaft			
Outside Diameter	0.6145 [15.608]	0.615 [15.62]	0.6155 [15.634]
Idler Shaft Protrusion	Flush with front surface of pump.		
Driven Gear/Drive Shaft Protrusion		0.580 [14.73]	.0610 [15.49]
Coupling Dowels Protrusion Above Coupling Face		0.990 [25.15]	1.010 [25.64]
Coupling/Drive Shaft Shaft Protrusion		0.050 [1.27]	0.070 [1.78]
4. Drive Shaft			
End Movement		0.004 [0.10]	0.010 [0.25]
Double Scavenger Pump			
1. Bushings			
Inside Diameter	0.841 [21.36]	0.840 [21.34]	0.8405 [21.349]
2. Idler and Drive Shaft			
Outside Diameter	0.837 [21.26]	0.8375 [21.272]	0.838 [21.29]
Idler Shaft Protrusion	Flush with front surface of pump.		
Driven Gear/ Drive Shaft Protrusion		0.580 [14.73]	0.610 [15.49]

NTINTA 855 C.I.D. Engine Shop Manual

Group 7: Lubricating Oil Pump Specifications - Inch [mm] (Cont'd.)

Ref. No.	Measurement	Worn Limit	New Minimum	New Maximum
	Coupling Dowels			
	Protrusion Above Coupling Face		0.990 [25.15]	1.010 [25.65]
	Coupling/Drive Shaft			
	Shaft Protrusion		0.050 [1.27]	0.070 [1.78]
4	Drive Shaft End Movement		0.004 [0.10]	0.007 [0.25]
	FFC Filter/Cooler or Non-FFC Lubricating Oil Pump Pressure Regulator Spring			
	Free Length			3.410 [86.36]
	Load at 2.125 inch [53.98 mm] lb. [N]		45 [200]	50 [222]
	Recommended Oil Pressure psi [kPa]		50 [345]	70 [483]
	FFC Lubricating Oil Pump By-Pass Valve Spring			
	Free Length			2.500 163.50]
	Load at 1.780 inch [45.21 mm] lb. [N]		79 [351]	91 [405]
	Oil Pressure psi [kPa]			130 [896]
	DFC Lubricating Oil Pump Pressure Regulator Spring			
	Free Length			3.310 [84]
	Load at 1.820 inch [46.2 mm] lb. [N]		21.9 [97A,4]	25.7 [114]
	Oil Pressure psi [kPa]			40 [275.7]
	DFC Lubricating Oil Pump Bypass Valve Spring			
	Free Length			2.224 [56.5]
	Load at 1.145 inch [29.07 mm] lb [N]		59.2 [263]	72.4 [322]
	Oil Pressure psi [kPa]			150 [1034]

Group 7: NTE Oil Pump Specifications - inch [mm]

	Worn Limit	New Minimum	New Maximum
Bushing	0.8785	0.8765	0.8775
Inside Diameter	[22.31]	[22.26]	[22.28]
Idler and Drive Shaft Outside Dia	0.8740 [22.17]	0.8745 [22.21]	0.8750 [22.22]
Idler Shaft		0.955	0.985
Protrusion		[24.25]	[25.02]
Drive Shaft		2.305	2.325
Protrusion		[58.54]	[59.05]

Wear Limits, Specifications and Torque

Group 7: Oil Pan Capacity - U.S. Gallons [Litres] and Degrees of Angularity

Part Number	Sump Location	Capacity		Degrees of Angularity			
		High	Low	Front Up	Front Down	F.P. Side Down	Exhaust Side Down
10451	Center	6-1/2 [25]	4 [15]				
10474-2	Rear	7 [26]	5-1/2 [21]	19	21	35	35
10492-2	Rear	6-1/2 [25]	4 [15]	19	21	35	35
10668-1	Rear	8-1/2 [32]	5-1/2 [21]	16	16	16	16
10774	Rear	7 [26]	5-1/2 [21]	19	20	30	25
10777	Front	7 [26]	5-1/2 [21]	40	40	45	35
10779	Rear	8-1/2 [32]	5-1/2 [21]	16	16	16	16
10809	Full	11 [42]	3 [11]				
10811	Center	7 [26]	5-1/2 [21]	32	40	37	35
10850	Rear	7 [26]	5-1/2 [21]	14	12	45	20
10850-A	Rear	7 [26]	5-1/2 [21]	14	12	45	20
11055	Front	7 [26]	5-1/2 [21]				
11102	Front	7 [26]	5-1/2 [21]				
11150	Dry						
11194	Dry						
103949	Front	7 [26]	5-1/2 [21]	15	35	35	35
110626	Rear	7 [26]	5-1/2 [21]	40	25	45	19
116916	Rear	7 [26]	5-1/2 [21]	20	15	37	35
118784	Rear	7 [26]	5-1/2 [21]	14	12	45	20
119330	Center	7 [26]	5-1/2 [21]	45	45	45	45
119382	Full	7 [26]	5-1/2 [21]	42	1	19	40
119586	Front	7 [26]	5-1/2 [21]				
120905	Center	7 [26]	5-1/2 [21]				
121089	Front	6 [23]	4-3/4 [18]	15	30	30	30
121244	Front	6 [23]	4 [15]	36	45	45	40
121862	Center	6-1/2 [25]	4-1/2 [17]	22	24	40	40
121377	Rear	6 [23]	4 [15]	45	38	42	40
125318	Rear	6-1/2 [25]	4 [15]	28	15	38	38
126818	Rear	7 [26]	5-1/2 [21]	40	25	45	19
129434	Rear	6 [23]	4 [15]	45	38	42	40
133879	Rear	7 [26]	5-1/2 [21]	36	11	32	30
134070	Center	6 [23]	4 [15]	35	33	35	35
134271	Front	7 [26]	5-1/2 [21]	10	35	40	40
134279	Rear	7 [26]	5-1/2 [21]	19	21	35	35
134283	Rear	7 [26]	5-1/2 [21]	19	20	30	25
137156	Full	7 [26]	4 [15]	45	8	42	40
139493	Front	6 [23]	4 [15]	36	45	45	40
139745	Rear	6 [23]	4 [15]	45	38	42	40
146866	Dry						
148160	Rear	6 [23]	4 [15]	45	39	40	42
151079	Rear	6 [23]	4 [15]				
152410	Rear	6 [23]	4-1/2 [17]	27	15	25	35
153729	Rear	7 [26]	5-1/2 [21]	19	12	25	25
154418	Full	6 [23]	4 [15]	15	15	15	15
161206	Front	6 [23]	4 [15]	36	45	45	40
162377	Rear	7 [26]	5-1/2 [21]	45	38	42	40
164436	Front	6 [23]	4 [15]	40	40	45	35
164776	Rear	7 [26]	5-1/2 [21]	40	25	45	19
167186	Rear	7 [26]	5-1/2 [21]	19	12	25	25
167429	Rear	7 [26]	5-1/2 [21]	40	25	45	19
169348	Front	6 [23]	4 [15]	40	40	45	35
177155	Rear	6 [23]	4 [15]	45	39	40	42
181768	Rear	7 [26]	5-1/2 [21]	20	15	37	35
187756	Center	6-1/2 [25]	4 [15]	24	24	32	30

Group 7: Oil Pan Capacity - U.S. Gallons [Litres] and Degrees of Angularity (Cont'd.)							
Part Number	Sump Location	Capacity		Degrees of Angularity			
		High	Low	Front Up	Front Down	F.P. Side Down	Exhaust Side Down
189672	Full	12 [45]	3-1/2 [13]				
193625	Rear	7 [26]	5-1/2 [21]	16	12	35	39
193629	Rear	7 [26]	5-1/2 [21]	16	12	35	39
193631	Rear	7 [26]	5-1/2 [21]	16	12	35	39
193634	Rear	7 [26]	5-1/2 [21]	16	12	35	39
193635	Rear	7 [26]	5-1/2 [21]	16	12	35	39
193636	Rear	7 [26]	5-1/2 [21]	16	12	35	39
193637	Rear	7 [26]	5-1/2 [21]	16	12	35	39
193638	Rear	7 [26]	5-1/2 [21]	16	12	35	39
193639	Rear	7 [26]	5-1/2 [21]	16	12	35	39
200787	Rear	7 [26]	5-1/2 [21]	16	12	35	39
201836	Rear	5 [19]	3-1/2 [13]	27	15	25	35
201837	Rear	5 [19]	3-1/2 [13]	27	15	25	35
201839	Rear	7 [21]	5-1/2 [21]	16	12	35	39
201841	Rear	5 [19]	3-1/2 [13]	27	15	25	35
201842	Rear	7 [26]	5-1/2 [21]	16	12	35	39
201843	Rear	7 [26]	5-1/2 [21]	16	12	35	39
201844	Rear	5 [19]	3-1/2 [13]	27	15	25	35
202283	Front	7 [26]	5-1/2 [21]	10	35	40	40
202284	Front	7 [26]	5-1/2 [21]	10	35	40	40
203561	Rear	7 [26]	5-1/2 [21]	19	12	25	25
203563	Rear	7 [26]	5-1/2 [21]	19	12	25	25
203564	Rear	7 [26]	5-1/2 [21]	19	12	25	25
203841	Front	7 [26]	5-1/2 [21]	10	35	40	40
3002151	Center	6-1/2 [25]	5-1/2 [21]	24	24	32	30
3002152	Center	7 [26]	5-1/2 [21]				
3005178	Rear	7 [26]	5-1/2 [21]	19	12	25	25
3005179	Rear	7 [26]	5-1/2 [21]	19	12	25	25
3005181	Rear	7 [26]	5-1/2 [21]	19	12	25	25
3005183	Rear	7 [26]	5-1/2 [21]	19	12	25	25

Group 7: Hose Size

Location	Minimum Hose Size
Turbocharger Oil Supply	No. 6
Full Flow Filter	No. 16
Turbocharger Oil Drain	No. 16

**Group 7: Hose Bends - Inch [mm]
(Rubber-Lined)**

Hose Size	Inside Diameter	Outside Diameter	Minimum Bend Radius
4	3/16 [4.76]	31/64 [12.30]	2 [50.80]
5	1/4 [6.35]	35/64 [13.89]	2-1/4 [57.15]
6	5/16 [7.94]	39/64 [15.48]	2-3/4 [69.85]
8	13/32 [10.32]	47/64 [18.65]	4-5/8 [117.48]
10	1/2 [12.70]	53/64 [21.03]	5-1/2 [139.70]
12	5/8 [15.87]	61/64 [24.21]	6-1/2 [165.10]
16	7/8 [22.23]	1-13/64 [30.56]	7-3/8 [187.34]
20	1-1/8 [28.58]	1-31/64 [37.70]	9 [228.60]
24	1-3/8 [34.93]	1-23/32 [43.66]	11 [279.40]

**Group 7: Hose Bends - Inch [mm]
(Teflon-Lined)**

Hose Size	Inside Diameter	Outside Diameter	Minimum Bend Radius
6	5/16 [7.94]	39/64 [15.48]	4 [101.60]
16	7/8 [22.23]	1-13/64 [30.56]	7-3/8 [187.33]

Wear Limits, Specifications and Torque

Group 8: Cooling System Specifications - Inch [mm]
Eccentric and FFC Water Pump

Ref. No.	Dimension Locations	New Minimum	New Maximum	Worn Limit
	Housing Bearing Bores	2.4408 [61.996]	2.4414 [62.012]	2.4494 [62.215]
	Housing Bore	1.5000	1.5200	
	Carbon Face Seal	[38.100]	[38.608]	
1.	Shaft Diameter	0.6262	0.6267	
	Impeller End	[15.905]	[15.918]	
2.	Shaft Diameter	0.6262	0.6267	
	Seat Location	[15.905]	[15.9181]	
3.	Shaft Diameter	0.9843	0.9847	
	Inner Bearing	[25.001]	[25.011]	
4.	Shaft Diameter	0.9843	0.9847	
	Outer Bearing	[25.001]	[25.011]	
5.	Shaft Diameter	0.6693	0.6696	
	Pulley End	[17.000]	[17.008]	
6.	Impeller Bore	0.624 [15.85]	0.625 [15.88]	
	Impeller Vane to Body Clearance			
	(Cast Iron)	0.020 [0.51]	0.040 [1.02]	
	(Phenolic)	0.030 [0.76]	0.050 [1.27]	
	Pulley Bore Diameter	0.6663 [16.924]	0.6673 [16.949]	
	Minimum Press-Fit Between:			
	Shaft and Impeller	0.001 [0.03]		
	Shaft and Pulley	0.001 [0.03]		
	Housing Bore	2.8345	2.8351	2.8431
	Outer Bearing	[71.996]	[72.012]	[72.215]
	Housing Bore	2.0471	2.0477	2.0557
	Inner Bearing	[51.996]	[52.012]	[52.215]
	Housing Bore	1.435	1.436	
	Carbon Face Seal	[36.45]	[36.47]	
	Housing Bore	2.9985	3.0015	
	Outer Seal	[76.162]	[76.238]	
	Housing Bore	1.374	1.376	
	Inner Seal	[34.90]	[34.95]	
1.	Shaft Diameter	0.6262	0.6267	
	Impeller End	[15.905]	[15.918]	
2.	Shaft Diameter	0.6262	0.6267	
	Seat Location	[15.905]	[15.918]	
3.	Shaft Diameter	0.872	0.878	
	Inner Seal	[22.15]	[22.30]	

NT/NTA 855 C.I.D. Engine Shop Manual

Group 8: Specifications - Inch [mm]**Eccentric and FFC Water Pump (Cont'd.)**

Ref. No.	Dimension Locations	New Minimum	New Maximum	Worn Limit
4.	Shaft Diameter Inner Bearing Surface	0.9842 [24.999]	0.9846 [25.009]	
5.	Shaft Diameter Outer Bearing Surface	1.1810 [29.997]	1.1814 [30.008]	
6.	Shaft Diameter Pulley End	1.1810 [29.997]	1.1814 [30.008]	
7.	Impeller Bore	0.624 [15.85]	0.625 [15.88]	
	Impeller Vane to Body Clearance	0.020 [0.51]	0.040 [1.02]	
	Pulley Bore	1.1787 [29.939]	1.1798 [29.967]	
	Wear Sleeve O.D. Outer Seal Surface	2.2540 [57.252]	2.2560 [57.302]	
	Minimum Press-Fit Between:			
	Shaft and Impeller	0.001 [0.03]		
	Shaft and Pulley	0.001 [0.03]		

Group 9: Drive Unit Specifications - Inch [mm]

Ref. No.	Measurement	Worn Limit	New Minimum	New Maximum
1.	Shaft			
	Outside Diameter (Bushing Location)	1.310 [33.27]	1.3115 [33.312]	1.312 [33.32]
	Bushing			
	Inside Diameter	1.321 [33.55]	1.316 [33.43]	1.319 [33.50]
	Outside Diameter		1.449 [36.80]	1.450 [36.83]
	Out-of-Round	0.002 [0.05]		
	Press-Fit Between Housing and Bushing		0.002 [0.05]	0.0045 [0.11]
	Accessory Drive			
	End Clearance NHINT		0.002 [0.05]	0.012 [0.26]
	End Clearance NTA		0.004 [0.10]	0.024 [0.61]
	Hydraulic Governor Drive			
	End Clearance		0.003 [0.08]	0.006 [0.15]

Wear Limits, Specifications and Torque

Group 14: Assembly Specifications - inch [mm]

Ref. No.	Measurement	Worn Limit	New Minimum	New Maximum
1.	Main Bearing Journal Clearance	0.007 [0.18]	0.0015 [0.038]	0.005 [0.13]
2.	Connecting Rod Bearing Journal Clearance	0.007 [0.18]	0.0015 [0.038]	0.0045 [0.114]
3.	Crankshaft End Clearance	0.022 [0.56]	0.007 [0.18]	0.017 [0.43]
4.	Cylinder Liner Protrusion		0.003 [0.08]	0.006 [0.15]
	Out-of-Round Top One (1) Inch			0.003 [0.08]
	Out-of-Round Packing Ring (Lower) Area			0.002 [0.05]
5.	Connecting Rod Side Clearance		0.0045 [0.114]	0.013 [0.33]
6.	Gear Train (Gear to Gear) Crankshaft, Camshaft, Accessory Drive and Lubricating Oil Pump Backlash	0.020 [0.51]	0.0045 [0.114]	0.0105 [0.267]
7.	Camshaft (With Thrust Plate) End Clearance		0.001 [0.03]	0.005 [0.13]
	(With Outboard Bearing Support) End Clearance		0.008 [0.20]	0.013 [0.33]
8.	Injection Timing <i>Refer to Table 6, Page 14-15.</i>			
9.	Injector, Crosshead and Valve Adjustments <i>Refer to Injector and Valve</i> <i>Adjustment, Page 14-32 through</i> <i>14-36</i>			
10.	Dynamometer Testing <i>Refer to Text Procedure,</i> <i>Page 14-44</i>			
11.	Lubricating Oil Pressure <i>Refer to Page 14-48</i>			
12.	Blow-By <i>Refer to Test Procedure,</i> <i>Page 14-48</i>			

Group 14: Crankshaft Flange Capscrew Torque Specifications - ft.-lb. [N•m]

Engine Model	Part No.	Minimum	Maximum
NT Series	196653 Capscrew	250	270
	196654 Retainer	[339]	[366]
NH Series	140410 Capscrew	180	200
	140411 Retainer	[244]	[271]

NT/NTA 855 C.I.D. Engine Shop Manual

Group 14: Vibration Damper Capscrew Torque Values

Capscrew Size	SAE Grade Number	Minimum ft.-lbs. [N•m]	Maximum ft.-lbs. [N•m]
1/2 inch	8	115 [156]	125 [170]
5/8 inch	8	180 [244]	200 [271]
5/8 inch	5	150 [203]	170 [231]

Group 14: Cam Follower Gasket Specifications

Gasket Part No.	Thickness Inch [mm]	Change In Push Rod Travel		Application
		Inch [mm]	Inch [mm]	
3020001	0.006 to 0.008 [0.15 to 0.20]	0.0015 to 0.002 [0.04 to 0.05]		Big Cam
3020002	0.014 to 0.020 [0.36 to 0.51]	0.0035 to 0.005 [0.09 to 0.13]		Big Cam
3020003	0.020 to 0.024 [0.51 to 0.61]	0.005 to 0.006 [0.13 to 0.15]		Big Cam
3020004	0.027 to 0.033 [0.69 to 0.84]	0.007 to 0.008 [0.18 to 0.20]		Big Cam
9266-A*	0.006 to 0.008 [0.15 to 0.20]	0.0015 to 0.002 [0.04 to 0.05]		Small Cam
9266	0.014 to 0.020 [0.36 to 0.51]	0.035 to 0.005 [0.09 to 0.13]		Small Cam
3011272	0.020 to 0.024 [0.51 to 0.61]	0.005 to 0.006 [0.13 to 0.15]		Small Cam
120819	0.027 to 0.033 [0.69 to 0.84]	0.007 to 0.008 [0.18 to 0.20]		Small Cam
3011273	0.037 to 0.041 [0.94 to 1.04]	0.009 to 0.010 [0.23 to 0.25]		Small Cam

*Must not be used alone.

Group 14: Timing Key Information

3/4 Inch Key Part No.	1 Inch Key Part No.	Offset Inch [mm]	Timing Change	Equivalent Gasket Stack
				Thickness Change Inch [mm]
3021601	69550	None	None	None
3021595	200722	0.0060 [0.15]	Retard	0.012 [0.30]
3021593	200712	0.0075 [0.19]	Retard	0.015 [0.38]
3021592	200707	0.0115 [0.29]	Retard	0.023 [0.58]
3021594	200713	0.0185 [0.47]	Retard	0.037 [0.94]
3021596	200723	0.0255 [0.65]	Retard	0.051 [1.30]
3021598	208746	0.0310 [0.79]	Retard	0.062 [1.57]
3021597	202600	0.0390 [0.99]	Retard	0.078 [1.98]
3021600	3012307	0.0510 [1.30]	Retard	0.102 [2.59]
3021599	3012328	0.0115 [0.29]	Advance	0.023 [0.58]
3022352*	-	0.0185 [0.47]	Advance	-
3022353*	-	0.0310 [0.79]	Advance	-

*For Mechanical Variable Timing (MVT) Engines)

Group 14: Alternator/Generator Torque Values (To Adjusting Link)

Nominal Bolt Size Inch	Torque Ft.-Lb. [N•m]
5/16	15 to 19 [20 to 26]
7/16	25 to 30 [34 to 41]
1/2	50 to 55 [68 to 75]

Group 14: Alternator/Generator Torque Values (To Bracket)

Nominal Bolt Size Inch	Torque Ft.-Lb. [N•m]
3/8	29 to 31 [39 to 42]
7/16	63 to 65 [85 to 88]
1/2	77 to 80 [104 to 108]

Group 14: Alternator/Generator Torque Values (Pulley to Alternator or Generator)

Nominal Bolt Size Inch	Torque Ft.-Lb. [N•m]
1/2	50 to 60 [68 to 81]
5/8	55 to 65 [75 to 88]
3/4	90 to 100 [122 to 126]

Note: Exceptions to the above limits are:

Delco-Remy Alternators	Torque Ft.-Lb. [N•m]
10 DN 150	70 to 80 [95 to 108]
CAV Alternators	
AC 5	40 to 42 [54 to 57]
AC 7	60 to 70 [81 to 95]
AC 90	60 to 70 [81 to 95]

Group 14: Injector and Valve Set Position

Bar in Direction	Pulley Position	Set Injector	Cylinder Valve
Start	A or 1-6 VS	3	5
Adv. To	B or 2-5 VS	6	3
Adv. To	C or 3-4 VS	2	6
Adv. To	A or 1-6 VS	4	2
Adv. To	B or 2-5 VS	1	4
Adv. To	C or 3-4 VS	5	1

Group 14: Engine Firing Order

Right Hand: **1-5-36-2-4** Left Hand: **1-4-2-6-3-5**

Wear Limits, Specifications and Torque

**Group 14: Adjustment Limits
Using Dial Indicator Method - Inch [mm]**

Oil Temp.	Injector Plunger Travel	Valve Intake	Clearance Exhaust
-----------	-------------------------	--------------	-------------------

Aluminum Rocker Housing

Cold	0.170 ±0.001 [4.32 ± 0.03]	0.011 [0.28]	0.023 [0.58]
Hot	0.170 ± 0.001 [4.32 ± 0.03]	0.011 [0.28]	0.023 [0.58]

Cast Iron Rocker Housing

Cold	0.175 ±0.001 [4.45 ± 0.03]	0.013 [0.33]	0.025 [0.64]
Hot	0.170 ±0.001 [4.32 ± 0.03]	0.011 [0.28]	0.023 [0.58]

NTE-855 (European Big Cam Only)

0.225 [5.72]	0.011 [0.28]	0.023 [0.58]
-----------------	-----------------	-----------------

NT-855 (Australian Big Cam Only)

0.228 [5.79]	0.011 [0.28]	0.023 [0.58]
-----------------	-----------------	-----------------

**Group 14: Injector Adjustment
(Torque Method)**

Cold Set	Hot Set
----------	---------

Cast Iron Rocker Housing

48 inch-lb. [5.4 N•m]	72 inch-lb. [8.1 N•m]
--------------------------	--------------------------

Aluminum Rocker Housing

72 inch-lb. [8.1 N•m]	72 inch-lb. [8.1 N•m]
--------------------------	--------------------------

**Group 14: Valve Clearance
(Torque Method) - Inch [mm]**

Intake Valves		Exhaust Valves	
Cold Set	Hot Set	Cold Set	Hot Set

Aluminum Rocker Housing

0.014 [0.36]	0.014 [0.36]	0.027 [0.69]	0.027 [0.69]
-----------------	-----------------	-----------------	-----------------

Cast Iron Rocker Housing

0.016 [0.41]	0.014 [0.36]	0.029 [0.74]	0.027 10.69]
-----------------	-----------------	-----------------	-----------------

Capscrew Markings and Torque Values

Current Usage	Much Used	Much Used	Used at Times	Used at Times
Minimum Tensile Strength —	To 1/2 — 69,000 [476]	To 3/4 — 120,000 [827]	To 5/8 — 140,000 [965]	150,000 [1 034]
PSI [MPa]	To 3/4 — 64,000 [421]	To 1 — 115,000 [793]	To 3/4 — 133,000 [917]	
	To 1 — 55,000 [379]			
Quality of Material	Indeterminate	Minimum Commercial	Medium Commercial	Best Commercial
SAE Grade Number	1 or 2	5	6 or 7	8
Capscrew Head Markings				
Manufacturer's marks may vary				
These are all SAE Grade 5 (3 line)				
Capscrew Body Size (Inches) - (Thread)	Torque Ft.-Lbs. [N•m]	Torque Ft.-Lbs. [N•m]	Torque Ft.-Lbs. [N•m]	Torque Ft.-Lbs. [N•m]
1/4 — 20	5 [7]	8 [11]	10 [14]	12 [16]
— 28	6 [8]	10 [14]		14 [19]
5/16 — 18	11 [15]	17 [23]	19 [26]	24 [33]
— 24	13 [18]	19 [26]		27 [37]
3/8 — 16	18 [24]	31 [42]	34 [46]	44 [60]
— 24	20 [27]	35 [47]		49 [66]
7/16 — 14	28 [38]	49 [66]	55 [75]	70 [95]
— 20	30 [41]	55 [75]		78 [106]
1/2 — 13	39 [53]	75 [102]	85 [115]	105 [142]
— 20	41 [56]	85 [115]		120 [163]
9/16 — 12	51 [69]	110 [149]	120 [163]	155 [210]
— 18	55 [75]	120 [163]		170 [231]
5/8 — 11	83 [113]	150 [203]	167 [226]	210 [285]
— 18	95 [129]	170 [231]		240 [325]
3/4 — 10	105 [142]	270 [366]	280 [380]	375 [508]
— 16	115 [156]	295 [400]		420 [569]
7/8 — 9	160 [217]	395 [536]	440 [597]	605 [820]
— 14	175 [237]	435 [590]		675 [915]
1 — 8	235 [319]	590 [800]	660 [895]	910 [1234]
— 14	250 [339]	660 [895]		990 [1342]

Notes:

1. Always use the torque values listed above when specific torque values are not available.
2. Do not use above values in place of those specified in other sections of this manual; special attention should be observed when using SAE Grade 6, 7 and 8 capscrews.
3. The above is based on use of clean, dry threads.
4. Reduce torque by 10% when engine oil is used as a lubricant.
5. Reduce torque by 20% if new plated capscrews are used.
6. Capscrews threaded into aluminum may require reductions in torque of 30% or more of Grade 5 capscrews torque and must attain two capscrew diameters of thread engagement.

Caution: If replacement capscrews are of a higher grade than the original capscrew, tighten the replacement capscrew to the torque value used for the original capscrew.

Wear Limits, Specifications and Torque

Lubricating Oil

The Functions of Lubricating Oil

The lubricating oil used in a Cummins engine must be multifunctional. It must perform the primary functions of:

Lubrication by providing a film between the moving parts to reduce wear and friction.

Cooling by serving as a heat transfer media to carry heat away from critical areas.

Sealing by filling in the uneven surfaces in the cylinder wall, valve stems and turbocharger oil seals.

Cleaning by holding contaminants in suspension to prevent a build up of deposits on the engine surfaces. In addition, it must also provide:

Dampening and cushioning of components that operate under high stress, such as gears and push tubes.

Protection from oxidation and corrosion.

Hydraulic Action for components such as Jacobs Brake and hydraulic controls.

Engine lubricating oil must be changed when it can no longer perform its functions within an engine. Oil does not wear out, but it becomes contaminated to the point that it can no longer satisfactorily protect the engine. Contamination of the oil is a normal result of engine operation. During engine operation a wide variety of contaminants are introduced into the oil. Some of these are:

Byproducts of Engine Combustion - asphaltenes, soot and acids from partially burned fuel.

Acids, varnish and sludge which are formed as a result of the oxidation of the oil as it breaks down or decomposes.

Dirt entering the engine through the combustion air, fuel, while adding or changing lubricating oil. The oil must have an additive package to combat these contaminants. The package generally consists of:

Detergents/Dispersants which keep insoluble matter in suspension until they are filtered from the oil or are removed with the oil change. This prevents sludge and carbon deposits from forming in the engine.

Inhibitors to maintain the stability of the oil, prevent acids from attacking metal surfaces and prevent rust during the periods the engine is not operating.

Other Additives that enable the oil to lubricate highly loaded areas, prevent scuffing and seizing, control foaming and prevent air retention in the oil.

Oil Performance Classification System

The American Petroleum Institute (API), The American Society for Testing and Materials (ASTM) and the Society of Automotive Engineers (SAE) have jointly developed and maintained a system for classifying lubricating oil by performance categories. The following are brief descriptions of the API categories used in the Cummins oil performance recommendations.

CC (Equivalent to MIL-L-2104B.) This category describes oils meeting the requirements of the military specification MIL-L-2104B. These oils provide low temperature protection from sludge and rust and are designed to perform moderately well at high temperature. For moderate-duty service.

CD (Equivalent to Series 3 and MIL-L-45199B.) This category describes oils meeting the requirements of the Series 3 specification and MIL-L-45199B. These oils provide protection from deposits and oxidation at high temperature. For severe-duty service.

SC (Equivalent to 1964 MS Oils.) This category describes oils meeting the 1964-1967 requirements of automobile manufacturers. Primarily for use in automobiles, it provides low temperature anti-sludge and anti-rust protection required in a light-duty diesel service such as a stop-and-go operation.

SD (Equivalent to 1968-1971 MS Oils.) This category describes oils meeting the 1964-1967 requirements of automobile manufacturers. Primarily for use in automobiles, it provides low temperature anti-sludge and anti-rust protection required in a light-duty diesel service such as a stop-and-go operation. It may be substituted for SC category.

SE (Equivalent to 1972 MS Oils.) This category describes oils meeting the 1972 requirements of automobile manufacturers. Primarily for use in automobiles, it provides protection from high temperature oxidation and low temperature anti-sludge

NT/NTA 855 C.I.D. Engine Shop Manual

and anti-rust as required in a light-duty diesel service such as a stop-and-go operation. It may be substituted for SC category.

CB (No equivalent Specification.) These oils were usually referred to as Supplement 1 oils. This category describes oils which met the requirements of the military specification MIL-L-2104A where the diesel engine test was run using fuel with a high sulfur content. For moderate duty service. Oils in this performance category should not be used in Cummins Engines.

The Engine Manufacturers Association (EMA) publishes a book entitled "Lubricating Oils Data Book". Copies may be purchased from the Engine Manufacturers Association, 111 E. Wacker Drive, Chicago, IL 60601. This book lists commercially available oils by oil company and brand name with the API performance categories met by each brand.

Oil Performance Recommendations

Cummins Engine Co., Inc. does not recommend the use of any specific brand of engine lubricating oil. Cummins recommends the use of oil designed to meet the following API categories:

CC for use in naturally aspirated engines.

CC/CD for use in turbocharged engines.

CC/SC for use only in engines that operate in a light-duty service including standby and emergency operation.

Dual Categories are used where more protection is required than is provided by a single category. CC/CD and CC/SC categories indicate that the oil is blended to meet the performance level required by each single category.

A **sulfated ash limit** has been placed on lubricating oil for use in Cummins engines. Past experience has shown that oils with a high ash content may produce deposits on valves that can progress to guttering and valve burning. A maximum sulfated ash content of 1.85 mass % is recommended for all oil used in Cummins engines except engines fueled with natural gas. For natural gas engines a sulfated ash range of 0.03 to 0.85 mass % is recommended. Cummins Engine Co., Inc., does not recommend the use of ashless oils for natural gas engines. When the ash content is below .15 mass %, the ash should represent organo-metallic anti-wear additives.

Break-In Oils

Special "break-in" lubricating oils are not recommended for new or rebuilt Cummins engines. Use the same lubricating oils used in normal engine operation.

Viscosity Recommendations

The viscosity of an oil is a measure of its resistance to flow. The Society of Automotive Engineers has classified engine oils in viscosity grades; Table 1 shows the viscosity range for these grades. Oils that meet the low temperature (-18°C [0°F]) requirement carry a grade designation with a "W" suffix. Oils that meet both the low and high temperature requirements are referred to as multi-grade or multi-viscosity grade oils.

Multi-graded oils are generally produced by adding viscosity index improver additives to retard the thinning effects a low viscosity base oil will experience at engine operating temperatures. Multi-graded oils that meet the requirements of the API classifications, are recommended for use in Cummins engines.

Cummins recommends the use of multi-graded lubricating oil with the viscosity grades shown in Table 2. Table 2 shows Cummins viscosity grade recommendations at various ambient temperatures. The only viscosity grades recommended are those shown in this table.

Cummins has found that the use of multi-graded lubricating oil improves oil consumption control, improves engine cranking in cold conditions while maintaining lubrication at high operating temperatures and may contribute to improved fuel consumption. Cummins does not recommend single grade lubricating oils. In the event that the recommended multi-grade oil is not available, single grade oils may be substituted.

Caution: When single grade oil is used be sure that the oil will be operating within the temperature ranges shown in Table 3.

The primary criterion for selecting an oil viscosity grade is the lowest temperature the oil will experience while in the engine oil sump. Bearing problems can be caused by the lack of lubrication during the cranking and start up of a cold engine when the oil being used is too viscous to flow properly. Change to a lower viscosity grade of oil as the temperature of the oil in the engine oil sump reaches the lower end of the ranges shown in Table 2.

Wear Limits, Specifications and Torque

Table 1: SAE Viscosity Numbers for Lubricating Oils

SAE Viscosity Grade	Viscosity Range	
	millipascal-second, mPa*s (centipoise, cP) @ - 180C (0°F) maximum	millimetre ² /second, mm ² /s (centistoke, cSt) @ 100°C (212°F) minimum maximum
5W	1250	3.8 -
10W	2500	4.1 -
15W	5000	5.6 -
20W	10000	5.6 -
20	-	5.6 less than 9.3
30	-	9.3 less than 12.5
40	-	12.5 less than 16.3
50	-	16.3 less than 21.9

1. SAE Recommended Practice J300d
2. 1 mPa*s = 1 cP
3. 1 mm²/s = 1 cSt

Table 2: Cummins Recommendations for Viscosity Grade vs. Ambient Temperature

SAE Viscosity Grade*	Ambient Temperature**
Recommended	
10W-30	-25°C to 35°C [-13°F to 95°F]
15W-40	
20W-40 or	- 10°C & above [14°F & above]

*SAE-5W mineral oils should not be used
 **For temperature consistently below -25°C [- 13°F] See Table 4.

Exception to Table 2

For standby and emergency engine applications such as electric generators and fire pumps where the engine is located in a heated room or enclosure use an SAE 10W-30 oil. For unheated standby and emergency applications, consult your Cummins service representative for advice.

Table 3: Alternate Oil Grades

10W	-25°C to 0°C[-13°F to 32°F]
20W	- 5°C to 20°C[-23 F to 68°F]
20W-20*	- 5°C to 20°C [- 23°F to 68°F]
20	- 5°C to 20°C [- 23° F to 68°F]
30	4°C and above [39°F and above]
40	10° C and above [50°F and above]

*20W-20 is not considered a multi-grade even though it meets two grades.

Synthetic Lubricating Oil

Synthetic oils for use in diesel engines are primarily blended from synthesized hydrocarbons and esters. These base oils are manufactured by chemically reacting lower molecular weight materials to produce a lubricant that has planned predictable properties.

Synthetic oil was developed for use in an extreme environment where the ambient temperature may be as low as - 45 °C [- 50°F] and extremely high engine temperatures at up to 205°C [400°F]. Under these extreme conditions petroleum base stock lubricants (mineral oil) do not perform satisfactorily.

Cummins Engine Co., Inc. recommends synthetic lubricating oil for use in Cummins engines operating in areas where the ambient temperature is consistently lower than - 25°C [- 13°F]. Synthetic lubricating oils may be used at higher ambient temperatures provided they meet the appropriate API Service categories and viscosity grades.

Cummins Engine Co., Inc. recommends the same oil change interval be followed for synthetic lubricating oil as that for petroleum based lubricating oil.

Arctic Operations

For engine operation in areas where the ambient temperature is consistently below - 25°C [- 13°F] and where there is no provision to keep the engine

warm when it is not operating, the lubricating oil should meet the requirements in the following table. Oil meeting these requirements usually have synthetic base stocks. SAE 5W viscosity grade synthetic oils may be used provided they meet the minimum viscosity requirement at 100°C [212 °F].

Table 4: Arctic Oil Recommendations

Parameter (Test Method)	Specifications
Performance	API Classification CC/SC
Quality Level	API Classification CC/CD
Viscosity	10,000 mPa•s Max. at - 35 °C [31 °F] 4.1 mm ² /s Min. at 100 °C [212 °F]
Pour Point (ASTM D-97)	Min. of 5°C [9°F] Below the Lowest Expected Ambient Temperature
Sulfated Ash Content (ASTM D-874)	1.85% by Weight Maximum

Grease

Cummins Engine Company, Inc., recommends use of grease meeting the specifications of MIL-G-3545, excluding those of sodium or soda soap thickeners. Contact lubricant supplier for grease meeting these specifications.

TEST TEST PROCEDURE

High-Temperature Performance

Dropping point, °F	ASTM D 2265 350 min.
Bearing life, hours at 300°F 10,000 rpm	*FTM 331 600 min.

Low Temperature Properties

Torque, GCM	ASTM D 1478
Start at 0°F	15,000 max.
Run at 0°F	5,000 max.

Rust Protection and Water Resistance

Rust Test	ASTM D 1743 Pass
Water resistance, %	ASTM D 1264 20 max.

Stability

Oil separation, % 30 Hours @ 212°F	*FTM 321 5 max.
---------------------------------------	--------------------

TEST TEST PROCEDURE

Penetration

Worked	ASTM D 217 250-300
--------	-----------------------

Bomb Test, PSI Drop

100 Hours	ASTM D 942. 10 max.
500 Hours	25 max.

Copper, Corrosion

	*FTM 5309 Pass
--	-------------------

Dirt Count, Particles/cc

25 Micron +	*FTM 3005 5,000 max.
75 Micron +	1,000 max.
125 Micron +	None

Rubber Swell

	*FTM 3603 10 max.
--	----------------------

*Federal Test Method Standard No. 791a.

Caution: Do not mix brands of grease. This can cause damage to the bearings. Excessive lubrication is as harmful as inadequate lubrication. After lubricating the fan hub, replace the pipe plugs. Use of fittings will allow lubricant to be thrown out, due to rotative speed.

Fuel Oil

Recommended Fuel Specification

Cummins recommends that fuel meeting the Grade No. 2-D requirements of the American Society for Testing and Materials (ASTM) D-975, Standard Specifications for Diesel Fuel Oils be used.

Cummins Diesel Engines have been developed to take advantage of the high energy content and generally lower cost of No. 2-D diesel fuels. Experience has shown that a Cummins Diesel Engine will also operate satisfactorily on fuels within the specification in Table 5.

Fuel Additives

In extreme situations, when available fuels are of poor quality or problems exist which are peculiar to certain operations, additives can be used; however, Cummins recommends consultation with the fuel supplier or Cummins Service Engineering Department prior to the use of fuel additives.

Wear Limits, Specifications and Torque

Table 5: Recommended Fuel Properties

Property	Recommended Specifications	General Description
Viscosity (ASTM D-445)	1.3 to 5.8 centistokes [1.3 to 5.8 mm per second] at 104°F [40 °C]	The injection system works most effectively when the fuel has the proper "body" or viscosity. Fuels that meet the requirements of ASTM 1-D or 2-D diesel fuels are satisfactory with Cummins fuel systems.
Cetane Number (ASTM D-613)	40 Minimum. In cold weather or in service with prolonged low loads, a higher cetane number is desirable.	Cetane number is a measure of the starting and warm-up characteristics of a fuel.
Sulfur Content (ASTM D-129 or 1552)	Not to exceed 1.0 mass percent	Diesel fuels contain varying amounts of various sulfur compounds. A practical method of neutralizing high sulfur fuels is to use lubricating oils which meet the API CD classification.
Active Sulfur (ASTM D-130)	Copper Strip Corrosion not to exceed No. 2 rating after three hours at 122 °F [50 °C].	Some sulfur compounds in fuel are actively corrosive. Fuels with a corrosion rating of three or higher after three hours at 122°F [50°C] can cause corrosion problems.
Water, and Sediment (ASTM D-1796)	Not to exceed 0.1 volume percent	The amount of water and solid debris in the fuel is generally classified as water and sediment. It is good practice to filter fuel while it is being put into the fuel tank. More water vapor condenses in partially filled tanks due to tank breathing caused by temperature changes. Filter elements, fuel screens in the fuel pump and fuel inlet connections on injectors must be cleaned or replaced whenever they become dirty. These screens and filters, in performing their intended function, will become clogged when using a poor or dirty fuel and will need to be changed more often.
Carbon Residue (Ramsbottom, ASTM D-524 or Conradson, ASTM D-189)	Not to exceed 0.25 mass percent on 10 volume percent residuum.	The tendency of a diesel fuel to form carbon deposits in an engine can be estimated by determining the Ramsbottom or Conradson carbon residue of the fuel after 90 percent of the fuel has been evaporated.
Flash Point (ASTM D-93)	At least 125°F [52°C] or legal temperature if higher than 125°F [52°C].	The flash point is the fuel temperature when enough volatile material evaporates so that a combustible mixture of fuel and air is formed above the fuel.
Density (ASTM D-287)	42° to 30° API gravity at 60°F [0.816 to 0.876 g/cc at 15°C].	Gravity is an indication of the high density energy content of the fuel. A fuel with a high density (low API gravity) contains more BTU's per gallon than a fuel with a low density (higher API gravity).
Cloud Point (ASTM D-97)	10°F [6°C] below lowest ambient temperature at which the fuel is expected to operate.	The cloud point of the fuel is the temperature at which crystals of paraffin was first appear. Crystals can be detected by a cloudiness of the fuel. These crystals will cause filters to plug.
Ash (ASTM D-482)	Not to exceed 0.02 mass percent.	The small amount of non-combustible metallic material found in almost all petroleum products is commonly called ash.
Distillation (ASTM D-86)	The distillation curve should be smooth and continuous.	At least 90 percent of the fuel should evaporate at less than 680°F [360°C]. All of the fuel should evaporate at less than 725°F [385 °C].

NT/NTA 855 C.I.D. Engine Shop Manual

Alternate Fuels

Note: Cummins Engine Company is not responsible and cannot warrant the emissions or performance of their engines when using other than the recommended fuels shown in Table 1.

During periods when the supply of No. 2-D diesel fuel is limited, alternate fuels, whose properties are within those defined in Table 6 can be used.

The following fuel specifications generally define alternate fuels within the prescribed limits:

Table 6: Alternate Fuels

1.	ASTM D-975 (grades No. 1-D and No. 3-D diesel fuel).
2.	ASTM D-396 (grades No. 2 fuel oil) - heating oil.
3.	ASTM D-1655 (grades Jet A and Jet A-1 aviation turbine fuel) - commercial jet fuel.
4.	ASTM D-2880 (grades No. 1 GT and No. 2 GT non-aviation gas turbine fuel).
5.	ASTM D-3699 (grades No. 1-K and No. 2-K) - kerosene.
6.	VV-F-800 (grades DFA, DF-1 and DF-2) - military diesel fuel.
7.	VV-F-815 (grades FS-1 and FS-2) - military heating oil.
8.	MIL-F-16884 (grade DFM) - military marine diesel fuel.
9.	MIL-T-5626 (grade JP-5) - military jet fuel.
10.	MIL-J-25656 (grade JP-6) - military jet fuel.
11.	MIL-T-83133 (grade JP-8) - military jet fuel.
12.	VV-K-211 (kerosene) - military kerosene.

Coolant

Water must be clean and free of any corrosive chemicals such as chloride, sulfates and acids. It must be kept slightly alkaline with a pH value in the range of 8.0 to 9.5. Any water which is suitable for drinking can be treated as described in the following paragraphs for use in an engine.

Maintain the Fleetguard DCA Water Filter on the engine. The filter by-passes a small amount of

coolant from the system via a filtering and treating

element which must be replaced periodically.

1. In summer, with no antifreeze, fill the system with water.
2. In winter select an antifreeze, except those with anti-leak compounds. Mix the antifreeze with water as required by temperature.
3. Install or replace DCA Water Filter Element as follows and as recommended in Cummins Engine Operation and Maintenance Manuals.

Caution: Although anti-leak antifreezes are chemically compatible with the DCA water treatment, the anti-leak compound can clog the coolant filters. Therefore "anti-leak" antifreeze can not be used in Cummins Engines.

Engines Equipped with DCA Water Filters

1. New engines shipped from the factory are equipped with water filters containing a "DCA precharge" element. See Table 7. This element is compatible with plain water or all permanent-type antifreeze except anti-leak antifreeze.

Note: The corrosion resistor cartridge part numbers listed in Table 7 are recommended for service replacement use on engines using the Chart Method to determine the "B" Maintenance Check. Refer to the Operation and Maintenance Manual(s) for details on using the Chart Method for extending the "B" Maintenance Checks. Refer to Table 8 for liquid DCA part numbers and to the Parts Status Table or a listing of old and new part numbers.

In order to obtain the number of DCA units required to precharge the cooling system multiply the number of U.S. gallons by 1.0, the number of Imperial gallons by 1.2 (one unit of DCA will treat one gallon of coolant). Use a corrosion resistor cartridge (S) from Table 7 (which contains that chemical charge) or use the regular service cartridge and add enough DCA liquid to reach the required protective level. See Table 8.

2. At the first "B" Check (oil change period) the DCA pre-charge element must be changed to the DCA Service Element.
3. Replace the DCA Service Element at each succeeding "B" Check except under the following conditions.

Wear Limits, Specifications and Torque

Table 7: Corrosion Resistor Cartridges for Extended Maintenance Intervals - Miles [Kilometers]

Cooling System Capacity			Corrosion Resistor Part No's.		Corrosion Resistor Part No's.		Corrosion Resistor Part No's.	
U.S. Gallons	Imperial Gallons	Liters	10,000 .14,000 DCA [16,000 - 22,500] Units		15,000 - 19,000 DCA [24,000 - 30,500] Units		20,000 - 25,000 DCA [32,000 - 40,225] Units	
0 - 10	0 - 8	0 - 38	3305366 (WF-2050)	2	3305366 (WF-2050)	2	3305367 (WF-2051)	4
11 - 20	9 - 17	42 - 76	3305367 (WF-2051)	4	3305367 (WF-2051)	4	3305368 (WF-2052)	6
21 - 30	17 - 25	79 - 114	3305367 (WF-2051)	4	3305368 (WF-2052)	6	3305369 (WF-2053)	8
31 - 50	26 - 42	117 - 189	3305369 (WF-2053)	8	3305370 (WF-2054)	15	3305371 (WF-2055)	23
			or		or		or	
			(2) 3305367 (WF-2051)	4 each	(2) 3305368 (WF-2052)	6 each	(2) 3305370 (WF-2054)	15 each
51 - 100	42 - 83	193 - 379	3305370 (WF-2054)	15	3305371 (WF-2055)	23	3305371 (WF-2055)	23
			or		or		or	
			(2) 3305368 (WF-2052)	6 each	(2) 3305370 (WF-2054)	15 each	(2) 3305370 (WF-2054)	15 each
			or		or		or	
			(4) 3305367 (WF-2051)	4 each	(4) 3305368 (WF-2052)	6 each	(4) 3305368 (WF-2052)	6 each
101 - 150	84 - 125	382 - 568	3305371 (WF-2055)	23	(2) 3305371 (WF-2055)	23 each	(2) 3305371 (WF-2055)	23 each
			or		or		or	
			(2) 3305370 (WF-2054)	15 each	(4) 3305370 (WF-2054)	15 each	(4) 3305370 (WF-2054)	15 each
			or					
			(4) 3305369 (WF-2053)	8 each				

- a. If make-up coolant must be added between element changes, use coolant from a pretreated supply, as stated in "Make-up Coolant Specifications", in Group 2 of Operation and Maintenance Manual.
 - b. Each time the system is drained, go back to the pre-charge element.
4. To make sure of adequate protection, have the coolant checked at each third element change or more often.

Table 8: Liquid DCA Products

Part No.	DCA Units	Part Name
3305372 (DCA-30L)	4 (1 pint)	Liquid DCA
3305373 (DCA-35L)	16 (1/2 gallon)	Liquid DCA
3305374 (DCA-40L)	32 (1 gallon)	Liquid DCA
3305375 (DCA-45L)	160 (5 gallon)	Liquid DCA
3305377 (DCA-50L)	1760 (55 gallon)	Liquid DCA

Group 20

This group describes different types of engine brakes. These include compression brakes and exhaust brakes with air intake suppressors. The operation and installation of the Jacobs Engine Brake is also described.

Vehicle Braking

**The Compression Brake
(Jacobs Engine Brake)
The Method of Operation of the
Compression Brake**

When the compression brake is energized, it causes the engine to perform like a power absorbing air compressor. The brake opens the exhaust valves before the compression stroke is complete and combustion does not occur in the cylinder. The compressed air is released into the engine

exhaust system and energy is not returned to the engine through the power stroke.

The following describes the process of opening the exhaust valves to release the compressed air from the cylinder. Refer to the diagram shown in Fig. 20-1 to help you to understand the process.

1. When you energize the solenoid valve, engine lubricating oil flows under pressure through the control valve. Then, the oil flows to both the master piston and the slave piston.

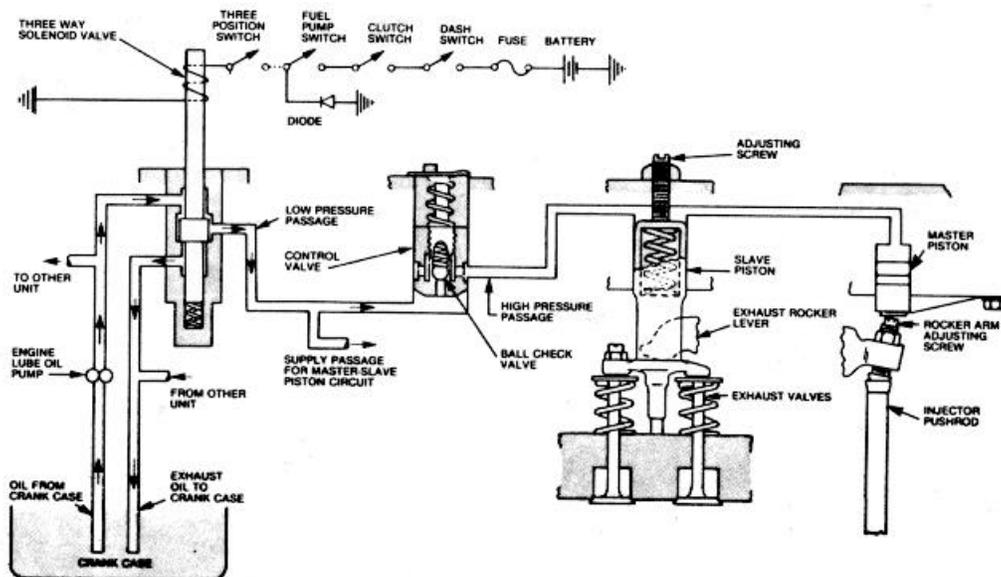


Fig. 20-1. Schematic Diagram Of The Compression Brake (Jacobs Engine Brake).

2. The oil pressure causes the master piston to move down against the adjusting screw of the injector rocker lever.
3. The push rod moves the adjusting screw end of the rocker lever up during the injection cycle. This causes the adjusting screw to push against the master piston. The movement of the master piston causes high oil pressure in the oil passage from the master piston to the slave piston. The ball check valve in the control valve holds the high pressure in the oil flow from the master piston to the slave piston.
4. The high pressure in the oil flow causes the slave piston to move down against the cross-head and opens the exhaust valves. The exhaust valves open as the piston moves to near the end of the compression stroke. The compression braking cycle is completed as the compressed air is released from the cylinder.

To Install the Compression Brake (Jacobs Engine Brake)

1. Remove the rocker lever housings if they had been previously installed.
2. Remove the adjusting screw and locknut from the exhaust valve crossheads. Remove the exhaust valve crossheads.
3. Install the adjusting screws and locknuts into the Jacobs Brake crossheads.
4. Install the Jacobs Brake crossheads onto the exhaust crosshead guides. The adjusting screw end of the crosshead must be toward the water manifold of the engine.
5. Adjust the crossheads. Follow the instructions on page 14-30 to adjust the crossheads.
6. Remove the rocker lever shaft setscrew from the rocker lever housings, Fig. 20-2.
7. Install the Jacobs Brake oil supply screw into the rocker lever housings. Tighten the screw so that the top of the screw is even with the boss in the housing.
8. Remove the adjusting screw and locknut from the injector rocker levers. Remove the locknut from the adjusting screw. Install the locknuts onto the Jacobs Brake adjusting screws.

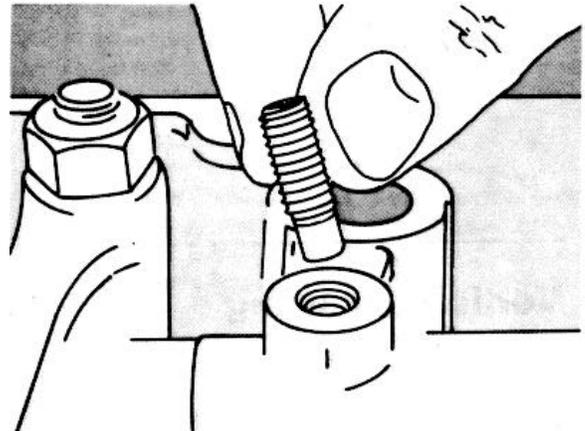


Fig. 20-2. Remove The Setscrew From The Rocker Lever Housing.

9. Install the Jacobs Brake adjusting screws into the injector rocker levers.
10. Install the rocker lever housings. Follow steps 1, 2 and 3 on page 14-31 to install the housings.
11. Install the Jacobs Brake steel washers into the mounting holes of the rocker lever housings, Fig. 20-3.

Caution: Do not use the Jacobs Brake washers if the engine has cast iron rocker lever housings.

12. Install the Jacobs Brake studs to fasten the rocker lever housings onto the engine. Make sure that you install the correct length studs into the correct location on the engine. If the

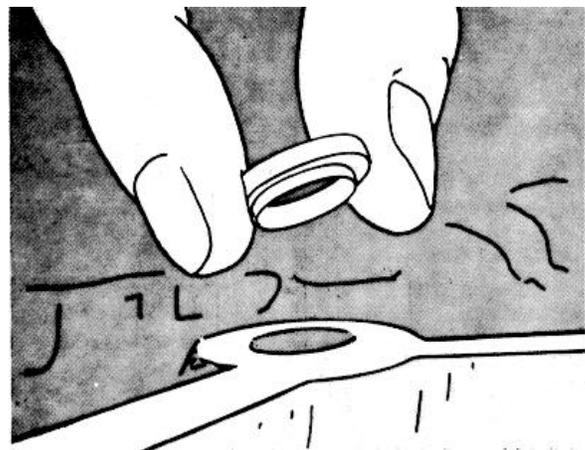


Fig: 20-3. Install The Jacobs Brake Steel Washers.

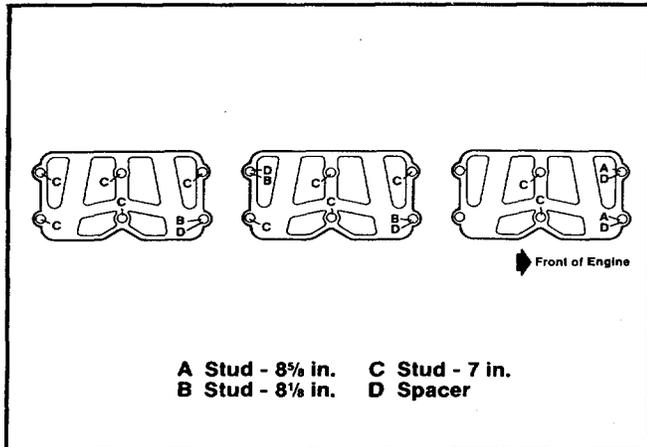


Fig. 20-4. Locations For The Stud And Spacer In The Rocker Lever Housings.

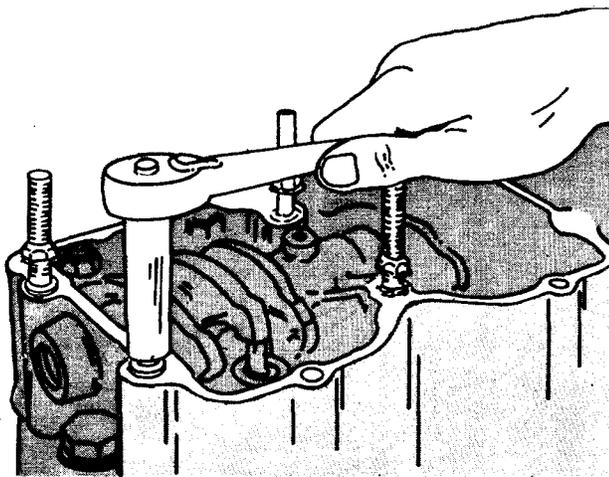


Fig. 20-5. Install The Jacobs Brake Studs Into The Rocker Lever Housings.

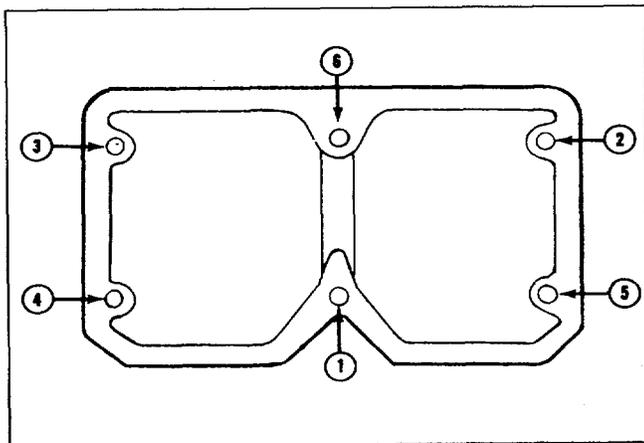


Fig. 20-6 (N11463). The Tightening Sequence For The Jacobs Brake Studs In The Rocker Lever Housings.

13. Tighten the studs to 65 to 75 ft.-lbs. [88 to 102 Nom] torque. Tighten the studs in the sequence shown in Fig. 20-6.
14. Adjust the valves and injectors. Follow the instructions that begin on page 14-32 to adjust the valves and injectors.
15. Install the rubber seal into the hole in the bottom of the Jacobs Brake unit. The hole is located approximately in the center of the side that installs against the rocker lever housing, Fig. 20-7. Apply a light coat of clean grease or lubriplate onto the rubber seal to hold the seal into the hole.

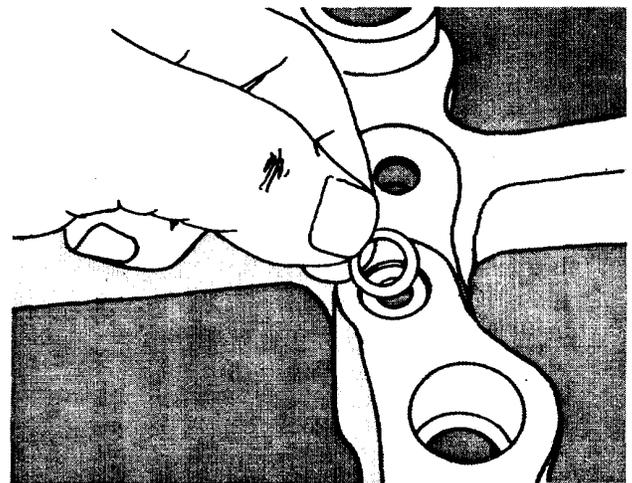


Fig. 20-7. Install The Rubber Seal Into The Jacobs Brake Unit.

16. Install the Jacobs Brake gaskets onto the rocker lever housings. The surfaces of the rocker lever housings must be clean and smooth when you install the gaskets.
17. Install the Jacobs Brake units onto the rocker lever housings. Install the spacers and nuts onto the studs. See Fig. 20-4 to find the correct locations for the spacers.
18. Tighten the nuts to 55 to 60 ft.-lbs. [75 to 81 Nom] torque. Tighten the nuts in the sequence shown in Fig. 20-6.

To Adjust the Slave Piston

The slave piston adjustment must be made with

the engine stopped and cold. Use the same procedure to adjust the slave piston that you used to adjust the valves. When the engine rotation is in the correct position to adjust the exhaust valve clearance it is also in the correct position to adjust the slave piston clearance. The exhaust valves for the cylinder to be adjusted must be in the closed position.

1. Rotate the crankshaft in the direction of engine rotation. Align the "A" or "1-6VS" mark on the accessory drive pulley with the pointer on the gear cover.
2. When the "A" or "1-6VS" mark is aligned, the intake and exhaust valves must be closed for cylinder number 5. The injector plunger for cylinder number 3 must be at the top of its travel. If the plunger is not at the top of its travel, rotate the crankshaft one complete revolution. Then, align the valve set mark.

Note: The instructions using the "A" or "1-6VS" mark to begin the adjustments are for illustration purposes. You can begin the adjustments with any of the cylinders as shown in Table 1.

Table 1: Injector and Valve Set Position

Bar in Direction	Pulley Position	Set Cylinder	
		Injector	Valve
Start	A or 1-6VS	3	5
Adv. To	B or 2-5VS	6	3
Adv. To	C or 3-4VS	2	6
Adv. To	A or 1-6VS	4	2
Adv. To	B or 2-5VS	1	4
Adv. To	C or 3-4VS	5	1

Note: Use an allen wrench to adjust the slave piston in the Jacobs Brake Model 25C and Model 44, Fig. 20-8. Use a screwdriver to adjust the slave piston in the Jacobs Brake Model 44A and Model 44B, Fig. 20-9. Use the same adjustment procedure and clearance for the Models 25C, 44, 44A and 44B.

3. Loosen the locknut for the adjusting screw. Loosen the adjusting screw until the piston is against the bottom of the bore in the engine brake housing.
4. Put a 0.018 inch [0.46 mm] feeler gauge between the slave piston and the crosshead. Tighten the adjusting screw until the slave

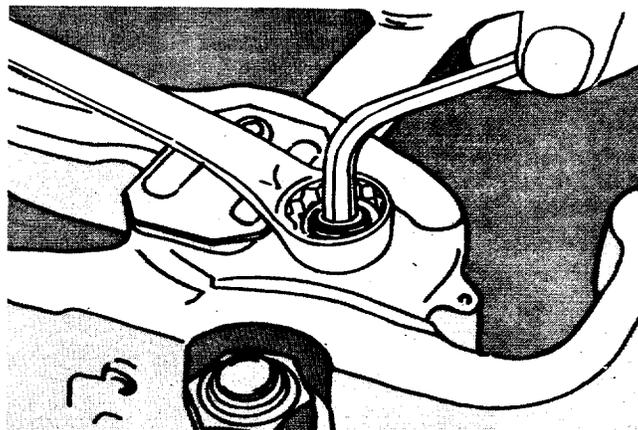


Fig. 20-8. Adjust The Slave Piston In The Models 25C And 44.

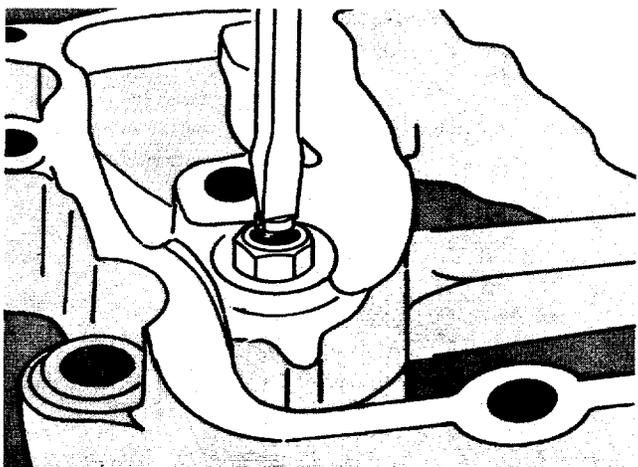


Fig. 20-9. Adjust The Slave Piston In The Models 44A And 44B.

piston touches the feeler gauge. The feeler gauge must have only a light amount of friction between the slave piston and the cross-b head. Hold the adjusting screw in position and tighten the locknut to 15 to 18 ft.-lbs. [20.3 to 24.4 N*m] torque.

5. Use the same procedure to adjust the remainder of the slave pistons.
6. Install the electrical wiring onto the solenoid in the Jacobs Brake units, Fig. 20-10. Connect the other end of the wiring to the inside terminal of the leadout assembly in the brake housing.

Note: Some applications use a 2-wire dual lead solenoid valve. Either solenoid electrical wiring

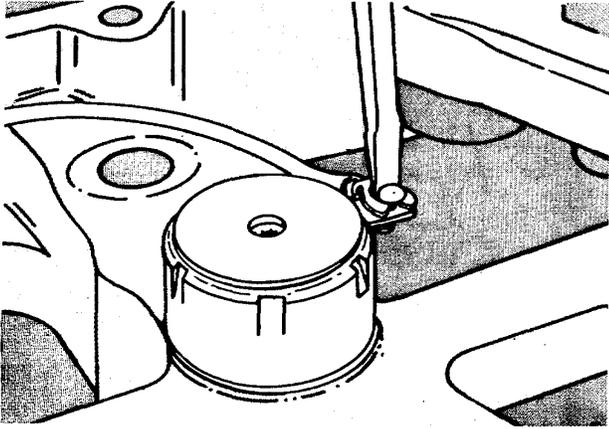


Fig. 20-10. Install The Electrical Wiring To The Solenoid Valve.

can be connected to the vehicle electrical system and the other wire to the ground system.

7. Remove the air from the oil passages in the brake units.
 - a. Start the engine. Run the engine at idle RPM for 4 to 5 minutes.
 - b. Increase the engine RPM to approximately 1800 RPM.
 - c. Decrease the engine RPM to the normal idle RPM. Push down on the solenoid 5 or 6 times to let the engine oil fill the passages in the brake units. Use your hand to push down on the solenoid, Fig. 20-11.
 - d. Stop the engine.

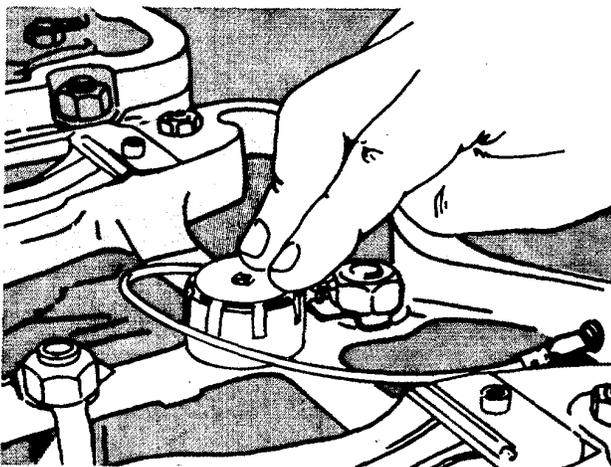


Fig. 20-11. Push On The Solenoid To Fill The Oil Passages.

Caution: When the engine is running and the rocker housing covers are removed, be sure to wear eye and face protection.

8. Install new rocker housing cover gaskets onto the Jacobs Brake units. Make sure that the surfaces for the gaskets are clean and free from any damage.
9. Install the rocker housing covers. Follow the instructions given on page 14-36 to tighten the capscrews.

Install the Clutch Switch

1. Install the clutch switch inside the vehicle cab. Use a location in the cab so that the actuating arm of the switch is against the clutch pedal arm, Fig. 20-12.

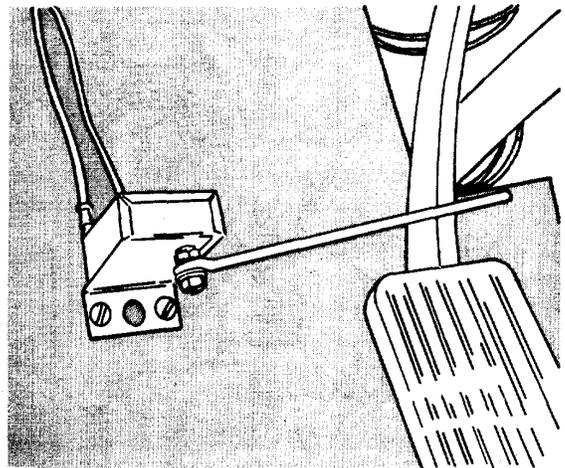


Fig. 20-12. The Clutch Switch Arm Against The Clutch Pedal Arm.

2. Adjust the clutch switch. The switch must be adjusted so that when the clutch pedal is pushed down (clutch disengaged) the switch will be in the open position. When the switch is in the open position it stops the electrical current to the solenoid in the brake unit.
 - a. Put the actuating arm of the switch against the clutch pedal arm so that the free movement of the clutch pedal causes the switch to open. You can loosen the outer nut that holds the actuating arm to the switch so that you can move the arm to the correct position. If necessary, you can bend the arm so that it is in the correct position. Tighten the outer nut.

Install the Fuel Pump Switch

1. Install the fuel pump switch onto the fuel pump as shown in Fig. 20-13. Use two of the fuel pump housing capscrews to fasten the switch onto the fuel pump.
2. Install the actuating arm for the switch onto the fuel pump throttle shaft. Adjust the actuating arm so that it causes the switch to be in the closed position when the throttle shaft is at the idle position. The switch must be in the open position when the throttle shaft is not at idle. When the switch is in the open position it stops the electrical current to the solenoid in the brake unit. Tighten or loosen the adjusting screw to adjust the arm to the

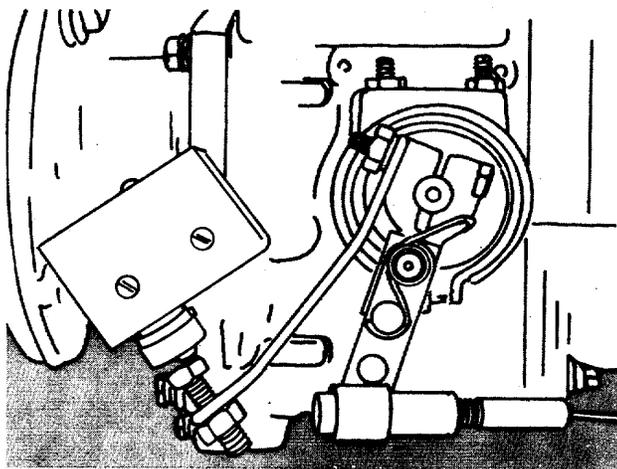


Fig. 20-13. The Fuel Pump Switch Installed Onto The Fuel Pump.

Caution: Make sure that the fuel pump throttle shaft moves freely from full throttle position to idle position after you have installed the switch.

Maintenance of the Engine Brake

The Control Valve

Disassembly

1. Remove the capscrew that fastens the cover plate to the housing, Fig. 20-14.

Warning: Remove the capscrew carefully. The cover plate holds the control valve springs in a compressed position.

2. Remove the control valve springs, Fig. 20-15.

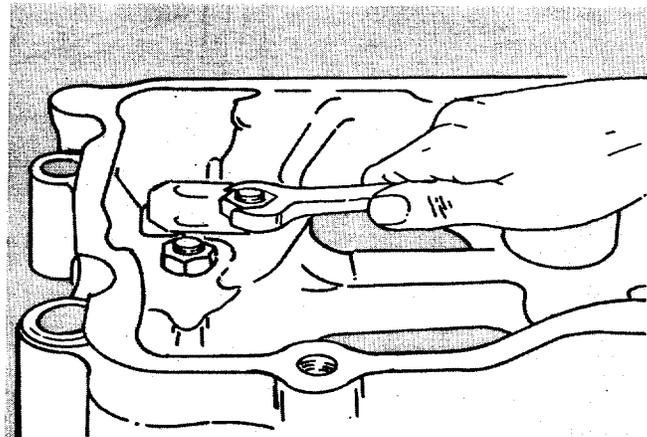


Fig. 20-14. Remove The Control Valve Cover Plate.

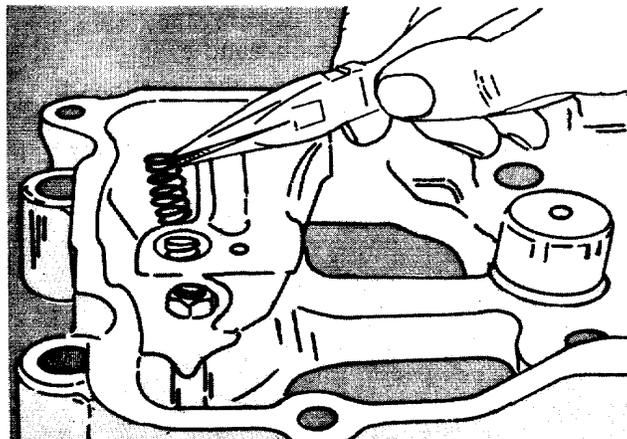


Fig. 20-15. Remove The Control Valve Springs.

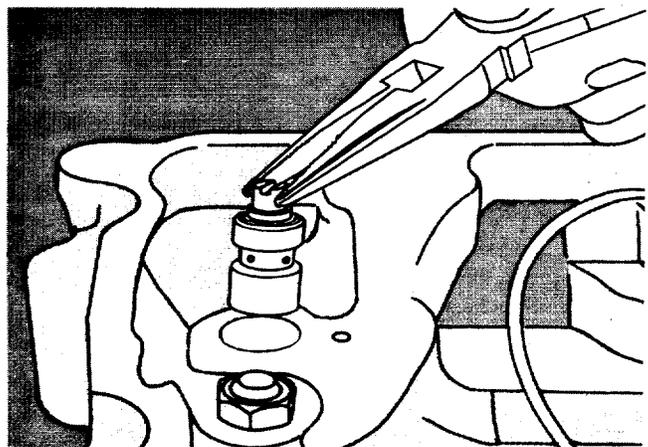


Fig. 20-16. Remove The Control Valve.

Note: The Jacobs Engine Brake Model Numbers 20, 25, 25A and 25B uses one spring for the control valve.

3. Remove the control valve. Use needle nose pliers to pull the control valve straight up and out of the bore, Fig. 20-16.

Inspection, Cleaning and Replacement

1. Check the springs for wear and damage.
2. Replace the springs if they are worn or damaged.
3. Check the control valve. The control valve must move freely in the bore. If it does not move freely, clean the valve and check it for damage. Replace the valve if it is damaged.

Assembly

1. Install the control valve into the bore.
2. Install the springs into the bore.
3. Install the cover plate.

The Solenoid Valve

Disassembly

1. Remove the electrical wiring from the solenoid valve.
2. Remove the solenoid valve. Use the solenoid wrench to loosen the solenoid valve, Fig. 20-17.



Fig. 20-17. Use The Solenoid Wrench To Loosen The Solenoid Valve.

Replacement

1. Remove the O-ring seals from the solenoid valve.
2. Apply a coat of oil onto the new O-ring seals.
3. Install the new O-ring seals onto the solenoid valve, Fig. 20-18. Make sure that the O-rings are correctly installed onto the solenoid valve.

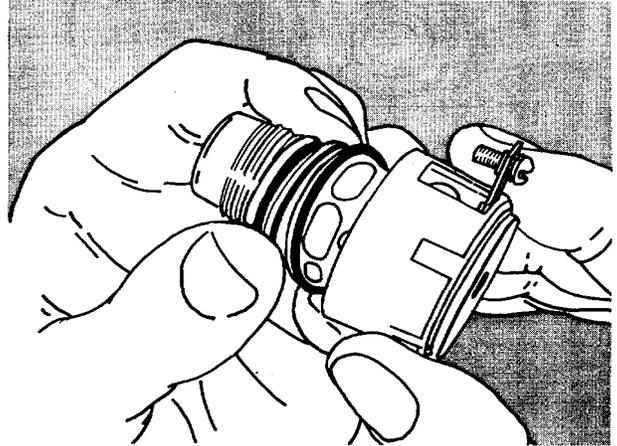


Fig. 20-18. install The O-Ring Seals Onto The Solenoid Valve.

Assembly

1. Install the solenoid valve into the bore in the housing. Make sure that the O-rings do not move from their position on the solenoid valve.
2. Use the solenoid wrench to tighten the solenoid valve.
3. Install the electrical wiring onto the solenoid valve.

The Master Piston

Disassembly

1. Remove the capscrew and flat spring, Fig. 20-19. Take notice of the position of the flat spring before you remove it. The spring must be installed in the same position as when it was removed.

Note: Some models use a capscrew and washer to fasten the flat spring onto the housing. Some models use a spring retainer. The spring retainer must be installed in the same position as when it was removed.

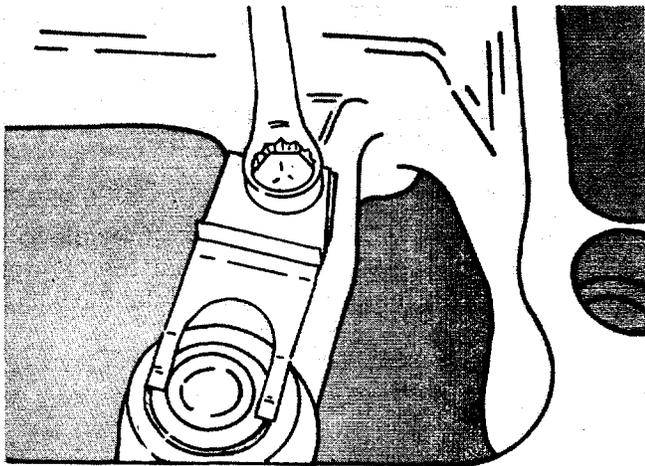


Fig. 20-19. Remove The Capscrew And Flat Spring.

2. Remove the master piston from the bore.

Inspection and Replacement

1. Check the master piston for freedom of movement in the bore. If the piston does not move freely, check for dirt or damage to the piston. Replace the piston if it is damaged.

Assembly

1. Install the master piston into the bore.
2. Install the flat spring, retainer or washer and capscrew. Make sure that the tabs of the spring do not touch the sides of the raised center part of the piston.

Caution: Do not try to adjust the master piston. The master piston has been adjusted at the factory. Any changes made to the master piston can cause damage to the engine.

The Slave Piston

Disassembly

Warning: The slave piston spring is under heavy compression. You must be very careful when you remove the spring. Follow the instructions and use the correct tools. Wear safety glasses.

1. Loosen the adjusting screw locknut.
2. Turn the engine brake unit over so that the side of the unit that installs against the rocker lever housing is up.
3. Push down against the spring retainer to

remove the tension against the snap ring. Use an arbor press to push against the spring retainer. Remove the snap ring, Fig. 20-20. Slowly raise the arbor press until all of the tension is released from the slave piston spring.

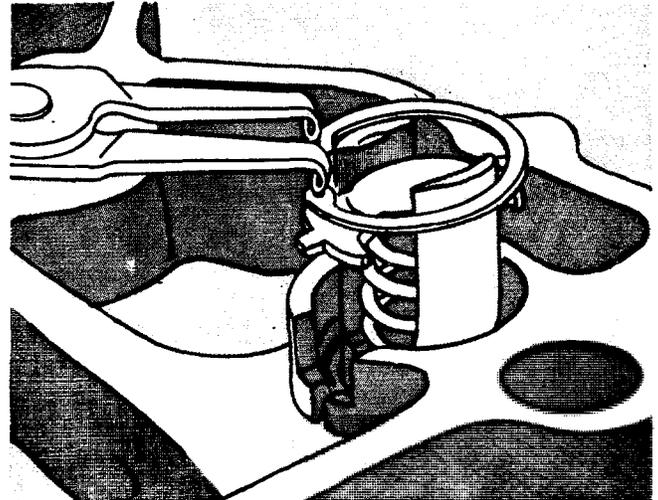


Fig. 20-20. Remove The Snap Ring From The Slave Piston.

4. Remove the spring retainer, spring and slave piston. Take notice of the position of the spring retainer. It must be installed in the same position as when removed.

Inspection and Replacement

1. Check the spring and spring retainer. Replace the parts if they are worn or damaged.
2. Check the slave piston for freedom of movement in the bore. If the piston does not move freely, check for dirt or damage. Replace the piston if it is damaged.

Assembly

1. Install the slave piston into the bore.
2. Install the spring and spring retainer.
3. Use an arbor press to push down on the retainer and spring so that you can install the snap ring. Install the snap ring.
4. Turn the brake unit over so that the side of the unit that install against the rocker lever housing is down. Install the adjusting screw and locknut.

Caution: The adjusting screws for the Jacobs Brake Models 44A and 44B contain an automatic

lash adjuster. Do not make any changes to these adjusting screws. Any changes can cause damage to the engine.

The Exhaust Brake

1. When an exhaust brake is installed, the engine can be used to reduce the speed of the vehicle and prevent wear on the mechanical brake system. The exhaust brake operates by controlling the flow of the exhaust gas from the exhaust manifold. On turbocharged engines, the exhaust flow is controlled after the exhaust flows through the turbocharger. This action applies more pressure against the engine piston, which reduces the rotation of the crankshaft and slows the vehicle.
2. The exhaust brake can generate carbon deposits in applications where braking is required for extended periods of time. Hydraulic or electric retarders can be used for these applications.
3. The following conditions are acceptable for the use of exhaust brakes:
 - a. The maximum pressure in the exhaust system must never exceed 45 psi [310 kPa].
 - b. Heavy duty valve springs, Part No. 178869, and valve guides, Part No. 170296, must be installed into the cylinder heads.
 - c. The damper plate for the exhaust brake must be fully open when the engine is accelerating or pulling a full load.
 - d. When the engine is at idle speed and the exhaust brake is in the closed position. The damper plate must be adjusted to permit a small amount of exhaust flow through the plate.
 - e. For naturally aspirated engines, install an air intake suppressor into the air intake system to prevent dirt from going through the air cleaner and into the engine. The air cleaner can be used without a relief valve when the engine has an exhaust brake.
 - f. The air intake suppressor can be used for turbocharged engines.
 - g. The Cummins warranty does not include damage caused by the installation and use of the exhaust brake.

- h. Refer to the manufacturer's instructions for the installation, operation, adjustment and maintenance of the exhaust brake.
4. Before you install any new exhaust brake, write or call the Cummins Application Engineering Department for more details.

The Air Intake Suppressor

When the engine is equipped with an exhaust brake, pulsations can occur in the air intake system. This is caused by the combination of cylinder pressures and the intake valves opening during the braking period. The pulsations can damage the element and cause the dirt to move through the element and enter the engine.

The air intake suppressor can help to prevent this problem.

The air intake suppressor must be installed into the air intake system, between the engine and the air cleaner. Install the suppressor as close to the engine as possible. Use the following to help you to determine the need for a suppressor.

1. Air intake suppressors are required for naturally aspirated engines that use a dry element air cleaner.
2. Check the design of the air cleaner to find if an air intake suppressor is necessary.
3. Oil bath air cleaners must have a seal between the oil sump and the air cleaner body.

Note: Use the Part No. 147706 air intake suppressor with 4.0 inch [101.6 mm] diameter air intake tubing. Use the Part No. 147707 air intake suppressor with 5.5 inch [139.7 mm] diameter air intake tubing.

NTA 855L4 DIESEL ENGINE CUMMINS
SECTION II. MAINTENANCE ALLOCATION CHART
Appendix

(1) Group Number	(2) Component /Assembly	(3) Maintenance Function	(4) Maintenance Level					(5) Tools And Equipment	(6) Remarks
			C	O	F	H	D		
01	Exhaust System Manifold, Exhaust	Inspect Replace Repair		0.5	6.0 8.0				
02	Cooling, System Hoses & Clamps	Inspect Replace	0.2	2.0					
	Thermostat Engine	Inspect Test Replace		0.5 0.5 2.0					
	Heater, External Engine Block	Inspect Replace Repair		0.5 4.0	6.0				
	Water Manifold Assy	Inspect Replace Repair		0.5	6.0 12.0				
	Pump, Water	Inspect Replace Repair		0.2	4.0	8.0			
03	Overhaul Fuel System Blower Assy	Inspect Replace Repair		0.2	10.C	12.0		10.0	
	Overhaul Lines & Fittings	Inspect Replace Repair	0.2 2.0 4.0					16.0	
	Filter, Fuel	Inspect Replace	0.1 0.3						
	Pump, Fuel Recipro- cating	Inspect Test Replace		0.5	1.5 3.0				
	Pumps, Fuel Injector Repair	Overhaul				10.0		16.0	
				21-1					

NTA 855L4 DIESEL ENGINE CUMMINS
SECTION II. MAINTENANCE ALLOCATION CHART
Appendix

(1) Group Number	(2) Component /Assembly	(3) Maintenance Function	(4) Maintenance Level					(5) Tools And Equipment	(6) Remarks
			C	O	F	H	D		
	Injectors, Fuel	Inspect Test Adjust Replace Repair		0.5 	1.0 2.0 4.0		8.0		
	Engine Assembly	Inspect Test Service Replace Repair Overhaul	1.5	1.5 	40.0	8.0		80.0	
	Filter, Oil	Inspect Replace		0.2 0.5					
	Lube Oil Cooler	Inspect Replace Repair		0.2 4.0	8.0				
	Drive Mechanism Fuel Pump	-Inspect Replace Repair		1.0	8.0	16.0			
	Pump, Oil	Inspect Replace Repair Overhaul				2.0 5.0	10.0	12.-0	
	Compression Release Mechanism	Inspect Replace Repair			2.0 4.0 3.0				
	Governor	Inspect Test Replace Repair Overhaul			0.3 2.0 2.0	10.0	16.0		
	Governor Drive	Inspect Replace Repair			2.0 4.0	8.0			
	Manifold, Intake	Inspect Replace Repair		0.5	4.0 6.0				
				21-2					

NTA 855L4 DIESEL ENGINE CUMMINS
SECTION II. MAINTENANCE ALLOCATION CHART
Appendix

(1) Group Number	(2) Component /Assembly	(3) Maintenance Function	(4) Maintenance Level					(5) Tools And Equipment	(6) Remarks
			C	O	F	H	D		
	After Cooler	Inspect Replace Repair		0.5	8.0	12.0			
	Fly Wheel & Damper	Inspect Replace			1.0 2.0				
	Rocker Arms	Inspect Replace Repair		0.3	1.5	3.0			
	Cylinder Head Assy	Inspect Replace Repair Overhaul		0.5	4.0	10.0	16.0		
	Valves, Intake & Exhaust	Inspect Adjust Replace Repair			1.0 1.5	8.0 12.0			
	Springs, Valve	Inspect Replace			1.0 2.0				
	Oil Pan	Inspect Replace Repair		1.0		16.0 24.0			
	Pistons & Connecting Rods	Inspect Replace Repair			2.0 12.0	20.0			
	Liners, Cylinder	Inspect Replace Repair			2.0 12.0	20.0			
	Camshaft & Bearings	Inspect Replace			4.0	16.0			
	Crankshaft & Bearings	Inspect Replace Repair			2.5	40.0	80.0		
	Engine Block	Inspect Test Replace Repair Overhaul		1.0		24.0	8.0 40.0 80.0		

NTA 855L4 DIESEL ENGINE CUMMINS

SECTION III. TOOL AND TEST EQUIPMENT REQUIREMENTS

REF. CODE	MAINT. CAT.	NOMENCLATURE	NATIONAL/NATO STOCK NUMBER	TOOL NUMBER

NTA 855L4 DIESEL ENGINE CUMMINS

SECTION IV

Reference Code	Remarks

Index

Accessory Drive Assembly

Assembly	9-2
Disassembly.....	9-2
Inspection	2
Installation.....	14-17
Removal	0-11

Accessory Drive Pulley

Installation.....	14-20
Removal	0-10

Adjust Injectors and Valves..... 14-32

Aftercooler

Assembly	10-1
Disassembly.....	10-1
Installation.....	14-36
Removal	0-7
Repair	10-1

Air Compressor

Installation.....	14-21
Removal	0-9
Repair	;
.....	12-1

Air Starting Motor

Repair	12-1
--------------	------

Alternator

Installation.....	14-39
Removal	0-2

Alternator Drive Pulley

Installation.....	14-40
-------------------	-------

Bearings (Main and Rods).....	1-25
-------------------------------	------

Bearing Shell Inspection.....	1-25
-------------------------------	------

Belts

Adjustment.....	14-32
Installation.....	14-32

Cam Follower

Assembly	4-6
Disassembly.....	4-2
Inspection	4-3
Installation.....	14-12
Removal	0-13

Cam Follower (MVT)

Assembly	4-11
Disassembly.....	4-7
Inspection	4-9
Installation.....	14-13
Removal	0-13

Camshaft

Inspection	1-33
Installation.....	14-9
Removal	0-16

Camshaft Gear

Installation.....	1-33
Removal	1-33

Chassis Dynamometer Test..... 14-47

Checks During Run-In 14-48

Coolant Specifications 18-24

Compression Brake

Adjustment.....	20-3
Installation.....	20-2
Maintenance	20-6

Connecting Rod

Inspection	1-27
Installation.....	14-7
Removal	0-16
Repair	1-30

Crankcase Breather

Assembly	3-5
Cleaning.....	3-5
Disassembly.....	3-5

Crankcase Pressure (Blow-By)..... 14-47

Crankshaft

Assembly	1-25
Cleaning and Inspection.....	1-24
Disassembly.....	1-24
Installation.....	14-3
Removal	0-17

Crossheads

Adjustment..... 14-30
 Inspection 2-12
 Installation..... 14-30
 Removal 0-11

Cylinder Block

Cleaning..... 0-3
 Inspection 1-2

Cylinder Head

Assembly and Testing..... 2-16
 Cleaning..... 2-3
 Disassembly..... 2-2
 Inspection 2-4
 Installation..... 14-10
 Removal 0-12
 Repair 2-5

Cylinder Liners

Cleaning and Inspection..... 1-24
 Installation..... 14-5
 Removal 0-18

Drain Water and Oil..... 0-2

Drive (Fuel Pump/Compressor)

Assembly 9-2
 Disassembly..... 9-2
 Inspection 9-2
 Installation..... 14-17
 Removal 0-11

Drive Pulley Inspection and Repair..... 9-4

Electrical Connections

Installation..... 14-39
 Removal 0-2

Engine Dynamometer

Installation..... 14-44
 Performance Data..... 14-46
 Power Check..... 14-47
 Test Procedures..... 14-47

Engine Run-In Test 14-47

Engine Serial Number 0-1

Engine Storage

Long Term 14-49
 Preparation 14-49
 Temporary 14-49

Index 2

Engine Testing 14-44

Engine Timing

Small Cam and Big Cam..... 14-14
 MVT 14-16

Exhaust Brake 20-9

Exhaust Manifolds

Cleaning and Inspection..... 11-1
 Installation..... 14-37
 Removal 0-7

Fan Bracket

Installation..... 14-23
 Removal 0-9

Fan Hubs

Assembly 8-19
 Disassembly..... 8-19
 Installation..... 14-32
 Inspection 8-19
 Removal 0-9

Fill Hydraulic Governor 14-45

Flywheel

Installation..... 14-27
 Removal 0-14
 Repair 16-1

Flywheel Housing

Installation..... 14-25
 Removal 0-15

Foreword 2

Fuel Crossover

Installation..... 14-11
 Removal 0-12

Front Engine Support

Installation..... 14-23
 Removal 0-14

Fuel Filter

Installation..... 14-37
 Removal 0-4

Fuel Oil Specifications..... 18-22

Fuel Pump

Adjustment.....	5-1
Installation.....	14-29
Removal.....	0-8

Fuel Pump Drive (Accessory Drive)

Assembly.....	9-2
Disassembly.....	9-2
Inspection.....	9-2
Installation.....	14-17
Removal.....	0-11

Fuel System..... 5-1**Gear Backlash.....** 14-10**Gear Cover**

Assembly.....	1-34
Inspection.....	1-34
Installation.....	14-18
Removal.....	0-15
Repair.....	1-34

Generator/Alternator

Installation.....	14-39
Removal.....	0-2

Governors (Hydraulic)

Fill.....	14-45
-----------	-------

Hose Size..... 7-12**In-Chassis Run-In.....** 14-47**Injection Timing**

Small Cam and Big Cam.....	14-14
MVT.....	14-16

Injector Adjustment

Dial Indicator Method.....	14-32
Torque Method.....	14-36

Injectors

Calibration.....	6-1
Installation.....	14-30
Removal.....	0-12

Injector Tip Protrusion..... 2-15**Intake Manifold/Aftercooler**

Cleaning and Inspection.....	10-1
Installation.....	14-36
Removal.....	0-7

Lubricating Oil Cooler (FFC and Big Cam)

Assembly.....	7-19
Disassembly.....	7-15
Inspection.....	7-18
Installation.....	14-38
Removal.....	0-5

Lubricating Oil Cooler (NTE)

Assembly.....	7-22
Disassembly.....	7-20
Inspection.....	7-21

Lubricating Oil Filter

Assembly.....	7-11
Disassembly.....	7-11
Inspection.....	7-11
Installation.....	14-39
Removal.....	0-6

Lubricating Oil Filter (By-Pass Type)

Assembly.....	7-12
Disassembly.....	7-12
Inspection.....	7-12

Lubricating Oil Pump

Assembly.....	7-4
Bushing Replacement.....	7-2
Disassembly.....	7-2
Inspection.....	7-2
Installation.....	14-18
Removal.....	0-12

Lubricating Oil Specifications..... 18-19**Main Bearing Caps**

Installation.....	14-3
Removal.....	0-17
Tightening.....	14-4

Mount Cylinder Block to Stand..... 14-3**Mount Engine to Stand.....** 0-7**Mounting Adaptations.....** 16-1**Oil Gauge Dipstick.....** 7-14**Oil Gauge Tube and Bracket**

Installation.....	14-40
Removal.....	0-4
.Index 3	

Oil Pan
 Inspection 7-14
 Installation..... 14-28
 Removal 0-15
 Repair 7-14

Paint Engine 14-48

Piston Rings
 Installation..... 1-31 & 14-7

Pistons
 Assembly 1-32
 Cleaning and Inspection 1-31
 Installation..... 14-7
 Removal 0-16

Piston Cooling Nozzles
 Installation..... 14-38
 Removal 0-6

Prime Fuel System 14-45

Prime Lubricating System 14-45

Push Rods
 Cleaning..... 4-18
 Inspection 4-18
 Installation..... 14-12
 Removal 0-11

Rear Seal
 Installation..... 14-25
 Removal 0-16

Remove Engine From Stand..... 14-37

Rocker Housing
 Assembly 3-4
 Disassembly..... 3-2
 Inspection 3-2
 Installation..... 14-31
 Removal 0-11

Rocker Housing Cover
 Assembly 3-5
 Inspection 3-5
 Installation..... 14-36
 Removal 0-11

Starting Motor
 Installation..... 14-40
 Removal 0-2

Starting Procedure..... 14-46

Steam Clean Engine..... 0-2

Steam Cleaning 0-3

Table of Contents..... 4

Test Procedures 14-4;

Thermostat and Housing
 Assembly 8-22
 Disassembly..... 8-21
 Inspection 8-21
 Installation..... 14-30
 Removal 0-11

Thrust Washers 9-2

Timing the Engine..... 14-14 & 14-16

Torque Specifications (Capscrews)..... 18-18

Vacuum Pump..... 12-1

Valve
 Grinding 2-10
 Inspection 2-9
 Installation..... 2-16
 Removal 2-2
 Testing..... 2-16

Valve Adjustment 14-32 & 14-36

Valve Crosshead
 Adjustment..... 14-30
 Inspection 2-12
 Installation..... 14-30
 Removal 0-11

Valve Crosshead Guides
 Inspection 2-11
 Installation..... 2-11
 Removal 2-11

Valve Guides
 Inspection 2-8
 Installation..... 2-8
 Removal 2-8

Valve Seats and Inserts

Grinding	2-7
Inspection	2-6
Installation.....	2-7
Removal	2-5

Valve Springs

Inspection	2-11
Installation.....	2-11
Removal	2-11
Testing.....	2-11

Vibration Damper and Flange

Cleaning.....	1-26
Inspection	1-26
Installation.....	14-21
Removal	0-14

Water Filter

Installation.....	14-41
Removal	0-4

Water Manifold

Installation.....	14-30
Removal	0-11

Water Pump

Assembly	8-4, 8-9 & 8-15
Disassembly.....	8-2, 8-6 & 8-12
Inspection	8-3, 8-8 & 8-14
Installation.....	14-23
Removal	0-9

Wear Limits and Specifications..... 18-1**Wiring Diagrams.....** 13-1

By Order of the Secretary of the Army:

Official:

R. L. DILWORTH
Brigadier General, United States Army
The Adjutant General

JOHN A. WICKHAM, JR.
General, United States Army
Chief of Staff

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25A, Operator, Organizational Direct and General Support Maintenance Requirements for Locomotive, Diesel-Elec, 0-4-4-0 Wheel, 80-T, 420/550 HP, Models NHBIS 600 & 112-5708 (Domestic Service) TM 55-2210-208 Series)

THE METRIC SYSTEM AND EQUIVALENTS

LINEAR MEASURE

- 1 Centimeter = 10 Millimeters = 0.01 Meters = 0.3937 Inches
- 1 Meter = 100 Centimeters = 1,000 Millimeters = 39.37 Inches
- 1 Kilometer = 1,000 Meters = 0.621 Miles

SQUARE MEASURE

- 1 Sq Centimeter = 100 Sq Millimeters = 0.155 Sq Inches
- 1 Sq Meter = 10,000 Sq Centimeters = 10.76 Sq Feet
- 1 Sq Kilometer = 1,000,000 Sq Meters = 0.386 Sq Miles

CUBIC MEASURE

- 1 Cu Centimeter = 1,000 Cu Millimeters = 0.06 Cu Inches
- 1 Cu Meter = 1,000,000 Cu Centimeters = 35.31 Cu Feet

LIQUID MEASURE

- 1 Milliliter = 0.001 Liters = 0.0338 Fluid Ounces
- 1 Liter = 1,000 Milliliters = 33.82 Fluid Ounces

TEMPERATURE


- $5/9 (^{\circ}\text{F} - 32) = ^{\circ}\text{C}$
- 212 $^{\circ}$ Fahrenheit is equivalent to 100 $^{\circ}$ Celsius
- 90 $^{\circ}$ Fahrenheit is equivalent to 32.2 $^{\circ}$ Celsius
- 32 $^{\circ}$ Fahrenheit is equivalent to 0 $^{\circ}$ Celsius
- $9/5 \text{ } ^{\circ}\text{C} + 32 = \text{ } ^{\circ}\text{F}$

WEIGHTS

- 1 Gram = 0.001 Kilograms = 1,000 Milligrams = 0.035 Ounces
- 1 Kilogram = 1,000 Grams = 2.2 lb.
- 1 Metric Ton = 1,000 Kilograms = 1 Megagram = 1.1 Short Tons

APPROXIMATE CONVERSION FACTORS

TO CHANGE	TO	MULTIPLY BY
Inches	Centimeters	2.540
Feet	Meters	0.305
Yards	Meters	0.914
Miles	Kilometers	1.609
Square Inches	Square Centimeters	6.451
Square Feet	Square Meters	0.093
Square Yards	Square Meters	0.836
Square Miles	Square Kilometers	2.590
Acres	Square Hectometers	0.405
Cubic Feet	Cubic Meters	0.028
Cubic Yards	Cubic Meters	0.765
Fluid Ounces	Milliliters	29.573
Pints	Liters	0.473
Quarts	Liters	0.946
Gallons	Liters	3.785
Ounces	Grams	28.349
Pounds	Kilograms	0.454
Short Tons	Metric Tons	0.907
Pound-Feet	Newton-Meters	1.356
Pounds Per Square Inch	Kilopascals	6.895
Miles Per Gallon	Kilometers Per Liter	0.425
Miles Per Hour	Kilometers Per Hour	1.609
TO CHANGE	TO	MULTIPLY BY
Centimeters	Inches	0.394
Meters	Feet	3.280
Meters	Yards	1.094
Kilometers	Miles	0.621
Square Centimeters	Square Inches	0.155
Square Meters	Square Feet	10.764
Square Meters	Square Yards	1.196
Square Kilometers	Square Miles	0.386
Square Hectometers	Acres	2.471
Cubic Meters	Cubic Feet	35.315
Cubic Meters	Cubic Yards	1.308
Milliliters	Fluid Ounces	0.034
Liters	Pints	2.113
Liters	Quarts	1.057
Liters	Gallons	0.264
Grams	Ounces	0.035
Kilograms	Pounds	2.205
Metric Tons	Short Tons	1.102
Newton-Meters	Pound-Feet	0.738
Kilopascals	Pounds Per Square Inch	0.145
Kilometers Per Liter	Miles Per Gallon	2.354
Kilometers Per Hour	Miles Per Hour	0.621

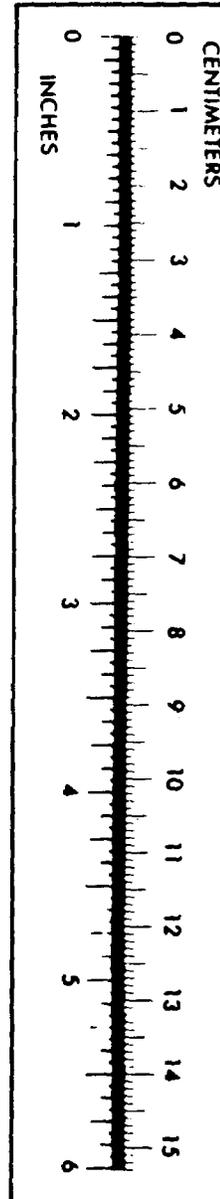

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

PUBLICATION DATE

PUBLICATION TITLE

BE EXACT... PIN-POINT WHERE IT IS

PAGE NO.

PARA-GRAPH

FIGURE NO.

TABLE NO.

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TEAR ALONG PERFORATED LINE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 2028-2 JUL 79

PREVIOUS EDITIONS ARE OBSOLETE.

P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

This fine document...

Was brought to you by me:



[Liberated Manuals -- free army and government manuals](#)

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap “watermarks” and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=<http://www.liberatedmanuals.com/>>Free Military and Government Manuals

- Sincerely
Igor Chudov
<http://igor.chudov.com/>
- [Chicago Machinery Movers](#)